PHILIPS 29PT8609

MODEL

SERVICE MANUAL

Colour television

Chassis

A02E

AA

Service
Service
Service

Service Manual

Contents **Page**

1 Technical Specifications, Connection Facilities, and Chassis Overview 2
2 Safety and Maintenance Instructions, Warnings, and Notes 4
3 Directions for Use 6
4 Mechanical Instructions 12
5 Service Modes, Error Codes, and Faultfinding 14
6 *Block Diagrams, Testpoint Overview, and Waveforms*
Wiring Diagram 23
Block Diagram LSP Supply and Deflection 24
Testpoint Overview LSP and CRT 25
Block Diagram 1 Audio & Video 26
Block Diagram 2 Audio & Video 27
Block Diagram 3 Audio & Video 28
Testpoint Overview SSB 29
I^{2}C Overview 30
Supply Lines Overview 31
7 *Circuit Diagrams and PWB layouts* *Diagram* *PWB*
LSP: Main Supply (Diagram A1A) 32 42-47
LSP: Main Supply (Diagram A1B) 33 42-47
LSP: Standby Supply (Diagram A2) 34 42-47
LSP: Line Deflection (Diagram A3) 35 42-47
LSP: Frame Defl. E/W Drive (Diagram A4) 36 42-47
LSP: Rotation Circuitry (Diagram A5) 37 42-47
LSP: Audio Amplifier (Diagram A6) 38 42-47
LSP: Headphone Amplifier (Diagram A7) 37 42-47
LSP: Tuner, SIMM Conn.(Fem.) (Diagram A8) 39 42-47
LSP: Front (Diagram A10) 40 42-47
LSP: Inputs/Outputs (Diagram A11) 41 42-47

Contents **Page**

SSB: If & SAW Filter (Diagram B1) 48 64-73
SSB: Vid. Source Sel/Data Link (Diagram B2) 49 64-73
SSB: Audio Source Select (Diagram B3) 50 64-73
SSB: MPIF-Supply, E/W, Ctrl (Diagram B4) 51 64-73
SSB: Video Decoder (Diagram B5) 52 64-73
SSB: Feature Box (Diagram B6) 53 64-73
SSB: RGB Processing (Diagram B7) 54 64-73
SSB: Sync & Deflection Proc. (Diagram B8) 55 64-73
SSB: Protection (Diagram B9) 56 64-73
SSB: Audio Processing (Diagram B10) 57 64-73
SSB: Control (Diagram B11) 58 64-73
SSB: Ctrl-Mem. Int. (EBIU) (Diagram B12) 59 64-73
SSB: Ctrl-Mem. Int. (SDRAM) (Diagram B13) 60 64-73
SSB: ADOC Supply (Diagram B14) 61 64-73
SSB: Low Volt. Supply ADOC (Diagram B15) 62 64-73
SSB: Connector Interface (Diagram B18) 63 64-73
Side I/O Panel (Diagram D) 74 75
Top Control Panel (Diagram E) 76 77
CRT Panel (Diagram F) 78 79
DC-Shift Panel (Diagram G) 80 80
VDAF + 2nd Orders (Diagram I) 81 82
Front Interface (Diagram J) 83 84
8 Electrical Alignments 85
9 Circuit Descriptions 92
List of Abbreviations 105
IC Data Sheets 107
10 Spare Parts List 108
11 Revision List 114

©Copyright 2003 Philips Consumer Electronics B.V. Eindhoven, The Netherlands.
All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.

Published by RB 0371 Service PaCE

Subject to modification EN 3122 785 13950

PHILIPS

1. Technical Specifications, Connections, and Chassis Overview

Index of this chapter:

1. Technical Specifications
2. Connections
3. Chassis Overview

Note: Figures below can deviate slightly from the actual situation, due to the different set executions.

1.1 Technical Specifications

1.1.1 Vision

Display type	: CRT, Real Flat
Screen size(s)	: 28 inch - 16:9
	: 29 inch - 4:3
	: 32 inch - 16:9
Tuning system	: PLL
IF frequency	: 38.9 MHz
Colour systems	: PAL: B/G,D/K,I
	: SECAM: B/G,D/K,L/L'
	: NTSC-playback
Channel selections	: 100 presets
	: UVSH
Aerial input	: 75 ohm, IEC-type

1.1.2 Sound

Sound systems	: FM-mono, AM-mono
	: FM-stereo: B/G
	: NICAM: B/G,D/K,I,L
Maximum power	: 4 x 10 W_rms (int.)

1.1.3 Miscellaneous

Mains voltage	: 220 - 240 Vac
Mains frequency	: 50 / 60 Hz
Ambient temperature	: +5 to +45 deg. C
Maximum humidity	: 90 % R.H.
Power consumption	:
- Normal operation	: ≈ 115 W
- Standby	: < 1 W

1.2 Connections

1.2.1 Front and Top Control, Side I/O Connections

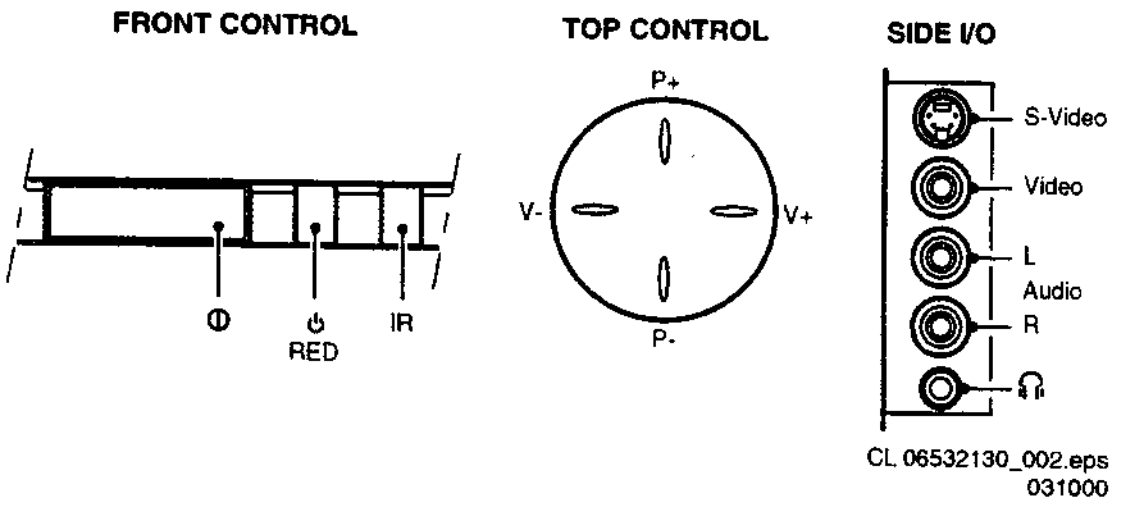

CL 06532130_002.eps
031000

Figure 1-1 Front and Top Control, Side I/O connections

Hosiden: SVHS - In

1	- Y	Ground	⏚
2	- C	Ground	⏚
3	- Y	1 Vpp / 75 ohm	→○
4	- C	0.3 Vpp / 75 ohm	→○

Cinch: In

- CVBS	1 Vpp / 75 ohm	→○◎
- Audio - L	0.5 Vrms / 10 kohm	→○◎
- Audio - R	0.5 Vrms / 10 kohm	→○◎

Mini Jack: Headphone - Out

- Headphone	32 - 600 ohm / 10 mW	◎/🎧

1.2.2 Rear Connections

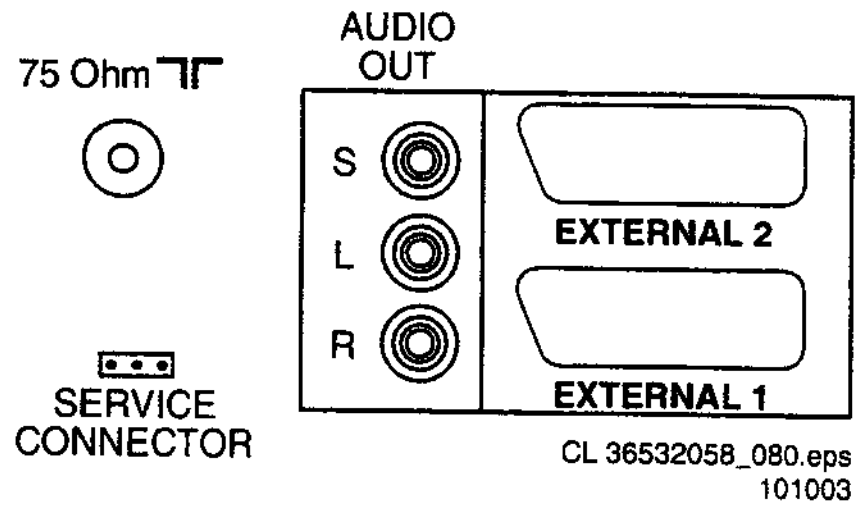

CL 36532058_080.eps
101003

Figure 1-2 Rear connections

Aerial - In

- IEC-type	Coax, 75 ohm	⊤

Service connector

1	- SDA-S	I2C data (5 V)	→○○→
2	- SCL-S	I2C clock (5 V)	→○
3	- GND	Ground	⏚

Audio - Out (Cinch)

S	- Surround	0.5 Vrms / 1 kohm (optional)	○→◎
L	- Audio - L	0.5 Vrms / 1 kohm	○→◎
R	- Audio - R	0.5 Vrms / 1 kohm	○→◎

External 1: RGB/YUV and CVBS - In/Out



CL96532137_056.eps
171199

Figure 1-3 SCART connector

1	- Audio - R	0.5 Vrms / 1 kohm	○→
2	- Audio - R	0.5 Vrms / 10 kohm	→○
3	- Audio - L	0.5 Vrms / 1 kohm	○→
4	- Audio	Ground	⏚
5	- Audio	Ground	⏚
6	- Audio - L	0.5 Vrms / 10 kohm	→○
7	- Blue / U	0.7 Vpp / 75 ohm	→○
8	- CVBS-status	0 - 1.3 V: INT 4.5 - 7 V: EXT 16:9 9.5 - 12 V: EXT 4:3	→○
9	- Video	Ground	⏚
10	- N.C.		
11	- Green / Y	0.7 Vpp / 75 ohm	→○
12	- N.C.		
13	- Video	Ground	⏚
14	- Video	Ground	⏚
15	- Red / V	0.7 Vpp / 75 ohm	→○
16	- Status / FBL	0 - 0.4 V: INT 1 - 3 V: EXT / 75 ohm	→○
17	- Video	Ground	⏚
18	- Video	Ground	⏚
19	- CVBS	1 Vpp / 75 ohm	○→
20	- CVBS	1 Vpp / 75 ohm	→○
21	- Shielding	Ground	⏚

External 2: CVBS and Y/C - In/Out (for recorder)



CL96532137_056.eps
171199

Figure 1-4 SCART connector

1 - Audio - R	0.5 Vrms / 1 kohm	○→
2 - Audio - R	0.5 Vrms / 10 kohm	→○
3 - Audio - L	0.5 Vrms / 1 kohm	○→
4 - Audio	Ground	⏚
5 - Audio	Ground	⏚
6 - Audio - L	0.5 Vrms / 10 kohm	→○
7 - C-in	0.7 Vpp / 75 ohm	○→
8 - CVBS-status	0 - 1.3 V: INT 4.5 - 7 V: EXT 16:9 9.5 - 12 V: EXT 4:3	→○
9 - Video	Ground	⏚
10 - Easylink	(P50)	→○
11 - N.C.		
12 - N.C.		
13 - Video	Ground	⏚
14 - Video	Ground	⏚
15 - C	0.7 Vpp / 75 ohm	→○
16 - N.C.		
17 - Video	Ground	⏚
18 - Video	Ground	⏚
19 - CVBS-out	1 Vpp / 75 ohm	○→
20 - YCVBS-in	1 Vpp / 75 ohm	→○
21 - Shielding	Ground	⏚

1.3 Chassis Overview

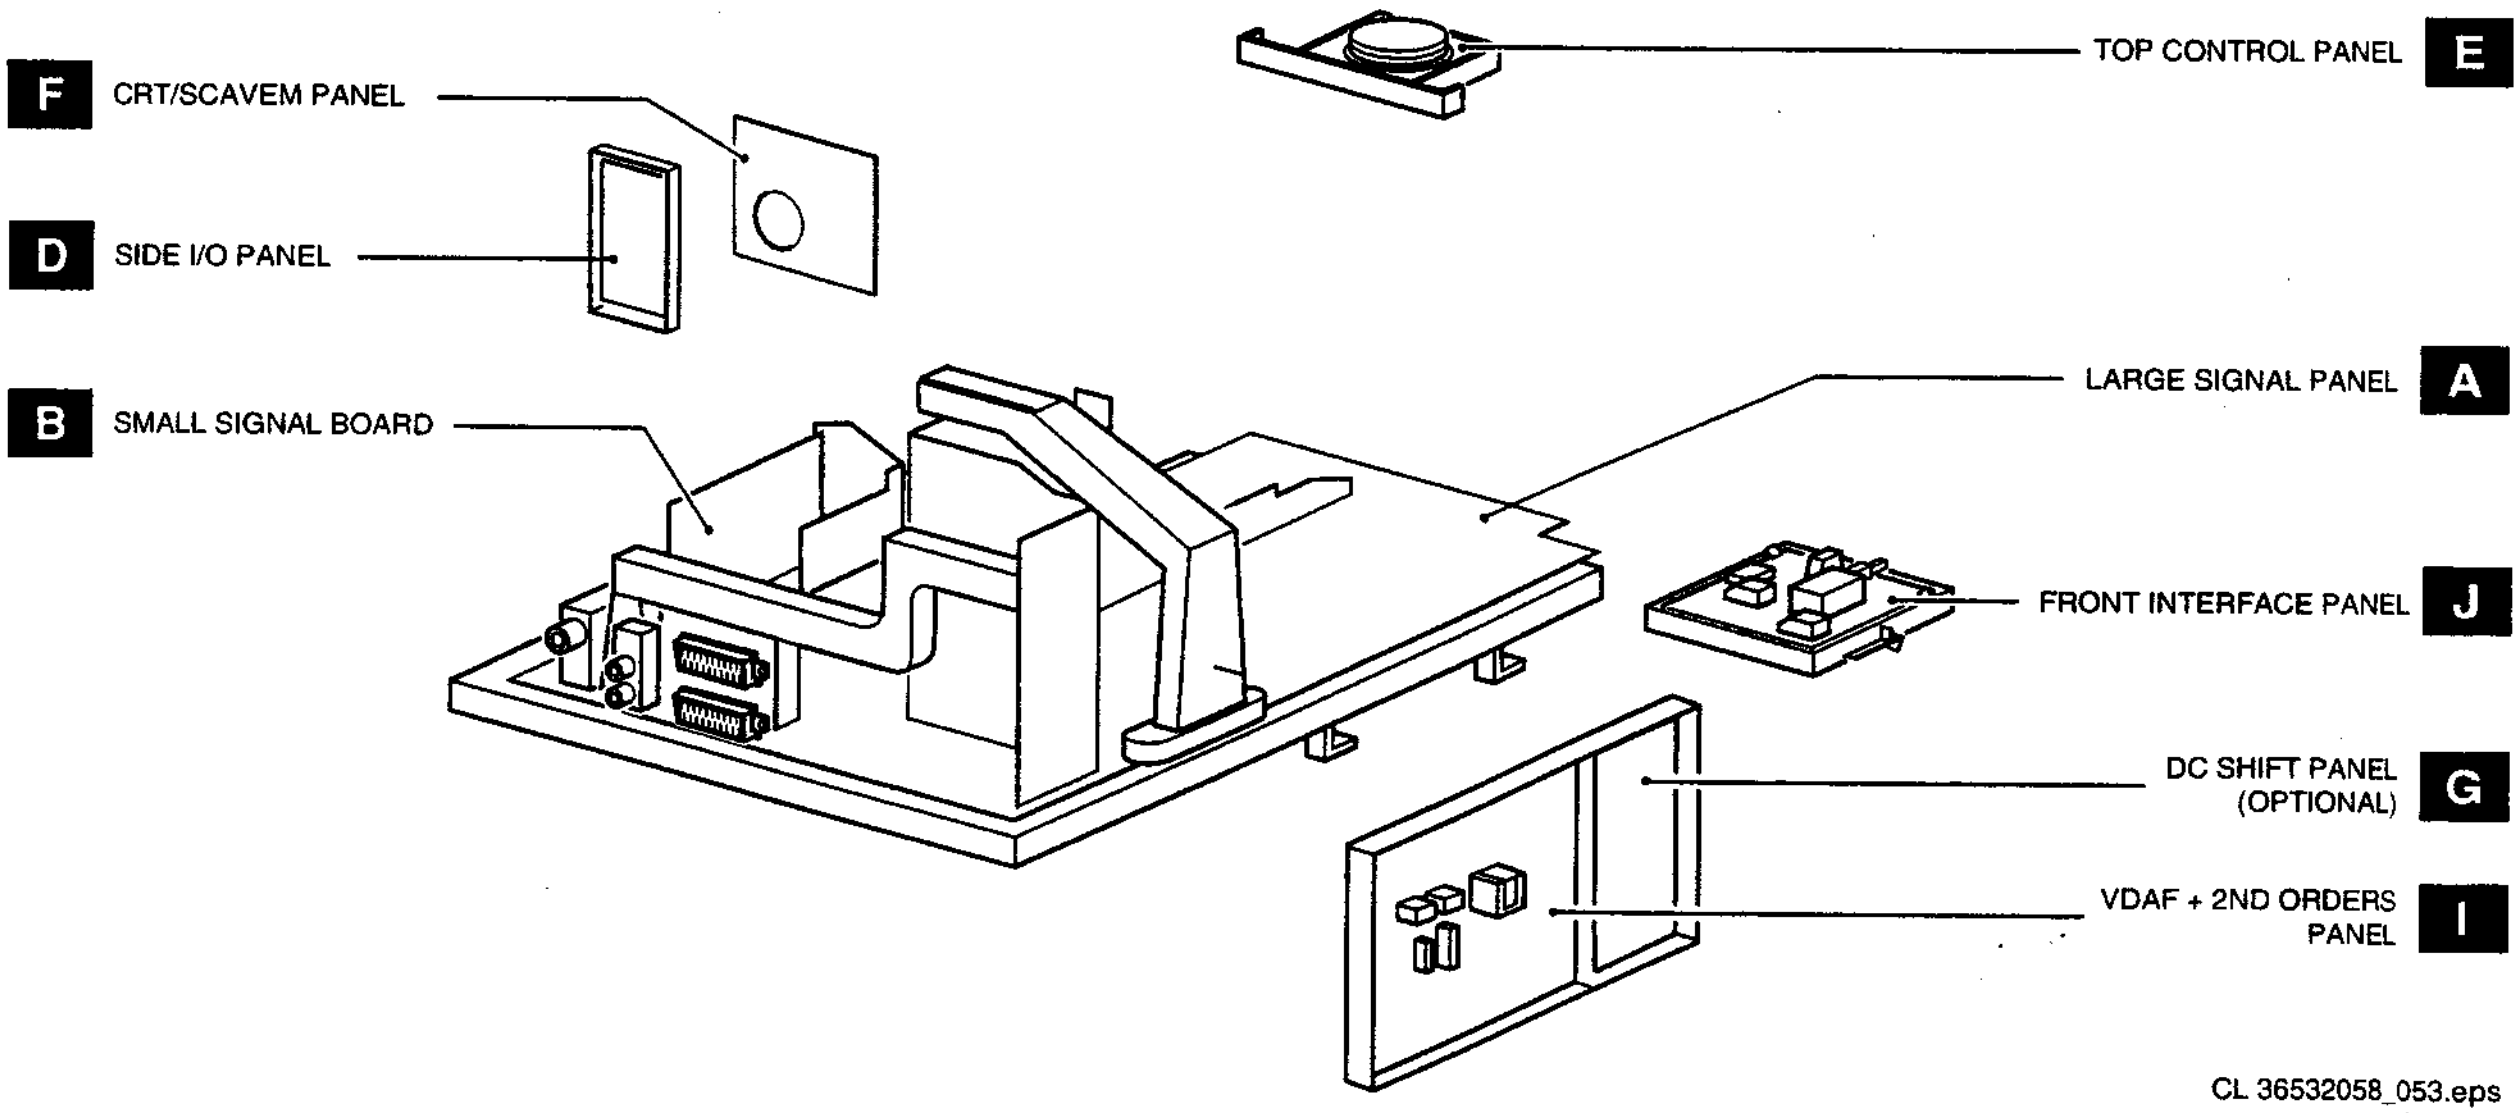
F CRT/SCAVEM PANEL
D SIDE I/O PANEL
B SMALL SIGNAL BOARD
TOP CONTROL PANEL E
LARGE SIGNAL PANEL A
FRONT INTERFACE PANEL J
DC SHIFT PANEL (OPTIONAL) G
VDAF + 2ND ORDERS PANEL I

CL 36532058_053.eps
211103

Figure 1-5 PWB location

2. Safety and Maintenance Instructions, Warnings, and Notes

2.1 Safety Instructions

Safety regulations require that **during** a repair:

- Due to the chassis concept, a very large part of the circuitry (incl. deflection) is 'hot'. Therefore, connect the set to the mains via an isolation transformer.
- Replace safety components, indicated by the symbol ⚠, only by components identical to the original ones. Any other component substitution (other than original type) may increase risk of fire or electrical shock hazard.
- Wear safety goggles when you replace the CRT.

Safety regulations require that **after** a repair, you must return the set in its original condition. Pay, in particular, attention to the following points:

- General repair instruction: as a strict precaution, we advise you to re-solder the solder connections through which the horizontal deflection current is flowing. In particular this is valid for the:
  1. Pins of the line output transformer (LOT).
  2. Fly-back capacitor(s).
  3. S-correction capacitor(s).
  4. Line output transistor.
  5. Pins of the connector with wires to the deflection coil.
  6. Other components through which the deflection current flows.

Note: This re-soldering is advised to prevent bad connections due to metal fatigue in solder connections, and is therefore only necessary for television sets more than two years old.

- Check the insulation of the mains cord for external damage.
- Check the strain relief of the mains cord for proper function, to prevent the cord from touching the CRT, hot components, or heat sinks.
- Check the electrical DC resistance between the mains plug and the secondary side (only for sets that have an isolated power supply). Do this as follows:
  1. Unplug the mains cord and connect a wire between the two pins of the mains plug.
  2. Turn on the main power switch (keep the mains cord unplugged!).
  3. Measure the resistance value between the pins of the mains plug and the metal shielding of the tuner or the aerial connection of the set. The reading should be between 4.5 Mohm and 12 Mohm.
  4. Switch the TV 'off' and remove the wire between the two pins of the mains plug.
- Check the cabinet for defects, to prevent the possibility of the customer touching any internal parts.

2.2 Maintenance Instructions

We recommend a maintenance inspection carried out by qualified service personnel. The interval depends on the usage conditions:

- When a customer uses the set under normal circumstances, for example in a living room, the recommended interval is three to five years.
- When a customer uses the set in an environment with higher dust, grease, or moisture levels, for example in a kitchen, the recommended interval is one year.
- The maintenance inspection includes the following actions:
  1. Perform the 'general repair instruction' noted above.
  2. Clean the power supply and deflection circuitry on the chassis.
  3. Clean the picture tube panel and the neck of the picture tube.

2.3 Warnings

- In order to prevent damage to ICs and transistors, avoid all high voltage flashovers. In order to prevent damage to the picture tube, use the method shown in Fig. 2-1, to discharge the picture tube. Use a high voltage probe and a multi-meter (position V_dc). Discharge until the meter reading is 0 V (after approx. 30 s).

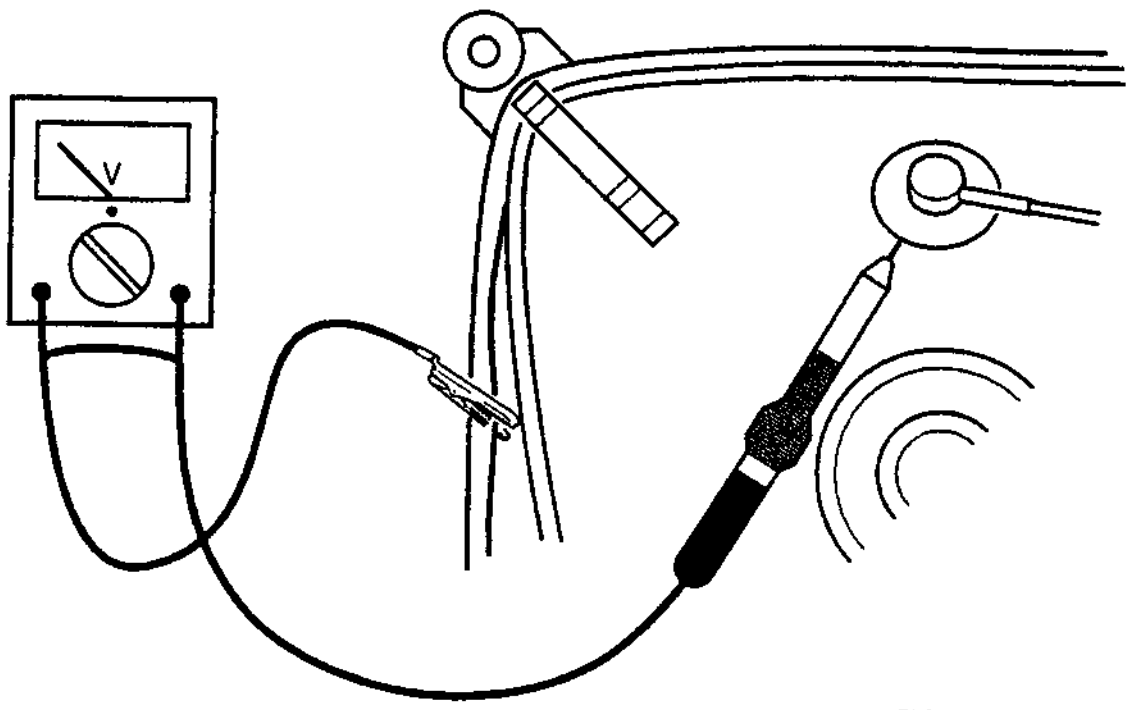

Figure 2-1 Discharge picture tube

- All ICs and many other semiconductors are susceptible to electrostatic discharges (ESD, ⚠). Careless handling during repair can reduce life drastically. Make sure that, during repair, you are connected with the same potential as the mass of the set by a wristband with resistance. Keep components and tools also at this potential. Available ESD protection equipment:
  - Complete kit ESD3 (small tablemat, wristband, connection box, extension cable and ground cable) 4822 310 10671.
  - Wristband tester 4822 344 13999.
- Together with the deflection unit and any multi-pole unit, flat square picture tubes form an integrated unit. The deflection and the multi-pole units are set optimally at the factory. We do not recommend adjusting this unit during repair.
- Be careful during measurements in the high voltage section and on the picture tube.
- Never replace modules or other components while the unit is 'on'.
- When you align the set, use plastic rather than metal tools. This will prevent any short circuits and the danger of a circuit becoming unstable.

2.4 Notes

2.4.1 General

- Measure the voltages and waveforms with regard to the chassis (= tuner) ground ⏚), or hot ground (↧), depending on the tested area of circuitry.
- The voltages and waveforms shown in the diagrams are indicative. Measure them in the Service Default Mode (see chapter 5) with a colour bar signal and stereo sound (L: 3 kHz, R: 1 kHz unless stated otherwise) and picture carrier at 475.25 MHz (PAL) or 61.25 MHz (NTSC, channel 3).
- Where necessary, measure the waveforms and voltages with (⊤) and without (⊤̸) aerial signal. Measure the voltages in the power supply section both in normal operation (Ⓘ) and in standby (⏻). These values are indicated by means of the appropriate symbols.

- The picture tube panel has printed spark gaps. Each spark gap is connected between an electrode of the picture tube and the Aquadag coating.
- The semiconductors indicated in the circuit diagram and in the parts lists, are interchangeable per position with the semiconductors in the unit, irrespective of the type indication on these semiconductors.
- Manufactured under license from Dolby Laboratories. 'Dolby', 'Pro Logic' and the 'double-D symbol', are trademarks of Dolby Laboratories.

DOLBY SURROUND
PRO • LOGIC

Figure 2-2 Dolby PL Symbol

2.4.2 Schematic Notes

- All resistor values are in ohms and the value multiplier is often used to indicate the decimal point location (e.g. 2K2 indicates 2.2 kohm).
- Resistor values with no multiplier may be indicated with either an "E" or an "R" (e.g. 220E or 220R indicates 220 ohm).
- All capacitor values are expressed in micro-farads (µ= x 10^-6), nano-farads (n= x 10^-9), or pico-farads (p= x 10^-12).
- Capacitor values may also use the value multiplier as the decimal point indication (e.g. 2p2 indicates 2.2 pF).
- An "asterisk" (*) indicates component usage varies. Refer to the diversity tables for the correct values.
- The correct component values are listed in the Electrical Replacement Parts List. Therefore, always check this list when there is any doubt.

2.4.3 Rework on BGA (Ball Grid Array) ICs

General

Although (LF)BGA assembly yields are very high, there may still be a requirement for component rework. By rework, we mean the process of removing the component from the PWB and replacing it with a new component. If an (LF)BGA is removed from a PWB, the solder balls of the component are deformed drastically so the removed (LF)BGA has to be discarded.

Device removal

As is the case with any component that, it is essential when removing an (LF)BGA, the board, tracks, solder lands, or surrounding components are not damaged. To remove an (LF)BGA, the board must be uniformly heated to a temperature close to the reflow soldering temperature. A uniform temperature reduces the chance of warping the PWB.
To do this, we recommend that the board is heated until it is certain that all the joints are molten. Then carefully pull the component off the board with a vacuum nozzle. For the appropriate temperature profiles, see the IC data sheet.

Area preparation

When the component has been removed, the vacant IC area must be cleaned before replacing the (LF)BGA.
Removing an IC often leaves varying amounts of solder on the mounting lands. This excessive solder can be removed with either a solder sucker or solder wick. The remaining flux can be removed with a brush and cleaning agent.
After the board is properly cleaned and inspected, apply flux on the solder lands and on the connection balls of the (LF)BGA.
Note: Do not apply solder paste, as this has shown to result in problems during re-soldering.

Device replacement

The last step in the repair process is to solder the new component on the board. Ideally, the (LF)BGA should be aligned under a microscope or magnifying glass. If this is not possible, try to align the (LF)BGA with any board markers.
To reflow the solder, apply a temperature profile according to the *IC data sheet*. So as not to damage neighbouring components, it may be necessary to reduce some temperatures and times

3. Directions for Use

Installing your television set

❶ Positioning the television set

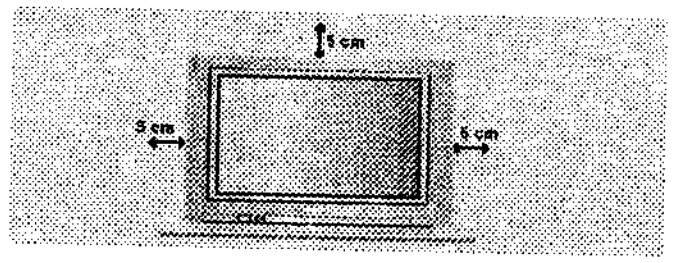

Place your TV on a solid, stable surface, leaving a space of at least 5 cm around the appliance. To avoid accidents, do not put anything on the set such as a cloth or cover, a container full of liquid (vase) or a heat source (lamp).
The set must not be exposed to water.

❷ Connections

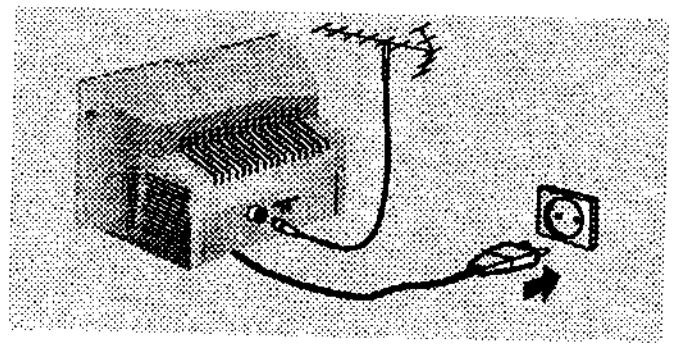

- Insert the aerial plug into the ⫪ socket at the rear of the set.
  If you are using an indoor aerial, reception may be difficult in certain conditions. You can improve reception by rotating the aerial. If the reception remains poor, you will need to use an external aerial.
- Insert the mains plug into a wall socket (220-240 V / 50 Hz).

❸ Remote control

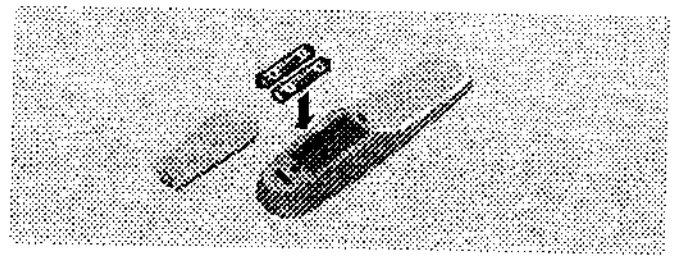

Insert the two R6-type batteries (supplied) making sure that they are the right way round.
Check that the mode selector is set to TV.
The batteries supplied with this appliance do not contain mercury or nickel cadmium.
If you have access to a recycling facility, please do not discard your used batteries (if in doubt, consult your dealer). When the batteries are replaced, use the same type.

❹ Switching on

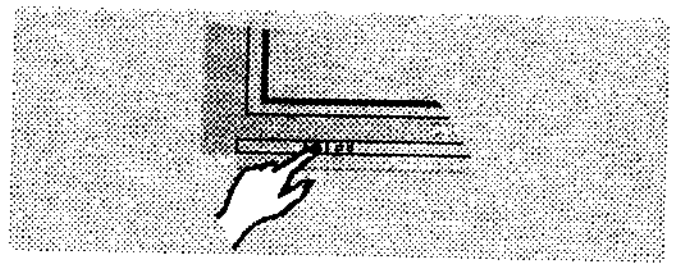

To switch on the set, press the on/off key.
A red indicator comes on and the screen lights up. Go straight to the chapter Quick installation on page 4.
If the television remains in standby mode, press **P** ⊕ on the remote control.
The indicator will flash when you use the remote control.

The keys on the TV set

The television set has 4 or 5 keys which are located on the front or the top of the set depending on the model.
The VOLUME - + (- ◿ +) keys are used to adjust sound levels. The PROGRAM - + (- **P** +) keys are used to select the required programmes.
To access the menus, simultaneously hold down the ◿ - and ◿ + keys (or MENU key).
The PROGRAM - + keys may then be used to select an adjustment and the - ◿ + keys to make that adjustment.
To exit from the menus, hold down the 2 ◿ - and ◿ + keys (or MENU key).
Note: when the **Child Lock** *function is activated, these keys are unavailable (refer to* **Features** *menu on page 7).*

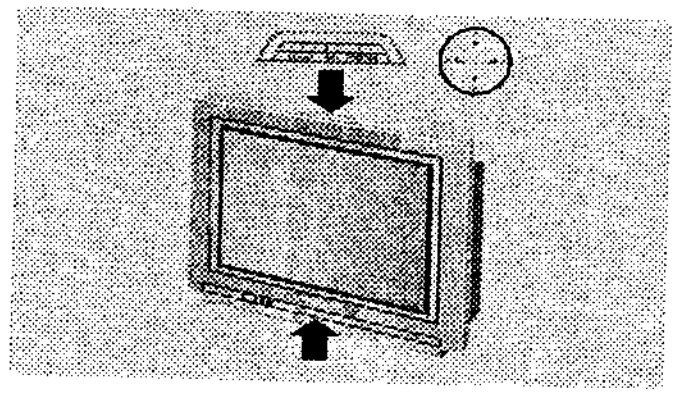

Remote control keys

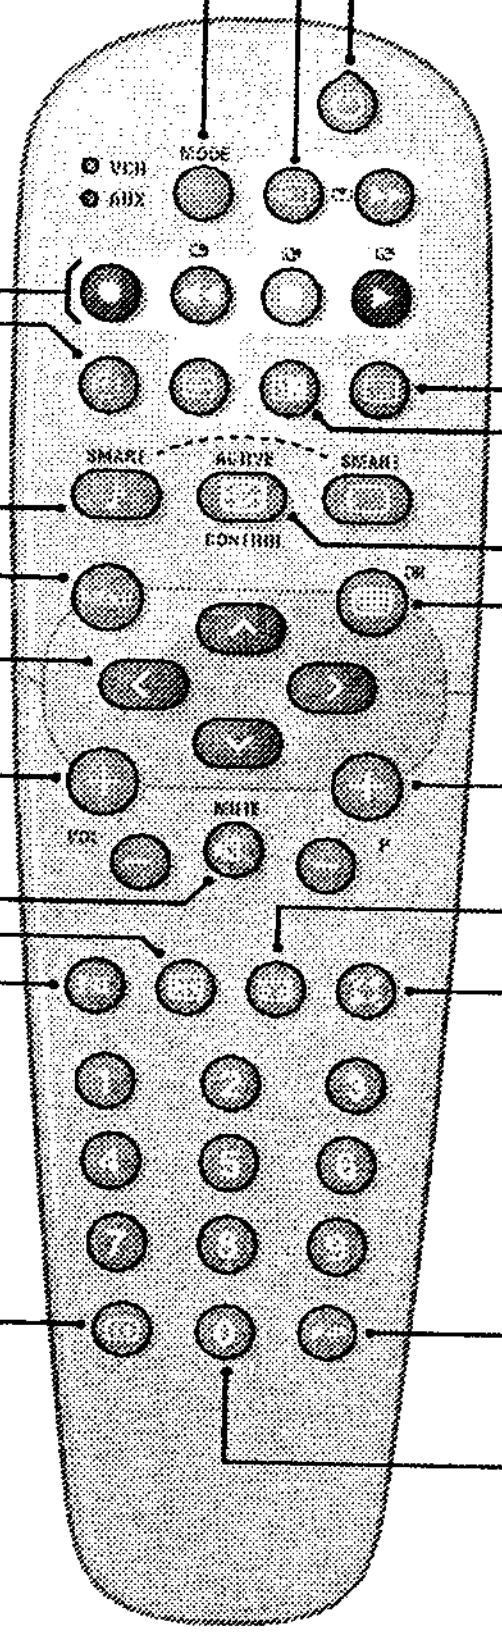

Select peripherals (p.10)
Press several times to select the required EXT connector.

Mode selector (p. 11)
To activate the remote control in TV, VCR (video recorder) or DVD mode.

Teletext keys (p. 8) or VCR / DVD (p.11)

Sleeptimer
To select the length of time before the set automatically switches to standby (from 0 to 240 minutes)

Smart picture and sound
Used to access a series of predefined picture and sound settings.
The **personal** *position relates to settings selected from the menus.*

Menu
To call up or exit the menus.

Cursor
These 4 keys are used to move around the menus.

Volume
To adjust the sound level

Mute
To mute or restore the sound.

Freeze the picture

Sound mode
Used to force programmes in **Stereo** and **Nicam Stereo** to **Mono** or, for bilingual programmes, to choose between **Dual I** or **Dual II**.
The **Mono** *indication is red when in forced position.*

Screen information
To display / remove the programme number, the name (if it exists), the time, the sound mode and the time remaining on the timer. Hold down for 5 seconds to permanently display the programme number on the screen. The volume level and the smart control adjustments are then displayed each time they are used.

Standby
To set the TV to standby mode.
To switch the TV set on again, press ⓑ, P ⊖ ⊕ or ⓪ ⑨.

List of programmes
To display/clear the list of programmes. Use the keys ⓐⓥ to select a programme and the key ⓑ to display it.
The symbol 🔒 *is displayed alongside all programmes which are locked (p.7).*

Dual screen *(according to the version)*
To activate/disable the display on 2 screens. The second screen displays teletext.

Active Control *(according to the version)*
Optimizes the quality of the picture according to the quality of reception.

Teletext (p. 8)

Programme selection
To access the next or previous TV channel from the list of Favourite Programmes (see p. 5).

16:9 Format (p. 9)

Surround Sound
To activate / deactivate the surround sound effect. In stereo, this gives the impression that the speakers are further apart. For models equipped with Virtual Dolby Surround*, you can experience Dolby Surround Pro Logic sound effects. In mono, a stereo spatial effect is simulated.

Previous programme
To return to the previous programme.

Digit keys
Direct access to the programmes.
For a 2 digit programme, enter the 2nd digit before the dash disappears.

---

* *Manufactured under license from Dolby Laboratories.*
"Dolby" and the double-D symbols are trademarks of Dolby Laboratories.

Quick installation

Plug & Play

When you turn on the TV set for the first time, a menu is displayed on screen.
This menu prompts you to select the country and language for the menus:

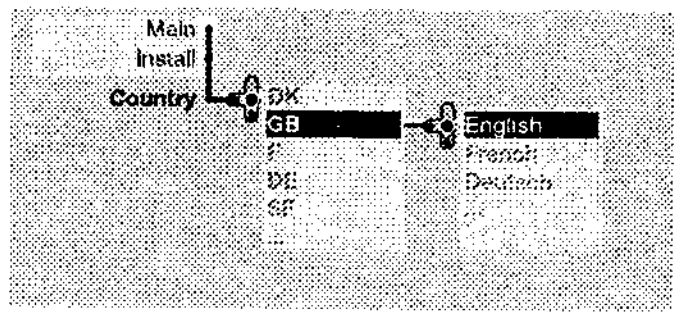

If the menu is not displayed, press and hold down the ◢- and ◢+ keys on the TV set for 5 seconds to display the menu.

❶ Use the (^)(v) keys on the remote control to select your country and validate with (>).
If your country does not appear in the list, select choice "..."

❷ Next select your language using the (^)(v) keys and validate with (>).

❸ The search starts automatically. All the available TV programmes will be stored.
This operation takes a few minutes.
The display shows the progress of the search and the number of programs found. At the end of the search, the menu disappears.
To exit or interrupt the search, press (MENU). If no programme is found, consult the possible solutions p. 12.

❹ If the transmitter or cable network sends the automatic sort signal, the programs will be numbered correctly. In this case, the installation is complete.

❺ If this is not the case, you need to use the **Sort** menu to number the programs correctly.
Some transmitters or cable networks broadcast their own sort parameters (region, language, etc.). In this case, indicate your choice using the (^)(v) keys and validate with (>).

Program sort

❶ Press key (MENU). The **Main menu** is displayed on the screen.

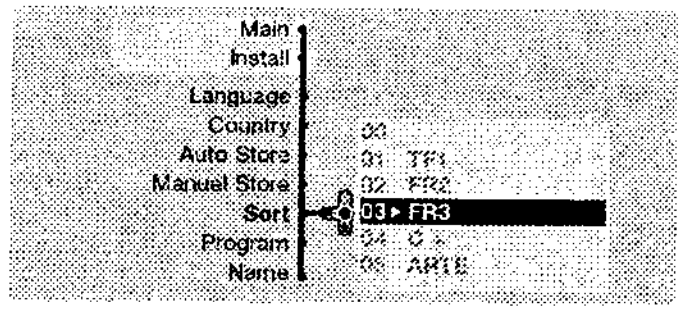

❷ With the cursor, select the **Install** menu followed by the **Sort** menu.

❸ Select the programme you want to move using the (^)(v) keys and press (>).

❹ Then use the (^)(v) keys to select the new number and validate with (<).

❺ Repeat steps ❸ and ❹ for each program you wish to renumber.

❻ To quit the menus, press (⊜).

Program name

If required, you can give a name to the programmes and external connectors.
Note: on installation, the programs are named automatically when an identification signal is sent.

❶ Press the (MENU) key.

❷ With the cursor, select the **Install** menu, then **Name**

❸ Use the ⊖ **P** ⊕ keys to select the programme to name or rename.

❹ Use the (<)(>) keys to move around the name display area (5 characters) and the (^)(v) keys to select the characters.

❺ When the name has been entered, use the (<) key to exit. The name is stored.

❻ Repeat steps ❸ to ❺ for each programme you wish to name.

❼ To quit the menus, press (⊜).

Manual store

This menu is used to store the programmes one at a time.

❶ Press the (MENU) key.

❷ With the cursor, select the **Install** menu then **Manual store**:

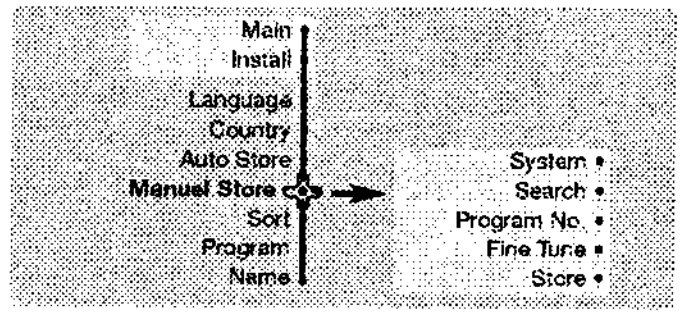

❸ **System:** select **Europe** (automatic detection*) or **Western Europe** (BG standard), **Eastern Europe** (DK standard), **United Kingdom** (I standard) or **France** (LL' standard).

* *Except for France (LL' standard), you must select choice* **France**.

❹ **Search:** press (>). The search starts. Once a programme is found, the scanning stops and its name is displayed (when available). Go to the next step. If you know the frequency of the required programme, this can be entered directly using the (0) to (9) keys.
If no picture is found, consult the possible solutions (p. 12).

❺ **Program No.:** enter the required number with the (<)(>) or (0) to (9) keys.

❻ **Fine Tune:** if the reception is not satisfactory, adjust using the (<)(>) keys.

❼ **Store:** press (>). The program is stored.

❽ Repeat steps ❹ to ❼ for each programme to store.

❾ To quit the menus, press (⊜).

Favourite programmes

This menu allows you to select the programmes to be accessed with the ⊖ **P** ⊕ key.

❶ Press the (MENU) key.

❷ With the cursor, select the **Install** menu then **Favourite Progr.** and press (>).

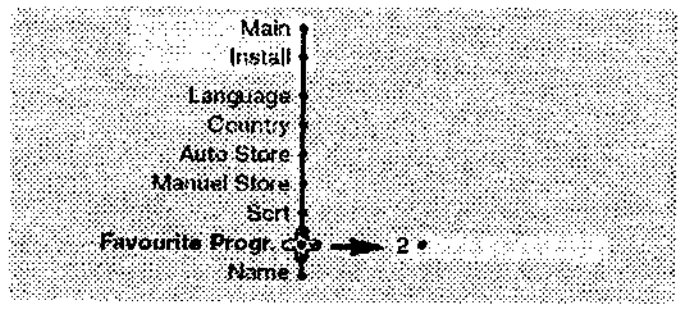

The list of favourite programmes is displayed. The programmes that were stored at installation will automatically appear on this list.

❸ Use the up/downcursor to select the required programme.

❹ Use the left/right cursor to add or remove a programme from the list.

❺ Run through steps ❸ and ❹ for each programme to be added or removed from the list.

❻ To exit, press (⊜) several times.

Other settings in the Install menu

❶ Press the (MENU) key and select the **Install** menu:

❷ **Language:** to change the display language for the menus.

❸ **Country:** to select your country (**GB** for Great Britain).
This setting is used for the search, automatic programme sort and teletext display. If your country does not appear in the list, select "..."

❹ **Auto Store:** to start automatic search for all programmes available in your region. If the transmitter or cable network sends the automatic sort signal, the programmes will be numbered correctly. If this is not the case, you need to use the Sort menu to renumber the programmes (see p. 4).
Some transmitters or cable networks broadcast their own sort parameters (region, language, etc.). In this case, indicate your choice using the (^)(v) keys and validate with (>). To quit or interrupt the search, press (MENU). If no picture is found, consult the possible solutions (p. 12).

❺ To quit the menus, press (⊜).

Picture settings

❶ Press MENU then ▶. The **Picture** menu is displayed:

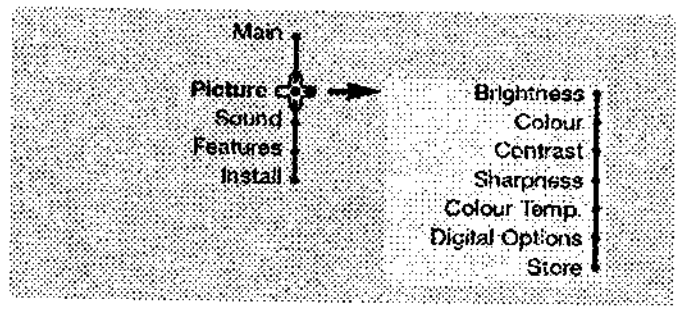

❷ Use the ▲▼ keys to select a setting and the ◀▶ keys to adjust.
Note: during the picture adjustment, only the selected line remains displayed. Press ▲▼ to display the menu again.

❸ Once the adjustments have been made, select **Store** and press ▶ to store them.
Press ⊡ to exit.

Description of the adjustments:
- **Brightness:** this changes picture brilliance.
- **Colour:** this changes the intensity of the colour.
- **Contrast:** this changes the difference between the light and dark tones.
- **Sharpness:** this changes the picture definition.
- **Colour Temp.:** this changes the colour rendering: **Cold** (bluer), **Normal** (balanced) or **Warm** (redder).
- **Digital Options:**
  - **100 Hz:** 100 Hz processing.
  - **Double lines:** doubling of vertical resolution which removes visible picture lines. *Advised for NTSC (60Hz) pictures.*
- **Store:** to store the picture adjustments and settings.

Sound adjustments

❶ Press MENU, select Sound (▼) and press ▶.
The **Sound** menu is displayed:

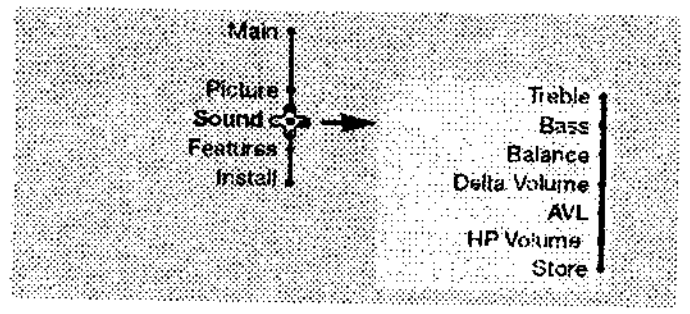

❷ Use the ▲▼ keys to select a setting and the ◀▶ keys to adjust.

❸ Once the adjustments have been made, select Store and press ▶ to store these changes.

❹ To quit the menus, press ⊡.

Description of the settings:
- **Treble**: this alters the high frequency sounds.
- **Bass:** this alters the low frequency sounds.
- Balance: this balances the sound on the left and right speakers.
- **Delta Volume** : this is used to compensate any volume discrepancies between the different programs or EXT sockets. This setting is available for programs 0 to 40 and the EXT sockets.
- **AVL** (Automatic Volume Leveller): this is used to limit increases in sound, especially on program change or advertising slots.
- **HP Volume** : allows you to adjust the headphones volume independently from the loud-speakers on the TV set.
- **Store:** this is used to store the sound settings.

Feature settings

❶ Press MENU, select **Features** (▼) and press ▶.
You can adjust:

❷ **Timer, Child Lock** and **Parental Cont.**: see next page

❸ **Dynamic NR: Min, Med** (optimum position), **Max** or **Off**: attenuates picture noise (snow) in difficult reception conditions.

❹ **Rotation** (only available on very large screen sets): large screen sets are sensitive to terrestrial magnetic field variations.
This setting is used to compensate for this by adjusting the picture rotation.

❺ To quit the menus, press ⊡.

Timer function

This menu lets you use the TV set as an alarm.

❶ Press the MENU key.

❷ With the cursor, select the **Features** menu then **Timer** :

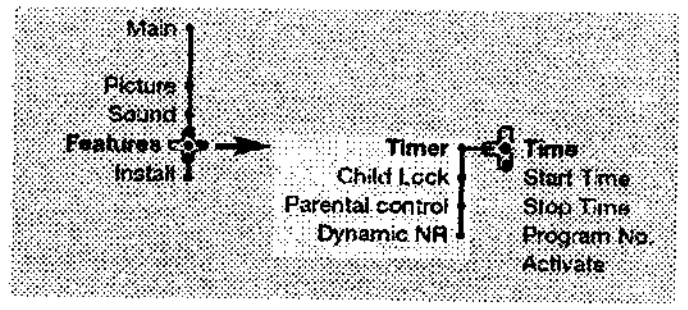

❸ **Time:** enter the current time.
Note: the time is updated automatically each time the TV set is switched on via the teletext information on programme 1. If this program does not have teletext, the update will not take place.

❹ **Start Time:** enter the start time.

❺ **Stop Time:** enter the standby time.

❻ **Program No.:** enter the number of the programme for the wake-up alarm.

❼ **Activate:** the settings include:
- **Once** for a single alarm,
- **Daily** for each day,
- **Stop** to cancel.

❽ Press ⏻ to put the TV set in standby.
It will automatically come on at the time programmed. If you leave the TV set on, it will just change programmes at the time entered (and will go to standby mode at the **Stop Time**).
By combining the **TV lock** *and* **Timer** *functions, you can restrict the period during which the TV set is used, for example by your children.*

TV lock

You can block certain programs or inhibit use of the TV set completely by locking the keys.

Child lock

❶ Press MENU.

❷ With the cursor, select the **Features** menu and position **Child Lock** to **On**.

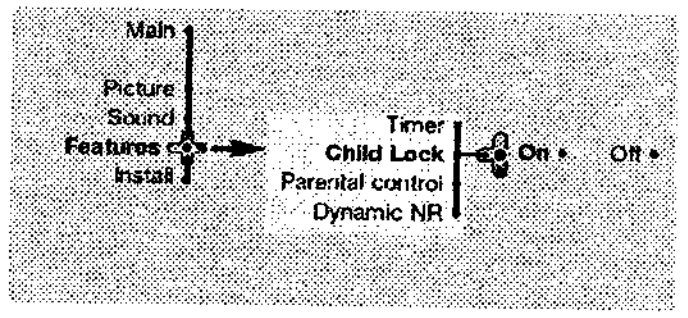

❸ Turn off the TV set and hide the remote control. The TV set cannot be used (except via the remote control).

❹ To cancel: position **Child Lock** to **Off**.

Parental control

❶ Press the MENU key, select the **Features** menu then **Parental Cont.**:

❷ You must enter your secret access code.
The first time you enter this, enter code 0711 twice and then enter your new code choice.
The menu is displayed.

❸ **Parental Cont.**: Use the ▲▼ keys to select the TV programme required and validate with ▶. The 🔒 symbol will be displayed opposite the programmes or sockets that are locked.
From now on, to view a locked programme, you must enter your secret code, otherwise the screen will stay blank.
The access to the **Install** *menu is also locked.*
Caution, for encrypted programs using an external decoder, you must lock the corresponding EXT socket.

❹ **Change code:** this allows you to enter a new 4 digit code. Confirm your new code by entering it a second time.
If you have forgotten your secret code, enter the universal code 0711 twice.

❺ **Unlock all:** this is used to unlock all locked programmes.

❻ **Lock All:** this is used to lock all the TV programmes and EXT connectors.

❼ Press the ⊡ key to quit.

Teletext

Teletext is an information system broadcast by certain channels which can be consulted like a newspaper. It also offers access to subtitles for viewers with hearing problems or who are not familiar with the transmission language (cable networks, satellite channels, etc.).

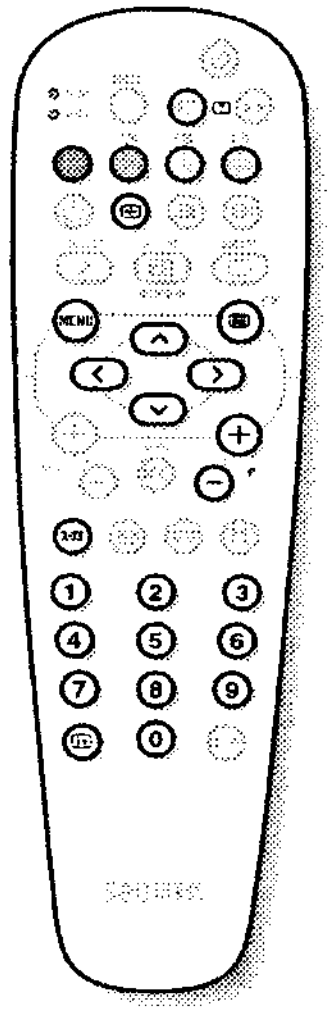

Press :		You will obtain:
▤	**Teletext call**	This is used to call teletext, change to transparent mode and then exit. The summary appears with a list of items that can be accessed. Each item has a corresponding 3 digit page number. *If the channel selected does not broadcast teletext, the indication 100 will be displayed and the screen will remain blank (in this case, exit teletext and select another channel).*
⓪/⑨ ⊖ P ⊕ ⌃ ⌄	**Selecting a page**	Enter the number of the page required using the ⓪ to ⑨ or ⊖ P ⊕ keys, ⌃⌄. Example: page 120, enter ① ② ⓪. The number is displayed top left, the counter turns and then the page is displayed. Repeat this operation to view another page. *If the counter continues to search, this means that the page is not transmitted. Select another number.*
●●●●	**Direct access to the items**	Coloured areas are displayed at the bottom of the screen. The 4 coloured keys are used to access the items or corresponding pages. *The coloured areas flash when the item or the page is not yet available.*
ⓘ	**Contents**	This returns you to the contents page (usually page 100).
‹ ›	**Direct selection of sub-pages**	Certain pages contain sub-pages (for example, page 120 contains sub-pages 1/3, 2/3 and 3/3). If this is the case, the page number is displayed in green, preceded by the symbol ▶, ◀ or ◀ ▶. Use the keys ‹ › to directly access the sub-pages of your choice.
⊕	**Enlarge a page**	This allows you to display the top or bottom part of the page and then return to normal size.
I-II	**Double page teletext** *(only available on certain versions)*	To activate or deactivate the double page teletext display mode. The active page is displayed on the left and the following page is displayed on the right. Press if you want to hold a page (i.e. the contents page). The active page is then displayed on the right. To return to normal mode, press I-II.
⊖ ?	**Hidden information**	To display or hide the concealed information (games solutions).
MENU ⓘ ●●●●	**Favourite pages**	Instead of the standard coloured areas displayed at the bottom of the screen, you can store 4 favourite pages on the first 40 channels which can then be accessed using the coloured keys (red, green, yellow, blue). Once set, these favourite pages will become the default every time tetetext is selected. ❶ Press the MENU key to change to favourite pages mode. ❷ Display the teletext page that you want to store. ❸ Press the coloured key of your choice for 3 seconds. The page is now stored. ❹ Repeat the operation with the other coloured keys. ❺ Now when you consult teletext, your favourite pages will appear in colour at the bottom of the screen. To temporaly retrieve the standard items, press MENU. *To clear everything, and return the standard items as the default, press ⓘ for 5 seconds.*

16:9 Formats

The pictures you receive may be transmitted in 16:9 format (wide screen) or 4:3 format (conventional screen). 4:3 pictures sometimes have a black band at the top and bottom of the screen (letterbox format). This function allows you to optimise the picture display on screen.

If your television is equipped with a 4:3 screen.

Press the ▭ key (or ⌃⌄) to select the different modes:



4:3
The picture is reproduced in 4:3 format.



Expand 4:3
The picture is enlarged vertically. This mode is used to cancell the black bands when watching a programme in letterbox format.



Compress 16:9
The picture is compressed vertically into 16:9 format.

If your television is equipped with a 16:9 screen.

Press the ▭ key (or ‹ ›) to select the different modes:
This TV set is also equipped with automatic switching which will select the correct-screen format, provided the specific signals are transmitted with the programmes.



4:3
The picture is reproduced in 4:3 format and a black band is displayed on either side of the picture. The picture may be progressively enlarged using the ⌃⌄ keys.



Zoom 14:9
The picture is enlarged to 14:9 format, a thin black band remains on both sides of the picture. The ⌃⌄ keys allow you to compress and move the image vertically to view the top or bottom of the picture (subtitles).



Zoom 16:9
The picture is enlarged to 16:9 format. This mode is recommended when displaying pictures which have black bands at the top and bottom (letterbox format).
Use the ⌃⌄ keys if you wish to compress and move the image vertically to view the top or bottom of the picture.



Subtitle Zoom
This mode is used to display 4:3 pictures using the full surface of the screen leaving the sub-titles visible.
Use the ⌃⌄ keys to increase or decrease the compression at the bottom of the screen.



Super Wide
This mode is used to display 4:3 pictures using the full surface of the screen by enlarging the sides of the picture. The ⌃⌄ keys allow you to scroll the image up or down the screen.



Widescreen
This mode restores the correct proportions of pictures transmitted in 16:9 using full screen display.

Connecting peripheral equipment

The television has 2 external sockets situated at the back of the set (EXT1 and EXT2).
The EXT1 socket has audio, CVBS/RGB inputs and audio, CVBS outputs.
The EXT2 socket has audio, CVBS/S-VHS inputs and audio, CVBS outputs.

Video recorder

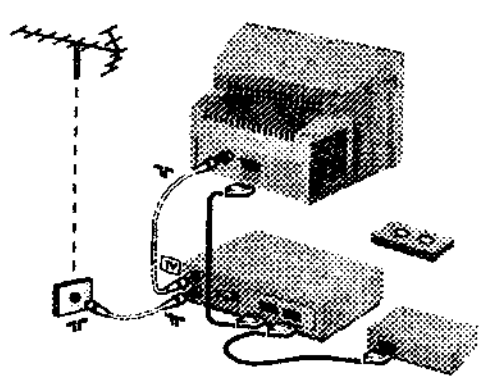

Carry out the connections shown opposite, using a good quality euroconnector cable.
If your video recorder does not have a euroconnector socket, the only connection possible is via the aerial cable. You will therefore need to tune in your video recorder's test signal and assign it programme number 0 (refer to manual store, p. 5).
To reproduce the video recorder picture, press ⓪.

Video recorder with decoder
Connect the decoder to the second euroconnector socket of the video recorder. You will then be able to record scrambled transmissions.

Other equipment

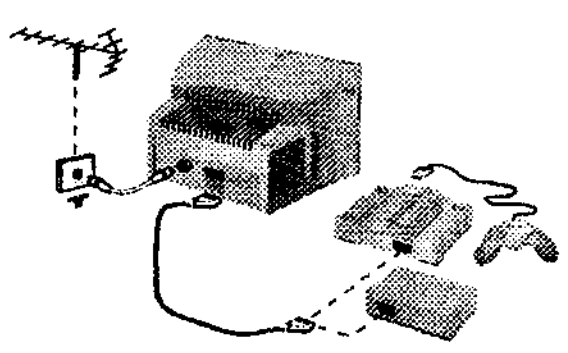

Satellite receiver, decoder, CDV, games, etc.
Carry out the connections shown opposite.
To optimise picture quality, connect the equipment which produces the RGB signals (digital decoder, games, etc.) to EXT1, and the equipment which produces the S-VHS signals (S-VHS and Hi-8 video recorders, certain DVD drives) to EXT2 and all other equipment to either EXT1 or EXT2.

Amplifier *(only available on certain versions)*

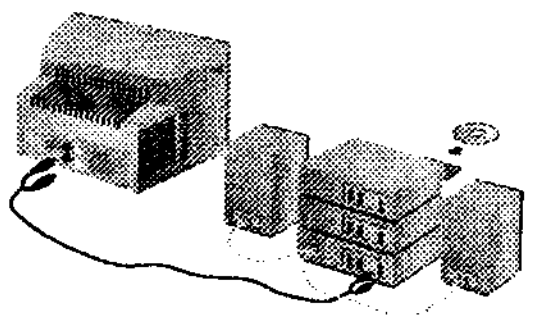

To connect to a hi-fi system, use an audio connection cable and connect the "L" and "R" outputs on the TV set to the "AUDIO IN" "L" and "R" input on your hi-fi amplifier.

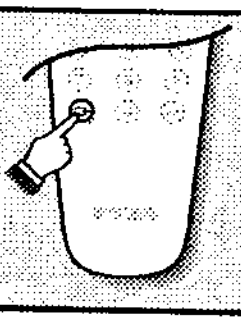

To select connected equipment

Press the ⊖ key to select **EXT1, EXT2, S-VHS2** (S-VHS signals from the EXT2 socket) and **EXT3** for connections on the front panel.
Most equipment (decoder, video recorder) carries out the switching itself.

Side connections

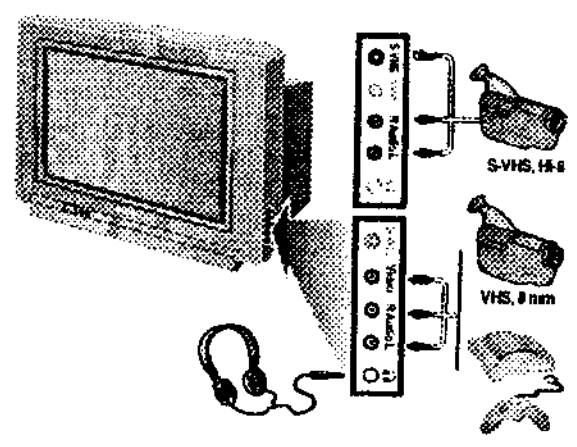

Make the connections as shown opposite.
With the ⊖ key, select **EXT3**.
For a monophonic device, connect the audio signal to the AUDIO L input. Use the (I-II) key to reproduce the sound on the left and right speakers of the TV set.

Headphones
Press the ⊗ key to mute the sound on the TV set (see also sound settings, page 6).
The headphone impedance must be between 32 and 600 Ohms.

Video recorder or DVD keys

The remote control lets you control the main functions of the VCR or DVD.

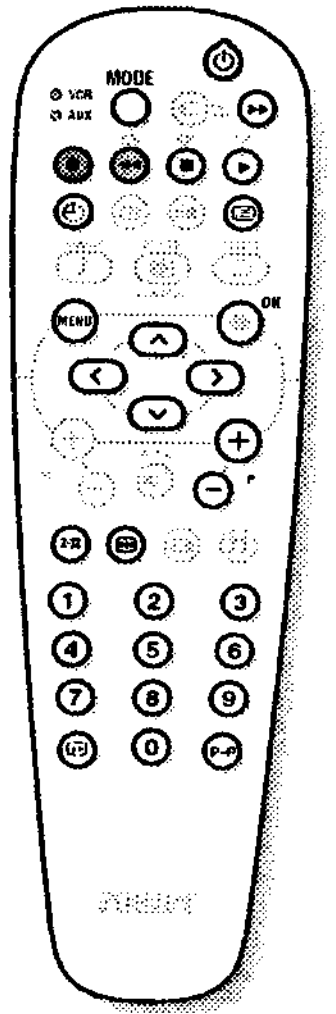

Press the **MODE** key to select the required mode : **VCR** (video recorder) or **AUX (DVD)**. The remote control indicator lights up to display the selected mode. It switches off automatically after 20 seconds if left idle. The remote control automatically returns to TV mode.
The following keys are operational, depending on the equipment :

⏻	standby,
◀◀	fast rewind,
▶▶	fast forward,
●	recording,
■	stop,
▶	play,
⏲	VCR timer,
▤	DVD : subtitling language
MENU	menu,
cursor	navigation and adjustments,
OK	validation,
⓪⑨	digit keys,
⊖ P ⊕	programme selection,
(I-II)	audio selection.
	pause,
ⓘ	OSD menu,
(P-P)	DVD :T-C function / VCR : index function.

The remote control is compatible with all video recorders using the RC5 standard and all DVDs using the RC6 standard.

Tips

Poor reception

The proximity of mountains or high buildings may be responsible for ghost pictures, echoing or shadows. In this case, try manually adjusting your picture: see **Fine Tuning** (p.5) or modify the orientation of the outside aerial.

Does your antenna enable you to receive broadcasts in this frequency range (UHF or VHF band)?

In the event of difficult reception (snowy picture) switch the **Dynamic NR** on the **Features** menu to **ON**. (p. 6).

No picture

If the television does not switch on, please press the standby key ⓞ (located on the remote control) twice.

Have you connected the aerial socket properly?

Have you chosen the right system? (p. 5).

Poorly connected euroconnector cables or aerial sockets are often the cause of picture or sound problems (sometimes the connectors can become half disconnected if the TV set is moved or turned). Check all connections.

Peripheral equipment gives a black and white picture

To play a video cassette, check that it has been recorded under the same standard (PAL, SECAM, NTSC) which can be replayed by the video recorder.

The remote control no longer works.

Check that the mode selector on the side of the remote control is set to TV.

No sound

If on certain channels you receive a picture but no sound, this means that you do not have the correct TV system. Modify the **System** setting (p. 5).

Teletext

Are certain characters not displayed correctly? Check that the **Country** setting has been positioned correctly (p.5).

Remote control

The TV set does not react to the remote control; the indicator on the set no longer flashes when you use the remote control? Replace the batteries.

Standby

When you switch the TV set on it remains in standby mode and the indication **Locked** is displayed when you use the keys on the TV set?

The **Child Lock** function is switched **On** (p. 7).

If the set receives no signal for 15 mins, it automatically goes into standby mode.

To save power, your set is fitted with components that give it a very low power consumption when in standby mode (less than 1 W).

Still no results?

If your TV set breaks down, never attempt to repair it yourself: contact your dealer's after-sales service.

Cleaning the set

Only use a clean, soft and lint-free cloth to clean the screen and the casing of your set. Do not use alcohol-based or solvent-based products.

Glossary

RGB Signals: These are 3 Red, Green and Blue video signals which directly drive the red, green and blue emitters in the cathode ray tube. Using these signals provides better picture quality.

NICAM sound: Process by which digital sound can be transmitted.

System: Television pictures are not broadcast in the same way in all countries. There are different standards: BG, DK, I, and L L'. The SYSTEM setting (p. 6) is used to select these different standards. This is not to be confused with PAL or SECAM colour coding. Pal is used in most countries in Europe, Secam in France, Russia and most African countries. The United States and Japan use a different system called NTSC.

16:9: Refers to the ration between the length and height of the screen. Wide screen televisions have a ration of 16/9, conventional screen TV sets have a ration of 4/3.

Personal Notes:

4. Mechanical Instructions

Index of this chapter:

1. Service connector
2. Set Disassembly
3. Service Positions
4. Assy / Board Removal
5. Set Reassembly

Note: Figures below can deviate slightly from the actual situation, due to the different set executions.

4.1 Service Connector (for ComPair)

For service diagnostics with ComPair, it is not necessary to disassemble the set. You only have to connect the ComPair interface box, via the appropriate cable, to the service connector (on the rear of the set, see figure 1-2), and start the program (see also chapter 5 "Service Modes, Error Codes, and Fault Finding ").

4.2 Set Disassembly

Follow the disassemble instructions in described order.

4.2.1 Rear Cover Removal

Warning: disconnect the mains power cord before you remove the rear cover.

1. Remove all the fixation screws of the rear cover.
2. Now the rear cover can be removed.

4.3 Service Positions

This chassis has several predefined service positions, for better accessibility. They are explained below in more detail.

4.3.1 Large Signal Panel (LSP)

Component Side LSP

For better accessibility of the LSP, do the following (see Figure "Service position 1"):

1. Remove the LSP-bracket from the bottom tray by pulling it backwards.
2. Hook the bracket in the first row of fixation holes of the bottom tray. In other words, reposition the bracket from [1] to [2].

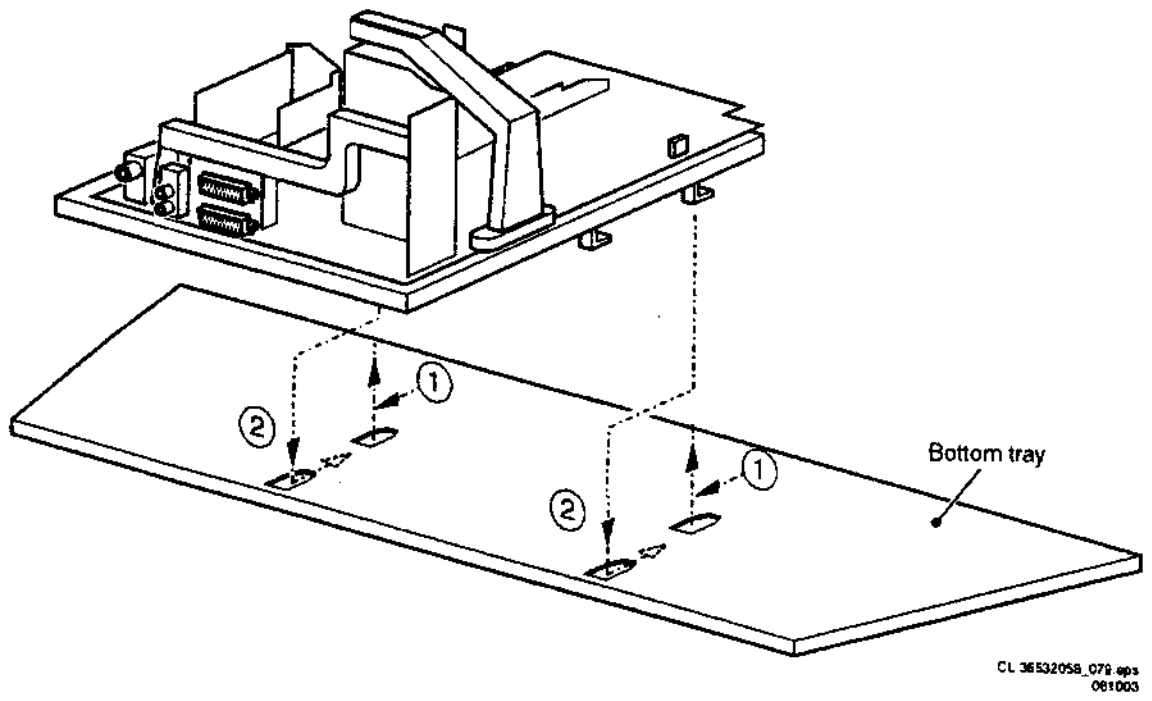

Figure 4-1 Service position 1

Solder Side LSP

To get access to the bottom side (solder side) of the LSP, do the following (see figure 4-1):

1. Remove the DAF-module (see paragraph "DAF Assy/ Panel" below).
2. Remove the Mains Switch-module (see paragraph "Mains Switch Assy/Panel" below).
3. Remove the cable from the side I/O panel.
4. Release some wiring from their fixation clamps, in order to get room for repositioning the LSP.
5. Flip the LSP 90 degrees clockwise [2], and place it in the fixation hole at the left side of the bottom tray [3].
6. Pull the LSP forward to fix it.

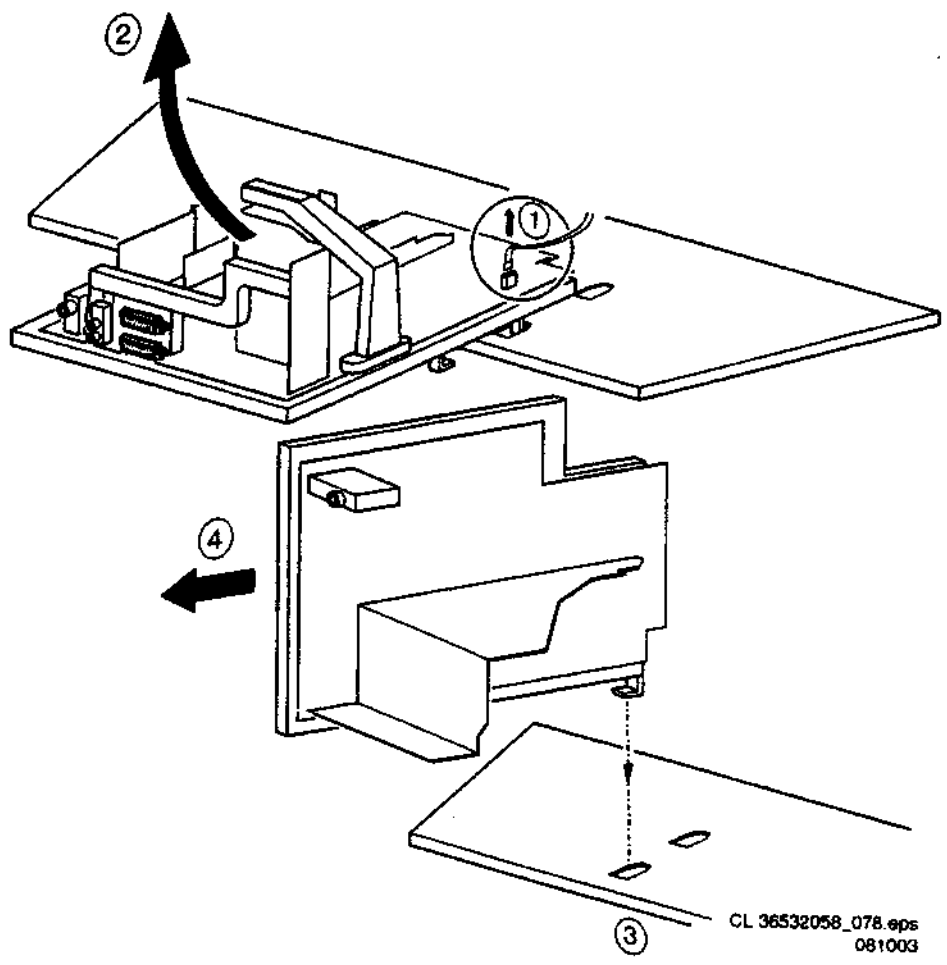

Figure 4-2 Service position 2

4.3.2 Small Signal Board (SSB)

In fact, there is no predefined service position for the SSB. Most test points are located on the A-side (side that is facing the tuner). If you have to replace ICs, you must take the complete SSB module out of the SIMM-connector.

Notes:

- For better access to the SSB, it is possible to order an "extension tool" with cables. You can use this service extension tool to connect a Small Signal Board (SSB) of an a02, A10, or EMG (EMx) chassis, via two "IDE" cables to the SIMM connector in the set. In this way, you can service the SSB more easily outside the TV set. You can order this tool under 12nc: 9965 000 14526.
- If necessary for the measurement, you can put the LSP in "service position 2" (as described above).

4.4 Assy / Board Removal

Sometimes, it can be necessary to swap a complete assy or Printed Wiring Board (PWB). How that can be done is explained below.

4.4.1 Top Control Assy/Panel

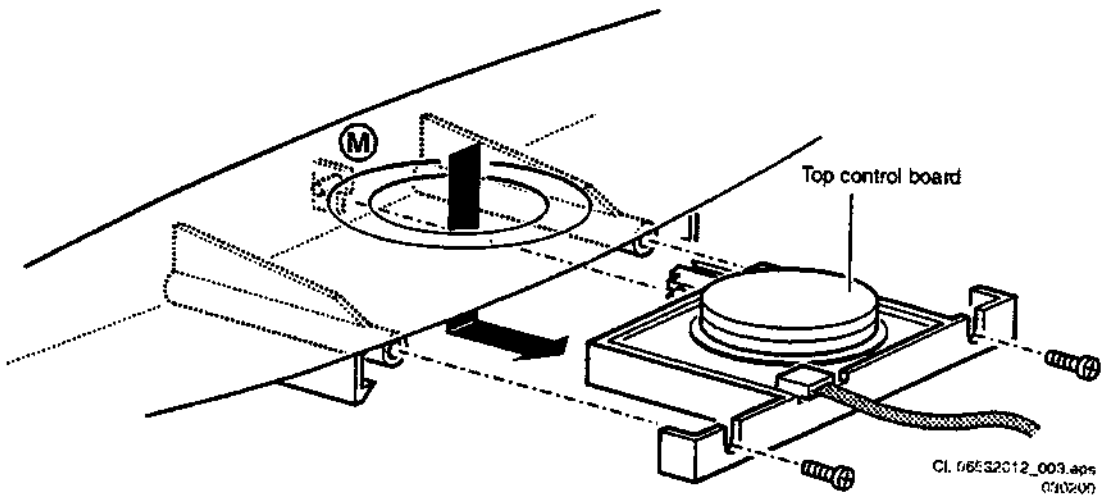

CL 06532012_003.eps
030200

Figure 4-3 Top control panel

1. Remove the two fixation screws, which hold the panel.
2. Pull the board backward (w.o.w. release it from the front hinge).
3. The board can easily be lifted out of the bracket after releasing the two fixation clamps at the connector side.

4.4.2 Side I/O Assy and Panel

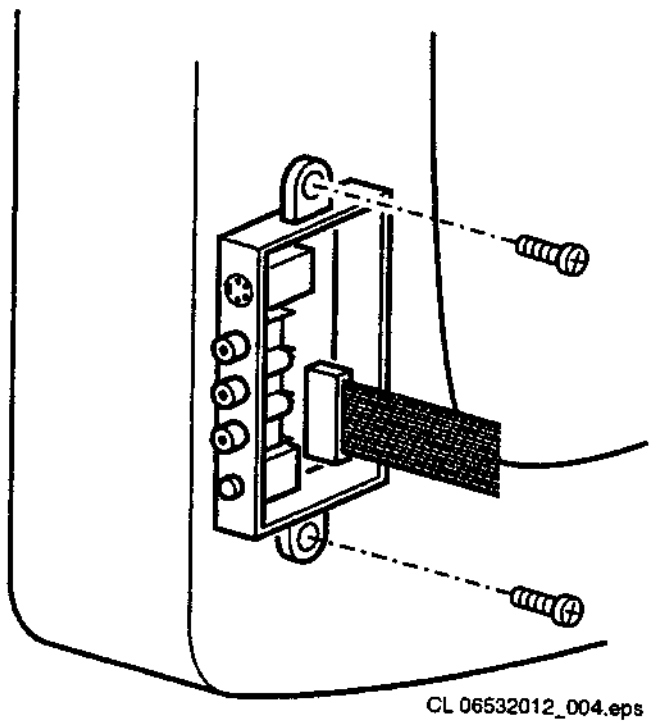

CL 06532012_004.eps
030200

Figure 4-4 Side-I/O panel

1. The complete Side I/O-assembly can easily be removed by unscrewing the two fixation screws.
2. The board can easily be lifted out of the bracket after releasing the two fixation clamps.

4.4.3 Mains Switch Assy/Panel

4.4.4 Accessing the Mains Switch/LED panel

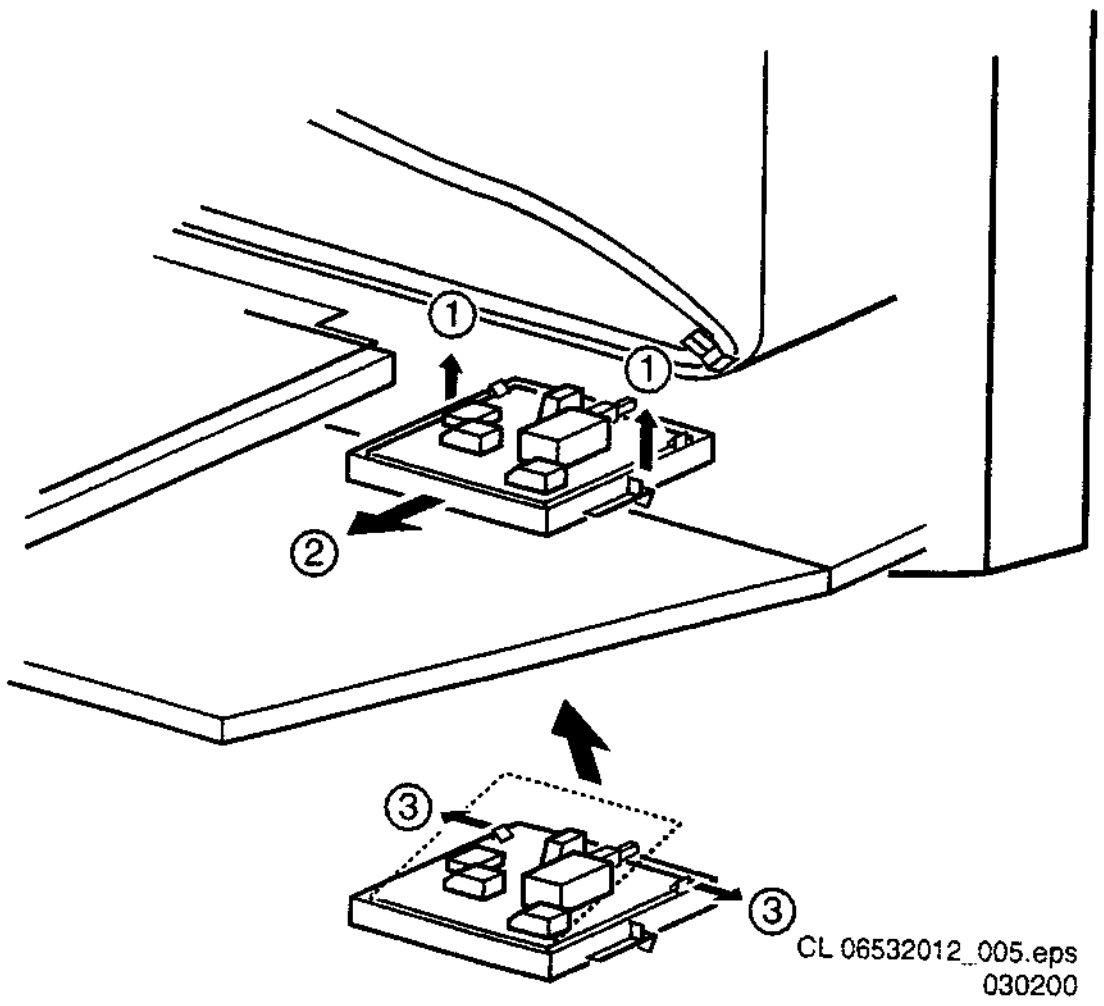

CL 06532012_005.eps
030200

Figure 4-5 Mains Switch/LED panel

1. Release the two fixation clamps (1) by pushing them upward.
2. At the same time, the complete assy must be pulled backward (2).
3. If the board has to be removed, release the two clamps at the sides of the bracket and lift panel out (3).

4.4.5 DAF Assy/Panel

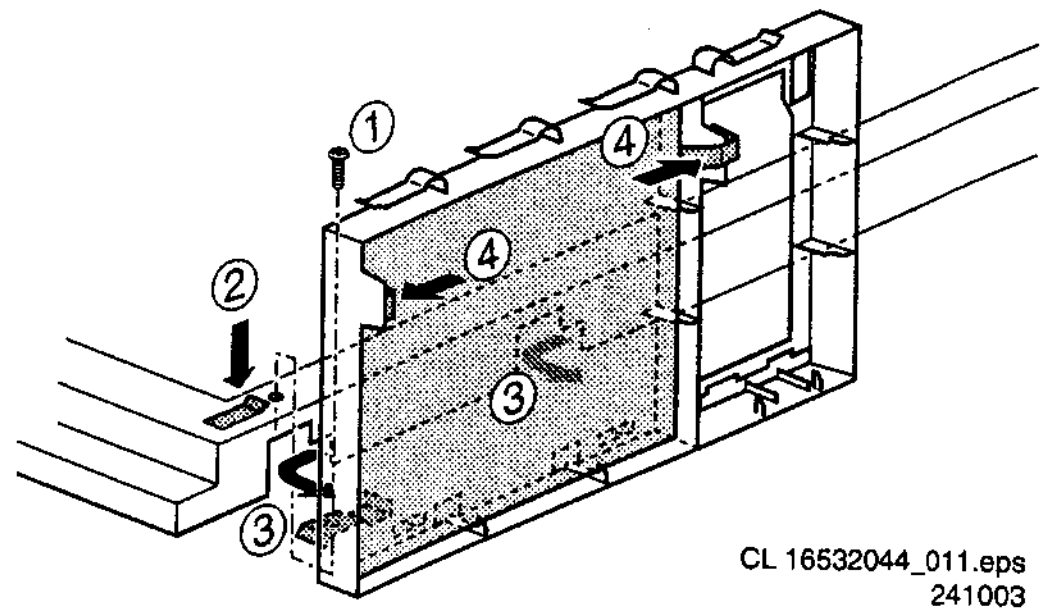

CL 16532044_011.eps
241003

Figure 4-6 DAF-module

1. Remove the fixation screw [1] (if present).
2. Push down the fixation clamp [2], and pull the complete bracket at the same time away from the CRT [3]. The module is now free from the LSP-bracket.

4.4.6 Small Signal Board (SSB)

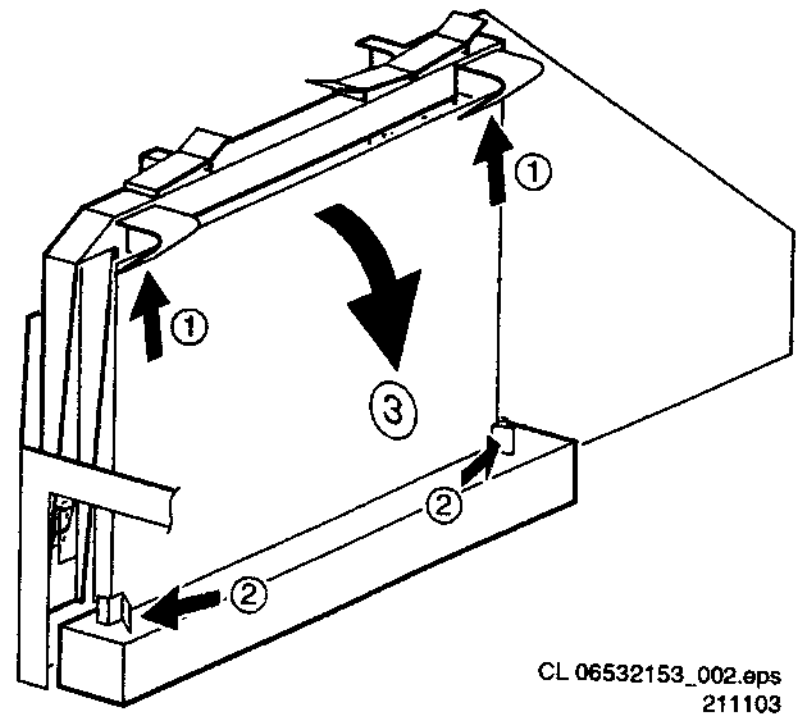

CL 06532153_002.eps
211103

Figure 4-7 SSB removal

1. Push the top of the SSB towards the LOT [1].
2. Due to the pressure, the two metal clamps at both sides of the SIMM-connector will release [2].
3. Take the complete SSB out [3].

4.4.7 Large Signal Panel (LSP)

1. Remove the SSB (see paragraph “Small Signal Board (SSB)” above).
2. Disconnect the necessary cables.
3. Remove the fixation screw, which is located nearby the SIMM-connector.
4. Release the fixation clamps on the left of the LSP-bracket (the board hinges at the right side).
5. Remove the board from the bracket.

4.5 Set Re-assembly

To re-assemble the whole set, do all processes in reverse order.
Be sure that, before the rear cover is mounted:

- The mains cord is mounted correctly in its guiding brackets.
- All wires/cables are returned in their original positions. This is very important due to the large “hot” area of the set

5. Service Modes, Error Codes, and Fault Finding

Index of this chapter:

1. Test points
2. Service Modes
3. Problems and solving tips (related to CSM)
4. ComPair
5. Error Codes
6. The blinking LED procedure
7. Protections
8. Repair tips
9. Software downloading

5.1 Test Points

See chapter 6 " Block Diagrams, Testpoint Overview, and Waveforms".

Perform measurements under the following conditions:

- Service Default Mode.
- Video: colour bar signal.
- Audio: 3 kHz left, 1 kHz right.

5.2 Service Modes

Service Default Mode (SDM) and Service Alignment Mode (SAM) offer several features for the service technician, while the Customer Service Mode (CSM) is used for communication between a Philips Customer Care Centre (P3C) and a customer.

There is also the option of using ComPair, a hardware interface between a computer (see requirements below) and the TV chassis. It offers the ability of structured troubleshooting, test pattern generation, error code reading, software version readout, and software upgrading.
Minimum requirements: a Pentium processor, Windows 95/98, and a CD-ROM drive (see also paragraph "ComPair").

5.2.1 Service Default Mode (SDM)

Purpose

- To create a pre-defined setting, to get the same measurement results as given in this manual.
- To override SW protections (only when SDM is activated via shorting the SDM pins on the SSB).
- To start the blinking LED procedure.
- Inspection of error buffer, life timer, and software version.

Specifications

- Tuning frequency: 475.25 MHz for PAL/SECAM.
- Colour system: SECAM L for France or PAL B/G for the rest of Europe.
- All picture settings at 50 % (brightness, colour, contrast).
- All sound settings at 50 %, except volume at 25 %.
- All service-unfriendly modes (if present) are disabled, like:
  - (Sleep) timer.
  - Child/parental lock.
  - Blue mute.
  - Automatic volume limiter (AVL).
  - Auto switch-off (when no video signal was received for 10 minutes).
  - Skip/blank of non-favourite pre-sets.
  - Hotel or hospital mode.
  - Local keyboard block.
  - Smart modes.
  - Auto store of personal presets.
  - Auto user menu time-out.

How to Activate SDM

Use one of the following methods:

- Use the standard RC-transmitter and key in the code "062596", directly followed by the "MENU" button.
  Note: It is possible that, together with the SDM, the main menu will appear. To switch it "off", push the "MENU" button again.
- Short circuit, during switch "on" of the set, the two solder pads on the SSB with the indication "FOR SERVICE". These solder pads are located at the "tuner" side of the SSB (just above the large BGA IC).
  Caution: If the SDM is activated via these pins, all the software-controlled protections are de-activated for 15 s. When these 15 s are expired, the set will shutdown to protection mode.
- Use the DST-emulation feature of ComPair.
- Use the "DEFAULT" button on the Dealer Service Tool (RC7150).

After activating this mode:

- "SDM" will appear in the upper right corner of the screen.
- Also, the error buffer, operating hours, and software version are displayed (can be toggled "on/off" with the "STATUS / OSD / [i+]" button).
- Blinking LED procedure will be started.
- All software-controlled protections are overridden for 15 s. When these 15 s are expired, the set will shutdown to protection mode.

Contents of SDM:

- **HRS.** Displays the accumulated total of operation hours (not the standby hours) in hexadecimal value.
- **SW.** Displays the date of the software and the software version of the ROM
  example: A02EB1_1.00 = AAABBC-X.YY.
  - **AAA**= chassis name.
  - **BB**= region and/or function name: E= Europe, A= Asia Pacific, U= NAFTA, L= LATAM, B= Basic, T= Top, P= PAL, N= NTSC, S= Stereo, M= Mono.
  - **C**= the language cluster number.
  - **X.Y**= the software version, where X is the main version number (different numbers are not compatible with one another) and Y is the sub version number (a higher number is always compatible with a lower number).
- **ERR** (followed by maximal 8 errors). The most recent error is displayed at the upper left (for an error explanation see paragraph "Error Codes").

How to navigate

- When you press the "MENU" button on the RC transmitter, the set will toggle between the SDM and the normal user menu (with the SDM mode still active in the background).
- When you press the "STATUS / OSD / [i+]" button on the RC transmitter, the set will toggle only display "SDM". This mode is useful when performing measurements, then the OSD info will not generate interference.

How to exit SDM

Use one of the following methods:

- Switch the set to STANDBY via a standard customer RC-transmitter (the error buffer is erased).
- Via a standard customer RC-transmitter: key in "00"-sequence (the error buffer is **not** erased).

5.2.2 Service Alignment Mode (SAM)

Purpose

- To perform alignments.
- To change option settings.
- To easily identify the used software version.
- To view operation hours.
- To display / clear the error code buffer.

Specifications

- Operating hours counter.
- Software version.
- Option settings.
- Error buffer reading and erasing.
- Software alignments.
- Disable service unfriendly modes.

How to activate SAM

Use one of the following methods:

- Via a standard RC transmitter: key in the code "062596" directly followed by the "STATUS / OSD / [i+]" button.
- Use the DST-emulation feature of ComPair.
- Press the "ALIGN" button on the DST while the set is in the normal operation

After activating this mode, "SAM" will appear in the upper right corner of the screen.

Contents of SAM:

- **HRS.** Displays the accumulated total of operation hours (not the standby hours) in hexadecimal value
  Note: every time the set is switched "on" by the mains switch or the RC, the timer is increased by 0.5.
- **SW.** Displays the software version of the ROM
  example: A02EB1_1.00 = AAABBC-X.YY.
  - **AAA**= chassis name.
  - **BB**= region and/or function name: E= Europe, A= Asia Pacific, U= NAFTA, L= LATAM, B= Basic, T= Top, P= PAL, N= NTSC, S= Stereo, M= Mono.
  - **C**= the language cluster number.
  - **X.Y**= the software version, where X is the main version number (different numbers are not compatible with one another) and Y is the sub version number (a higher number is always compatible with a lower number).
- **ERR** (followed by maximal 8 errors). The most recent error is displayed at the upper left (for an error explanation see paragraph "Error Codes").
- **CLEAR ERRORS.** When you press the "OK" button, the error buffer is reset.
- **OPTIONS.** Extra features for Service.
- **AKB.** Disable (off) or enable (on) the "black current loop" (AKB= Auto Kine Bias). For Vg2 alignment.
- **VSD.** Disable (off) or enable (on) the vertical deflection (VSD= Vertical Scan Disable).**Do not use** (will cause a protection). Is for future use.
- **TUNER.** This will activate the "TUNER" alignments sub-menu.
- **WHITE TONE.** This will activate the "WHITE TONE" alignments sub-menu.
- **GEOMETRY.** This will activate the "GEOMETRY" alignments sub-menu.
- **SOUND.** This will activate the "SOUND" alignments sub-menu.
- **SMART SETTINGS.** This will activate the "SMART SETTINGS" alignments sub-menu.
- **STORE.** This will save the new settings/alignments.
- **EEPROM TEST.** This will report if the SW checksum is OK. Convenient after SW upgrading.
- **VID RAM TEST.** This will check the continuity of the address bus and data bus of the Video RAM.
- **VG2.** This feature is not implemented yet. **Do not use.**

Note: Alignments are described in chapter 8 "Alignments".

How to navigate

- In SAM, you can select the menu items with the "CURSOR UP/DOWN" key on the RC-transmitter. The selected item will be highlighted. When not all menu items fit on the screen, move the "CURSOR UP/DOWN" key to display the next/previous menu items.
- With the "CURSOR LEFT/RIGHT" keys, it is possible to:
  - (De) activate the selected menu item.
  - Change the value of the selected menu item.
  - Activate the selected submenu.
- When you press the "MENU" button on the RC transmitter, the set will toggle between the SAM and the normal user menu (with the SAM mode still active in the background).

How to exit SAM

Use one of the following methods:

- Switch the set to STANDBY via the RC-transmitter (the error buffer is erased).
- Via a standard customer RC-transmitter: key in "00"-sequence (the error buffer is **not** erased).

5.2.3 Customer Service Mode (CSM)

Purpose

When a customer is having problems with his TV-set, he can call his dealer or the Philips helpdesk (P3C). The service technician can than ask the customer to activate the CSM, in order to identify the status of the set. Now, the service technician can judge the severity of the complaint. In many cases, he can advise the customer how to solve the problem, or he can decide if it is necessary to visit the customer.
The CSM is a **read only** mode; therefore, modifications in this mode are not possible.

How to activate CSM

Use one of the following methods:

- Press the "MUTE" button on the RC-transmitter **simultaneously** with any key on the TV for at least 4 seconds.
- Key in the code "123654" via the standard RC transmitter.

Notes:

- Activation of the CSM is only possible if there is no (user) menu on the screen!
- During CSM, sound volume is set to 25% of the scale, "Smart Sound" is set to "Theatre" mode, and "Smart Picture" is set to "Rich/Movies" mode temporarily to ensure a good picture and sound of the working set. After leaving CSM, the original settings are restored.

How to navigate

By means of the "CURSOR-DOWN/UP" knob on the RC-transmitter, you can navigate through the menus.

Contents of CSM

The following information is displayed on screen:

- Text "CSM" on the first line.
- Line number for every line (to make CSM language independent).
- Option code information.
- Configuration information.
- Service-unfriendly modes.

1. **28PW8609/12** (if present). Type/model number according to the Philips standard.
2. **SOFTWARE.** Software version AAABBC-X.YY.
3. **HOURS ON.** Operating hours (in hexadecimal).
4. **CODES.** Shows the contents of the error buffer (the word "error" may not be used on this screen, instead "codes" is used).
5. **OP.** Option code information.
6. **SYSTEM.** "XXXXXX" is the (colour) system that is set for this preset (this is not applicable to NAFTA and AP-NTSC models).
7. **NO SIGNAL.** No "ident" signal present (VID status bit in MPIF) on selected source.
8. **TIMER ON** (if present). Timer (in "FEATURE" menu) is activated.
9. **CHANNEL LOCKED** (if present). Child Lock is activated (i.e. when local keyboard is locked).
10. **NOT PREFERED** (if present). Current channel is defined as skipped or non-preferred.

11. **HOTELMODE ON/OFF** (if present). Shows if the HOTEL mode is activated (only for Europe and AP).
12. **SOURCE.** Selected source before entry of CSM; XXX (channel no.), external source name (i.e. AV1, CVI, EXT1, etc...).
13. **SOUND.** Selected SOUND mode; "XX"= MONO, NICAM, STEREO, L1 (Language 1), L2 (Language 2), SAP, VIRTUAL, or DIGITAL prior entry to CSM.
14. **VOLUME.** Volume level before entry of CSM (typ. 00..100).
15. **BALANCE.** Balance level before entry of CSM (typ. -50..50).
16. **BRIGHTNESS.** Brightness level before entry of CSM (typ. 00..100).
17. **COLOR.** Colour level before entry of CSM (typ. 00..100).
18. **CONTRAST.** Contrast level before entry of CSM (typ. 00..100).
19. **HUE** (if present). Hue level before entry of CSM (typ. -50..100).

How to exit CSM

Use one of the following methods:
- After you press a key on the RC-transmitter (with exception of the "CHANNEL", "VOLUME" and digit (0-9) keys), or
- After you switch the TV-set "OFF" with the mains switch.
- After 15 min. no RC or local keyboard actions.

5.3 Problems and Solving Tips (related to CSM)

Note: Below described problems are all related to the TV settings. The procedures to change the value (or status) of the different settings are described above. New value(s) are automatically stored.

5.3.1 Picture Problems

Picture too dark
1. Press SMART PICTURE on the RC. In case the picture improves, increase the "Brightness" or the "Contrast" value. The new value(s) are automatically stored (in "personal" pre-set) for all TV channels.
2. Check in CSM lines BRIGHTNESS and/or CONTRAST. If the value of line BRIGHTNESS is low (< 10) or the value of line CONTRAST is low (< 10), increase them.

Picture too bright
1. Press SMART PICTURE on the RC. In case the picture improves, decrease the "Brightness" or the "Contrast" value. The new value(s) are automatically stored (in "personal" pre-set) for all TV channels.
2. Check in CSM lines BRIGHTNESS and/or CONTRAST. If the value of line BRIGHTNESS is high (> 40) or the value of line CONTRAST is high (> 50), decrease the "Brightness" or the "Contrast" value.

White line around picture elements and text
1. Press SMART PICTURE on the RC. In case the picture improves, decrease the "Sharpness" value. The new value is automatically stored (in "personal" pre-set) for all TV channels.
2. Check in CSM line SHARPNESS. Decrease the "Sharpness" value. The new value is automatically stored for all TV channels.

No picture

Check in CSM line 7. In case this line shows NO SIGNAL, check the aerial cable/aerial system.

Blue picture

No proper signal is received. Check the aerial cable/aerial system.

Blue picture and/or unstable picture

A scrambled or decoded signal is received.

Black and white picture

Check in CSM line COLOR. In case the value is low (< 10), increase the "Color" value. The new value is automatically stored for all TV channels.

No colours/colour lines around picture elements or colours not correct or unstable picture
1. Check in CSM line SYSTEM. If a "strange" system pops up, something has gone wrong during installation. Re-install the channel.
2. In case line SYSTEM is "FRANCE", the installed system for this pre-set is SECAM, while PAL is required. Install the required program again: open the installation menu and perform manual installation. Select system "West Europe".

Menu text not sharp enough
1. Press "SMART PICTURE". In case picture improves, decrease the "Contrast" value. The new value(s) are automatically stored for all TV channels.
2. Check in CSM line CONTRAST. If the value of this line is high (> 50), decrease the "Contrast" value.

5.3.2 Sound Problems

No sound from left and right speaker

Check in CSM line VOLUME. If the value is high, increase the value of "Volume". The new value(s) are automatically stored (in "personal" pre-set) for all TV channels.

Sound too loud for left and right speaker

Check in CSM line VOLUME. If the value is low, decrease the value of "Volume". The new value(s) are automatically stored (in "personal" pre-set) for all TV channels.

5.4 ComPair

5.4.1 Introduction

ComPair (Computer Aided Repair) is a service tool for Philips Consumer Electronics products. ComPair is a further development on the European DST (service remote control), which allows faster and more accurate diagnostics. ComPair has three big advantages:
- ComPair helps you to quickly get an understanding on how to repair the chassis in a short time by guiding you systematically through the repair procedures.
- ComPair allows very detailed diagnostics (on I^2C level) and is therefore capable of accurately indicating problem areas. You do not have to know anything about I^2C commands yourself because ComPair takes care of this.
- ComPair speeds up the repair time since it can automatically communicate with the chassis (when the microprocessor is working) and all repair information is directly available. When ComPair is installed together with the SearchMan electronic manual of the defective chassis, schematics and PWBs are only a mouse click away.

5.4.2 Specifications

ComPair consists of a Windows based faultfinding program and an interface box between PC and the (defective) product. The ComPair interface box is connected to the PC via a serial or RS232 cable.

For this chassis, the ComPair interface box and the TV communicate via a bi-directional service cable via the service connector.

The ComPair faultfinding program is able to determine the problem of the defective television. ComPair can gather diagnostic information in two ways:

- **Automatic** (by communication with the television): ComPair can automatically read out the contents of the entire error buffer. Diagnosis is done on I2C level. ComPair can access the I2C bus of the television. ComPair can send and receive I2C commands to the micro controller of the television. In this way, it is possible for ComPair to communicate (read and write) to devices on the I2C busses of the TV-set.
- **Manually** (by asking questions to you): Automatic diagnosis is only possible if the micro controller of the television is working correctly and only to a certain extends. When this is not the case, ComPair will guide you through the faultfinding tree by asking you questions (e.g. Does the screen give a picture? Click on the correct answer: YES / NO) and showing you examples (e.g. Measure test-point I7 and click on the correct oscillogram you see on the oscilloscope). You can answer by clicking on a link (e.g. text or a waveform picture) that will bring you to the next step in the faultfinding process.

By a combination of automatic diagnostics and an interactive question / answer procedure, ComPair will enable you to find most problems in a fast and effective way.

Beside fault finding, ComPair provides some **additional features** like:

- Up- or downloading of pre-sets.
- Managing of pre-set lists.
- Emulation of the Dealer Service Tool (DST).
- If both ComPair and SearchMan (Electronic Service Manual) are installed, all the schematics and the PWBs of the set are available by clicking on the appropriate hyperlink.
  Example: *Measure the DC-voltage on capacitor C2568 (Schematic/Panel) at the Mono-carrier.*
  - Click on the “Panel” hyperlink to automatically show the PWB with a highlighted capacitor C2568.
  - Click on the “Schematic” hyperlink to automatically show the position of the highlighted capacitor.
- SW upgrading

5.4.3 Stepwise Start-up

This is realised via ComPair and is very helpful when a **protection** is activated (see also chapter “Protections”). Under normal circumstances, a fault in the power supply, or an error during start-up, will switch the television to protection mode. ComPair can take over the initialisation of the television. In this way, it is possible to distinguish which part of the start-up routine (hence which circuitry) is causing the problem. Take notice that the transition between two steps can take some time, so give the set some time to reach a stable state. During the transition time, the LED can blink strangely.

On activating Service mode, protections and other errors can be trapped by powering the TV in stepwise fashion as explained below. The "stepwise start-up" mode is done in the specified sequence. Before activating this mode, all the protections are disabled and are only enabled step-by-step, to trap the errors more appropriately.

The following steps are involved.

Step 0: Standby.

- Pre-condition: The set is in protection mode.
- Post-condition: The set is switched to the stepwise start-up mode. Only the necessary Standby Supply is present, all other supplies are switched "off".

Step 1: Power "on".

- Pre-condition: All protections are disabled, sound amplifiers are muted, and general initialisation is done.
- Post-condition: 8V and 5V supplies are "on". Degaussing is "on" and switched "off" after 3 s. The supply fault protections are enabled.

Step 2: Initialised.

- Pre-condition: Step 1 is done. No supply protection faults are detected.
- Post-condition: ADOC, MPIF, and Tuner components are initialised.

Step 3: Deflection "on".

- Pre-condition: Step 2 is done. No protection faults detected.
- Post-condition: Deflection is switched "on". The horizontal deflection fault protections are enabled.

Step 4: TV "on".

- Pre-condition: Step 3 is done. No protection faults detected.
- Post-condition: Picture tube is switched "on". Sound amplifiers are demuted. The X-ray/beam current fault protections are enabled.

Note: When the set is in stepwise mode and, due to stepping-up, a protection is activated, the set will really go into protection (blinking LED). The set will not leave the stepwise-mode however. If state X is the state where the set went to protection, stepwise start-up will return to state X-1. At state (X-1) diagnostic measurements can be performed. Also, in the short time, the set is in state X but not in protection, you can also do some measurements.

5.4.4 How To Connect

1. First, install the ComPair Browser software (see the Quick Reference Card for installation instructions).
2. Connect the RS232 interface cable between a free serial (COM) port of your PC and the PC connector (marked with “PC”) of the ComPair interface.
3. Connect the mains adapter to the supply connector (marked with “POWER 9V DC”) of the ComPair interface.
4. Switch the ComPair interface “OFF”.
5. Switch the television set “OFF” with the mains switch.
6. Connect the ComPair interface cable between the connector on the rear side of the ComPair interface (marked with “I2C”) and the ComPair connector at the rear side of the TV.
7. Plug the mains adapter in a mains outlet, and switch the interface “ON”. The green and red LEDs light up together. The red LED extinguishes after approx. 1 second while the green LED remains lit.
8. Start the ComPair program and read the “Introduction” chapter.

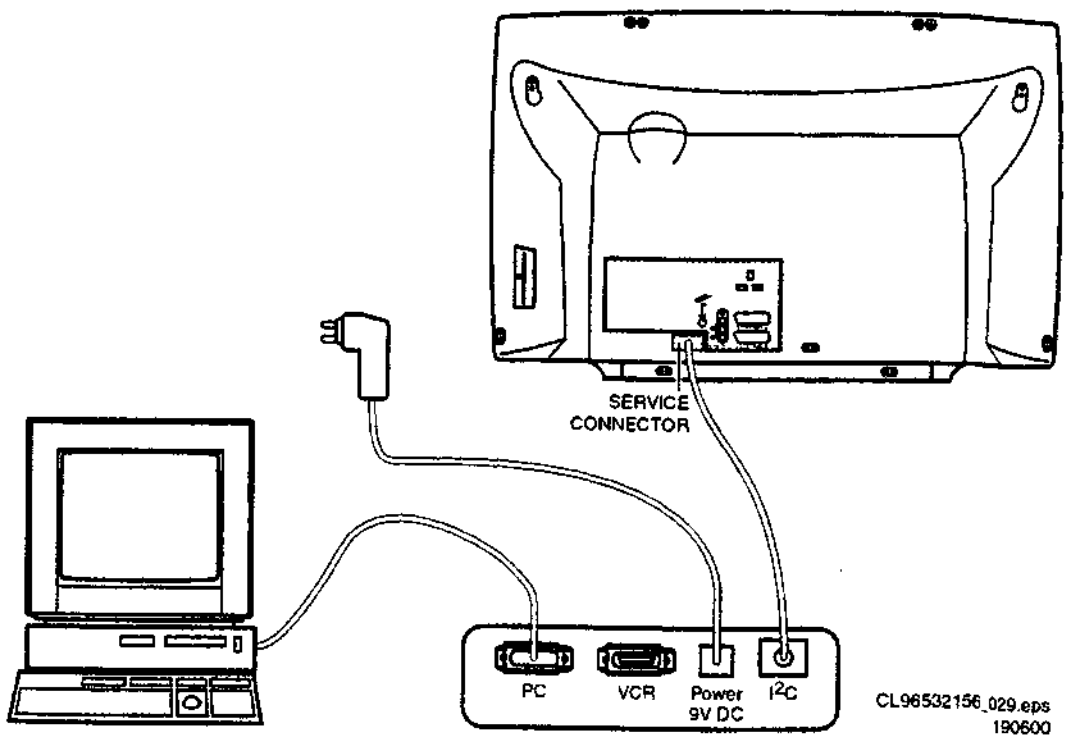

Figure 5-1 ComPair Interface connection

5.4.5 How To Order

ComPair order codes:

- Starter kit ComPair32/SearchMan32 software and ComPair interface (excl. transformer): 3122 785 90450.
- ComPair interface (excluding transformer): 4822 727 21631.
- Starter kit ComPair32 software (registration version): 3122 785 60040.
- Starter kit SearchMan32 software: 3122 785 60050.
- ComPair32 CD (2003 update): 3122 785 60110.
- SearchMan32 CD (2003 update): 3122 785 60120.
- ComPair interface cable: 3122 785 90004.
- ComPair firmware upgrade IC: 3122 785 90510.
- Transformer Europe: 4822 727 21632.
- Transformer UK: 4822 727 21633.

5.5 Error Codes

5.5.1 Introduction

The error code buffer contains all detected errors since the last time the buffer was erased. The buffer is written from left to right, new errors are logged at the left side, and all other errors shift one position to the right.
When an error has occurred, the error is added to the list of errors, provided the list is not full or the error is a protection error.
When an error occurs and the error buffer is full, then the new error is not added, and the error buffer stays intact (history is maintained), except when the error is a protection error.
To prevent that an occasional error stays in the list forever, the error is removed from the list after 50+ operation hours.
When multiple errors occur (errors occurred within a short time span), there is a high probability that there is some relation between them.

5.5.2 How to read the Error Buffer

Use one of the following methods:

- On screen via the SAM (only if you have a picture).
  Examples:
  - **0 0 0 0**: No errors detected
  - **6 0 0 0**: Error code 6 is the last and only detected error
  - **9 6 0 0**: Error code 6 was first detected and error code 9 is the last detected error
- Via the blinking LED procedure (when you have no picture). See next paragraph.
- Via ComPair.

5.5.3 How to clear the Error Buffer

Use **one** of the following methods:

- By activation of the “CLEAR ERRORS” command in the SAM menu.
- With a normal RC, key in sequence “MUTE” followed by “062599” and “OK”.
- When you transmit the commands “DIAGNOSE” - “99” - “OK” with ComPair (or with a DST).
- If the content of the error buffer has not changed for 50+ hours, it resets automatically.

5.5.4 Error Codes

Error codes are required to indicate failures in the TV set. In principle a unique error is available for every:

- I2C device error.
- I2C bus error (for every bus containing two or more I2C devices).
- Protection error (e.g. +8V protection or Horizontal protection).
- Error not related to an I2C device, but of importance (e.g. BC-loop, RAM error).

Table 5-1 Error Table

Error	Description
0	No error
1	Horizontal Protection (via NOHFB bit in ADOC)
3	+8V error (missing/protection active by checking MPIF ASUP bit))
4	X-ray/High beam current protection signal (via XPROT bit in ADOC)
5	Hardware Protection is active (same as EMG)
7	Under-voltage protection
11	MPIF I2C communication failure / MPIF test failed
12	BC-loop not stabilised within the time limit (i.e. after timer is expired)
13	NVM I2C communication failure
14	Main tuner I2C failure UV13xx
17	3D Combfilter I2C communication failure
18	PIP Tuner I2C failure
19	2fH component input I2C failure (PCF8574)
21	PIP IF demodulator IC TDA988x communication failed (only for PIP/DW sets)
22	Flash over protection error (to register CRT flash-overs, via FPR bit in ADOC)

Service tips:

- In case of non-intermittent faults, clear the error buffer before you begin the repair. This to ensure that old error codes are no longer present. Before clearing the buffer, write down the content, as this history can give you significant information.
- If possible, check the entire contents of the error buffer. In some situations, an error code is only the result of another error code and not the actual cause (e.g., a fault in the protection detection circuitry can also lead to a protection).

5.6 The Blinking LED Procedure

5.6.1 Introduction

Via this procedure, you can make the contents of the error buffer visible via the front LED. This is especially useful for fault finding, when there is no picture.

When the SDM is activated, the front LED will show (blink) the contents of the error-buffer. Error-codes > 10 are shown as follows:

1. A long blink of 750 ms (which is an indication of the decimal digit),
2. A pause of 1500 ms,
3. “n” short blinks (where “n” = 1 - 9),
4. When all the error-codes are displayed, the sequence finishes with a LED blink of 3000 ms,
5. The sequence starts again.

Example: Error 12 9 6 0 0.
After activation of the SDM, the front LED will show:

1. 1 long blink of 750 ms (which is an indication of the decimal digit) followed by a pause of 1500 ms,
2. 2 short blinks of 250 ms, followed by a pause of 3000 ms,
3. 9 short blinks of 250 ms, followed by a pause of 3000 ms,
4. 6 short blinks of 250 ms, followed by a pause of 3000 ms,
5. 1 long blink of 3000 ms to finish the sequence,
6. The sequence starts again.

5.6.2 How to activate

Use one of the following methods:

- Activate the SDM (only via soldering pads marked “FOR SERVICE” on the SSB). The blinking front LED will show the entire contents of the error buffer (this works in “normal operation" mode and in "protection" mode). In order to avoid confusion with RC5 signal reception blinking, this LED blinking procedure is terminated when an RC5 command is received.

- Transmit the commands "MUTE", "06250x", and "OK" with a normal RC (where "x" is the position in the error buffer that has to be displayed). With x= 1, the last detected error is shown, x= 2 the second last error, etc.... When x= 0, all errors are shown.
- "DIAGNOSE X" with the DST (where "x" is the position in the error buffer that has to be displayed). With x= 1, the last detected error is shown, x= 2 the second last error, etc.... When x= 0, all errors are shown.

Note: It can take some seconds before the blinking LED starts.

5.7 Protections

5.7.1 Introduction

Fault protections are introduced to avoid unacceptable temperature rising and burning hazards. If a fault situation is detected, an error code will be generated and if necessary, the set is put in protection mode.
The protection mode is indicated by the blinking of the front LED at a frequency of 3 Hz (or by a coded blinking in special cases). For the customer, it is made impossible to switch "on" the set during a protection.
It is possible to determine the type of fault by interpreting the blinking pattern of the LED indicator. It is also possible to read out the error codes from the NVM via ComPair. It is possible to de-activate the protection states in the Service Default Mode.

The following protections are implemented:

Table 5-2 Protections overview

Protection	Detection method	Bit name	Detection
Under Voltage	Via ADC (KB)	ADC (KB)	ADC input
+8V Supply	Via MPIF_IRQ	ASUP	MPIF internal register
Horizontal fly-back	Via interrupts	NOHFB	ADOC internal register (DOP)
X-ray	Via interrupts	XPROT	ADOC internal register (DOP)
Beam Current	Via interrupts	BCF	ADOC internal register (DOP)
Flash	Hardware ctrl	-	Hardware
Arc	Hardware ctrl	-	Hardware
Vertical	Hardware ctrl	-	Hardware
East/West	Hardware ctrl	-	Hardware
Bridge coil	Hardware ctrl	-	Hardware

The protections are split up in the following order:

- I2C related protections.
- ADOC related protections (via polling on I/O pins or via algorithms).
- DOP related protections (mainly for deflection items).
- Hardware errors that are not sensed by the OTC (e.g. vertical flyback protection, bridge coil protection, E/W protection, arcing protection).

All faults detected are re-checked five times before the protection mode is triggered. It should be noted that supply fault detection/protection are enabled only after the chassis power supply has been established. Likewise, after the line drive starts, the deflection detection/protection must be enabled. To prevent false activation of protection mode during power mode transitions, interrupts related to supply fault and deflection fault are disabled.

5.7.2 I2C Related Protections

In normal operation, some registers of the I2C controlled ICs are refreshed every 200 ms. During this sequence, the I2C busses and the I2C ICs are checked.
An I2C protection will take place if the SDA and SCL lines are short-circuited to ground, or to each other. An I2C error will also occur, if the power supply of the IC is missing.

5.7.3 ADOC Related Protections

If a protection is detected at an ADOC input, the uP will start to scan all protection inputs every 200 ms for five times. If the protection on one of the inputs is still active after 1 s, the microprocessor will put the set in the protection mode. Before the scanning is started, a so-called "ESD refresh" is carried out. This is done, because the interrupt on one of the inputs is possibly caused either by a flash or by ESD. As a flash or ESD can influence IC settings, the key ICs are initialised again, to ensure the normal picture and sound conditions of the set.

Under Voltage Protection
The under voltage protection is needed due to the non-isolated chassis architecture used in A02. Whenever there is a short circuit in the Deflection yoke coil or in the Audio power supply, the averaged Horizontal Flyback Voltage (HFB_XRAY_PROT) will fall. After signal conditioning, this voltage is fed to the "KEYBOARD_ADC" input. When this input of the MIPS controller is less than a certain level, the under voltage protection is activated. This is done by the normal keyboard polling mechanism.
The protection mode is activated after five consecutive occurrences. Response time required is 2 s. This is to avoid set going to under voltage protection mode during start up, since the HFB will only be stable w.r.t. mains on for about 1.6 s.

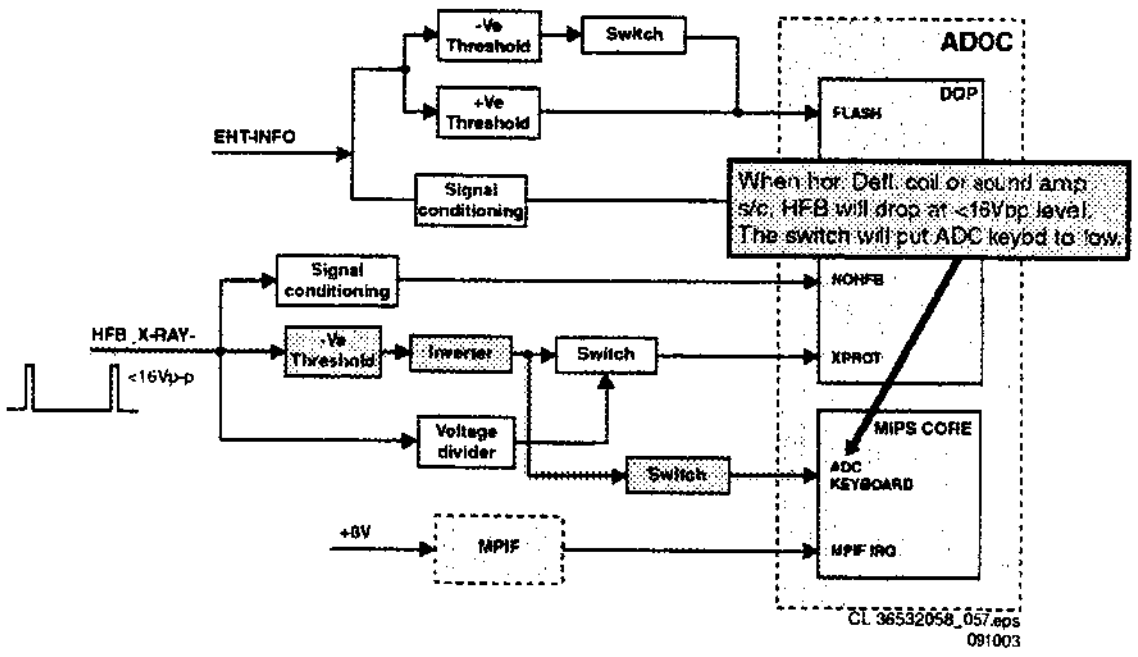

Figure 5-2 Under Voltage Protection

+8V Protection
Hardware is employed for the detection of +8V supply fault. A hardware interrupt (MPIF-IRQ) is generated by the MPIF when the +8V supply falls below the IC specification.
To avoid false detection, the corresponding interrupt sub routine checks the status of "ASUP" bit in the MPIF status register for five times consecutively with an interval of 200 ms before triggering the protection mode. Response time required is 1.2 s.

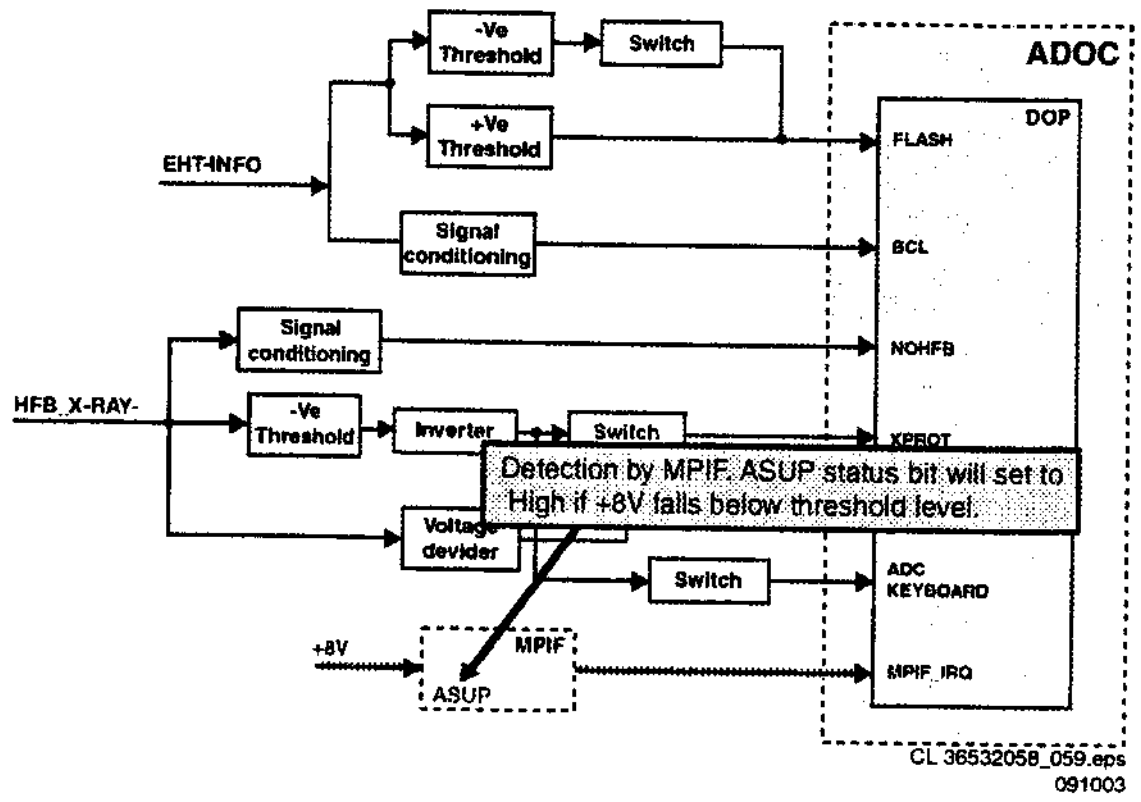
-Ve Threshold
Switch
+Ve Threshold
EHT-INFO
Signal conditioning
Signal conditioning
HFB_X-RAY-
-Ve Threshold
Inverter
Switch
Voltage devider
Switch
+8V
MPIF
ASUP
ADOC
DOP
FLASH
BCL
NOHFB
XPROT
ADC KEYBOARD
MPIF_IRQ

Detection by MPIF. ASUP status bit will set to High if +8V falls below threshold level.

CL 36532058_059.eps
091003

Figure 5-3 +8V Protection

5.7.4 DOP Related Protections

The uP reads every 200 ms the status register of the DOP (via the I2C bus). If a protection signal is detected on one of the inputs of the DOP, the relevant error bit in the register is set to "high". If this error bit is still "high" after 1 s, the OTC will store the error code in the error buffer of the NVM and, depending on the relevancy of the error bit, the set will either go into the protection mode or not.

Horizontal Fly Back Protection

Hardware is employed for the detection of a horizontal deflection fault. The DOP core generates a hardware interrupt when consecutive three horizontal flyback pulses are not received at the HFB input of the DOP block of the ADOC IC. To avoid false detection, the corresponding interrupt sub routine checks the status of "NOHFB" status bit in the DOP core for five times consecutively with an interval of 50 ms before triggering the protection mode. The response time for this protection needed is 300 ms.

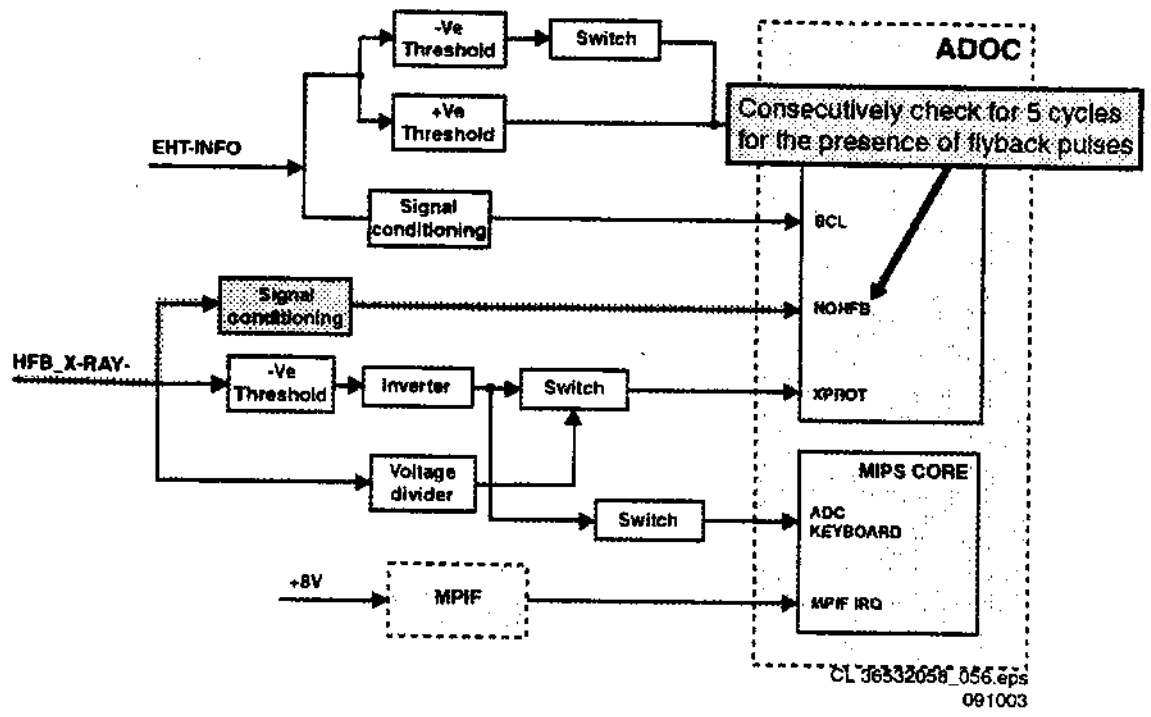
-Ve Threshold
Switch
+Ve Threshold
EHT-INFO
Signal conditioning
Signal conditioning
HFB_X-RAY-
-Ve Threshold
Inverter
Switch
Voltage divider
Switch
+8V
MPIF
ADOC
BCL
NOHFB
XPROT
MIPS CORE
ADC KEYBOARD
MPIF IRQ

Consecutively check for 5 cycles for the presence of flyback pulses

CL 36532058_056.eps
091003

Figure 5-4 Horizontal Fly Back Protection

X-Ray Protection (Over Voltage, USA only)

Hardware is employed for the detection of X-ray fault. A hardware interrupt is generated by the DOP core when the "XPROT" input of ADOC IC is pulled "HIGH" (flyback pulses are > 27 V_pp).

To avoid false detection, the corresponding interrupt sub routine checks the status of "XPROT" bit in DOP core for five times consecutively with an interval of 50 ms before triggering the protection mode. It should be noted that the "XPROT" status is not reset on reading. It should be cleared by the software explicitly.

Once the XRAY protection status is confirmed, the "PRD" bit has to be set to "1" by software. This enables an automatic stop of the H-out via Slow Stop initiated by auto-clearing the DFL bit. Now, the protection mode is activated.

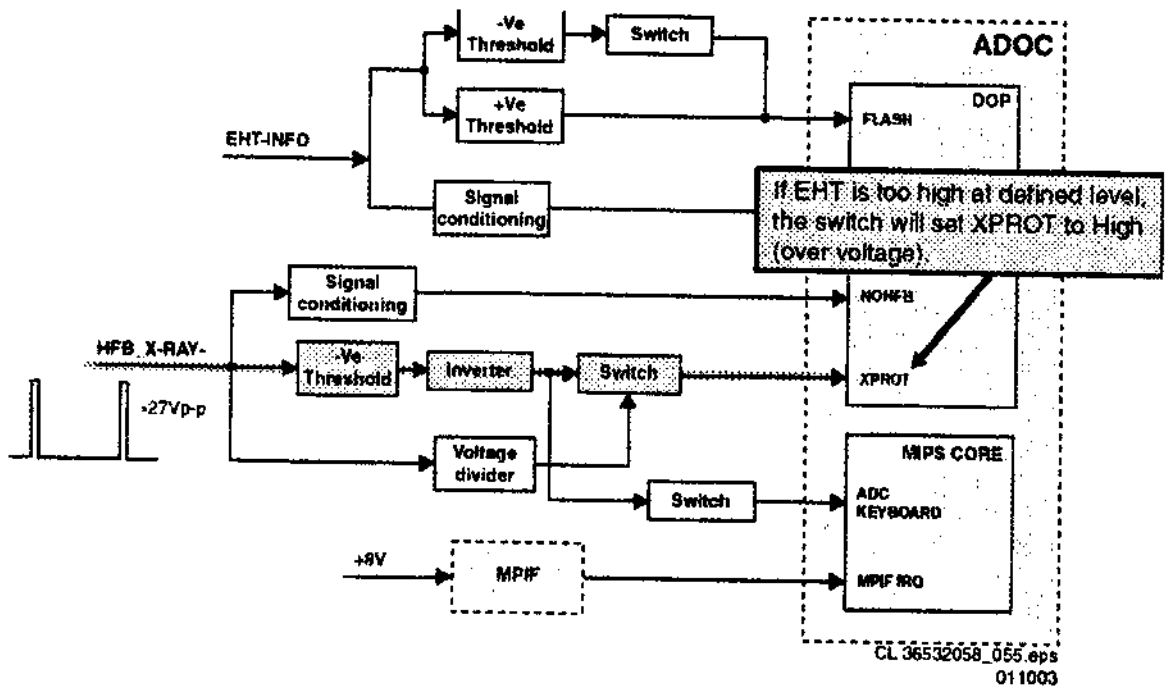
-Ve Threshold
Switch
+Ve Threshold
EHT-INFO
Signal conditioning
Signal conditioning
HFB_X-RAY-
>27Vp-p
-Ve Threshold
Inverter
Switch
Voltage divider
Switch
+8V
MPIF
ADOC
DOP
FLASH
NOHFB
XPROT
MIPS CORE
ADC KEYBOARD
MPIF IRQ

If EHT is too high at defined level, the switch will set XPROT to High (over voltage).

CL 36532058_055.eps
011003

Figure 5-5 X-Ray Protection

Beam Current Protection

A hardware interrupt is generated by the DOP core when the current at the BCL input of the ADOC IC exceeds the limit. To avoid false detection, the corresponding interrupt sub routine checks the status of "BCF" bit in DOP core for five times consecutively with an interval of 50 ms before triggering the protection mode. Once the BCL protection status is confirmed, the "PRD" bit has to be set to "1" by software. This enables an automatic stop of the H-out via Slow Stop initiated by auto-clearing the "DFL" bit. Now, the protection mode is activated.

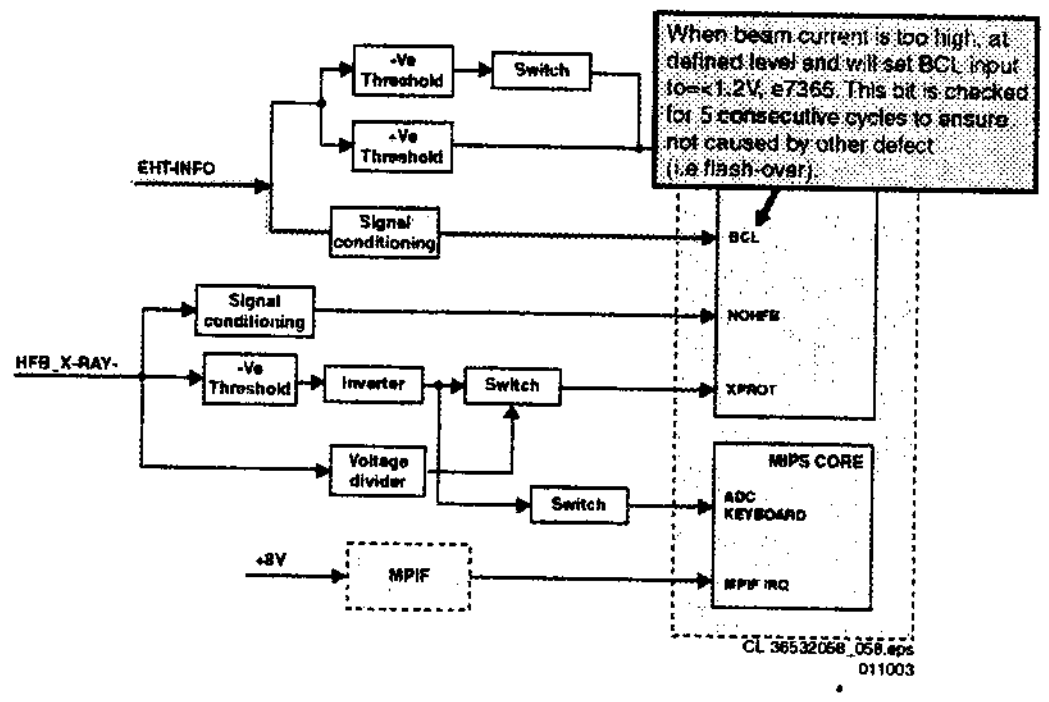
-Ve Threshold
Switch
+Ve Threshold
EHT-INFO
Signal conditioning
Signal conditioning
HFB_X-RAY-
-Ve Threshold
Inverter
Switch
Voltage divider
Switch
+8V
MPIF
BCL
NOHFB
XPROT
MIPS CORE
ADC KEYBOARD
MPIF IRQ

When beam current is too high, at defined level and will set BCL input to=<1.2V, e7365. This bit is checked for 5 consecutive cycles to ensure not caused by other defect (i.e flash-over).

CL 36532058_058.eps
011003

Figure 5-6 Beam Current Protection

Flash Protection

Flash detection is used to shutdown the set only if the Flash occurs more than 5 times and is persistent. Therefore, this is a method to protect the set from undue electrical stress because of picture tube flashes. The flash detector circuitry uses the "EHT_INFO" signal as input. Its output is connected to the "FLASH" input of the DOP block of the ADOC.

When the "FLASH" input is pulled "HIGH", the ADOC's horizontal drive output stops immediately and the "FPR" status bit of the DOP core is set to "1". The status is latched until readout. With the absence of any other disturbances, the horizontal drive output will restart after the "FLASH" input is "LOW" again. No software interaction is required in this case. The "FPR" bit has to be readout by polling at an interval of 500 ms. If the "FPR" status bit has been set to "1" for more than 5 times consecutively, then the protection mode has to be triggered. Setting the "FPR" bit for less than 5 times by the "FLASH" input does not need to trigger the protection mode (shutting down of the H-drive should be enough).

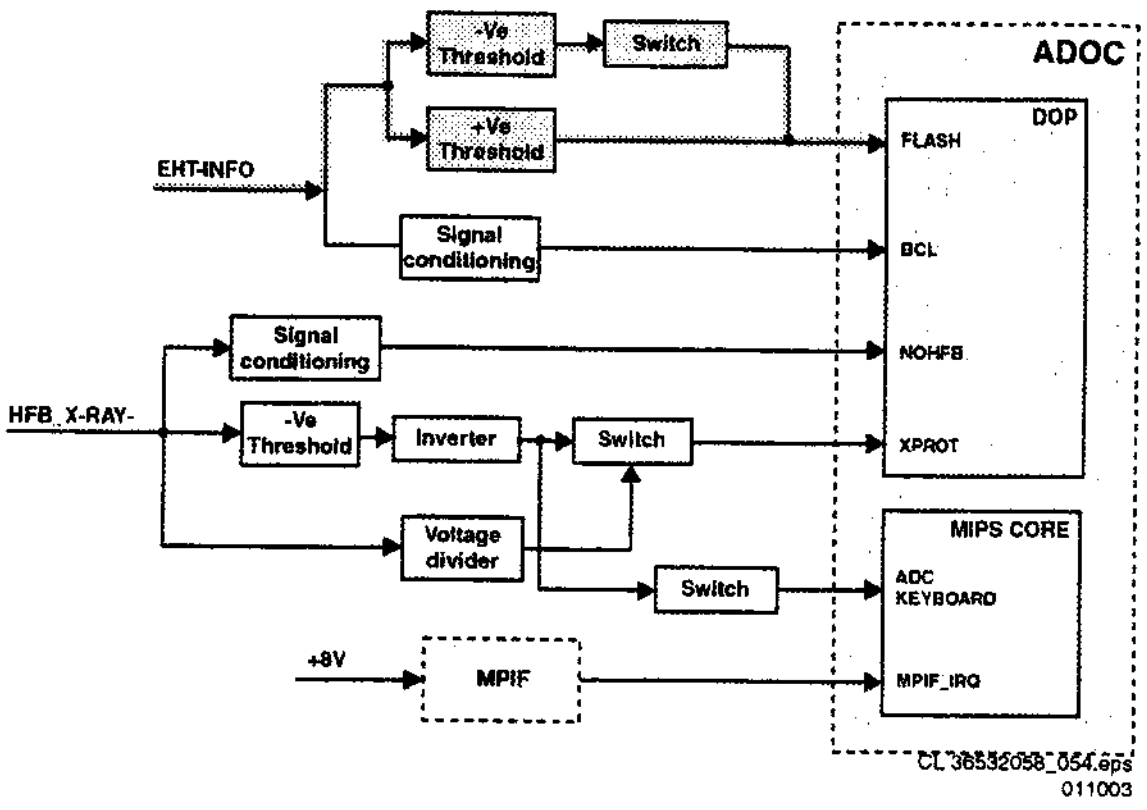

Figure 5-7 Flash Protection

5.7.5 Hardware Related Protections

Due to the architecture (read "hot" deflection), some protections cannot be sensed by the microprocessor. These protections will lead to a protection on set level (Standby mode and blinking LED).

Arc Protection
If there are "open" connections (e.g. bad solder joints) in the high-energy deflection circuitry, this can lead to damaging effects (read: fire). For that reason, the E/W current is sensed (via 3479//3480). If this current becomes too high, the "thyristor" circuit (TS7653 and TS7654) is triggered. TS7442 is switched "on" and TS7443 is forced into conduction. The "SUP-ENABLE" signal is shorted now to ground level, which will force the Main Power Supply to Standby mode. This prevents further arcing.

Vertical Protection
If the frame stage generates no pulses, TS7641 will block. TS7443 is now switched "on", which will lead to Standby mode. Therefore, in normal operation condition, TS7641 and TS7652 are conducting, while TS7443 is blocked.

EW protection
Several faults in the defection circuit can cause excessive currents through MOSFET 7480. The temperature of this device can become too high, causing an unsafe situation. The power supply is shut down in the above-mentioned way.
Caution: All hardware deflection protections can be disabled by interrupting R3403 on the LSP.
However, be careful: unsafe situations (heat) can occur or the picture tube can be destroyed.

Bridge coil protection
According safety regulations, every coil may be short-circuited. By doing this in the secondary winding of coil L5422, high currents will flow in the winding. With no safety circuit, the coil will begin to burn soon.
This is sensed via the "EW" signal going to the base of TS7652 (via R3495 and D6499). In a normal situation, the voltage on C2498 (diagram A4) is high and TS7652 is conducting. When bridge coil 5422 (diagram A3) is short circuited, the voltage on C2498 changes to low, which will block TS7652. In this case, also TS7641 will block and the voltage on 2642 will rise until TS7443 is forced in conduction. The "SUP-ENABLE" signal (in normal operating condition -20 V) is shorted now to ground level, which will force the Main Power Supply to Standby mode.
Note: Maximum EW width settings can also cause a protection.

5.8 Repair tips

5.8.1 Miscellaneous

The relay you hear when you switch the set "on" (from Standby or via the mains switch), is from the degaussing circuitry. It is **not** used for switching the Power Supply (as done in the MG-chassis).

- Take care not to touch the "hot" heatsink while disconnecting the SSP, despite the fact that the mains cord is out of the mains socket. There still can be an annoying rest-voltage on the heatsink for a short while, because the discharge resistors 3502 and 3503 (on the LSP between hot and cold part) are not stuffed for Europe. Instead, discharge resistors 3066 and 3057 on the Mains Switch panel are used, but because they are located **before** the Mains switch, they only discharge when this switch is "on". **Advice:** when you want to disconnect the SSP, first disconnect the Mains cord, but keep the Mains Switch in the "on" position.
- Where the circuitry was too "crowded" for service printing, you can find the correct location on the "test point overviews" in this manual.
- **A very large part of the LSP is "hot",** such as:
  - The primary part of the Standby Supply.
  - The whole Main supply (except for the secondary Audio supply).
  - And the complete deflection circuitry (so notice that the deflection coil is hot!).

5.8.2 Start-up/Shut-down Sequence

For a detailed description, see chapter 9 " Circuit Descriptions, Abbreviation List, and IC Data Sheets".

5.8.3 ComPair

This chassis does not have an IR transmitting LED (as in MG-sets). Therefore, a "Service" (ComPair) connector is implemented at the rear side of the set, which is directly accessible. In addition to this, there is also a blinking LED procedure to show the contents of the error buffer.

When you use ComPair, you have the possibility to activate a "stepwise start-up" mode. With this mode, you can initiate the start-up sequence step by step. This also means that in certain steps, some protections are not activated. This is sometimes very convenient during repair.

5.8.4 Protections

Activating SDM via the "service pads" will overrule the processor-controlled protections, but **not** the hardware protections.
Caution: When doing this, the service technician must know what he is doing, as it could lead to damaging the set.

The "ARC"- and/or "BRIDGECOIL" protection are hardly ever triggered, however:

- When you suspect the "ARC" protection, look for bad solder joints and smell. By interrupting resistor 3497, this protection is disabled (special attention needed!).
- When you suspect the "BRIDGECOIL" protection, which can also be due to a too wide picture amplitude, shorten G and S of the E/W MOSFET 7480. This will disable the protection. You will now have minimal horizontal amplitude. Re-align the horizontal amplitude in the SAM menu and remove the G/S short of TS7480.

5.8.5 Main Supply

1. Replace FET 7504 and zener 6505.
2. Disconnect the SSP panel.
3. Short B and E of TS7529, in order to put the Main Supply in "on"-mode (TS7529 is blocking then).
   Caution: To prevent that R3403 and TS7443 will be damaged, **first disable the HW-protection of the deflection circuit.** Therefore, short-circuit C2642 on the LSP (diagram A4).
4. Attach a load of 500 Ω to the V_BAT capacitor C2515 (the supply can not work without a minimum load).
5. Use a variac, and slowly increase the V_MAINS. Measure over sensing resistors R3514//15, if a nice sawtooth voltage becomes available.
6. Also, measure the V_BAT. This may never exceed +141 V. If it does, there is something wrong in the feedback circuitry (e.g. regulator 7506).

Note: Be careful when measuring on the gate of FET TS7504. This circuitry is very high ohmic and can easily be damaged (first connect ground to measuring equipment, than measure the gate).

5.8.6 Frame Deflection

Caution: When the Frame Deflection circuitry is suspected, one must be careful. Because there is a DC-voltage on the frame deflection, **the beam current could damage the CRT neck, leading to a defective CRT.**

To prevent this from happening, you must:

1. Interrupt the resistors 3403 and 3404 on the CRT panel (diagram F), in order to remove the "filament" voltage from the tube (no beam current, so no chance of destroying the CRT).
2. Interrupt resistor 3403 on the LSP (diagram A4) to disable the "SUP-ENABLE" line.
3. Measure with a multi-meter, or better with an oscilloscope, the functionality of the Frame stage.
4. After you have found the cause, exchange the defective component (e.g. TDA8177), and re-solder the interrupted resistors.

Table 5-3 Repair tips

Phenomenon	Possible Cause	Repair tip
No picture, no LED.	Standby Supply defective.	Measure circuitry (see diagram A2). Start at test-point A19.When the Mains switch is "on", this voltage must always be available.
No picture, LED blinking at 3 Hz.	Set is in protection due to various causes. For error codes see error-code list.	You have no picture, so: read the error buffer via ComPair (error buffer is accessible when set is in protection, ComPair-file will guide you to this). Read the blinking LED information via standard remote command mute-06250x-ok. Or you read the error code sequence via standard remote command mute-062500-ok. When you have found the error, check the circuitry related to the supply voltage and I2C-communication or the circuitry that triggers the protection.
No picture, LED blinking with code 8-8-8-etc or 9-9-9-etc.	No communication on slow I2C- or fast I2C-bus.	As processor cannot communicate with one of the 2 busses it the standby-LED spontaneously starts blinking 8-8-8-etc or 9-9-9-etc... If in the error buffer somewhere is an error 8 or 9, these will have the highest priority starting the mentioned blinking. Measure dependent of the error on the I2C-bus which device is loading the bus (use the I2C-overview)
No picture, LED blinking with code 13-13-13-etc.	No communication on NVM-I2C bus to the uP.	As the uP cannot communicate with the NVM I2C bus, it spontaneously starts blinking 13-13-13-etc. Note: when there is no access to the NVM, a lot of picture setting can go wrong.
No picture, no sound. Set is making audible squeaking sound	Supply is possibly in hiccup-mode, which is audible via a squeaking supply transformer.	Possible causes: V_BAT is shorted (caused by short circuited line transistor 7421), the sound winding is shorted (amplifier is shorting the power supply lines), or D6514 is shorted (due to a too high V_BAT). Remove excessive load, to see what causes the failure, or check feedback circuit. See repair tip "Main Power Supply" (supply needs a minimal load).
No picture, no sound. Front LED works fine	Supply does not work correctly.	If e.g. V_BAT is only about 90 V, it is possible that the regulator IC (7506) is defective.
No RC-reception. Front LED does not echo RC-commands.	uP circuitry or RC-receiver is defective.	In case the set does react on a local keyboard operation, you must check the RC-receiver circuitry (diagram J).
Relay (degaussing) is not audible; when set is switched from "off" or "standby" to "on".	uP is not working correctly. When line "DEGAUS" is low, the degaussing must be activated.	Check RESET-circuitry (IC7581 on diagram B11). Check the level on line "DEGAUS" when you switch the set "on". Signal must be low initially and go to high after approx. 12 s.
Picture is rotated.	Rotation circuitry (if present) on diagram A5, or related supply to it, malfunctions.	Measure test points on diagram A5.
Picture is continuously switching "off" and "on", showing heavy "switch" spots (set does not go into protection).	200 V is missing on CRT panel.	Probably a bad connection from LSP connector 1424 to CRT connector 1424 (diagram F), or an interruption of the 200 V supplies line (e.g. R3341 on circuit F1 is interrupted).
Picture is not sharp.	Focus is possibly mis-aligned or SCAVEM-circuitry does not work correctly.	Re-align the "FOCUS" potmeter on the Line Output Transformer, or check the SCAVEM circuitry on the CRT-panel (diagram F). It is also possible that the DAF circuitry is defective (see diagram I). Check the V_dc values.
Picture is distorted.	Check video-path in Service Default Mode.	Investigate whether there is an error code present in the error buffer. In case there is one, check the I2C-bus and/or supply lines (see overview supply lines). Measure and check signal path Tuner-MPIF-ADOC-RGB amplifier. In case it is a geometry issue, check on diagram A4 opto-coupler 7482, OpAmps 7440/7450 and the Frame circuitry alignments or a possible corrupted NVM (IC7525 on diagram B11).
No menu, no OSD.	Probably a defective uP (ADOC).	
No Teletext.	IC7730 defective or not powered.	Check circuitry around IC7730 on diagram B13.
Strange switch "off" behaviour	TS7445 possibly defective.	Check, with a multi-meter, whether transistor TS7445 is well functioning. (diagram A3).
Various symptoms, due to missing local supply voltage.	An interrupted fuse, NFR-resistor or connection.	When no symptom or error code leads you to a specific circuitry, use the supply lines overview (see supply lines overview), for a quick scan of all supply lines.

5.9 Software Downloading

In this chassis, you can **upgrade** the software via ComPair. You can find more information on how this procedure works in the ComPair file. It is possible that not all sets are equipped with the hardware, needed to make software upgrading possible. To speed up the programming process the firmware of the ComPair interface can be upgraded. See paragraph "How To Order" for the order numbers.

6. Block Diagrams, Testpoint Overview, and Waveforms

Wiring Diagram

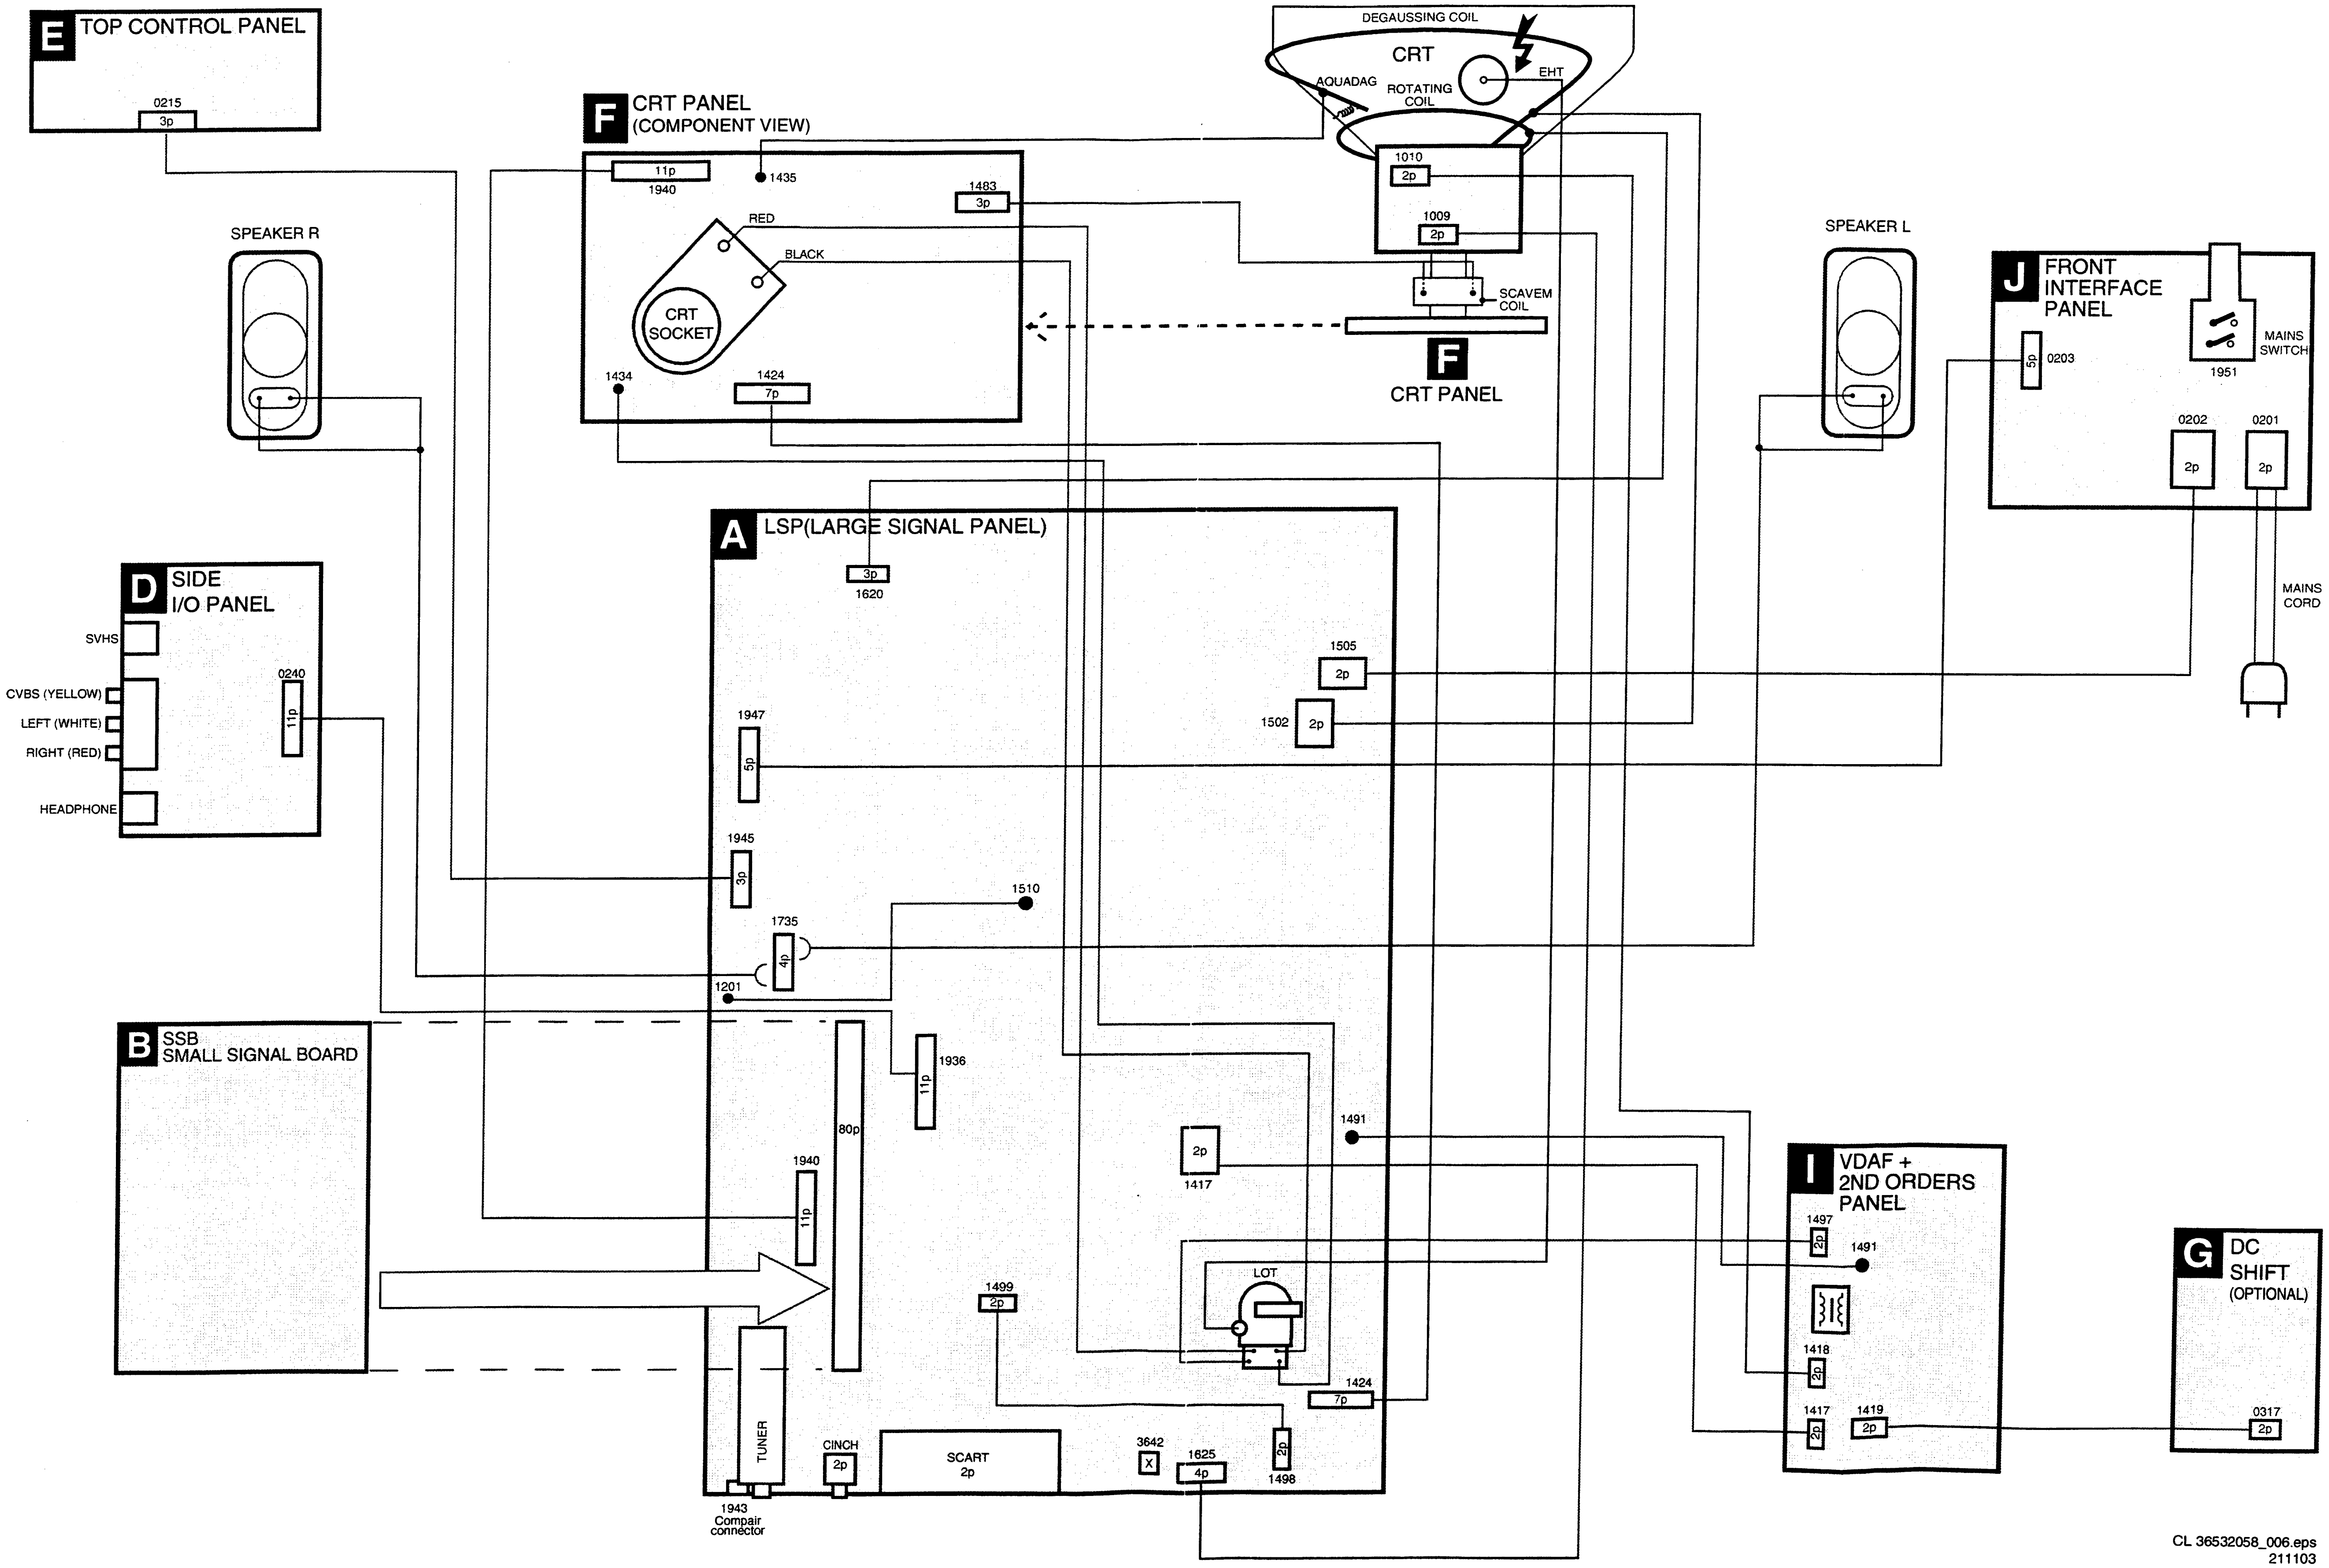
E TOP CONTROL PANEL
0215
3p
F CRT PANEL (COMPONENT VIEW)
11p
1940
1435
1483
3p
RED
BLACK
CRT SOCKET
1434
1424
7p
DEGAUSSING COIL
CRT
AQUADAG
ROTATING COIL
EHT
1010
2p
1009
2p
SCAVEM COIL
F
CRT PANEL
SPEAKER R
SPEAKER L
J FRONT INTERFACE PANEL
5p
0203
MAINS SWITCH
1951
0202
0201
2p
2p
MAINS CORD
A LSP(LARGE SIGNAL PANEL)
3p
1620
1505
2p
1502
2p
1947
5p
1945
3p
1510
1735
4p
1201
1936
11p
80p
1940
11p
1491
2p
1417
LOT
1499
2p
1424
7p
TUNER
CINCH
2p
SCART
2p
3642
X
1625
4p
2p
1498
1943
Compair connector
D SIDE I/O PANEL
SVHS
CVBS (YELLOW)
LEFT (WHITE)
RIGHT (RED)
HEADPHONE
0240
11p
B SSB SMALL SIGNAL BOARD
I VDAF + 2ND ORDERS PANEL
1497
2p
1491
1418
2p
1417
2p
1419
2p
G DC SHIFT (OPTIONAL)
0317
2p

CL 36532058_006.eps
211103

Block Diagram LSP Supply and Deflection

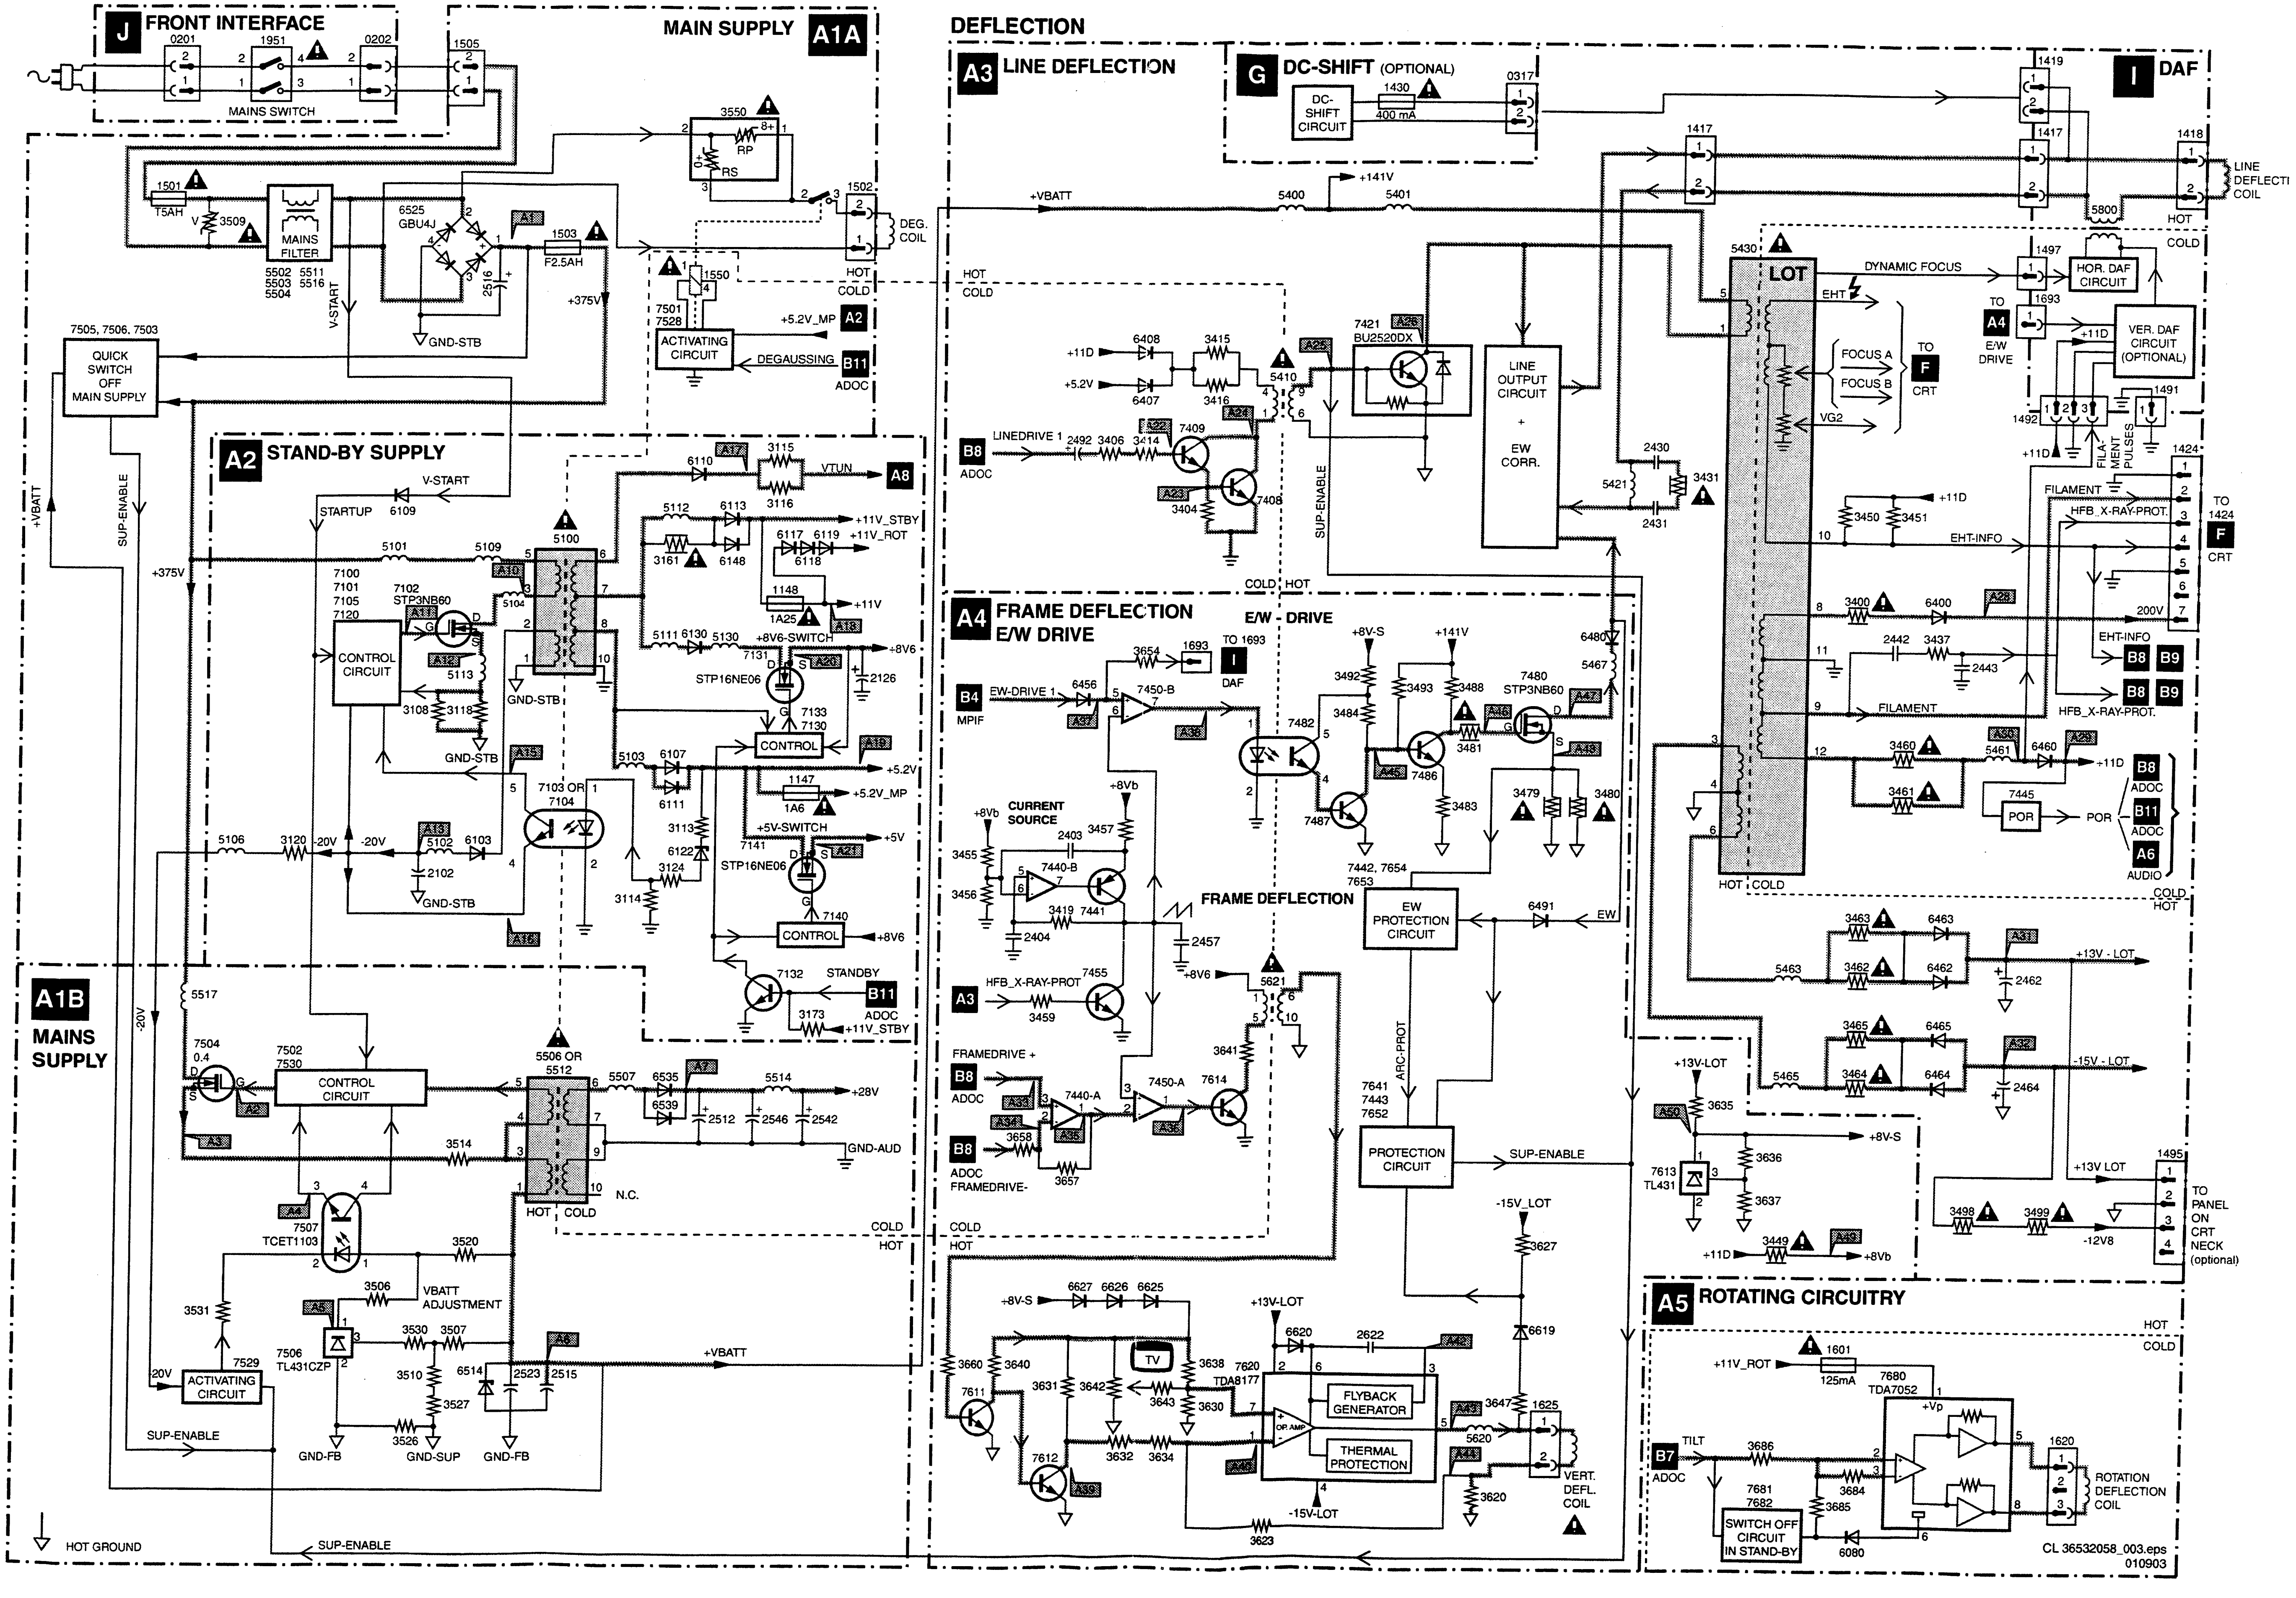
J FRONT INTERFACE
0201
1951
0202
MAINS SWITCH
MAIN SUPPLY A1A
1505
3550
RP
RS
1502
DEG. COIL
HOT
COLD
1501
T5AH
3509
MAINS FILTER
5502 5511
5503 5516
5504
6525
GBU4J
2516
1503
F2.5AH
+375V
V-START
GND-STB
1550
7501
7528
ACTIVATING CIRCUIT
+5.2V_MP
A2
DEGAUSSING
B11
ADOC
7505, 7506, 7503
QUICK SWITCH OFF MAIN SUPPLY
+VBATT
SUP-ENABLE
A2 STAND-BY SUPPLY
STARTUP
6109
5101
5109
5100
7100
7101
7105
7120
7102
STP3NB60
CONTROL CIRCUIT
5113
3108
3118
GND-STB
7103 OR 7104
5106
3120
-20V
5102
6103
2102
6110
3115
VTUN
A8
6113
3116
+11V_STBY
6117
6119
+11V_ROT
6118
3161
6148
1148
1A25
+11V
5111
6130
5130
+8V6-SWITCH
7131
STP16NE06
+8V6
2126
7133
7130
CONTROL
5103
6107
+5.2V
1147
1A6
+5.2V_MP
6111
+5V-SWITCH
3113
6122
7141
STP16NE06
+5V
3124
3114
7140
+8V6
7132
STANDBY
B11
3173
ADOC
+11V_STBY
A1B MAINS SUPPLY
5517
7504
0.4
7502
7530
CONTROL CIRCUIT
5506 OR 5512
5507
6535
6539
5514
+28V
2512
2546
2542
3514
GND-AUD
N.C.
7507
TCET1103
3520
3506
VBATT ADJUSTMENT
3531
7529
ACTIVATING CIRCUIT
7506
TL431CZP
3530
3507
3510
6514
2523
2515
3527
3526
GND-FB
GND-SUP
GND-FB
SUP-ENABLE
HOT GROUND
DEFLECTION
A3 LINE DEFLECTION
G DC-SHIFT (OPTIONAL)
DC-SHIFT CIRCUIT
1430
400 mA
0317
I DAF
1419
1417
1418
LINE DEFLECTION COIL
5800
+VBATT
5400
+141V
5401
+11D
6408
3415
+5.2V
6407
3416
5410
7421
BU2520DX
LINE OUTPUT CIRCUIT + EW CORR.
B8
ADOC
LINEDRIVE 1
2492
3406
3414
7409
7408
3404
2430
5421
3431
2431
5430
LOT
DYNAMIC FOCUS
EHT
FOCUS A
FOCUS B
VG2
TO F CRT
1497
HOR. DAF CIRCUIT
1693
A4 E/W DRIVE
VER. DAF CIRCUIT (OPTIONAL)
1491
1492
FILA-MENT PULSES
1424
3450
3451
EHT-INFO
FILAMENT
HFB_X-RAY-PROT.
TO 1424 F CRT
3400
6400
200V
2442
3437
2443
EHT-INFO
B8 B9
FILAMENT
HFB_X-RAY-PROT.
3460
5461
6460
3461
7445
POR
ADOC
B11
A6
AUDIO
A4 FRAME DEFLECTION E/W DRIVE
E/W - DRIVE
3654
1693
TO 1693
DAF
B4
MPIF
EW-DRIVE 1
6456
7450-B
+8V-S
+141V
3492
3493
3488
7480
STP3NB60
3484
7482
3481
7486
3483
7487
3479
3480
6480
5467
CURRENT SOURCE
2403
3457
3455
3456
7440-B
7441
3419
2404
FRAME DEFLECTION
2457
+8V6
5621
HFB_X-RAY-PROT
7455
3459
FRAMEDRIVE +
7440-A
7450-A
7614
3658
3657
ADOC FRAMEDRIVE-
3641
7442, 7654
7653
EW PROTECTION CIRCUIT
6491
EW
ARC-PROT
7641
7443
7652
PROTECTION CIRCUIT
SUP-ENABLE
-15V_LOT
3627
6619
+13V-LOT
3635
+8V-S
7613
TL431
3636
3637
+11D
3449
+8Vb
3463
6463
5463
3462
6462
+13V - LOT
2462
3465
6465
5465
3464
6464
-15V - LOT
2464
+13V LOT
1495
3498
3499
-12V8
TO PANEL ON CRT NECK (optional)
+8V-S
6627
6626
6625
+13V-LOT
3660
3640
7611
3631
3642
TV
3638
3643
3630
7620
TDA8177
6620
2622
FLYBACK GENERATOR
THERMAL PROTECTION
3647
1625
5620
VERT. DEFL. COIL
7612
3632
3634
3620
-15V-LOT
3623
A5 ROTATING CIRCUITRY
1601
+11V_ROT
125mA
7680
TDA7052
+Vp
B7
TILT
ADOC
3686
7681
7682
3684
3685
SWITCH OFF CIRCUIT IN STAND-BY
6080
1620
ROTATION DEFLECTION COIL
CL 36532058_003.eps
010903

Testpoint Overview LSP and CRT

LSP COPPER TRACK SIDE

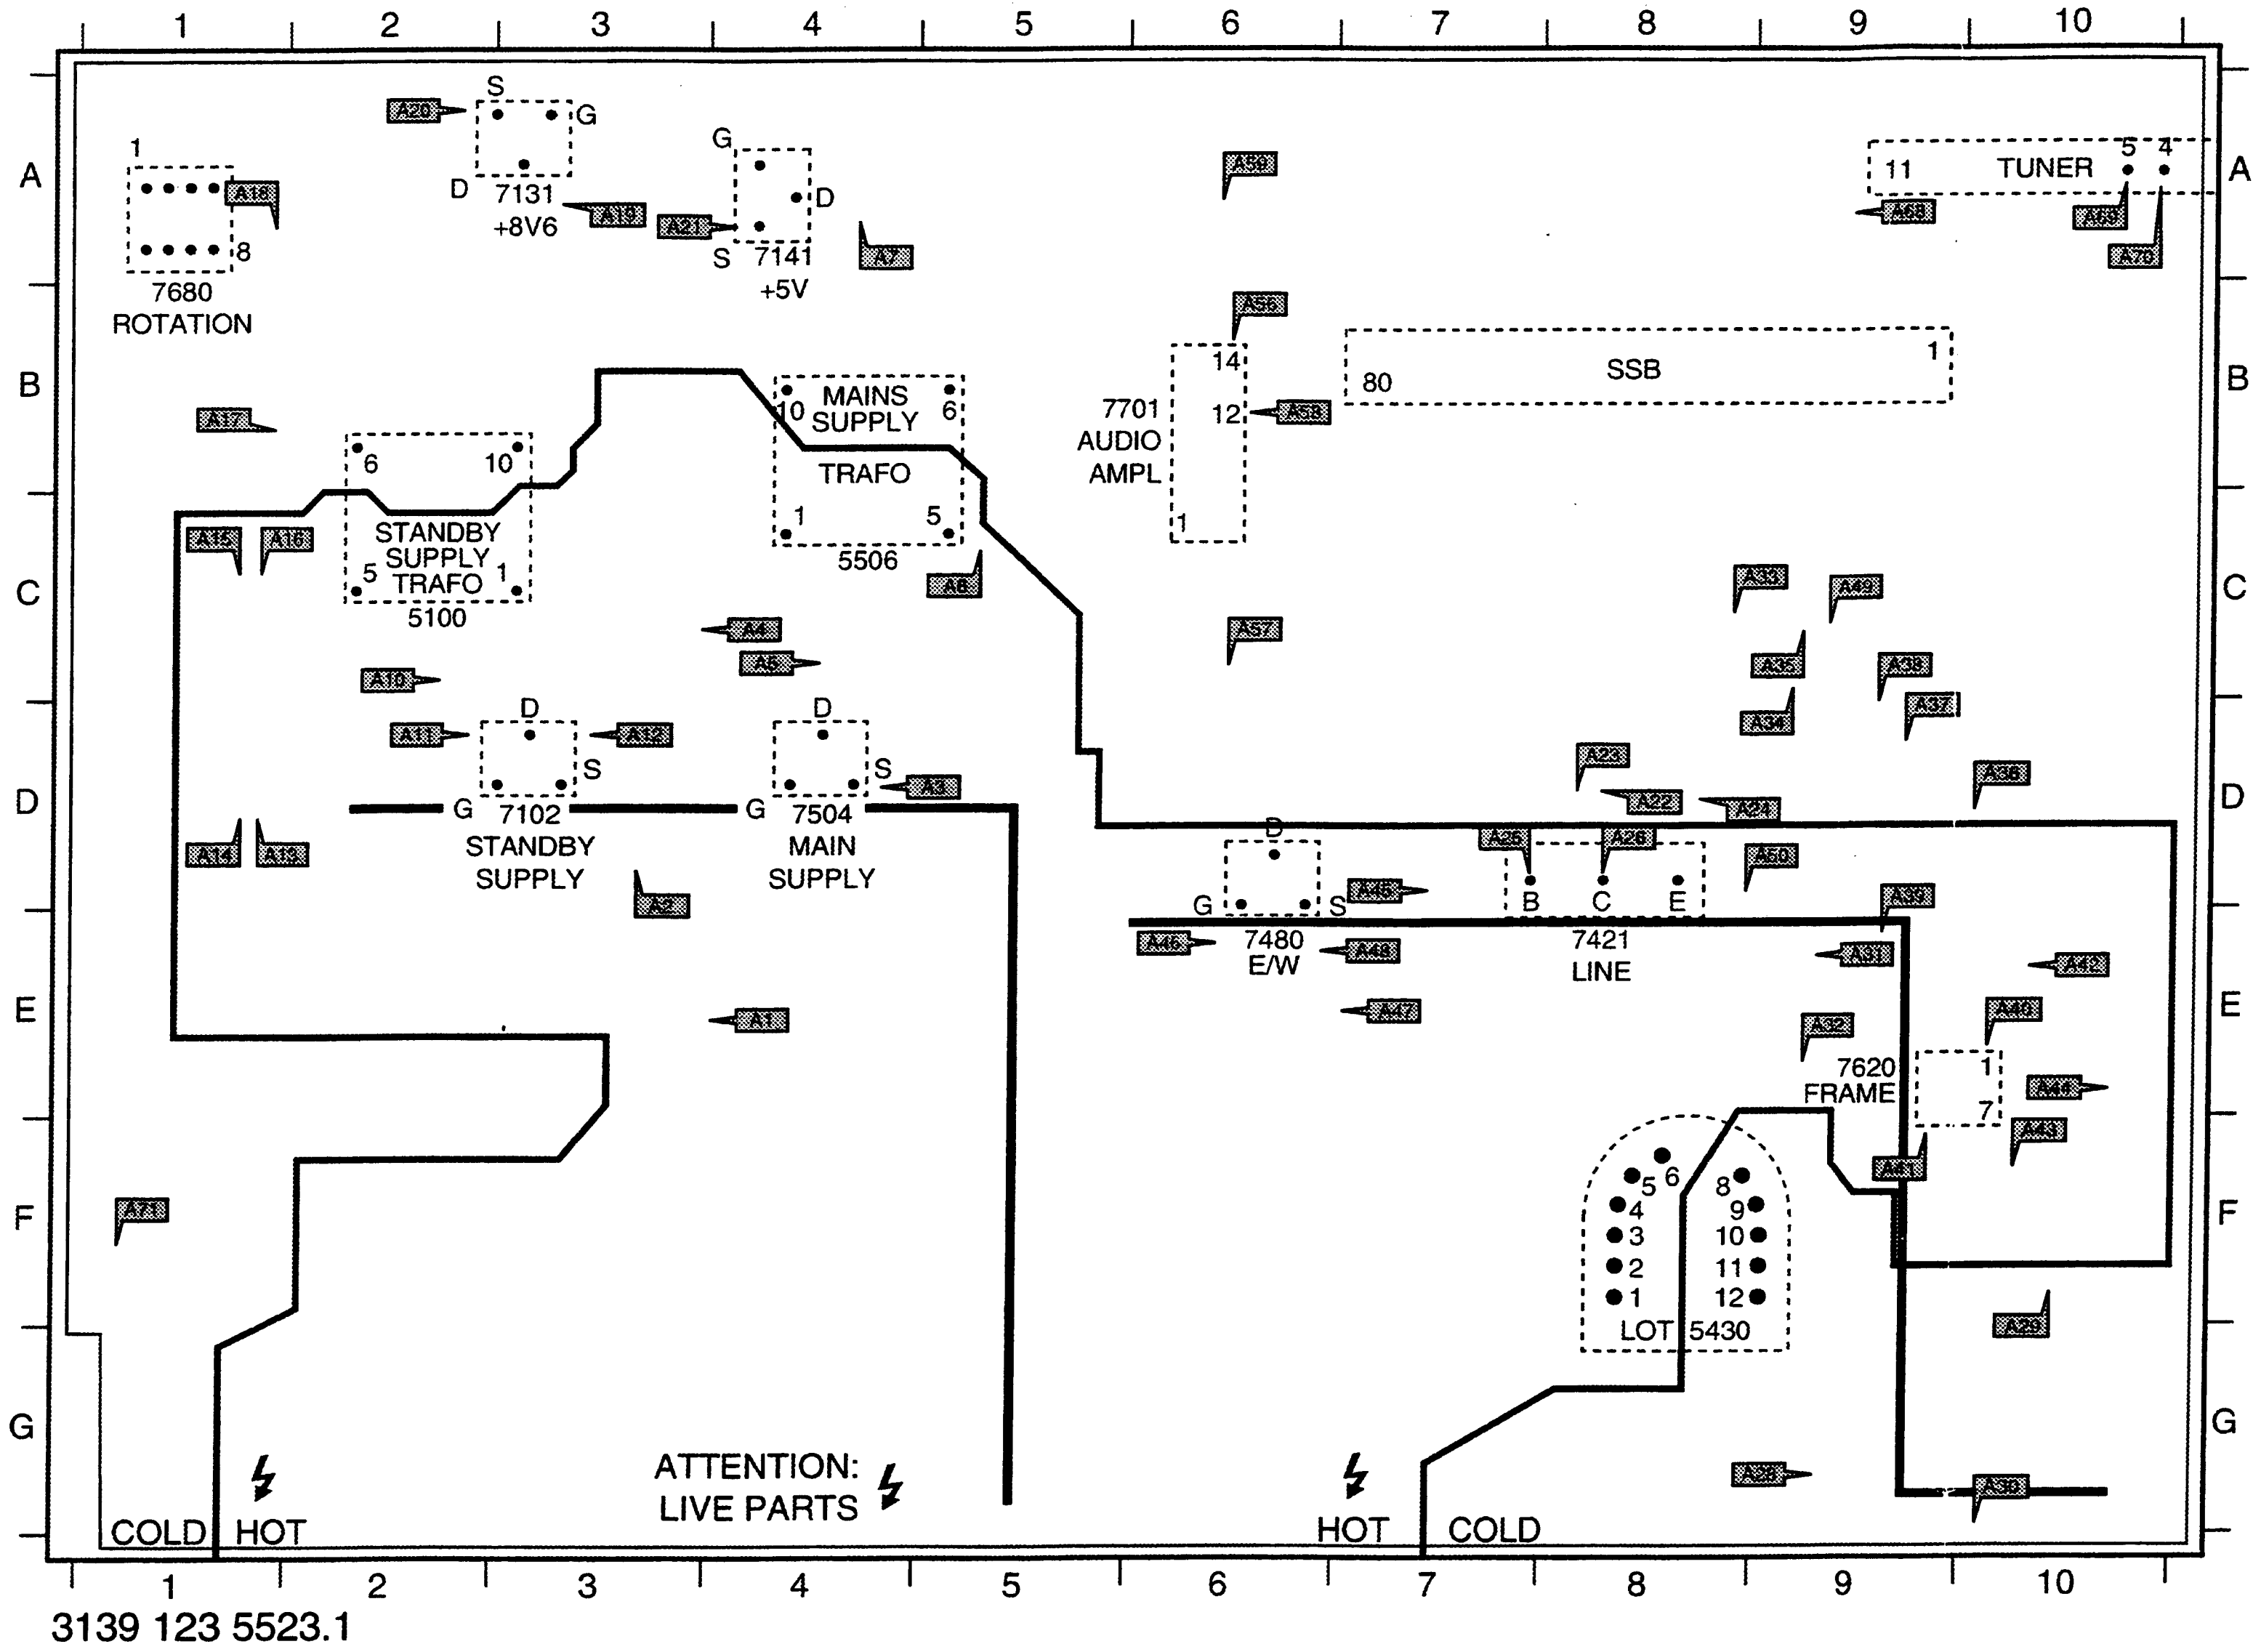

1 2 3 4 5 6 7 8 9 10
A B C D E F G
7680
ROTATION
7131
+8V6
7141
+5V
TUNER
11
MAINS SUPPLY
TRAFO
5506
STANDBY SUPPLY TRAFO
5100
7701
AUDIO
AMPL
SSB
80
7102
STANDBY
SUPPLY
7504
MAIN
SUPPLY
7480
E/W
7421
LINE
7620
FRAME
LOT 5430
COLD
HOT
ATTENTION:
LIVE PARTS
HOT
COLD
3139 123 5523.1

A1	E4
A2	D3
A3	D4
A4	C4
A5	C4
A6	C5
A7	A4
A10	C2
A11	C2
A12	D3
A13	D1
A14	D1
A15	C1
A16	C1
A17	B1
A18	A1
A19	A3
A20	A2
A21	A3
A22	D8
A23	D8
A24	D8
A25	D8
A26	D7
A28	G9
A29	G10
A30	G10
A31	E9
A32	E9
A33	C8
A34	D9
A35	C9
A36	D10
A37	D9
A38	C9
A39	D10
A40	E10
A41	E10
A42	E10
A43	F10
A44	E10
A45	D7
A46	E6
A47	E7
A48	E7
A49	C9
A50	D9
A56	C6
A57	B6

A58	C6
A59	B5
A68	A9
A69	A10
A70	A10

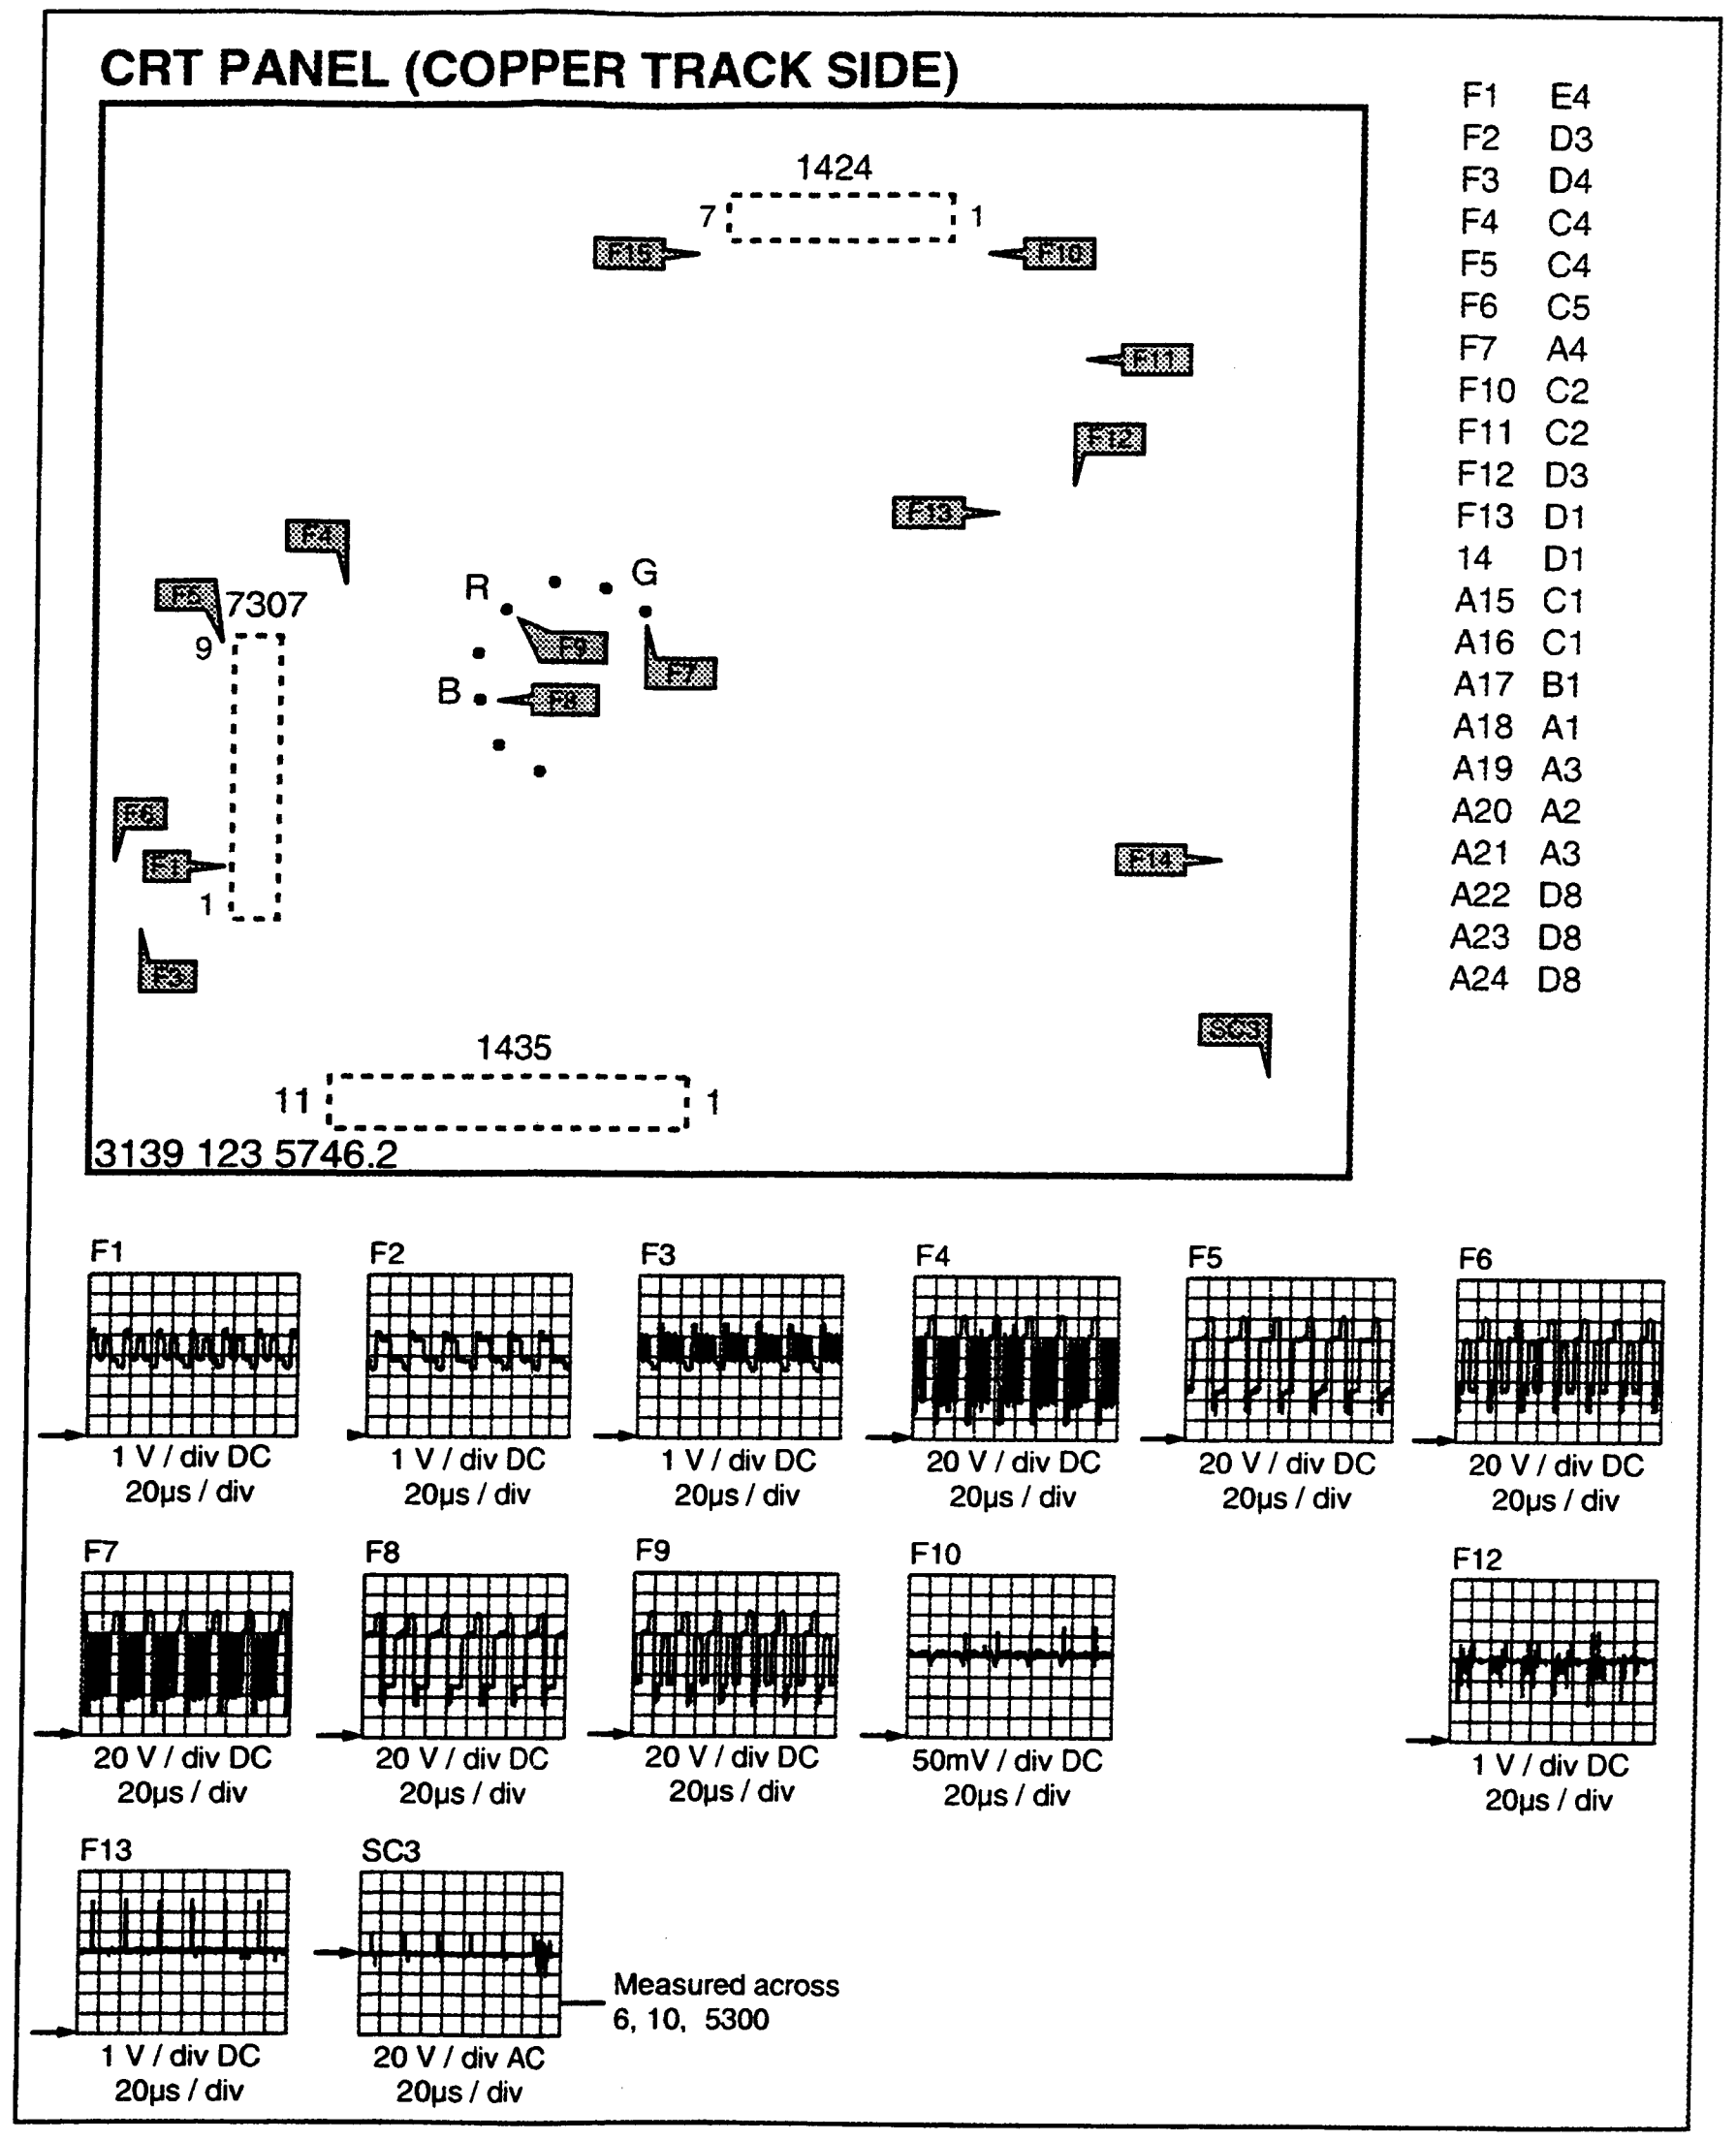

CRT PANEL (COPPER TRACK SIDE)
1424
7307
R
G
B
1435
3139 123 5746.2
F1
1 V / div DC
20µs / div
F2
1 V / div DC
20µs / div
F3
1 V / div DC
20µs / div
F4
20 V / div DC
20µs / div
F5
20 V / div DC
20µs / div
F6
20 V / div DC
20µs / div
F7
20 V / div DC
20µs / div
F8
20 V / div DC
20µs / div
F9
20 V / div DC
20µs / div
F10
50mV / div DC
20µs / div
F12
1 V / div DC
20µs / div
F13
1 V / div DC
20µs / div
SC3
20 V / div AC
20µs / div
Measured across 6, 10, 5300

F1	E4
F2	D3
F3	D4
F4	C4
F5	C4
F6	C5
F7	A4
F10	C2
F11	C2
F12	D3
F13	D1
14	D1
A15	C1
A16	C1
A17	B1
A18	A1
A19	A3
A20	A2
A21	A3
A22	D8
A23	D8
A24	D8

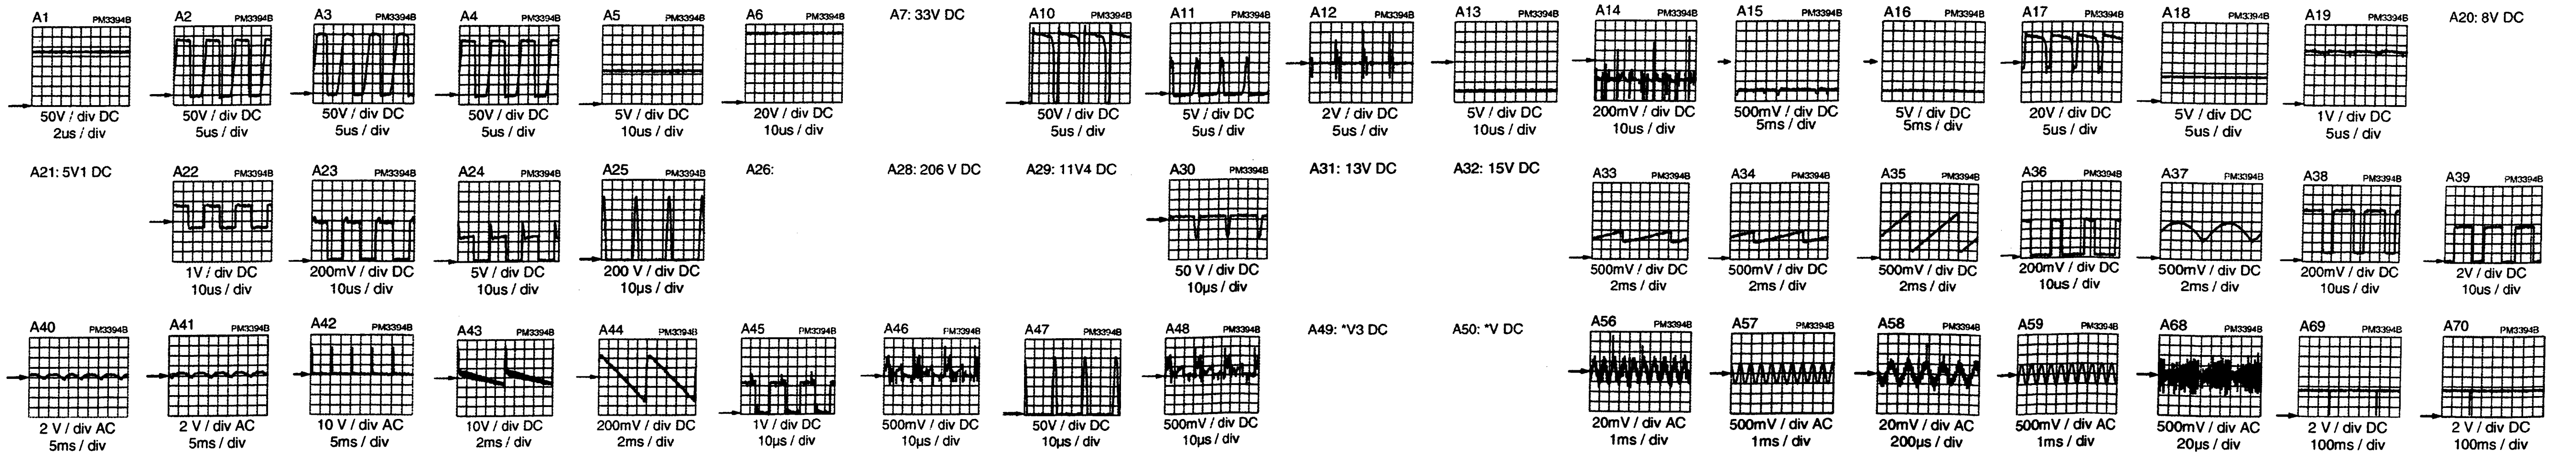

CL 36532058_007.eps
071003

Block Diagram 1 Audio & Video

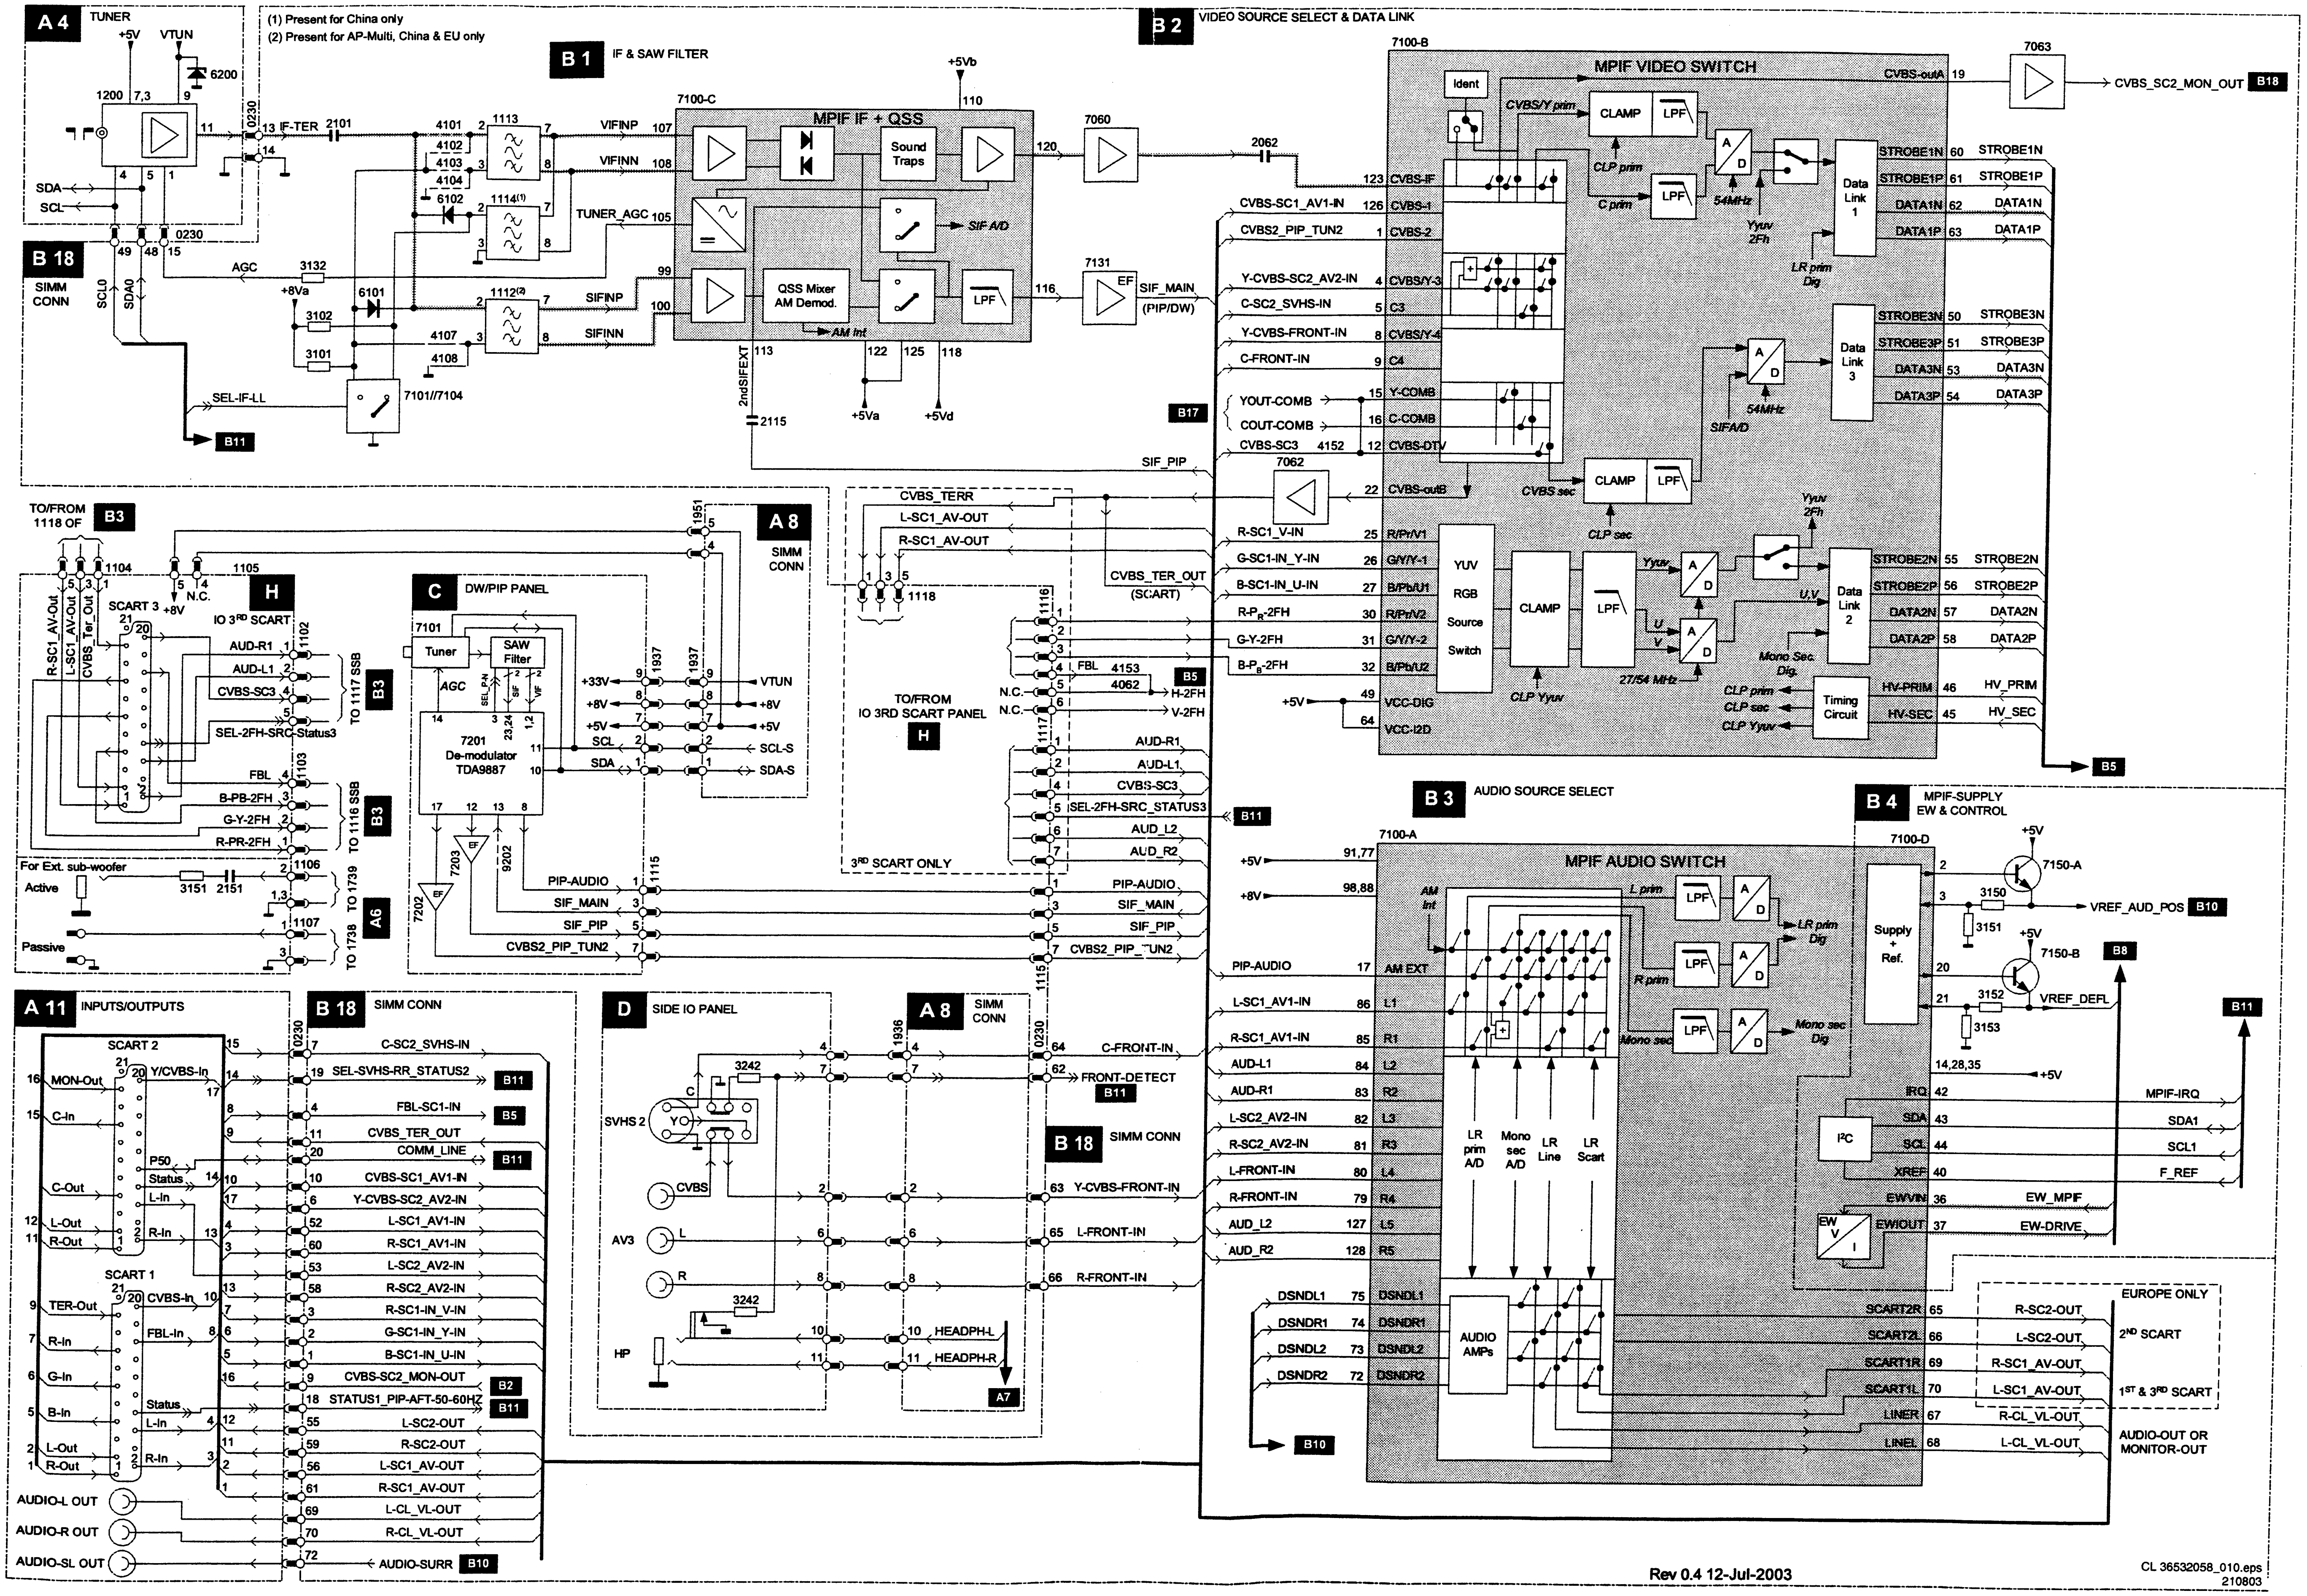
A4 TUNER
+5V
VTUN
6200
1200
7,3
9
11
0230
4
5
1
SDA
SCL
(1) Present for China only
(2) Present for AP-Multi, China & EU only
B1 IF & SAW FILTER
13 IF-TER
2101
4101
4102
4103
4104
6102
1113
1114(1)
1112(2)
4107
4108
3132
3102
3101
6101
+8Va
AGC
SEL-IF-LL
7101//7104
B11
VIFINP
VIFINN
TUNER_AGC
SIFINP
SIFINN
7100-C
MPIF IF + QSS
+5Vb
110
Sound Traps
QSS Mixer AM Demod.
AM Int
SIF A/D
LPF
113
122
125
118
+5Va
+5Vd
2ndSIFEXT
2115
7060
7131
EF
SIF_MAIN (PIP/DW)
2062
B18
SIMM CONN
SCL0
SDA0
49
48
15
B2 VIDEO SOURCE SELECT & DATA LINK
7100-B
MPIF VIDEO SWITCH
Ident
CVBS/Y prim
CLAMP
LPF
CLP prim
C prim
54MHz
Yyuv 2Fh
LR prim Dig
CVBS-outA 19
7063
CVBS_SC2_MON_OUT
B18
Data Link 1
Data Link 3
Data Link 2
STROBE1N 60
STROBE1P 61
DATA1N 62
DATA1P 63
STROBE3N 50
STROBE3P 51
DATA3N 53
DATA3P 54
STROBE2N 55
STROBE2P 56
DATA2N 57
DATA2P 58
HV-PRIM 46
HV-SEC 45
HV_PRIM
HV_SEC
Timing Circuit
CLP prim
CLP sec
CLP Yyuv
Mono Sec. Dig.
27/54 MHz
SIFA/D
123 CVBS-IF
CVBS-SC1_AV1-IN 126 CVBS-1
CVBS2_PIP_TUN2 1 CVBS-2
Y-CVBS-SC2_AV2-IN 4 CVBS/Y-3
C-SC2_SVHS-IN 5 C3
Y-CVBS-FRONT-IN 8 CVBS/Y-4
C-FRONT-IN 9 C4
B17
YOUT-COMB 15 Y-COMB
COUT-COMB 16 C-COMB
CVBS-SC3 4152 12 CVBS-DTV
SIF_PIP
7062
22 CVBS-outB
CVBS sec
CLP sec
R-SC1_V-IN 25 R/Pr/V1
G-SC1-IN_Y-IN 26 G/Y/Y-1
B-SC1-IN_U-IN 27 B/Pb/U1
R-PR-2FH 30 R/Pr/V2
G-Y-2FH 31 G/Y/Y-2
B-PB-2FH 32 B/Pb/U2
+5V 49 VCC-DIG
64 VCC-I2D
YUV RGB Source Switch
B5
TO/FROM 1118 OF B3
1104
1105
SCART 3
H IO 3RD SCART
R-SC1_AV-Out
L-SC1_AV-Out
CVBS_Ter_Out
N.C.
+8V
AUD-R1
AUD-L1
CVBS-SC3
SEL-2FH-SRC-Status3
FBL
B-PB-2FH
G-Y-2FH
R-PR-2FH
1102
1103
TO 1117 SSB B3
TO 1116 SSB B3
For Ext. sub-woofer
Active
Passive
3151
2151
1106
1107
TO 1739
TO 1738
A6
C DW/PIP PANEL
7101
Tuner
SAW Filter
AGC
7201 De-modulator TDA9887
7202
7203
9202
+33V
+8V
+5V
SCL
SDA
1937
1951
A8 SIMM CONN
VTUN
SCL-S
SDA-S
PIP-AUDIO
SIF_MAIN
SIF_PIP
CVBS2_PIP_TUN2
1115
CVBS_TERR
L-SC1_AV-OUT
R-SC1_AV-OUT
1118
TO/FROM IO 3RD SCART PANEL H
3RD SCART ONLY
CVBS_TER_OUT (SCART)
1116
1117
FBL 4153
4062
H-2FH
V-2FH
N.C.
AUD-R1
AUD-L1
CVBS-SC3
SEL-2FH-SRC_STATUS3
AUD_L2
AUD_R2
B11
B3 AUDIO SOURCE SELECT
7100-A
MPIF AUDIO SWITCH
+5V 91,77
+8V 98,88
AM Int
PIP-AUDIO 17 AM EXT
L-SC1_AV1-IN 86 L1
R-SC1_AV1-IN 85 R1
AUD-L1 84 L2
AUD-R1 83 R2
L-SC2_AV2-IN 82 L3
R-SC2_AV2-IN 81 R3
L-FRONT-IN 80 L4
R-FRONT-IN 79 R4
AUD_L2 127 L5
AUD_R2 128 R5
L prim
R prim
Mono sec
LR prim Dig
Mono sec Dig
LR prim A/D
Mono sec A/D
LR Line
LR Scart
DSNDL1 75 DSNDL1
DSNDR1 74 DSNDR1
DSNDL2 73 DSNDL2
DSNDR2 72 DSNDR2
AUDIO AMPs
B10
SCART2R 65
SCART2L 66
SCART1R 69
SCART1L 70
LINER 67
LINEL 68
R-SC2-OUT
L-SC2-OUT
R-SC1_AV-OUT
L-SC1_AV-OUT
R-CL_VL-OUT
L-CL_VL-OUT
EUROPE ONLY
2ND SCART
1ST & 3RD SCART
AUDIO-OUT OR MONITOR-OUT
B4 MPIF-SUPPLY EW & CONTROL
7100-D
Supply + Ref.
+5V
7150-A
7150-B
3150
3151
3152
3153
VREF_AUD_POS
B10
VREF_DEFL
B8
B11
14,28,35 +5V
IRQ 42
SDA 43
SCL 44
XREF 40
EWVIN 36
EWIOUT 37
I2C
EW V I
MPIF-IRQ
SDA1
SCL1
F_REF
EW_MPIF
EW-DRIVE
A11 INPUTS/OUTPUTS
SCART 2
MON-Out
C-In
C-Out
L-Out
R-Out
Y/CVBS-In
P50
Status
L-In
R-In
SCART 1
TER-Out
R-In
G-In
B-In
CVBS-In
FBL-In
Status
L-Out
R-Out
AUDIO-L OUT
AUDIO-R OUT
AUDIO-SL OUT
B18 SIMM CONN
0230
C-SC2_SVHS-IN
SEL-SVHS-RR_STATUS2
FBL-SC1-IN
CVBS_TER_OUT
COMM_LINE
CVBS-SC1_AV1-IN
Y-CVBS-SC2_AV2-IN
L-SC1_AV1-IN
R-SC1_AV1-IN
L-SC2_AV2-IN
R-SC2_AV2-IN
R-SC1-IN_V-IN
G-SC1-IN_Y-IN
B-SC1-IN_U-IN
CVBS-SC2_MON-OUT
STATUS1_PIP-AFT-50-60HZ
L-SC2-OUT
R-SC2-OUT
L-SC1_AV-OUT
R-SC1_AV-OUT
L-CL_VL-OUT
R-CL_VL-OUT
AUDIO-SURR
B11
B5
B2
B10
D SIDE IO PANEL
SVHS 2
3242
CVBS
AV3
L
R
HP
A8 SIMM CONN
1936
HEADPH-L
HEADPH-R
A7
B18 SIMM CONN
C-FRONT-IN
FRONT-DETECT
Y-CVBS-FRONT-IN
L-FRONT-IN
R-FRONT-IN
Rev 0.4 12-Jul-2003
CL 36532058_010.eps 210803

Block Diagram 2 Audio & Video

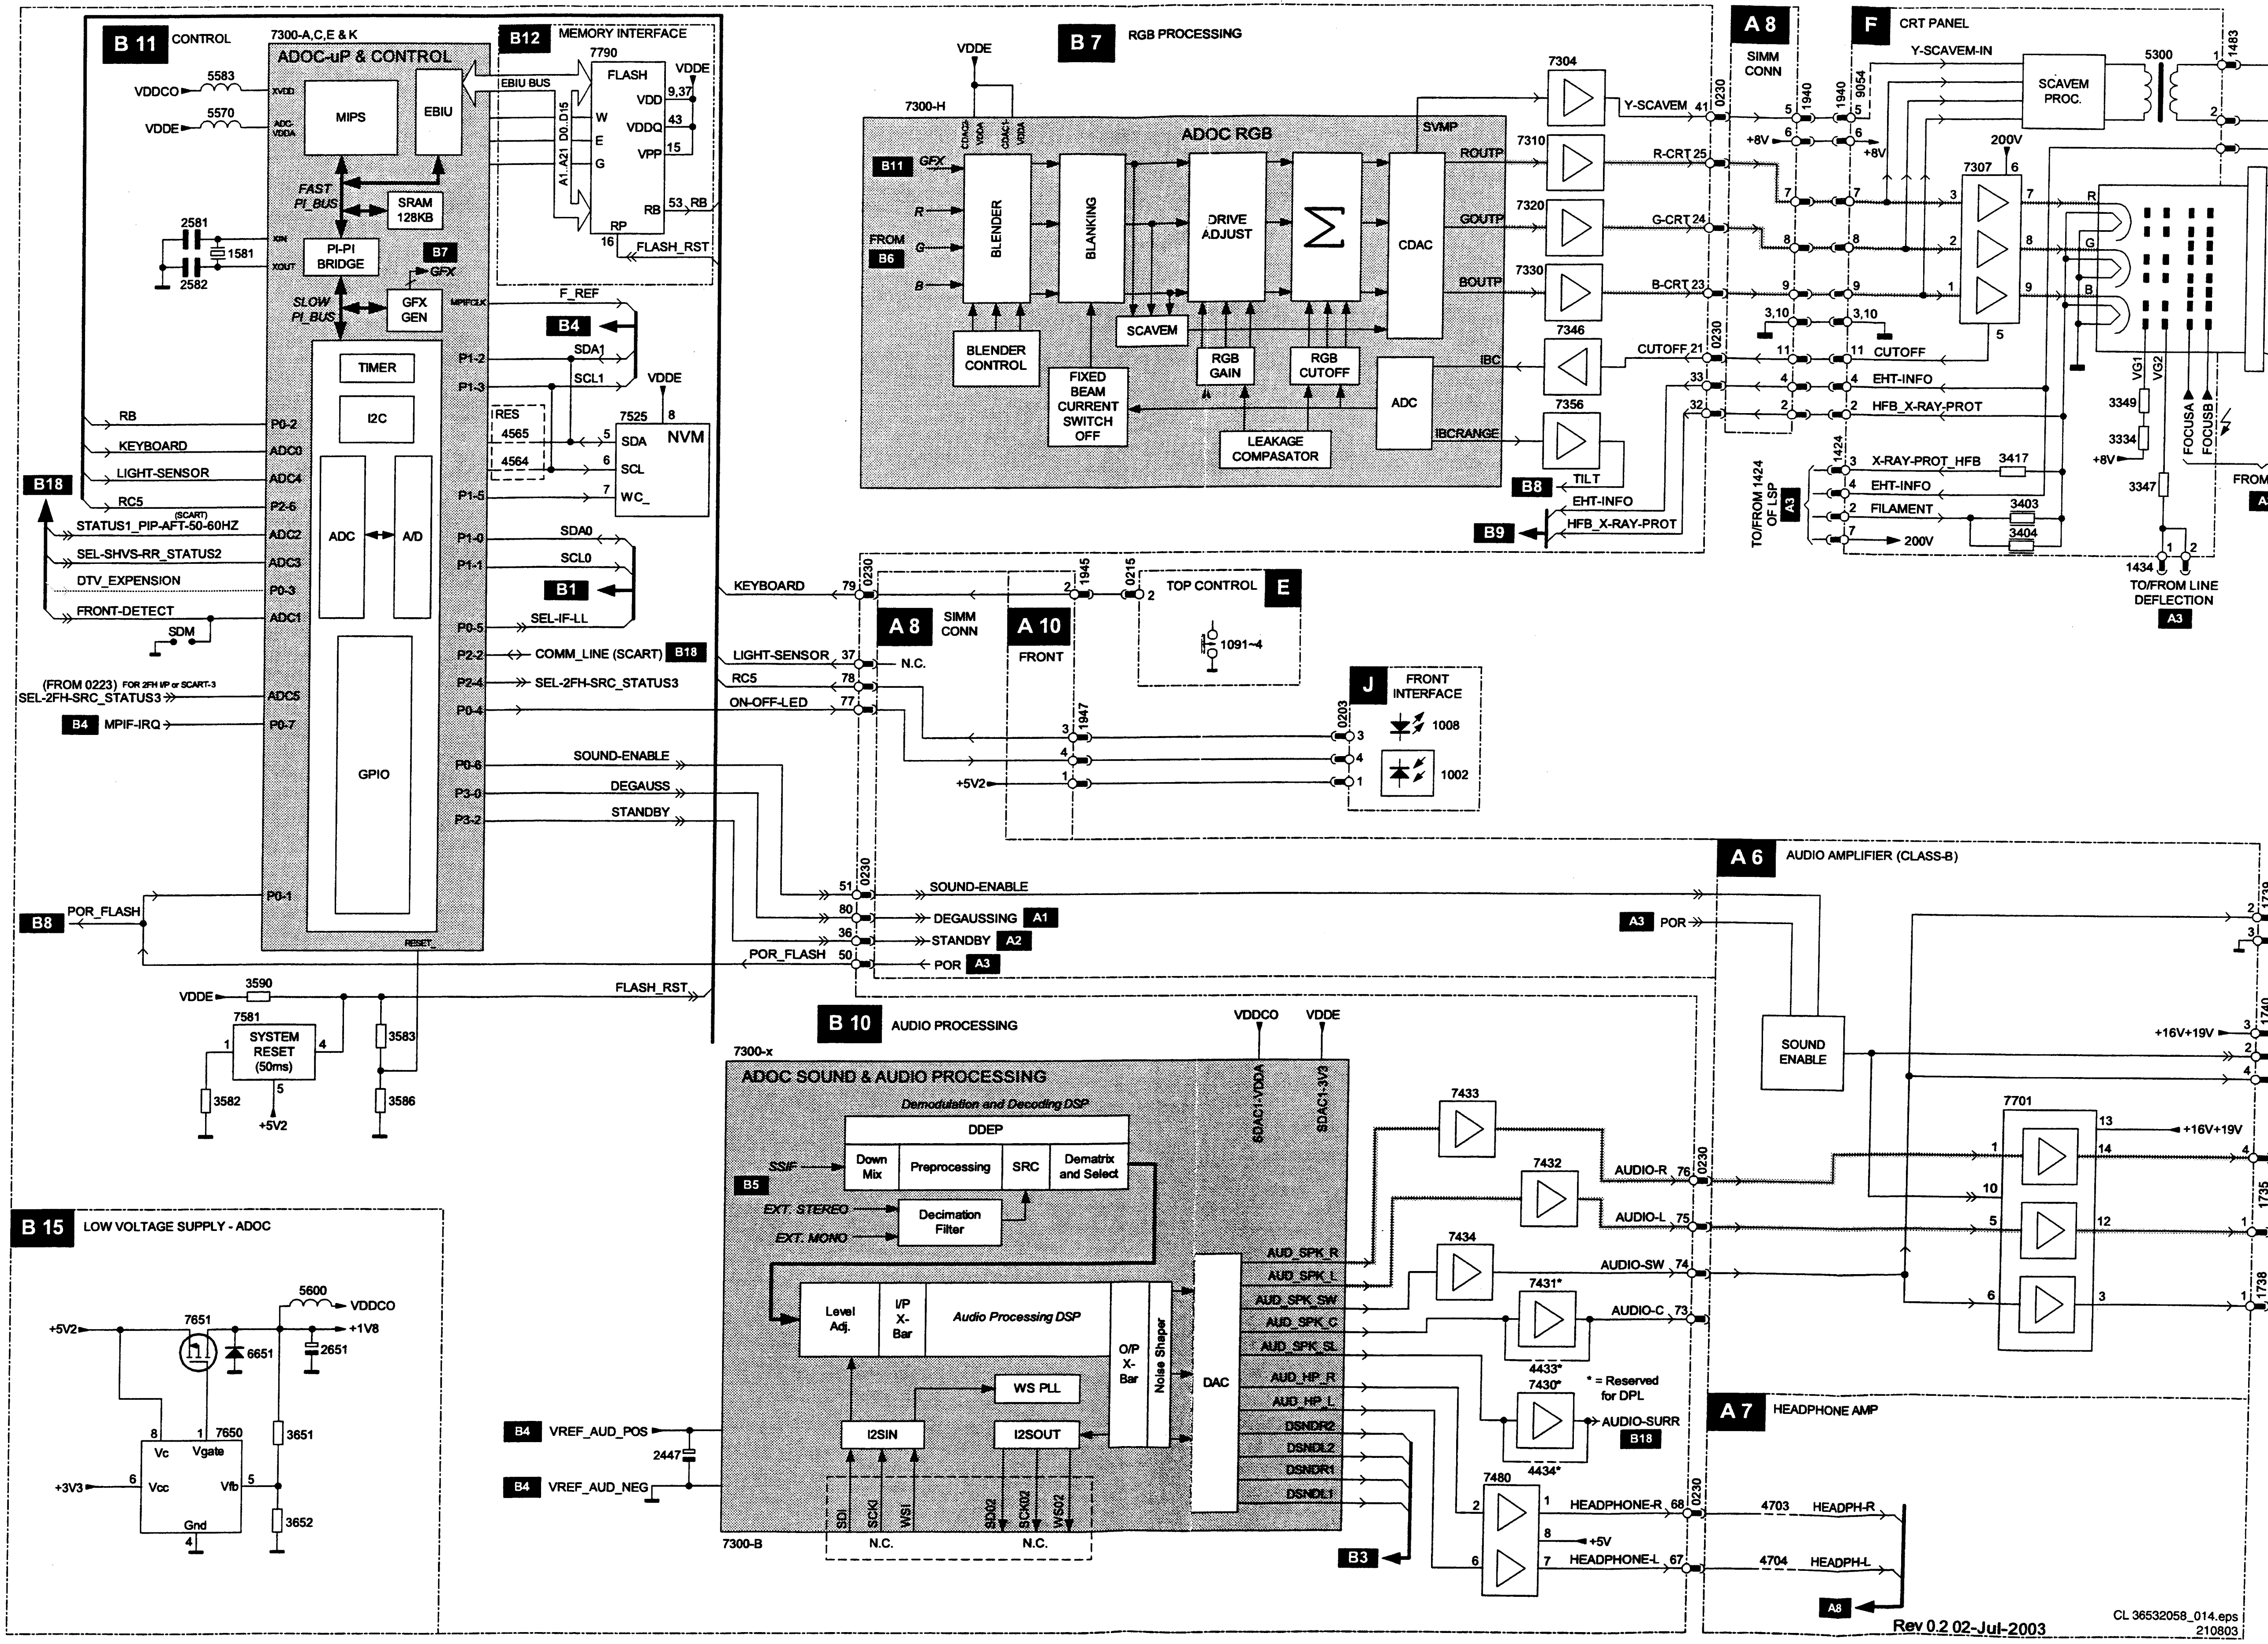

B 11 CONTROL
7300-A,C,E & K
ADOC-uP & CONTROL
VDDCO
5583
VDDE
5570
MIPS
EBIU
FAST PI_BUS
SRAM 128KB
PI-PI BRIDGE
SLOW PI_BUS
GFX GEN
GFX
2581
2582
1581
XIN
XOUT
TIMER
I2C
ADC
A/D
GPIO
B12 MEMORY INTERFACE
7790
FLASH
VDDE
EBIU BUS
A1..A21 D0..D15
VDD
VDDQ
VPP
RP
9,37
43
15
53
16
RB
FLASH_RST
F_REF
SDA1
SCL1
P1-2
P1-3
VDDE
RES
4565
4564
7525
NVM
SDA
SCL
WC_
P1-5
SDA0
SCL0
P1-0
P1-1
SEL-IF-LL
P0-5
COMM_LINE (SCART)
P2-2
SEL-2FH-SRC_STATUS3
P2-4
P0-4
SOUND-ENABLE
P0-6
DEGAUSS
P3-0
STANDBY
P3-2
P0-1
RESET_
B4
B1
B7
B18
RB
KEYBOARD
LIGHT-SENSOR
RC5
(SCART) STATUS1_PIP-AFT-50-60HZ
SEL-SHVS-RR_STATUS2
DTV_EXPENSION
FRONT-DETECT
P0-2
ADC0
ADC4
P2-6
ADC2
ADC3
P0-3
ADC1
SDM
(FROM 0223) FOR 2FH I/P or SCART-3 SEL-2FH-SRC_STATUS3
ADC5
B4 MPIF-IRQ
P0-7
B8 POR_FLASH
POR_FLASH
VDDE
3590
FLASH_RST
7581
SYSTEM RESET (50ms)
3582
+5V2
3583
3586
B 7 RGB PROCESSING
VDDE
7300-H
ADOC RGB
B11 GFX
FROM B6
R G B
BLENDER
BLANKING
DRIVE ADJUST
CDAC
SVMP
ROUTP
GOUTP
BOUTP
IBC
IBCRANGE
BLENDER CONTROL
FIXED BEAM CURRENT SWITCH OFF
SCAVEM
RGB GAIN
RGB CUTOFF
ADC
LEAKAGE COMPASATOR
7304
Y-SCAVEM
7310
R-CRT
7320
G-CRT
7330
B-CRT
7346
CUTOFF
7356
TILT
EHT-INFO
HFB_X-RAY-PROT
B8
B9
A 8 SIMM CONN
0230
1940
9054
F CRT PANEL
Y-SCAVEM-IN
SCAVEM PROC.
5300
1483
SCAVEM COIL
+8V
200V
7307
CRT
CUTOFF
EHT-INFO
HFB_X-RAY-PROT
VG1
VG2
FOCUSA
FOCUSB
3349
3334
3347
EHT
FROM LOT A3
TO/FROM 1424 OF LSP A3
1424
X-RAY-PROT_HFB
3417
EHT-INFO
FILAMENT
3403
3404
200V
1434
TO/FROM LINE DEFLECTION A3
KEYBOARD
LIGHT-SENSOR
RC5
ON-OFF-LED
N.C.
A 8 SIMM CONN
A 10 FRONT
1945
0215
1947
TOP CONTROL E
1091-4
J FRONT INTERFACE
0203
1008
1002
+5V2
A 6 AUDIO AMPLIFIER (CLASS-B)
SOUND-ENABLE
DEGAUSSING A1
STANDBY A2
POR A3
A3 POR
SOUND ENABLE
1739
Ext. ACTIVE SUBWOOFER (via 3rd SCART Panel)
1740
Int. ACTIVE SUBWOOFER
+16V+19V
7701
+16V+19V
RIGHT
1735
LEFT
1738
Ext/Int. Passive SUB-WOOFER
B 10 AUDIO PROCESSING
VDDCO
VDDE
7300-x
ADOC SOUND & AUDIO PROCESSING
Demodulation and Decoding DSP
DDEP
SSIF
B5
Down Mix
Preprocessing
SRC
Dematrix and Select
EXT. STEREO
EXT. MONO
Decimation Filter
SDAC1-VDDA
SDAC1-3V3
Level Adj.
I/P X-Bar
Audio Processing DSP
O/P X-Bar
Noise Shaper
DAC
WS PLL
I2SIN
I2SOUT
SDI SCKI WSI
SDO2 SCKO2 WSO2
N.C.
N.C.
7300-B
AUD_SPK_R
AUD_SPK_L
AUD_SPK_SW
AUD_SPK_C
AUD_SPK_SL
AUD_HP_R
AUD_HP_L
DSNDR2
DSNDL2
DSNDR1
DSNDL1
B3
B4 VREF_AUD_POS
2447
B4 VREF_AUD_NEG
7433
7432
AUDIO-R
AUDIO-L
7434
AUDIO-SW
7431*
AUDIO-C
4433*
7430*
* = Reserved for DPL
AUDIO-SURR B18
4434*
7480
HEADPHONE-R
+5V
HEADPHONE-L
A 7 HEADPHONE AMP
4703 HEADPH-R
4704 HEADPH-L
A8
B 15 LOW VOLTAGE SUPPLY - ADOC
5600
VDDCO
+5V2
7651
6651
+1V8
2651
7650
Vc
Vgate
Vcc
Vfb
Gnd
+3V3
3651
3652
Rev 0.2 02-Jul-2003
CL 36532058_014.eps 210803

Block Diagram 3 Audio & Video

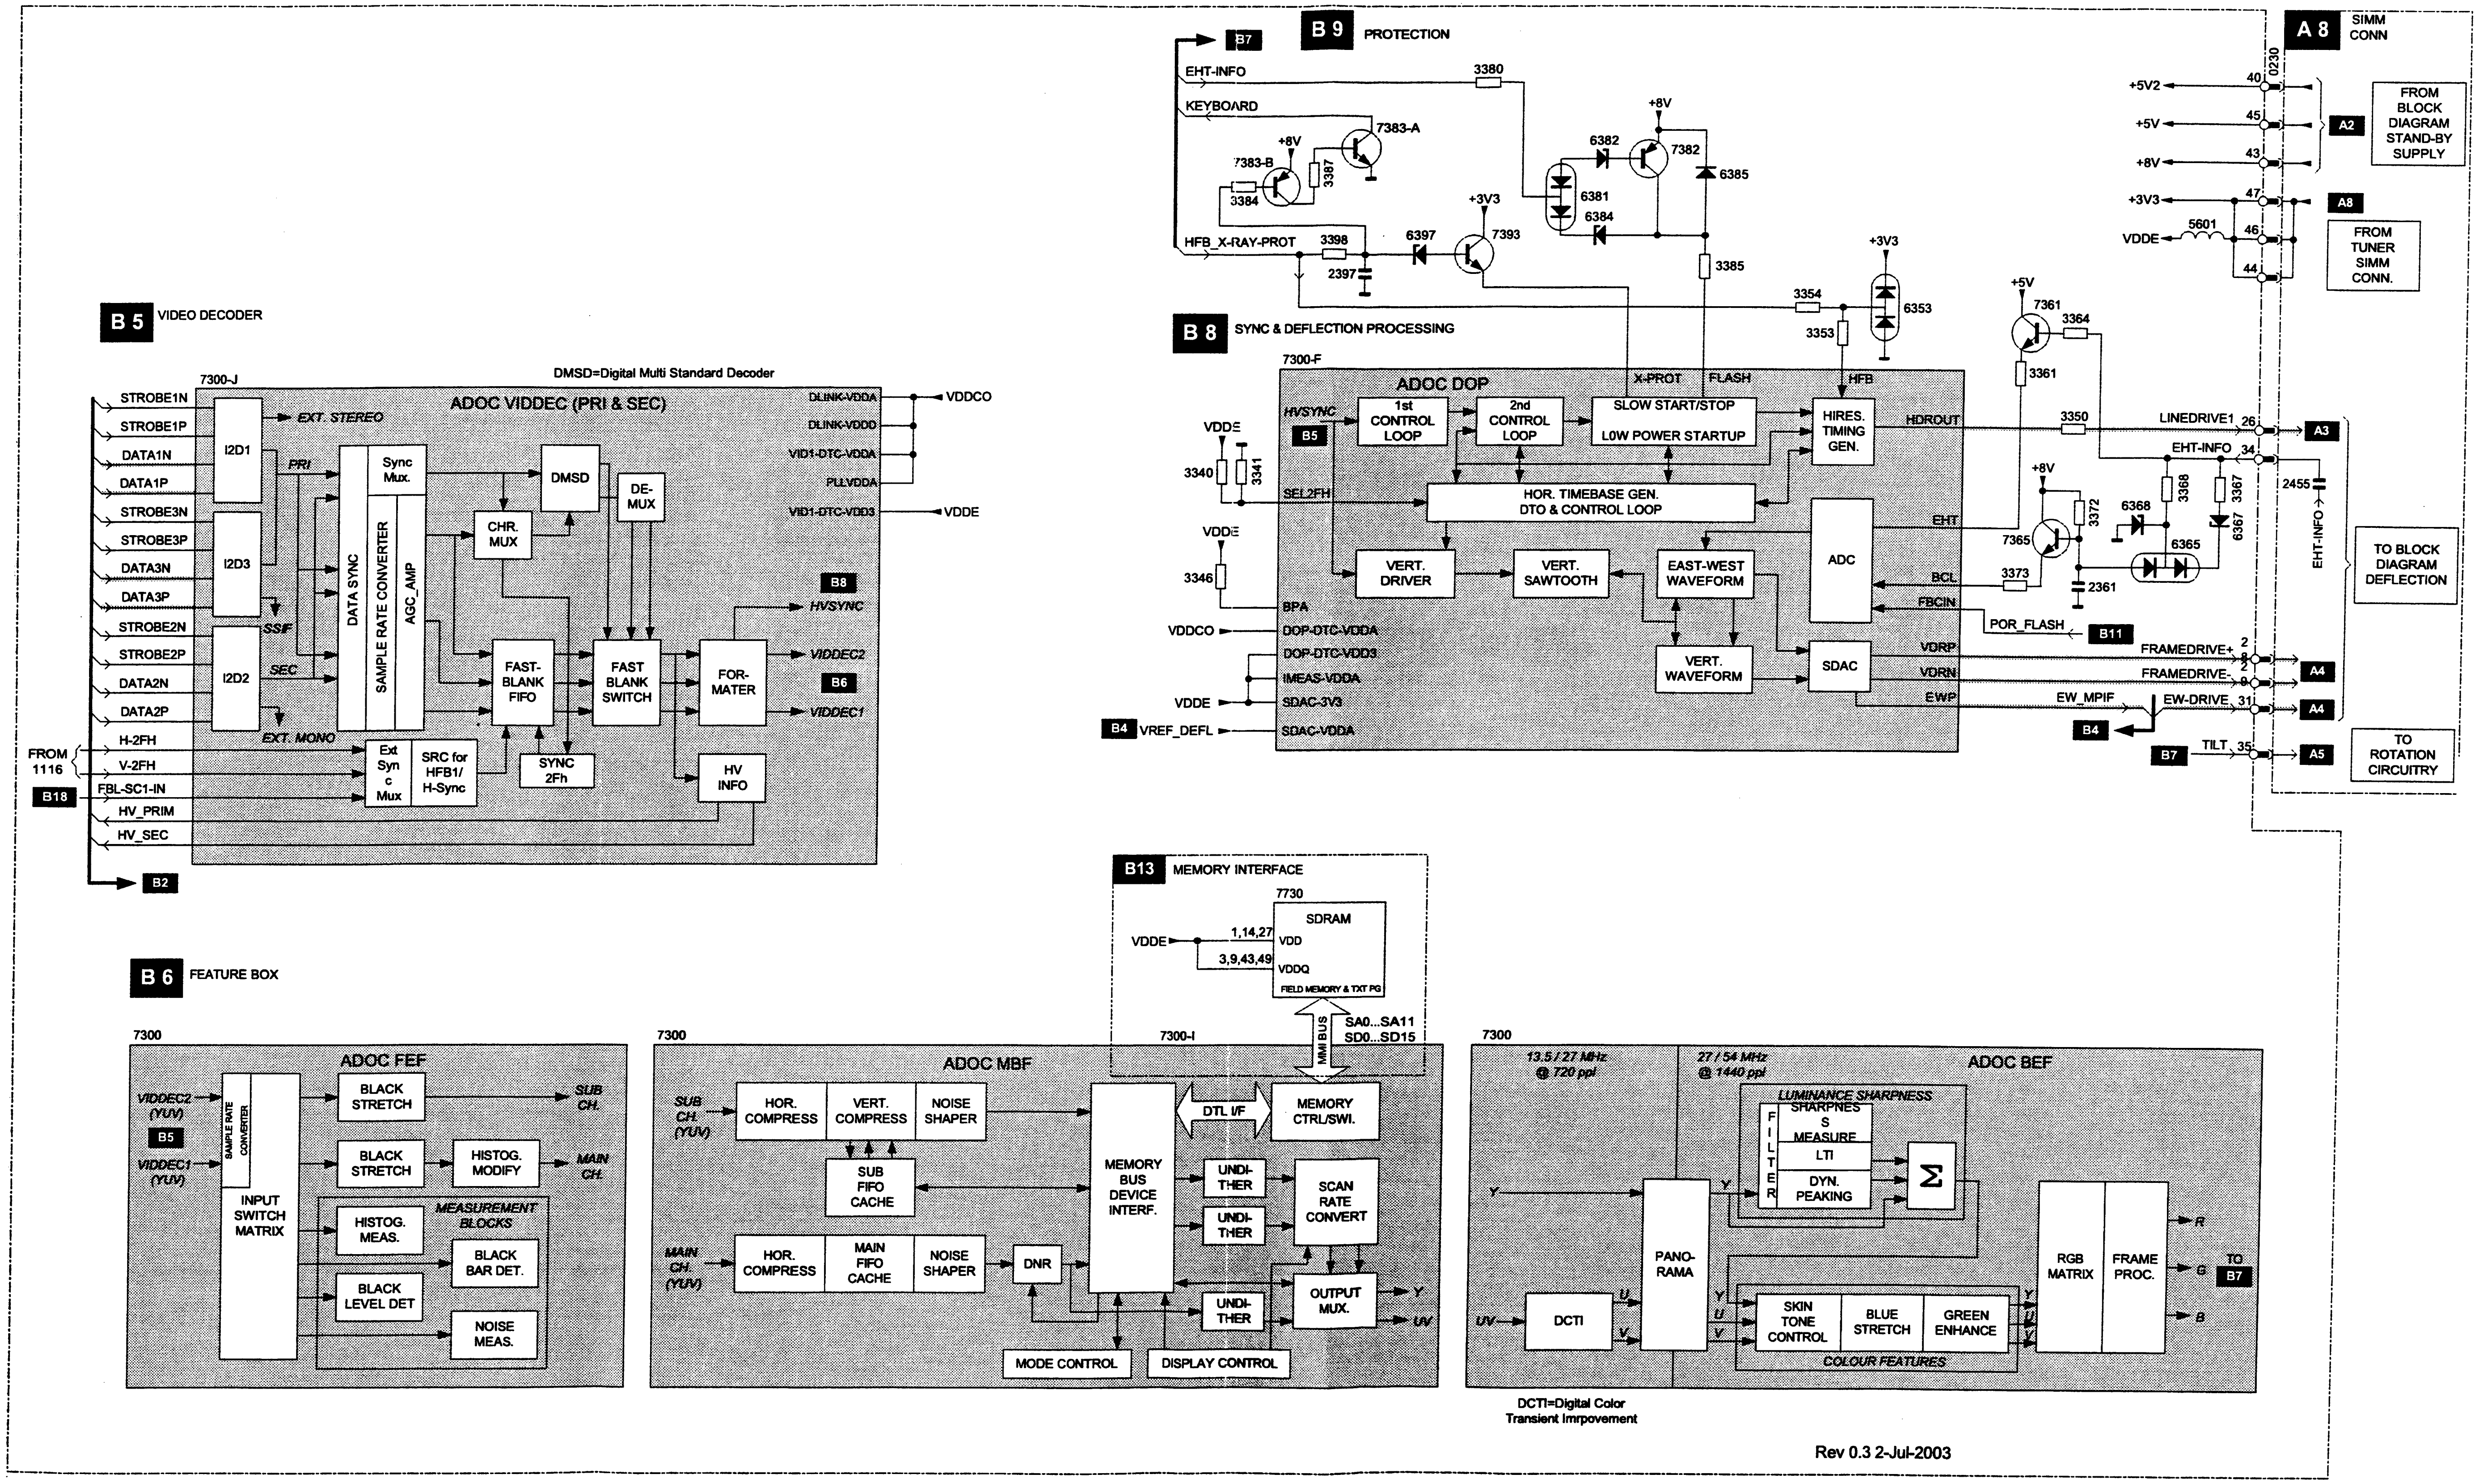
B 9 PROTECTION
B7
EHT-INFO
3380
KEYBOARD
7383-A
7383-B
+8V
3387
3384
HFB_X-RAY-PROT
3398
2397
6397
+3V3
7393
6382
7382
6385
6381
6384
3385
A 8 SIMM CONN
0230
+5V2
+5V
+8V
+3V3
VDDE
5601
40
45
43
47
46
44
A2
FROM BLOCK DIAGRAM STAND-BY SUPPLY
A8
FROM TUNER SIMM CONN.
B 5 VIDEO DECODER
7300-J
DMSD=Digital Multi Standard Decoder
ADOC VIDDEC (PRI & SEC)
STROBE1N
STROBE1P
DATA1N
DATA1P
STROBE3N
STROBE3P
DATA3N
DATA3P
STROBE2N
STROBE2P
DATA2N
DATA2P
H-2FH
V-2FH
FBL-SC1-IN
HV_PRIM
HV_SEC
FROM 1116
B18
B2
I2D1
I2D3
I2D2
EXT. STEREO
PRI
SSIF
SEC
EXT. MONO
Sync Mux.
DATA SYNC
SAMPLE RATE CONVERTER
AGC_AMP
DMSD
CHR. MUX
DE-MUX
FAST-BLANK FIFO
FAST BLANK SWITCH
FOR-MATER
Ext Syn c Mux
SRC for HFB1/ H-Sync
SYNC 2Fh
HV INFO
DLINK-VDDA
DLINK-VDDD
VID1-DTC-VDDA
PLLVDDA
VID1-DTC-VDD3
VDDCO
VDDE
B8
HVSYNC
VIDDEC2
B6
VIDDEC1
B 8 SYNC & DEFLECTION PROCESSING
7300-F
ADOC DOP
X-PROT
FLASH
HFB
HVSYNC
B5
1st CONTROL LOOP
2nd CONTROL LOOP
SLOW START/STOP
L0W POWER STARTUP
HIRES. TIMING GEN.
HDROUT
SEL2FH
HOR. TIMEBASE GEN. DTO & CONTROL LOOP
VERT. DRIVER
VERT. SAWTOOTH
EAST-WEST WAVEFORM
VERT. WAVEFORM
ADC
SDAC
EHT
BCL
FBCIN
VDRP
VDRN
EWP
BPA
DOP-DTC-VDDA
DOP-DTC-VDD3
IMEAS-VDDA
SDAC-3V3
SDAC-VDDA
VDDE
3340
3341
3346
VDDCO
B4
VREF_DEFL
3354
3353
+3V3
6353
+5V
7361
3364
3361
3350
LINEDRIVE1
26
EHT-INFO
34
A3
2455
EHT-INFO
+8V
3372
6368
3388
3387
6367
7365
6365
3373
2361
POR_FLASH
B11
FRAMEDRIVE+
FRAMEDRIVE-
A4
EW_MPIF
EW-DRIVE
31
A4
B4
TILT
35
B7
A5
TO BLOCK DIAGRAM DEFLECTION
TO ROTATION CIRCUITRY
B13 MEMORY INTERFACE
7730
SDRAM
VDDE
1,14,27
3,9,43,49
VDD
VDDQ
FIELD MEMORY & TXT PG
MMI BUS
SA0...SA11
SD0...SD15
B 6 FEATURE BOX
7300
ADOC FEF
VIDDEC2 (YUV)
B5
VIDDEC1 (YUV)
SAMPLE RATE CONVERTER
INPUT SWITCH MATRIX
BLACK STRETCH
BLACK STRETCH
HISTOG. MODIFY
SUB CH.
MAIN CH.
MEASUREMENT BLOCKS
HISTOG. MEAS.
BLACK BAR DET.
BLACK LEVEL DET
NOISE MEAS.
7300
ADOC MBF
7300-I
SUB CH. (YUV)
HOR. COMPRESS
VERT. COMPRESS
NOISE SHAPER
SUB FIFO CACHE
MAIN CH. (YUV)
HOR. COMPRESS
MAIN FIFO CACHE
NOISE SHAPER
DNR
MEMORY BUS DEVICE INTERF.
DTL I/F
MEMORY CTRL/SWI.
UNDI-THER
UNDI-THER
UNDI-THER
SCAN RATE CONVERT
OUTPUT MUX.
Y
UV
MODE CONTROL
DISPLAY CONTROL
7300
ADOC BEF
13.5 / 27 MHz @ 720 ppl
27 / 54 MHz @ 1440 ppl
LUMINANCE SHARPNESS
FILTER
SHARPNESS MEASURE
LTI
DYN. PEAKING
Σ
Y
PANO-RAMA
UV
DCTI
U
V
SKIN TONE CONTROL
BLUE STRETCH
GREEN ENHANCE
COLOUR FEATURES
RGB MATRIX
FRAME PROC.
R
G
B
TO B7
DCTI=Digital Color Transient Imrpovement
Rev 0.3 2-Jul-2003

CL 36532058_013.eps
210803

Testpoint Overview SSB

1009	A2
F014	A3
F015	A3
F016	A4
F017	A4
F020	C1
F021	A2
F041	A1
F042	A1
F045	A1
F046	B1
F047	B1
F060	C2
F064	B1
F074	A2
F075	A2
F076	A1
F077	B1
F078	A1
F080	B1
F088	A2
F089	A2
F114	C2
F115	D2
F116	C1
F132	C1
F134	B2
F135	B2
F137	C2
F138	C2
F139	B2
F150	A1
F152	C1
F159	A2
F281	B4
F282	A4
F341	C4
F346	C4
F348	A1
F351	C4
F354	C3
F355	C5
F357	D5
F358	C5
F381	C3
F382	C4
F383	C3
F384	C3
F385	C3
F386	C4
F387	C3
F389	C3
F390	C3
F391	C3
F437	B4
F438	B3
F439	B4
F448	B4
F449	B4
F480	A5
F481	A5
F508	B4
F509	B4
F510	A3
F511	B3
F512	B3
F513	B3
F514	B3
F515	A7
F516	B4
F517	B4
F518	B4
F519	B3
F520	B4
F521	B3
F522	B3
F523	B3
F524	C4
F527	C2
F532	B3
F533	B4
F534	B4
F537	C4
F538	B4
F539	B4
F540	B4
F541	B4
F542	B4
F543	B4
F544	B4
F550	B3
F551	B3
F570	A5
F582	B6
F584	A7
F601	B5
F650	C6
F651	B6
F652	C6
F730	B5
F790	C5
F791	B5
F792	B5
F793	C5
F794	C5
F795	C5
F797	C6
F798	C6
F799	C6
F901	D1
F902	D1
F903	D1
F904	D2
F905	D2
F906	D2
F907	C2
F909	D2
F910	D2
F911	D2
F913	C2
F915	D2
F918	D2
F919	D3
F920	D3
F921	D3
F923	D3
F924	D3
F925	D3
F926	D3
F928	D3
F929	D3
F931	D3
F932	D3
F933	D4
F935	D3
F936	D3
F937	D3
F938	C4
F939	D2
F940	D4
F941	D4
F943	D4
F944	D4
F947	C5
F948	D5
F949	D5
F950	D5
F951	D5
F952	D5
F953	D5
F955	D5
F956	D5
F958	D5
F959	D5
F960	D5
F961	D6
F962	D5
F963	D6
F964	D6
F965	D6
F966	D6
F967	D6
F968	D6
F969	D6
F970	D6
F972	D7
F973	D6
F974	D6
F975	D7
F976	D7
F977	D6
F978	D7
F979	D7
F980	D7
I001	C1
I002	A2
I003	A2
I004	B2
I005	B1
I006	A2
I007	A2
I008	A2
I009	B2
I010	A2
I061	C2
I062	B1
I063	C1
I064	B1
I101	C2
I102	B2
I103	B2
I104	C2
I105	B2
I106	B3
I107	B2
I108	B2
I151	B1
I152	B1
I153	B2
I154	B2
I281	C2
I301	C4
I302	C4
I303	C4
I304	C4
I305	C4
I306	C4
I307	C4
I308	D4
I309	C4
I310	D4
I341	B5
I342	C5
I343	C5
I344	C5
I345	C6
I346	C5
I347	C5
I348	C5
I349	C5
I350	C5
I381	C3
I382	C3
I431	A4
I432	A4
I433	A3
I434	A3
I435	A4
I436	A4
I437	A4
I438	A4
I439	A3
I440	A4
I441	A4
I442	A4
I443	A5
I444	A5
I445	A5
I446	A5
I447	A6
I448	A6
I501	C4
I502	C6
I601	B5
I651	C7

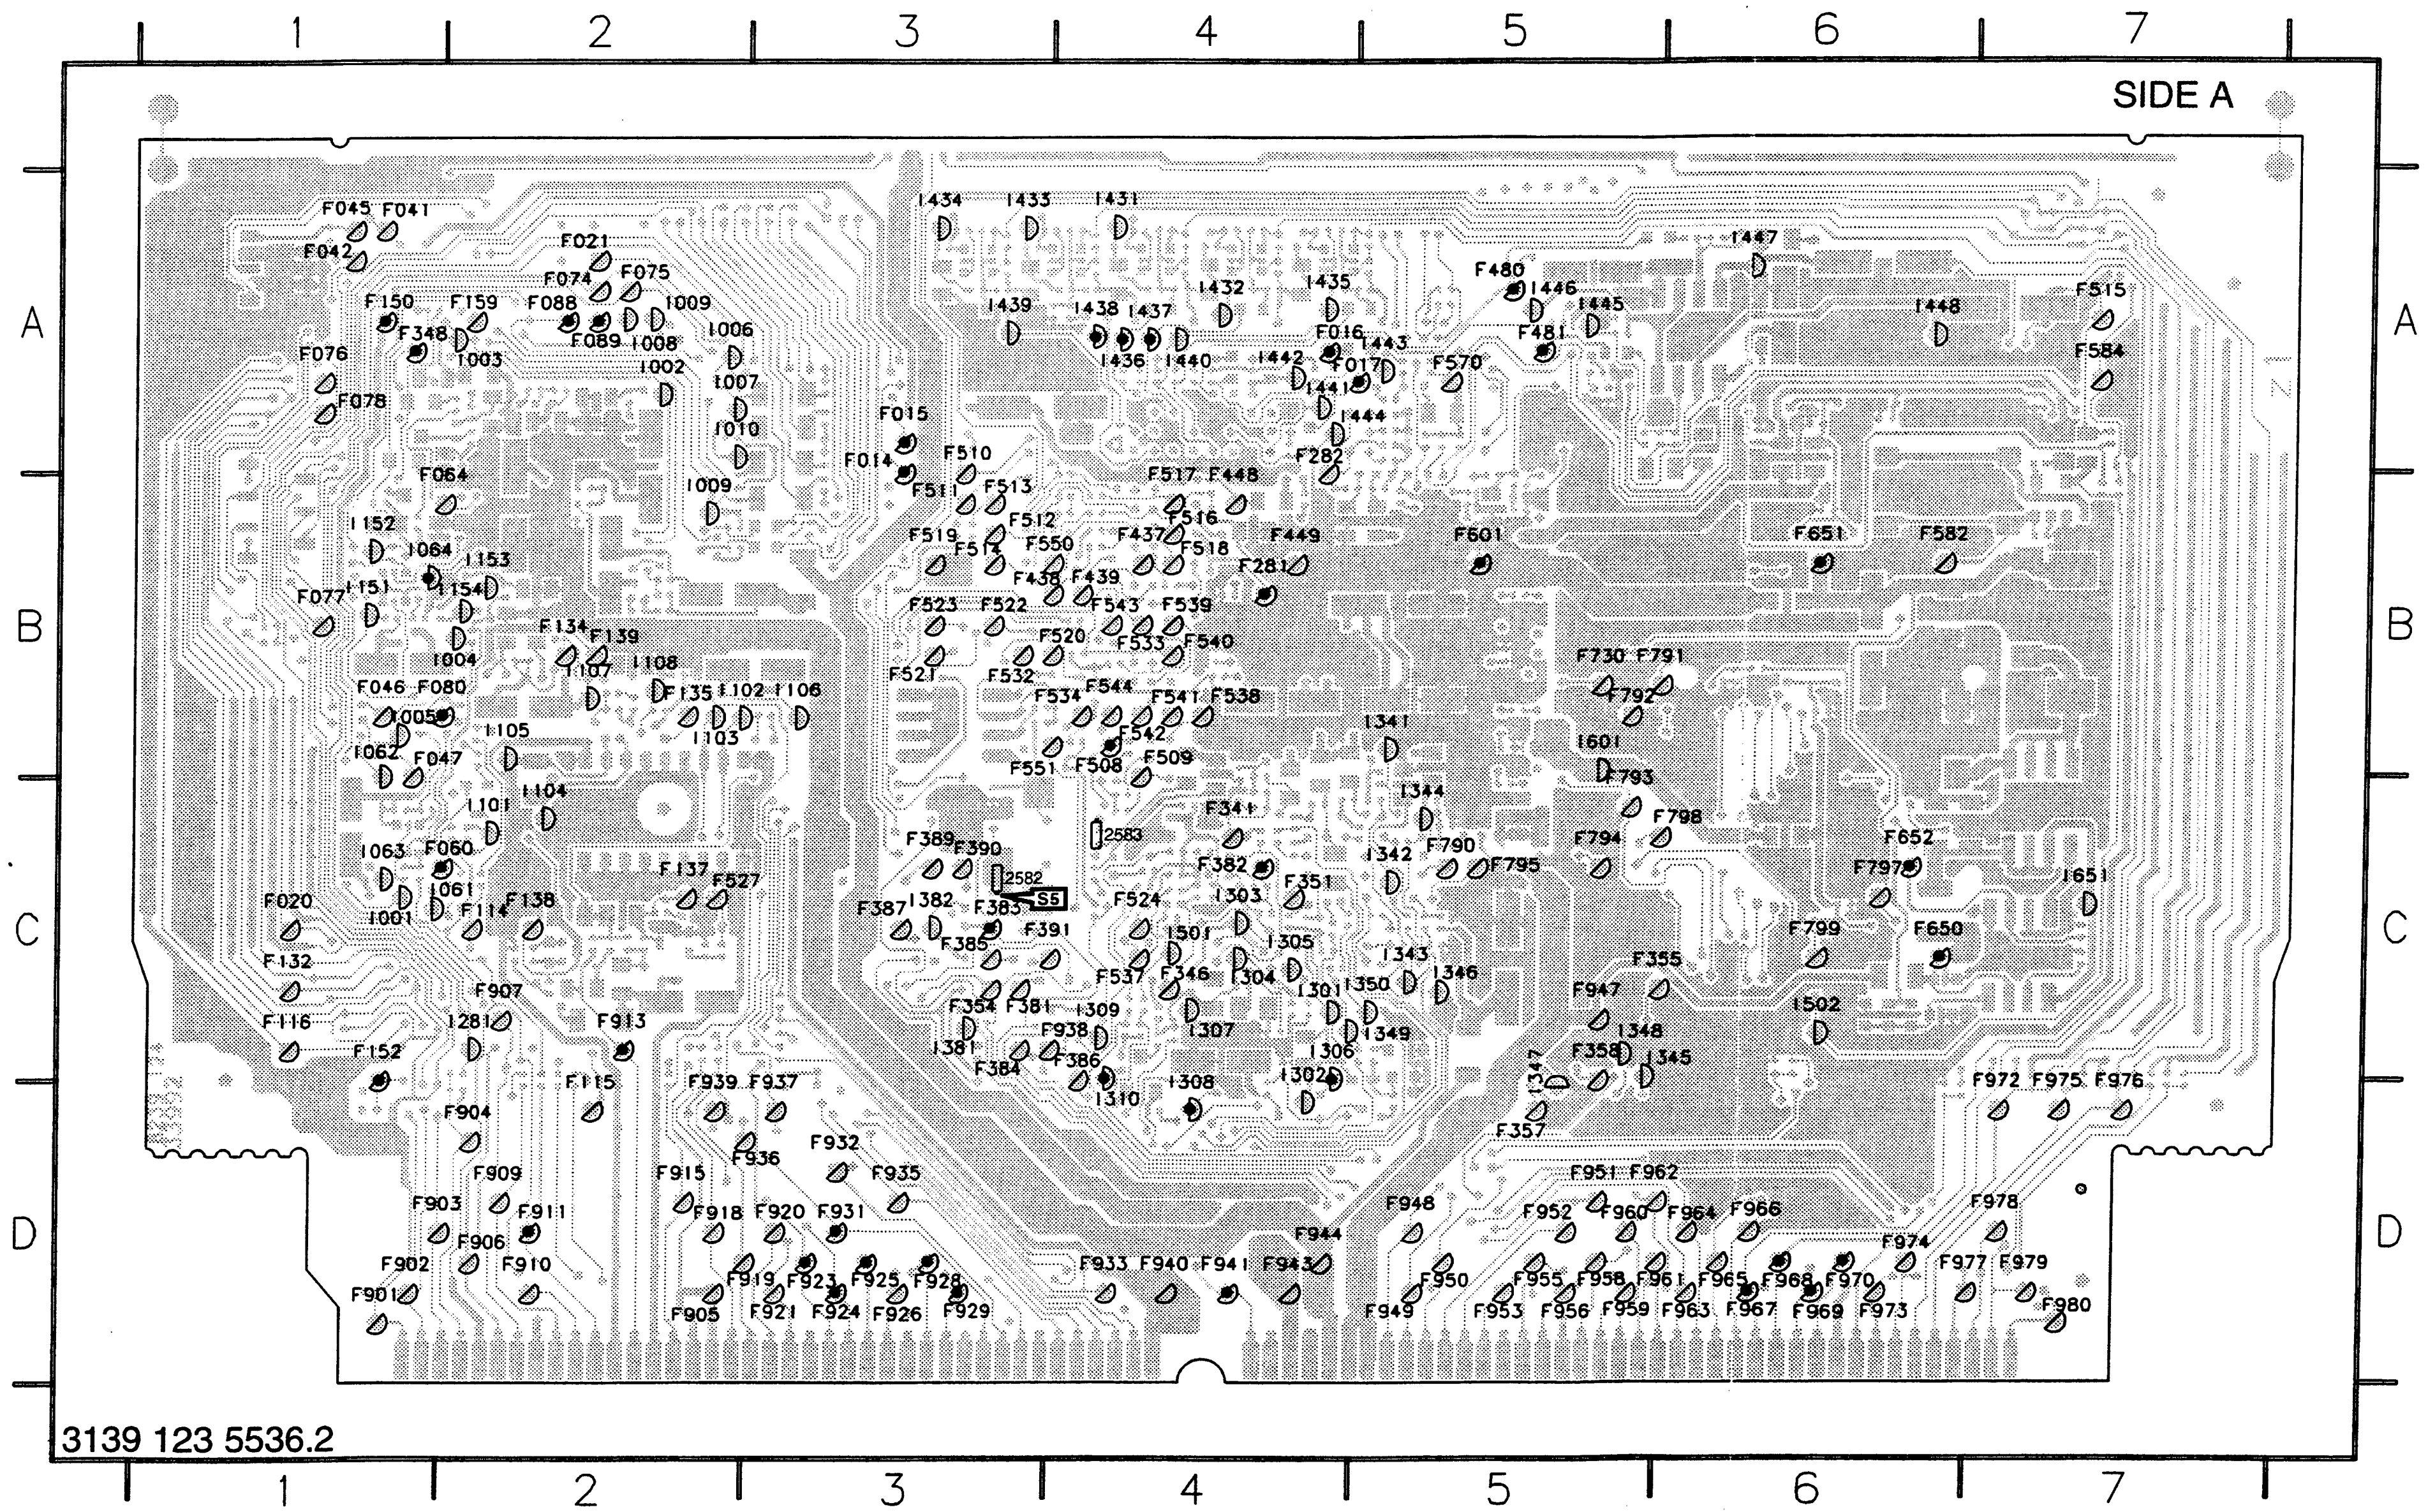
1
2
3
4
5
6
7
A
B
C
D
SIDE A
F045 F041
F042
F021
F074 F075
F088 1009
F089 1008
1006
1002
1007
1010
1009
F150 F159
F348 1003
F076
F078
F064
1152
1064 1153
1151 1154
F077
1004
F134 F139
1107 1108
F135 1102 1106
1103
F046 F080
1005
1062 F047
1105
1101 1104
1063 F060
1061 F114 F138
1001
F020
F132
F116
F907
1281
F913
F152
F115
F904
F909
F903 F911
F906
F902 F910
F901
F137 F527
1434 1433 1431
1439 1438 1437
1436 1440
1432 1435
F016 1443
1442 F017
1441 1444
F282
F015
F014 F510 F511 F513
F512 F517 F448
F519 F514 F550
F516 F437 F518
F438 F439 F449 F281
F523 F522 F543 F539
F520 F533 F540
F521 F532
F534 F544 F541 F538
F542
F551 F508 F509
F389 F390
2582
F387 1382 F383 S5
F385 F391
F524 1303 F351
F382 F341
2583
1501 1305
F537 F346 1304
1343 1346
1301 1350
F354 F381 1309
1307 1349
1381 F938 1386
F384 1306
1310 1308 1302
F939 F937
F936 F932
F915 F935
F918 F920 F931
F919 F923 F925 F928
F905 F921 F924 F926 F929
F933 F940 F941 F943
F944
1341
1344
1342 F790 F795
F480 1446
1445
F481
F570
1447
1448
F515
F584
F601
F651 F582
F730 F791
F792
1601
F793
F794 F798
F652
F797
1651
F799
F650
F355
F947
1348
F358 1345
1347
1502
F357
F972 F975 F976
F951 F962
F948 F952 F960 F964 F966
F978
F974
F977 F979
F950 F955 F958 F961 F965 F968 F970
F949 F953 F956 F959 F963 F967 F969 F973
F980
3139 123 5536.2

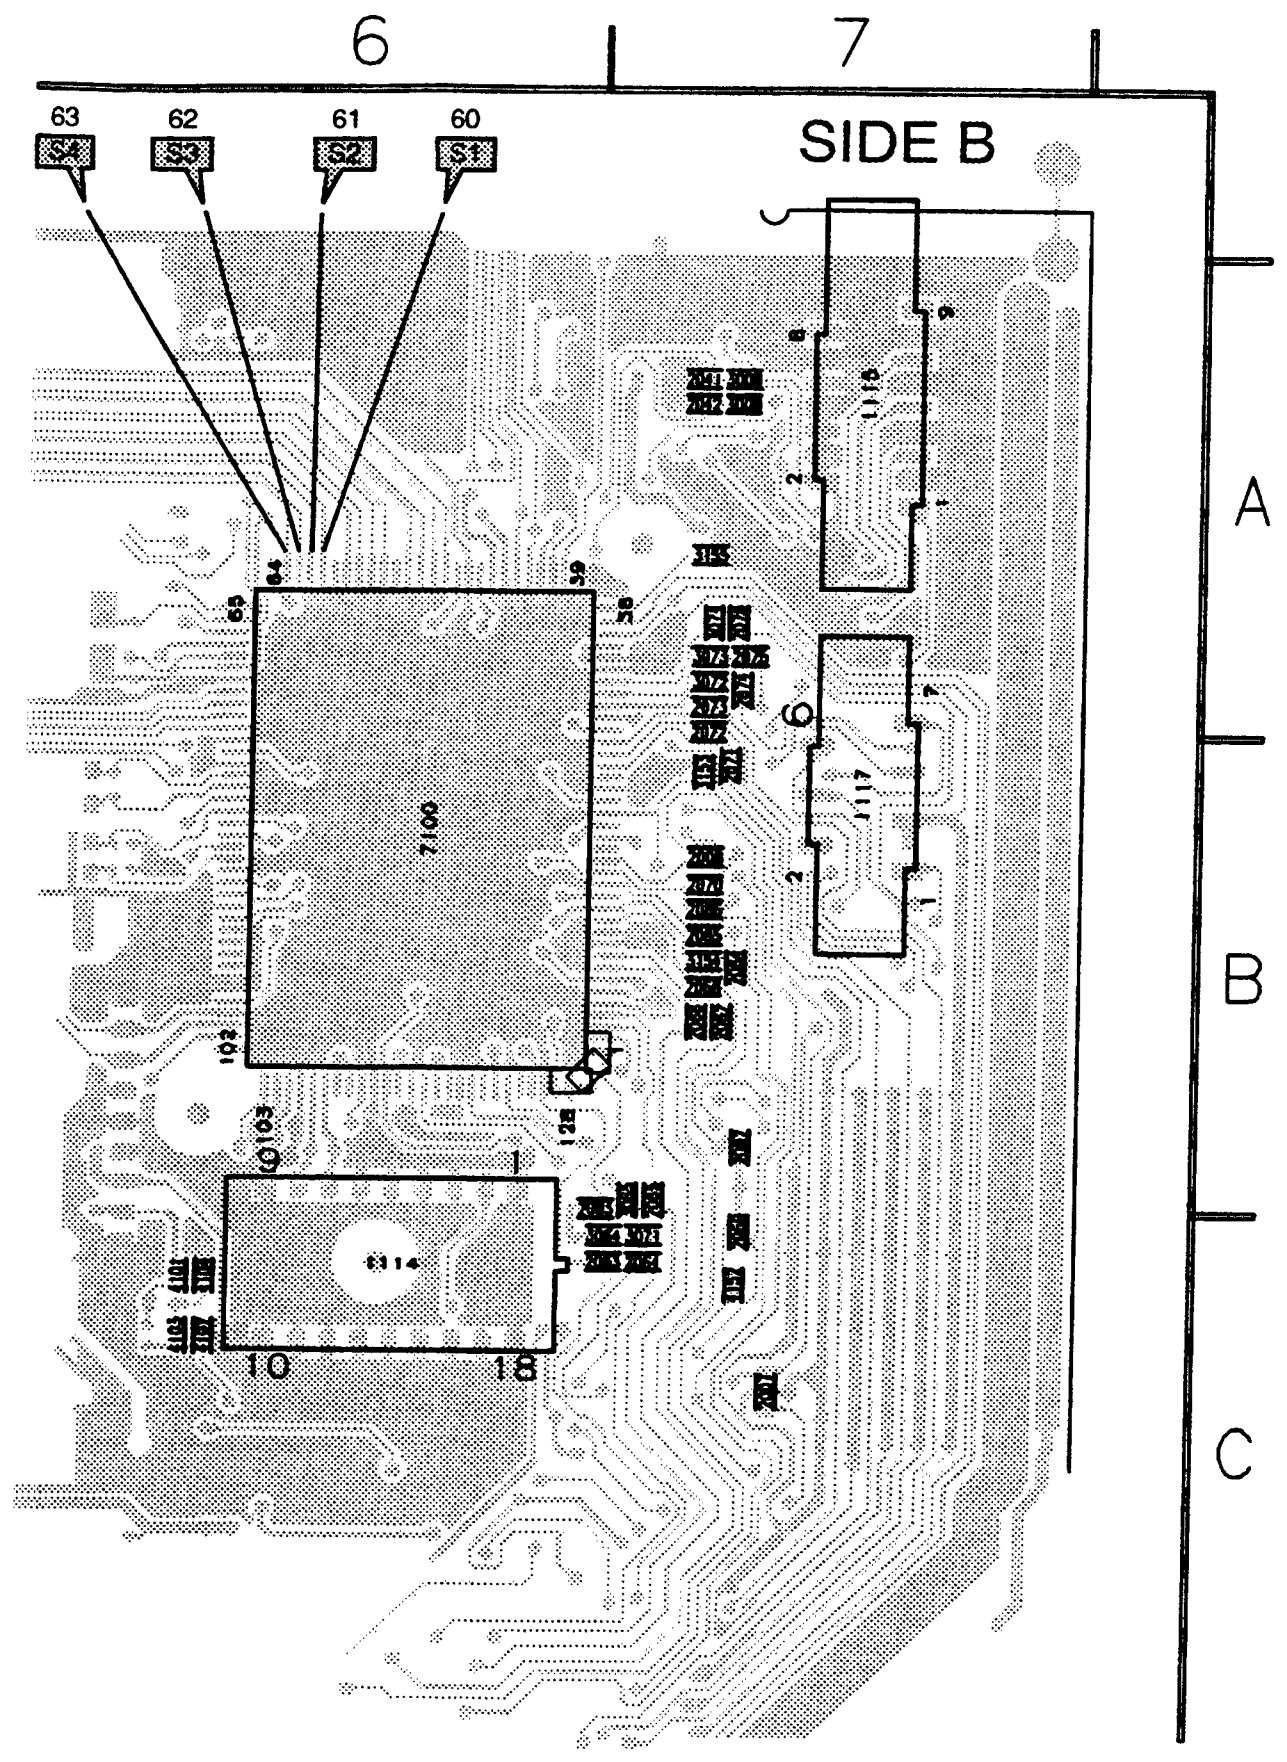
6
7
SIDE B
63 S4
62 S3
61 S2
60 S1
7100
1116
1117
1
10
18
A
B
C


S1
100mV / div DC
20µs / div


S2
100mV / div DC
20µs / div


S3
100mV / div DC
20µs / div


S4
100mV / div DC
20µs / div


S5
500mV / div DC
50ns / div


F014
1 V / div DC
1ms / div


F015
1 V / div DC
1ms / div


F016
500mV / div DC
1ms / div


F017
500mV / div DC
1ms / div


F060
500mV / div DC
20µs / div


F080
500mV / div DC
20µs / div


F064
500mV / div DC
20µs / div


F088
1 V / div DC
20µs / div


F089
1 V / div DC
20µs / div

F150: 3V2 DC
F152: 3V2 DC
F281: 3V2 DC
F381: 0V DC
F382: 0V DC
F383: 0V DC


F480
100mV / div AC
1ms / div


F481
100mV / div AC
1ms / div


F508
1 V / div DC
500µs / div


F509
1 V / div DC
200µs / div

F601: 1V8 DC
F650: 3V2 DC
F651: 1V8 DC


F652
500mV / div DC
500ns / div


F911
500mV / div DC
20µs / div


F913
500mV / div AC
10µs / div


F923
1 V / div DC
10µs / div


F924
1 V / div DC
10µs / div


F925
1 V / div DC
10µs / div


F926
1 V / div DC
10µs / div


F928
500mV / div DC
5ms / div


F929
500mV / div DC
5ms / div


F931
1 V / div DC
5ms / div


F941
2 V / div DC
20µs / div


F967
200mV / div AC
1ms / div


F968
200mV / div AC
1ms / div


F969
500mV / div AC
1ms / div


F970
500mV / div AC
1ms / div


I306
200mV / div DC
10µs / div


I308
200mV / div DC
10µs / div


I310
200mV / div DC
10µs / div


I436
20mV / div AC
500µs / div


I437
20mV / div AC
200µs / div


I438
100mV / div AC
1ms / div

CL 36532058_008.eps
211103

I2C Overview

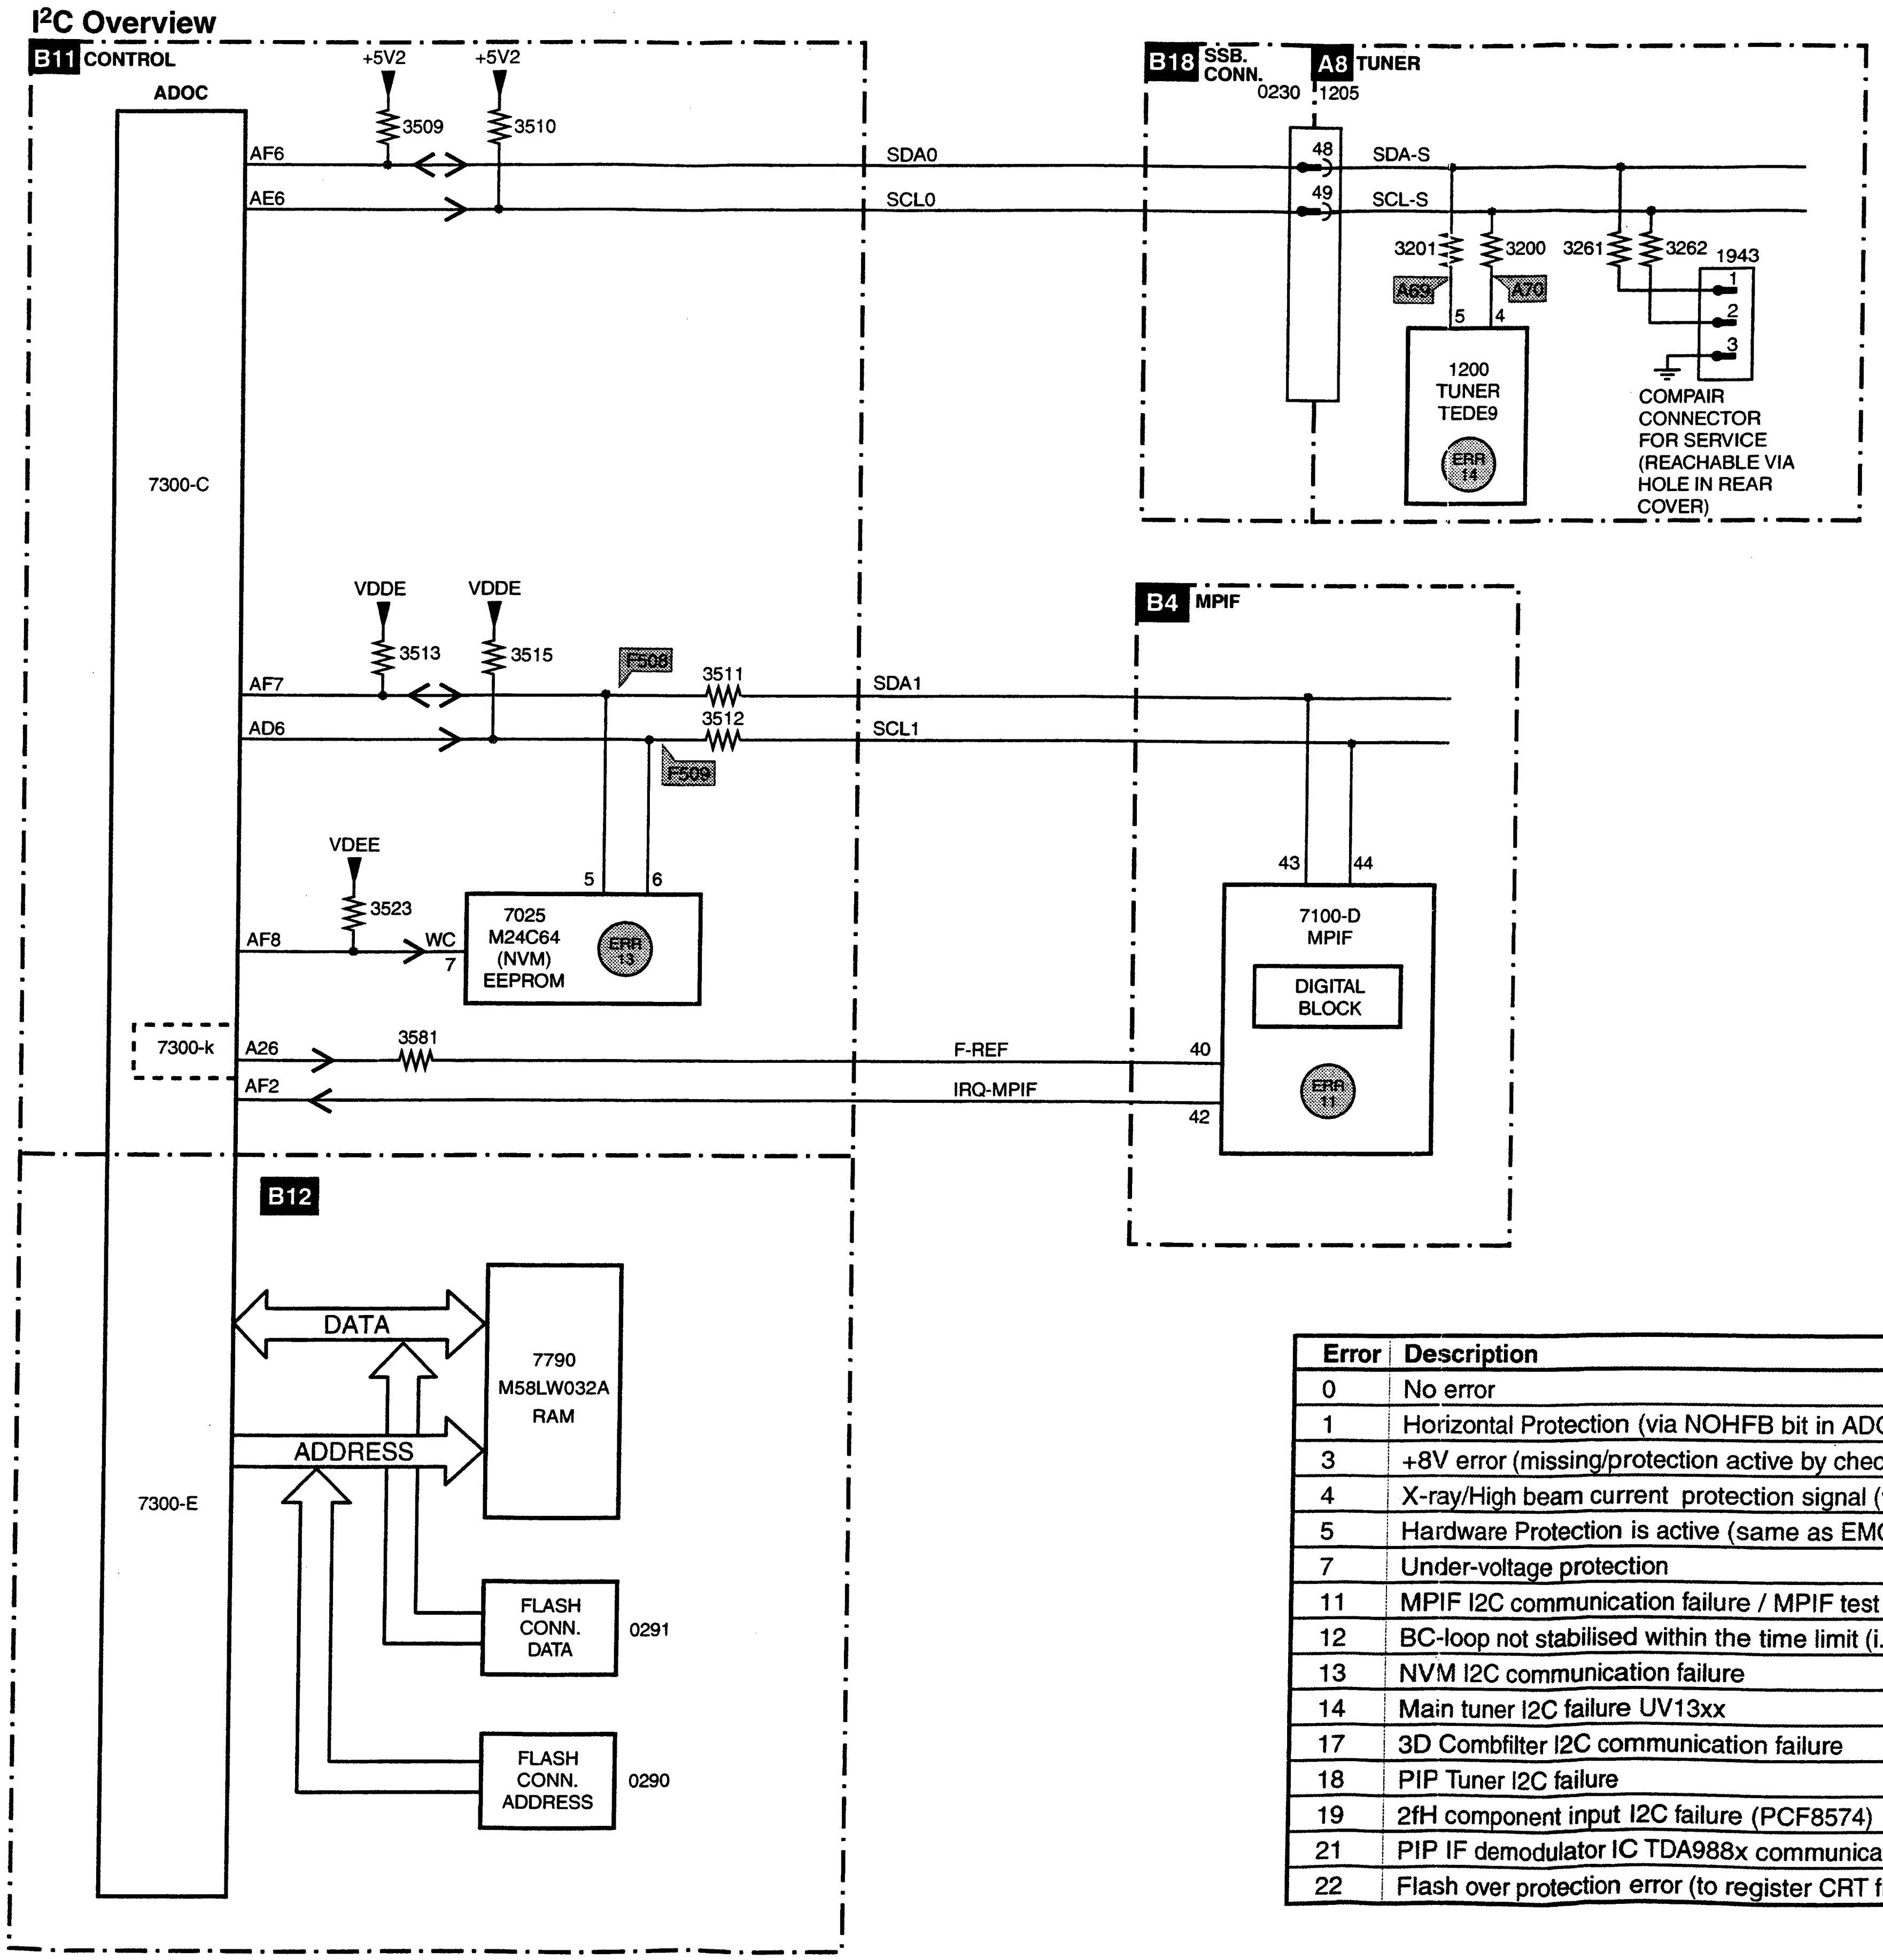
I²C Overview
B11 CONTROL
ADOC
7300-C
+5V2
+5V2
3509
3510
AF6
AE6
SDA0
SCL0
VDDE
VDDE
3513
3515
F508
3511
3512
F509
AF7
AD6
SDA1
SCL1
VDEE
3523
AF8
WC
7
5
6
7025
M24C64
(NVM)
EEPROM
ERR 13
7300-k
A26
AF2
3581
F-REF
IRQ-MPIF
B12
DATA
ADDRESS
7790
M58LW032A
RAM
7300-E
FLASH CONN. DATA
0291
FLASH CONN. ADDRESS
0290
B18 SSB. CONN.
A8 TUNER
0230
1205
48
49
SDA-S
SCL-S
3201
3200
3261
3262
1943
A69
A70
5
4
1
2
3
1200
TUNER
TEDE9
ERR 14
COMPAIR CONNECTOR FOR SERVICE (REACHABLE VIA HOLE IN REAR COVER)
B4 MPIF
43
44
7100-D
MPIF
DIGITAL BLOCK
40
42
ERR 11

Error	Description
0	No error
1	Horizontal Protection (via NOHFB bit in ADOC)
3	+8V error (missing/protection active by checking MPIF ASUP bit))
4	X-ray/High beam current protection signal (via XPROT bit in ADOC)
5	Hardware Protection is active (same as EMG)
7	Under-voltage protection
11	MPIF I2C communication failure / MPIF test failed
12	BC-loop not stabilised within the time limit (i.e. after timer is expired)
13	NVM I2C communication failure
14	Main tuner I2C failure UV13xx
17	3D Combfilter I2C communication failure
18	PIP Tuner I2C failure
19	2fH component input I2C failure (PCF8574)
21	PIP IF demodulator IC TDA988x communication failed (only for PIP/DW Sets)
22	Flash over protection error (to register CRT flash-overs, via FPR bit in ADOC)

CL 36532058_004.eps
030903

Supply Lines Overview

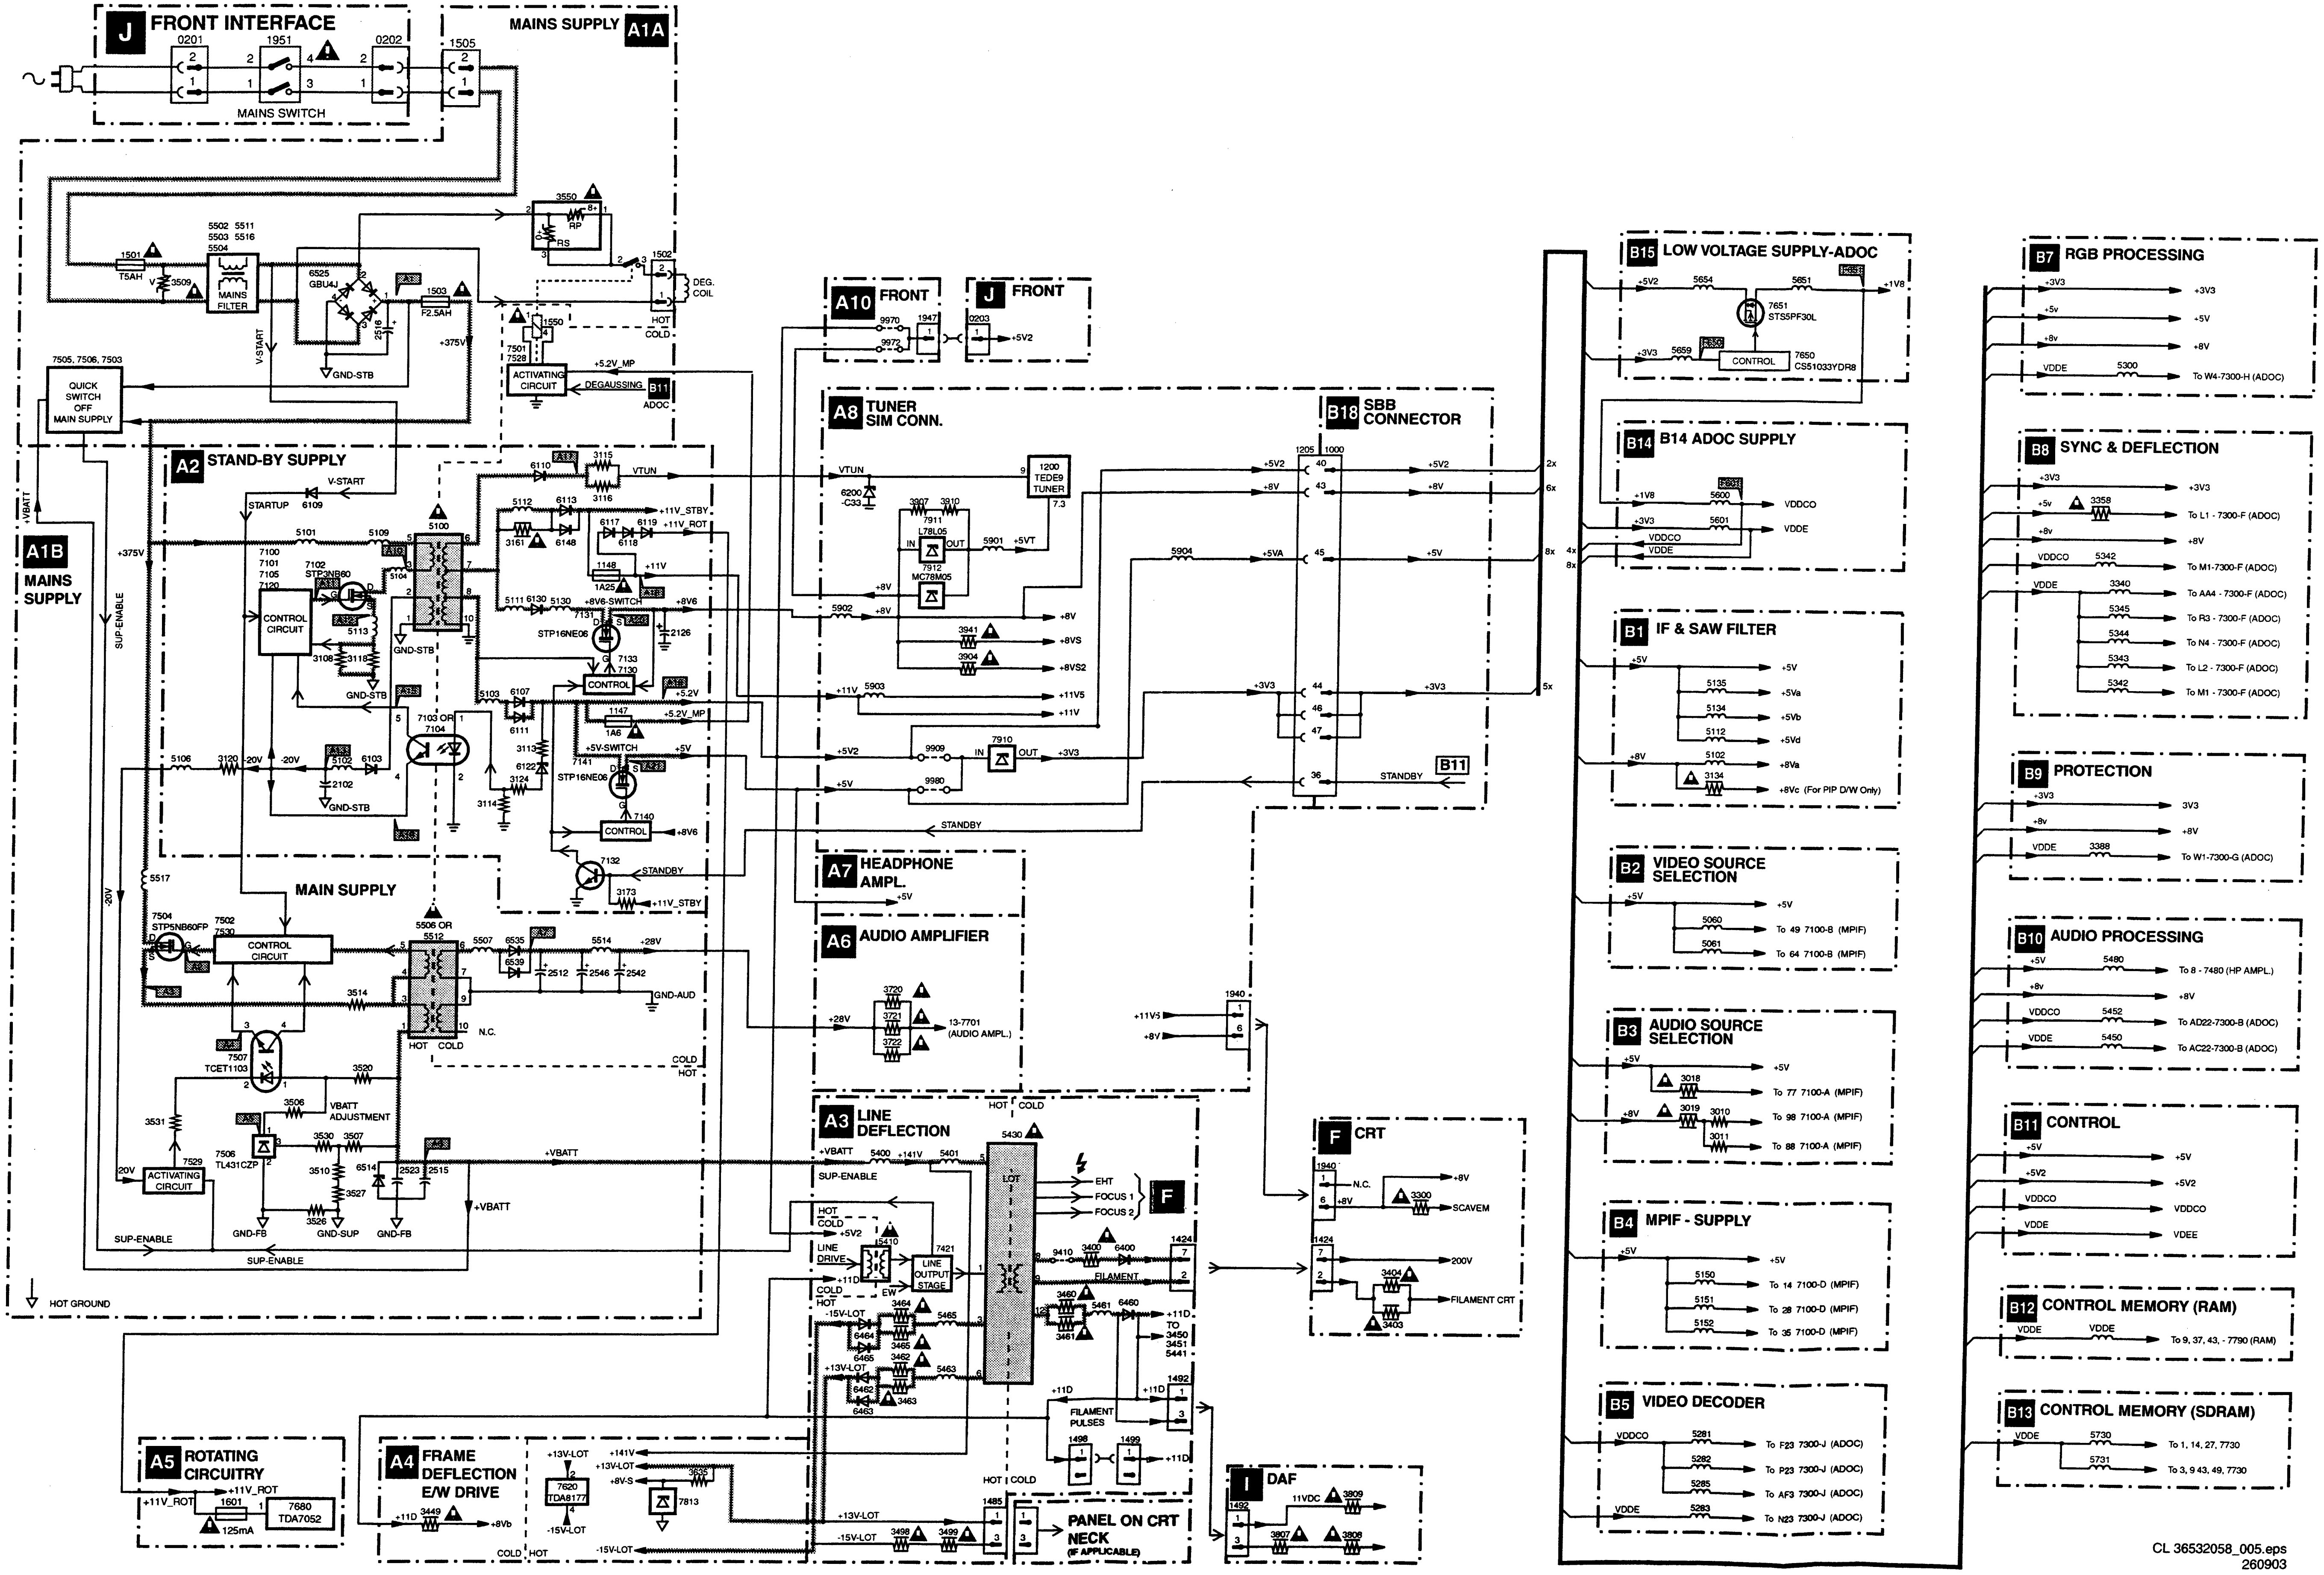
J FRONT INTERFACE
MAINS SWITCH
MAINS SUPPLY A1A
MAINS FILTER
DEG. COIL
ACTIVATING CIRCUIT
DEGAUSSING B11
QUICK SWITCH OFF MAIN SUPPLY
A1B MAINS SUPPLY
A2 STAND-BY SUPPLY
CONTROL CIRCUIT
MAIN SUPPLY
VBATT ADJUSTMENT
SUP-ENABLE
HOT GROUND
A10 FRONT
J FRONT
A8 TUNER SIM CONN.
B18 SBB CONNECTOR
A7 HEADPHONE AMPL.
A6 AUDIO AMPLIFIER
A3 LINE DEFLECTION
LINE DRIVE
LINE OUTPUT STAGE
EHT
FOCUS 1
FOCUS 2
F
FILAMENT
FILAMENT PULSES
PANEL ON CRT NECK (IF APPLICABLE)
A5 ROTATING CIRCUITRY
A4 FRAME DEFLECTION E/W DRIVE
F CRT
SCAVEM
FILAMENT CRT
I DAF
B15 LOW VOLTAGE SUPPLY-ADOC
B14 B14 ADOC SUPPLY
B1 IF & SAW FILTER
B2 VIDEO SOURCE SELECTION
B3 AUDIO SOURCE SELECTION
B4 MPIF - SUPPLY
B5 VIDEO DECODER
B7 RGB PROCESSING
B8 SYNC & DEFLECTION
B9 PROTECTION
B10 AUDIO PROCESSING
B11 CONTROL
B12 CONTROL MEMORY (RAM)
B13 CONTROL MEMORY (SDRAM)
CL 36532058_005.eps
260903

7. Circuit Diagrams and PWB Layouts

Large Signal Panel: Main Supply

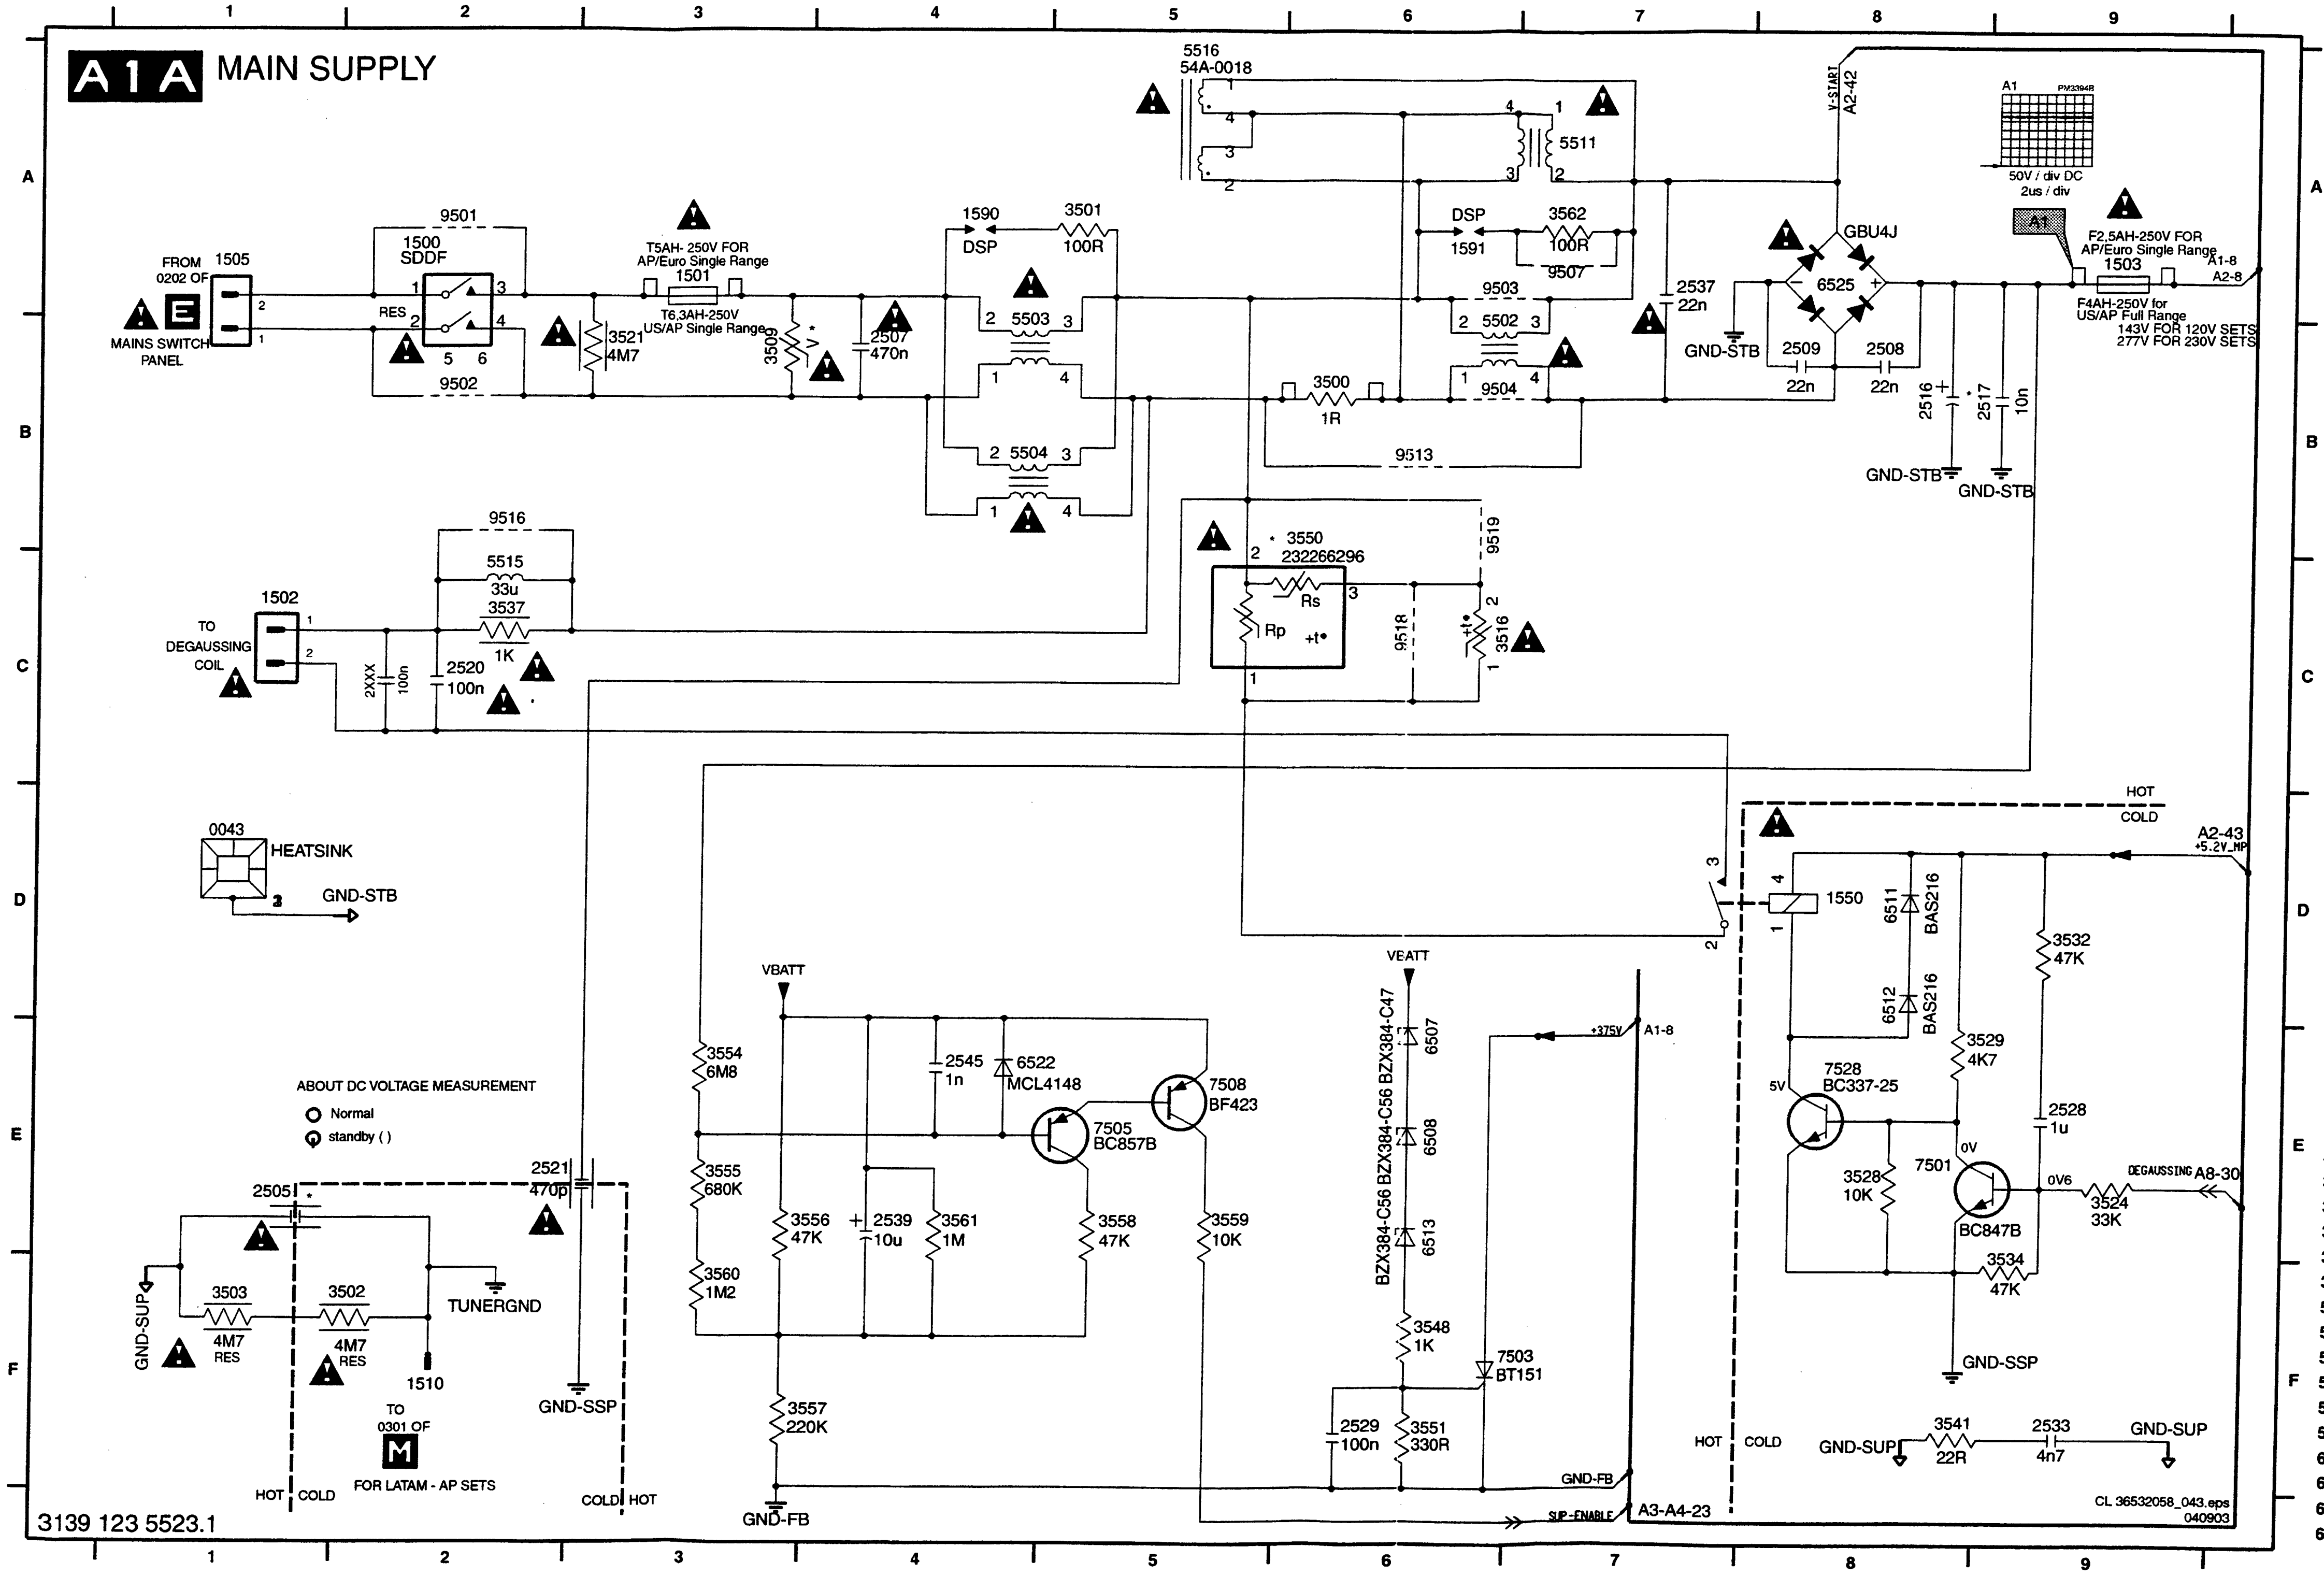
A1A MAIN SUPPLY
1
2
3
4
5
6
7
8
9
A
B
C
D
E
F
FROM 0202 OF
1505
MAINS SWITCH PANEL
E
9501
1500 SDDF
RES
9502
T5AH- 250V FOR AP/Euro Single Range
1501
T6,3AH-250V US/AP Single Range
3521 4M7
3509
2507 470n
1590 DSP
3501 100R
5503
5504
5516 54A-0018
5511
DSP 1591
3562 100R
9507
9503
5502
9504
3500 1R
9513
2537 22n
GND-STB
GBU4J
6525
2509 22n
2508 22n
2516
2517
10n
GND-STB
V-START A2-42
A1
50V / div DC 2us / div
F2,5AH-250V FOR AP/Euro Single Range
1503
F4AH-250V for US/AP Full Range
143V FOR 120V SETS
277V FOR 230V SETS
A1-8
A2-8
9516
5515 33u
3537 1K
1502
TO DEGAUSSING COIL
2XXX 100n
2520 100n
3550 232266296
Rs
Rp
9518
9519
3516
0043
HEATSINK
GND-STB
HOT
COLD
A2-43 +5.2V_MP
1550
6511 BAS216
6512 BAS216
3532 47K
3529 4K7
7528 BC337-25
5V
2528 1u
3528 10K
7501
0V
0V6
BC847B
DEGAUSSING A8-30
3524 33K
3534 47K
GND-SSP
VBATT
3554 6M8
3555 680K
3560 1M2
3556 47K
2539 10u
3561 1M
2545 1n
6522 MCL4148
7505 BC857B
7508 BF423
3558 47K
3559 10K
3557 220K
GND-FB
VEATT
BZX384-C56 BZX384-C56 BZX384-C47
6507
6508
6513
3548 1K
7503 BT151
2529 100n
3551 330R
+375V A1-8
GND-FB
SUP-ENABLE A3-A4-23
HOT COLD
GND-SUP
3541 22R
2533 4n7
GND-SUP
ABOUT DC VOLTAGE MEASUREMENT
Normal
standby ( )
2505
2521 470p
3503 4M7 RES
3502 4M7 RES
TUNERGND
GND-SUP
1510
TO 0301 OF
M
FOR LATAM - AP SETS
GND-SSP
HOT COLD
COLD HOT
3139 123 5523.1
CL 36532058_043.eps 040903

0043	D1
1500	A2
1501	A3
1502	C1
1503	A9
1505	A1
1510	F2
1550	D8
1590	A4
1591	A6
2505	E1
2507	B4
2508	B8
2509	B8
2516	B8
2517	B9
2520	C2
2521	E2
2528	E9
2529	F6
2533	F9
2537	A7
2539	E4
2545	E4
2547	C2
3500	B6
3501	A5
3502	F2
3503	F1
3509	B3
3516	C6
3521	B3
3524	E9
3528	E8
3529	E9
3532	D9
3534	F9
3537	C2
3541	F8
3548	F6
3550	B6
3551	F6
3554	E3
3555	E3
3556	E4
3557	F4
3558	E5
3559	E5
3560	F3
3561	E4
3562	A7
5502	B6
5503	B4
5504	B4
5511	A7
5515	C2
5516	A5
6507	E6
6508	E6
6511	D8
6512	D8
6513	E6
6522	E4
6525	A8
7501	E8
7503	F7
7505	E5
7508	E5
7528	E8
9501	A2
9502	B2
9503	A6
9504	B6
9507	A7
9513	B6
9516	B2
9518	C6
9519	B6

Item	Remarks	Europe	NAFTA	China	AP single range	AP full range	DESCRIPTION
1501		—	V	—	—	V	FUSE 5X20 HT 6A3 250V IEC B
1501		V	—	V	V	—	FUSE 5X20 HT 5A 250V IEC B
1503		—	V	—	—	V	FUSE 5X20 F 4A 250V IEC B
1503		V	—	V	V	—	FUSE 5X20 F 2A5 250V IEC B
1591		V	—	V	—	V	SURGE PROTECT DSP-501N-A21F A
2100	in A2	—	—	—	V	—	CERSAF KX 250V S 470P PM10 B
2100	in A2	V	V	V	—	V	CERSAF KX 250V S 1N PM20 B
2503		V	—	V	V	—	CAP MPOL 100V S 33N PM10 A
2503		—	V	—	—	V	CAP MPOL 100V S 39N PM5 A
2505		V	V	—	V	—	CERSAF KX 250V S 470P PM10 B
2505		—	—	V	—	V	CERSAF KX 250V S 1N PM20 B
2506		—	V	—	—	V	CAP POL 50V S 47N PM10 COL A
2515		V	—	—	—	—	ELCAP JA 200V S 47U P50M10 B
2515		—	V	—	—	—	ELCAP JA 200V S 47U P50M10 B
2515		—	—	V	—	—	ELCAP JA 200V S 47U P50M10 B
2515		—	—	—	V	V	ELCAP JA 200V S 47U P50M10 B
2516		—	—	—	—	V	ELCAP USR 400V S 470U PM20 B
2516		—	—	V	—	—	ELCAP LQ 450V S 220U PM20 B
2516		—	V	—	—	—	ELCAP USR 200V S 680U PM20 B
2516		V	—	—	V	—	ELCAP 057 400V S 220U PM20 B
2517		—	—	—	—	V	CAP MPOL 400V S 10N PM10 A
2518		V	—	V	V	—	CER2 DC B 500V S 100P COL A
2518		—	V	—	—	V	CER2 DC B 500V S 330P COL A
2521		—	V	—	—	V	CERSAF KX 250V S 1N PM20 B
2524		V	—	V	V	—	CER2 0603 X7R 50V 10N COL
2529		—	V	—	—	V	CER2 0603 Y5V 25V 100N COL
2531		V	—	V	V	—	CER2 DC B 500V S 1N COL A
2531		—	V	—	—	V	CER2 DC B 500V S 1N5 COL A
2539		—	V	—	—	V	ELCAP 5MM 35V 10U PM20 COL A
2540		V	—	V	V	—	ELCAP 50V S 1U PM20 COL A
2540		—	V	—	—	V	ELCAP 50V S 10U PM20 COL A
2541		V	—	V	V	—	CER2 DC B 500V S 100P COL A
2541		—	V	—	—	V	CER2 DC B 500V S 330P COL A
2544		—	V	—	—	V	CER2 0603 X7R 50V 1N COL
2544		V	—	V	V	—	CER2 0603 X7R 50V 2N2 COL
3500		—	V	—	V	V	RST WW 10W RMW10L S 0R56 PM5 B
3502		—	V	—	—	—	RST MGL VR37 A 4M7 PM5 A
3503		—	V	—	—	—	RST MGL VR37 A 4M7 PM5 A
3505		—	V	—	—	V	RST CRB 1/6W A 150K PM5 COL A
3505		V	—	V	V	—	RST CRB 1/6W A 22K PM5 COL A
3509		V	—	V	V	V	VDR DC 1MA/612V S MAX 1120V B
3509		—	V	—	—	—	VDR DC 1MA/423V S MAX 800V B
3512		V	—	V	V	—	RST SM 0603 220K PM5 COL
3512		—	V	—	—	V	RST SM 0603 330K PM5 COL
3514		V	—	V	V	—	RST MFLM PR01 S 0R39 PM5 B
3514		—	V	—	—	V	RST POW 1W S 0R22 PM5 COL B
3515		V	—	V	V	—	RST MFLM PR01 S 0R39 PM5 B
3515		—	V	—	—	V	RST POW 1W S 0R22 PM5 COL B
3518		—	V	—	—	V	RST MGL VR25 A 330K PM5 A
3518		V	—	V	V	—	RST CRB 1/6W A 100K PM5 COL A
3519		V	—	V	V	—	RST SM 0603 1K PM5 COL
3519		—	V	—	—	V	RST SM 0603 1K2 PM5 COL
3531		—	V	—	—	V	RST SM 0805 4K7 PM5 COL R
3531		V	—	V	V	—	RST SM 0805 6K8 PM5 COL R
3538		—	V	—	—	V	RST SM 0805 33K PM5 COL R
3539		—	V	—	—	V	RST SM 0805 39K PM5 COL R
3540		—	V	—	—	V	RST CRB 1/6W A 10K PM5 COL A
3540		V	—	V	V	—	RST CRB 1/6W A 33K PM5 COL A
3543		—	V	—	—	V	RST CRB 1/6W A 1K PM5 COL A

Large Signal Panel: Main Supply

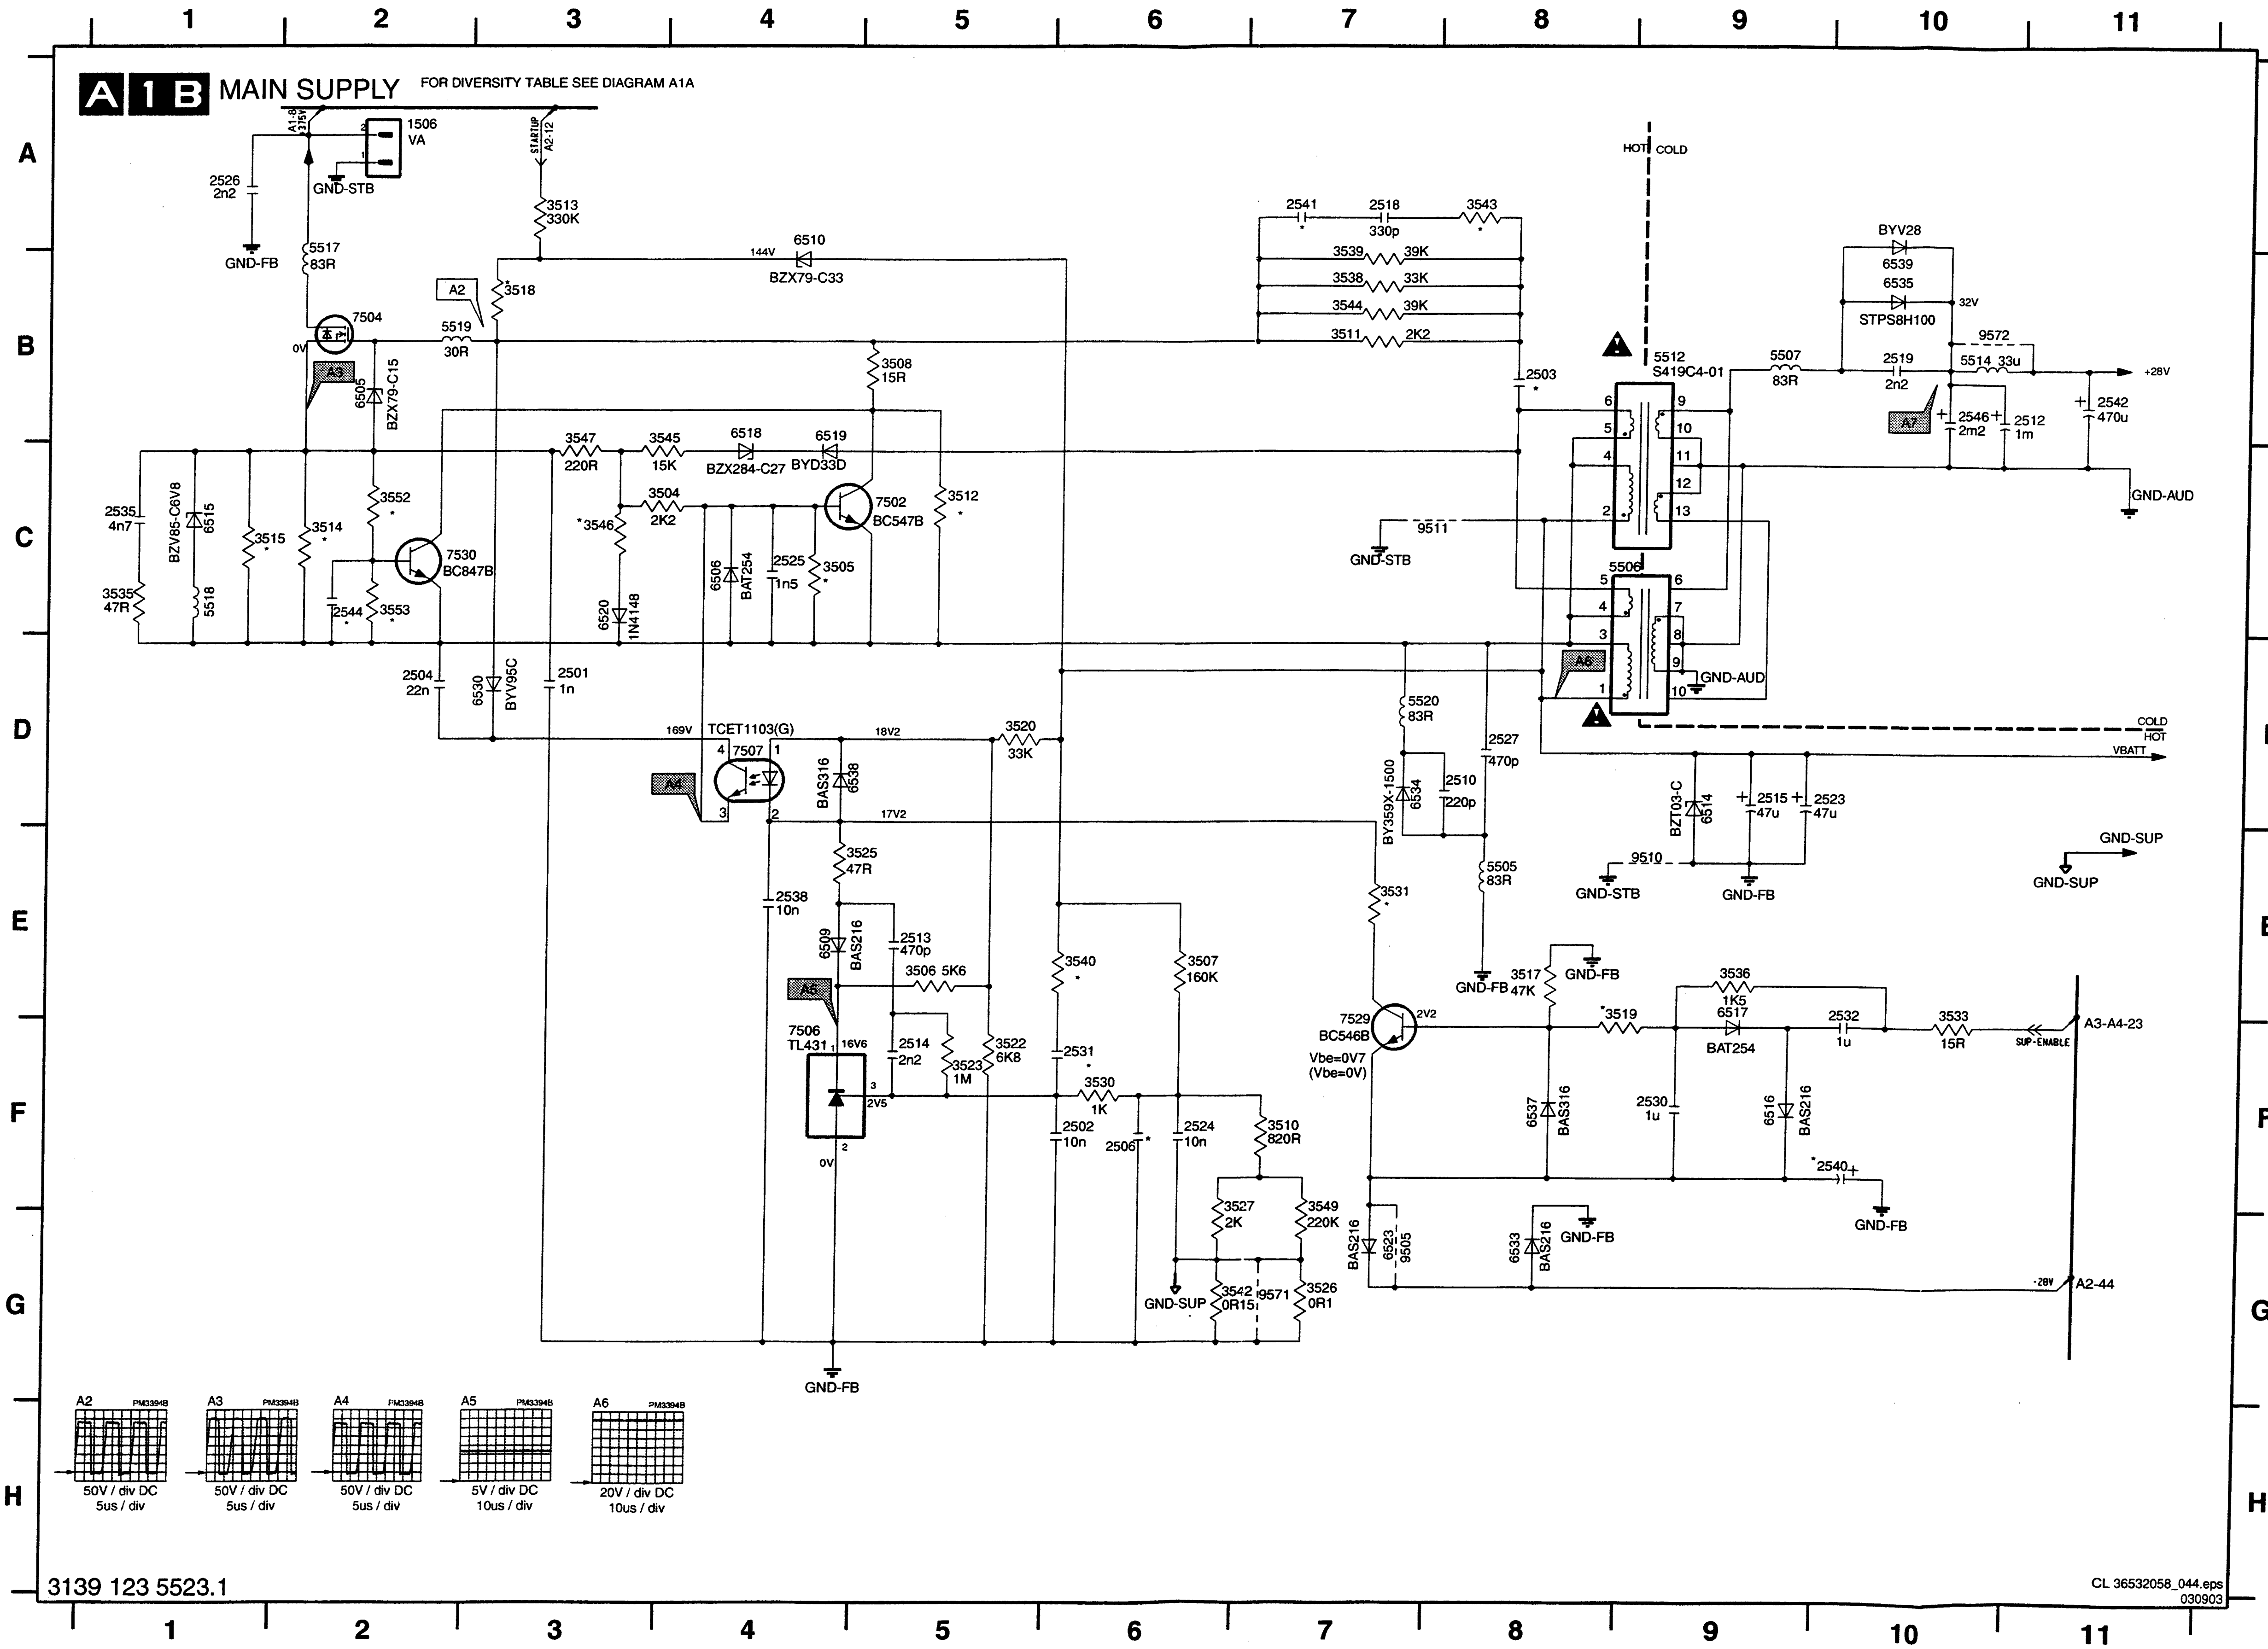
A1B MAIN SUPPLY
FOR DIVERSITY TABLE SEE DIAGRAM A1A
1 2 3 4 5 6 7 8 9 10 11
A B C D E F G H
1506 VA
2526 2n2
GND-STB
GND-FB
5517 83R
STARTUP A2-12
3513 330K
3518
A2
A3
A4
A5
A6
A7
7504
0V
5519 30R
6510 BZX79-C33
144V
3508 15R
6505 BZX79-C15
2535 4n7
3535 47R
BZV85-C6V8
6515
5518
3515
3514
3552
3553
2544
7530 BC847B
3547 220R
3545 15K
6518 BZX284-C27
6519 BYD33D
3504 2K2
3546
6520 1N4148
6506 BAT254
2525 1n5
3505
7502 BC547B
3512
2504 22n
6530 BYV95C
2501 1n
169V
TCET1103(G)
7507
18V2
17V2
BAS316 6538
3520 33K
3525 47R
2538 10n
6509 BAS216
2513 470p
3506 5K6
7506 TL431
16V6
2V5
2514 2n2
3523 1M
3522 6K8
3540
2531
3530 1K
2502 10n
2506
3507 160K
2524 10n
3510 820R
3527 2K
3549 220K
3542 0R15
9571
3526 0R1
GND-SUP
2541
2518 330p
3543
3539 39K
3538 33K
3544 39K
3511 2K2
2503
HOT COLD
5512 S419C4-01
5506
9511
GND-AUD
5520 83R
2527 470p
BY359X-1500
6534
2510 220p
5505 83R
3531
7529 BC546B
Vbe=0V7 (Vbe=0V)
2V2
3517 47K
3519
3536 1K5
6517 BAT254
2532 1u
3533 15R
SUP-ENABLE
A3-A4-23
2530 1u
6537 BAS316
6516 BAS216
2540
6523 BAS216
9505
6533 BAS216
-28V
A2-44
BYV28
6539
6535
STPS8H100
32V
9572
5507 83R
2519 2n2
5514 33u
+28V
2546 2m2
2512 1m
2542 470u
COLD HOT
VBATT
BZT03-C 6514
2515 47u
2523 47u
9510
GND-SUP
50V / div DC 5us / div
5V / div DC 10us / div
20V / div DC 10us / div
PM3394B
3139 123 5523.1
CL 36532058_044.eps
030903

1506	A2
2501	D3
2502	F6
2503	B8
2504	D2
2506	F6
2510	D8
2512	B11
2513	E5
2514	F5
2515	D9
2518	A7
2519	B10
2523	D10
2524	F6
2525	C4
2526	A1
2527	D8
2530	F9
2531	F6
2532	F10
2535	C1
2538	E4
2540	F10
2541	A7
2542	B11
2544	C2
2546	B10
3504	C3
3505	C4
3506	E5
3507	E6
3508	B5
3510	F7
3511	B7
3512	C5
3513	A3
3514	C2
3515	C1
3517	E8
3518	B3
3519	F8
3520	D5
3522	F5
3523	F5
3525	E5
3526	G7
3527	F7
3530	F6
3531	E7
3533	F10
3535	C1
3536	E9
3538	B7
3539	B7
3540	E6
3542	G7
3543	A8
3544	B7
3545	C3
3546	C3
3547	C3
3549	F7
3552	C2
3553	C2
5505	E8
5506	C8
5507	B9
5512	B9
5514	B10
5517	A2
5518	C1
5519	B2
5520	D7
6505	B2
6506	C4
6509	E4
6510	A4
6514	D9
6515	C1
6516	F9
6517	E9
6518	B4
6519	B4
6520	C3
6523	G7
6530	D3
6533	G8
6534	D7
6535	B10
6537	F8
6538	D4
6539	B10
7502	C5
7504	B2
7506	F4
7507	D4
7529	F7
7530	C2
9505	G7
9510	E9
9511	C7
9571	G7
9572	B10

Large Signal Panel: Standby Supply

1146 F15
1147 D15
1148 C11
2100 E8
2101 B6
2102 F3
2103 A5
2104 D9
2105 A5
2106 B15
2107 D9
2108 C6
2109 F9
2110 E5
2111 E6
2112 E6
2114 B4
2115 C9
2116 B9
2118 D11
2119 D10
2120 C11
2121 G2
2122 G2
2123 E6
2124 F6
2126 B15
2130 D14
2131 C13
2132 B14
2140 F13
2141 C13
2143 C11
2144 E5
2145 D5
2147 E13
2148 B11
2149 G9
2150 C14
2151 F3
2152 C7
2153 F7
2154 B13
2155 F1
2156 F1
2157 F2
2159 C5
2160 B5
2161 B3
2162 C15
2163 B4
3101 B4
3102 B5
3103 B6
3104 D6
3105 B5
3106 F3
3107 E2
3108 E7
3109 E9
3111 B5
3113 E10
3114 F9
3115 B10
3116 B10
3117 D5
3118 E7
3120 G3
3121 F3
3123 F10
3124 F9
3125 F4
3126 F4
3127 F5
3130 B13
3131 C12
3132 C13
3133 D15
3134 D14
3135 C14
3136 D13
3137 D11
3138 B4
3140 C14
3141 F13
3142 F13
3143 F13
3144 B12
3145 G6
3146 F7
3147 F6
3148 E6
3149 E6
3150 D6
3151 C14
3152 E5
3153 C14
3155 F13
3156 C14
3157 D14
3158 C15
3159 D13
3160 E6
3161 D10
3162 B12
3164 B13
3165 C15
3166 E9
3167 E9
3168 B14
3169 F1
3170 F1
3171 C10
3172 C10
5100 C7
5101 B6
5102 G3
5103 C9
5104 C7
5105 C10
5106 G2
5107 D7
5108 E7
5109 C7
5110 C9
5111 C11
5112 C10
5113 D7
5130 B13
5131 F1
6103 G3
6104 B4
6105 D6
6106 F4
6107 D9
6108 E5
6109 B3
6110 B9
6111 C9
6112 B13
6113 C11
6114 G5
6115 D6
6116 E7
6117 C12
6118 D12
6119 D12
6120 G10
6121 G10
6122 F10
6130 B11
6132 C14
6133 C12
6134 B12
6141 E14
6142 E5
6144 E5
6147 E7
6148 C11
6149 C15
7100 F4
7101 D5
7102 C6
7103 F8
7104 F8
7105 E6
7120 F2
7130 C14
7131 B13
7132 D14
7133 C13
7140 E14
7141 E14
9101 B7
9102 D12
9103 F8
9106 F8
9107 C12
9108 D12
9112 C10
9122 D11
9123 F3
9126 E15
9128 F3
9129 E3

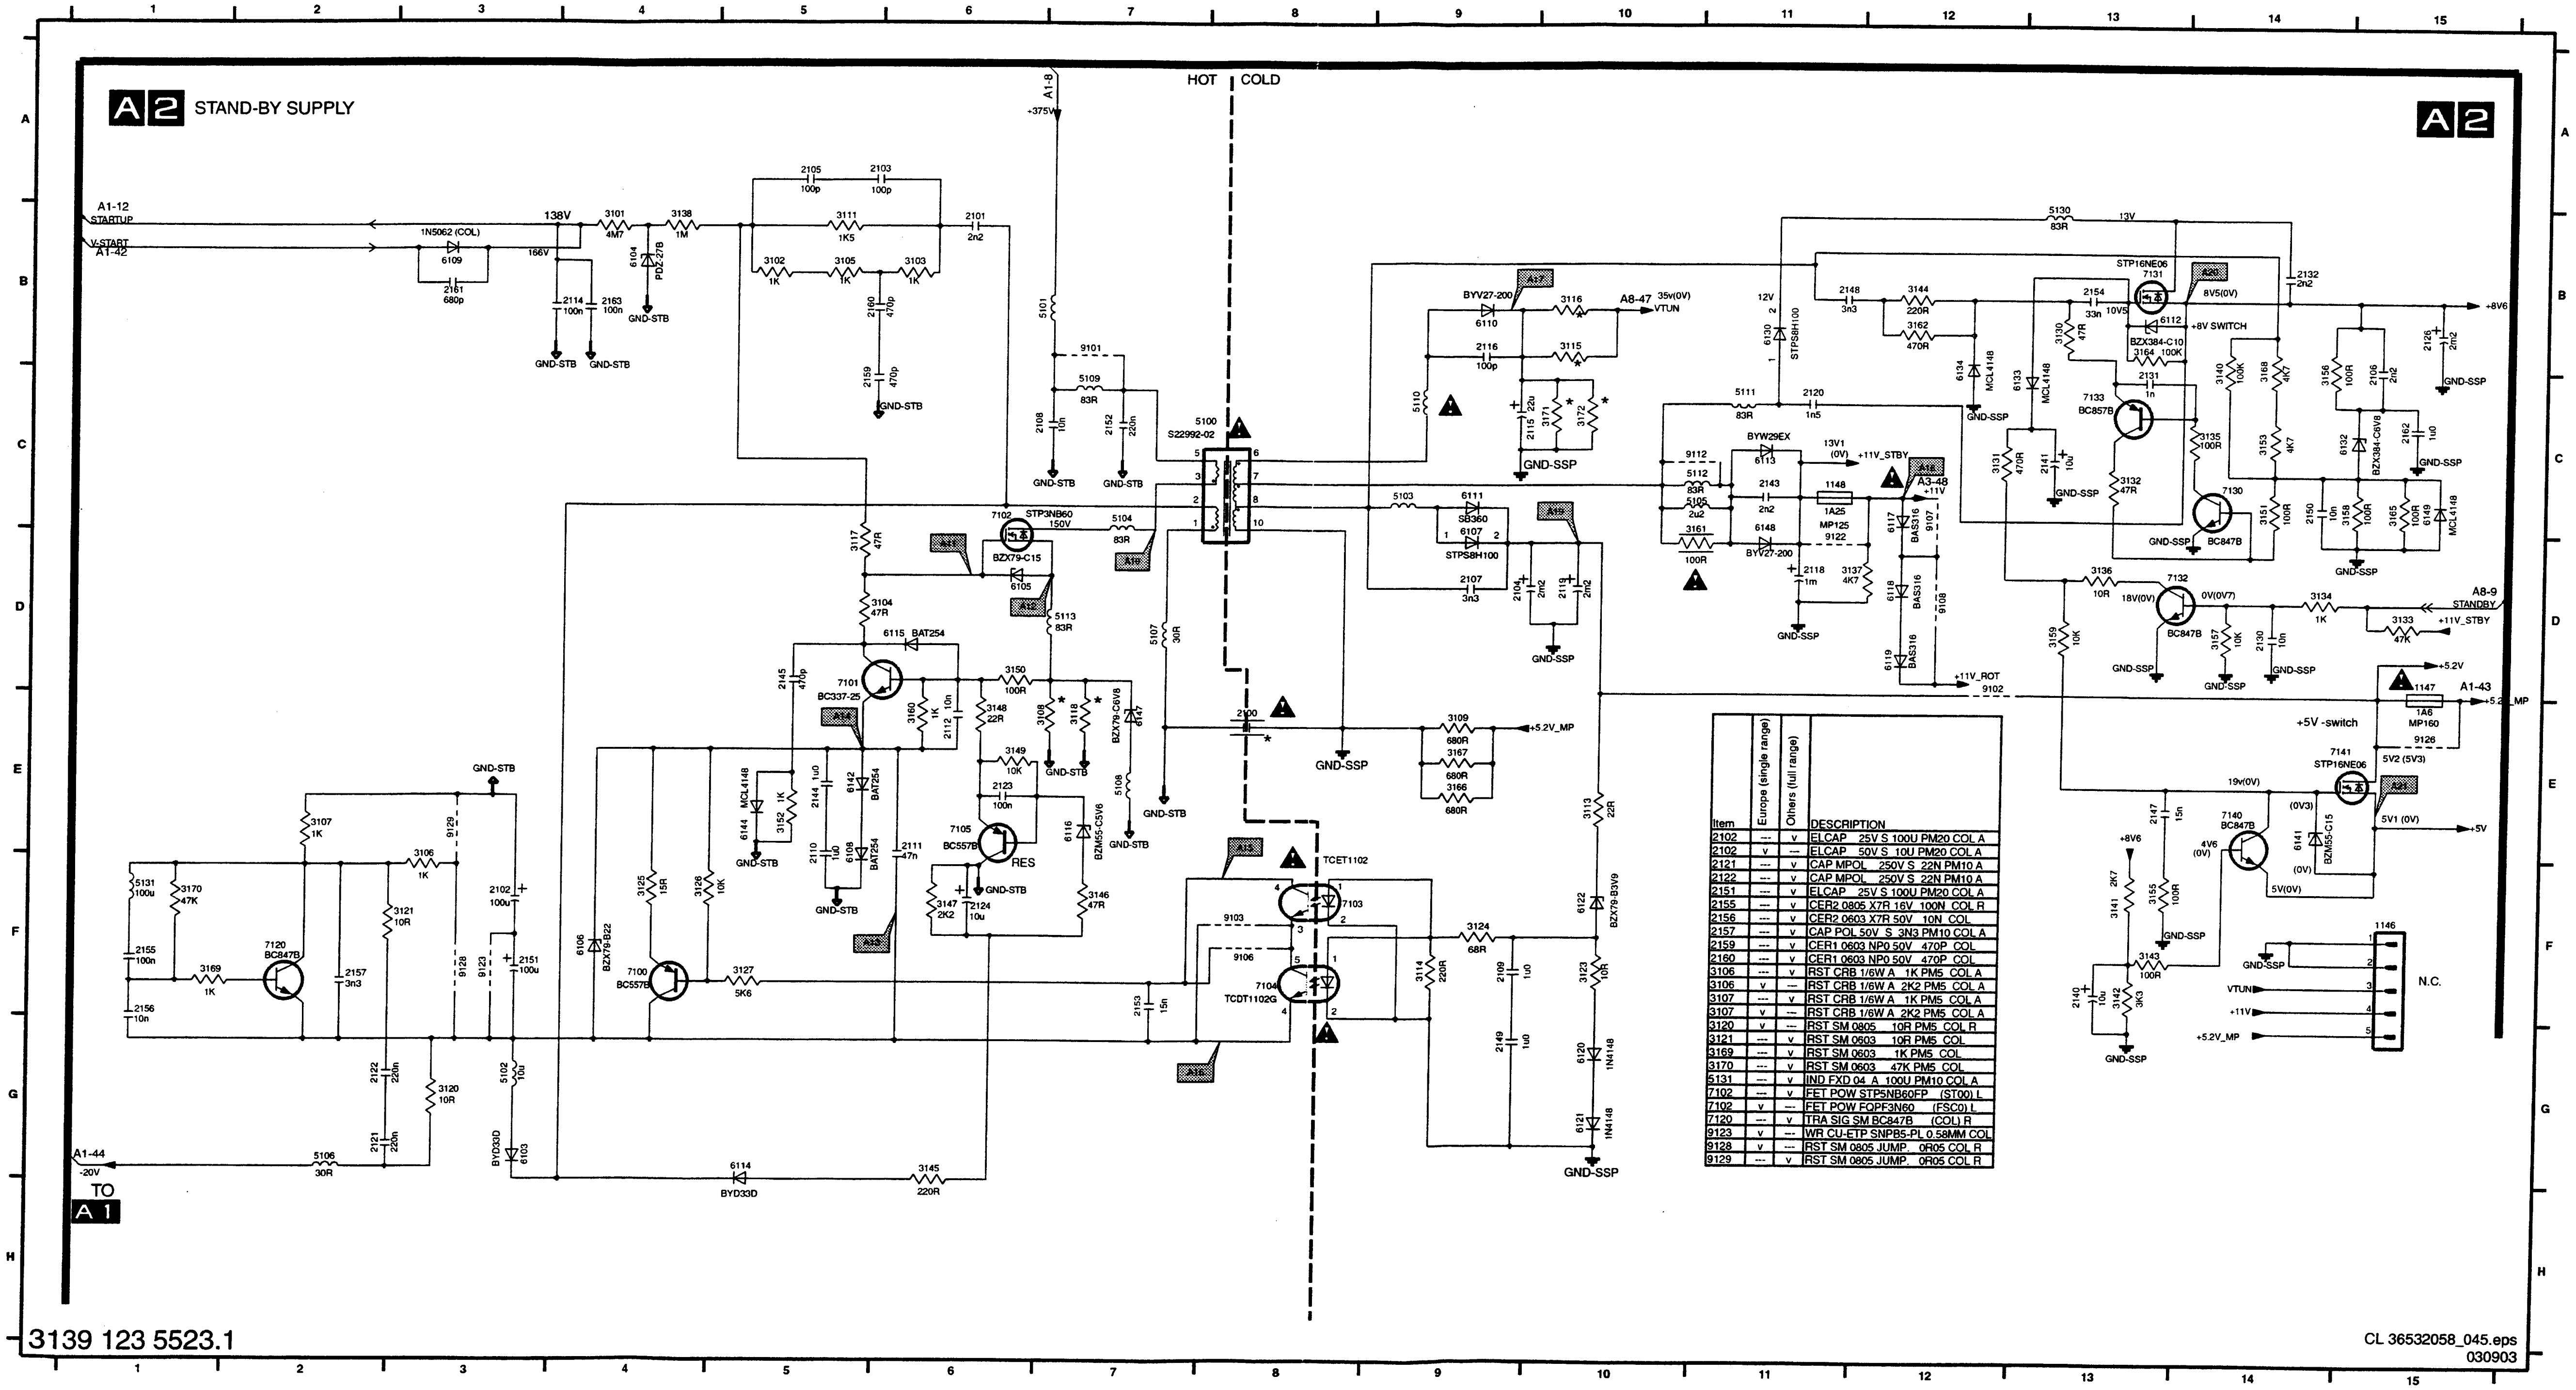
A2 STAND-BY SUPPLY
A2
HOT
COLD
A1-8
-375V
A1-12 STARTUP
V-START A1-42
138V
166V
1N5062 (COL)
6109
2161 680p
2105 100p
2103 100p
3101 4M7
3138 1M
2101 2n2
3111 1K5
3102 1K
3105 1K
3103 1K
6104 PDZ-27B
2114 100n
2163 100n
GND-STB
2160 470p
2159 470p
5101
9101
5109 83R
2108 10n
2152 22n
5100 S22992-02
7102 STP3NB60
BZX79-C15
6105
5104 83R
5113 83R
3117 47R
3104 47R
6115 BAT254
2145 470p
7101 BC337-25
3150 100R
3160 1K
2112 10n
3148 22R
3108
3118
6147 BZX79-C6V8
3149 10K
2123 100n
2144 1u0
6142 BAT254
6144 MCL4148
3152 1K
2110 1u0
6108 BAT254
2111 47n
7105 BC557B
RES
3147 2K2
2124 10u
6116 BZM55-C5V6
3146 47R
5108
5107 30R
2100
GND-SSP
3109 680R
3167 680R
3166 680R
+5.2V_MP
3107 1K
3106 1K
3121 10R
9129
9128
2102 100u
2151 100u
5131 100u
3170 47K
2155 100n
2156 10n
7120 BC847B
3169 1K
2157 3n3
6106 BZX79-B22
3125 15R
3126 10K
7100 BC557B
3127 5K6
2153 15n
9103
9106
7104 TCDT1102G
7103
TCET1102
2122 220n
2121 220n
3120 10R
5102 10u
6103 BYD33D
5106 30R
6114 BYD33D
3145 220R
A1-44
-20V
TO A1
5110
BYV27-200
6110
2116 100p
3116
3115
A8-47 35V(0V) VTUN
2115 22u
3171
3172
5103
6111 SB360
6107 STPS8H100
2107 3n3
2104 2n2
2119 2n2
12V
6130 STPS8H100
5111 83R
2120 1n5
9112
5112 83R
5105
2162 2u2
3161 100R
BYW29EX 6113
2143 2n2
6148 BYV27-200
1148 1A25 MP125
9122
13V1 (0V) +11V_STBY
A3-48 +11V
2118 1m
3137 4K7
6117 BAS316
9107
6118 BAS316
9108
6119 BAS316
+11V_ROT
9102
3124 68R
2109 1u0
3114 220R
3113 22R
6122 BZX79-B3V9
3123 10R
2149 1u0
6120 1N4148
6121 1N4148
5130 83R
13V
2148 3n3
3144 220R
3162 470R
STP16NE06 7131
2154 33n 10V5
8V5(0V)
6112 BZX384-C10
+8V SWITCH
3164 100K
2131 1n
3130 47R
6134 MCL4148
6133 MCL4148
7133 BC857B
3135 100R
3131 470R
2141 10u
3132 47R
7130 BC847B
2132 2n2
3140 100K
3168 4K7
3153 4K7
3151 100R
6132 BZX384-C6V8
3156 100R
2106 2n2
2126 2n2
2162 1u0
2150 10n
3158 100R
3165 100R
6149 MCL4148
+8V6
3136 10R
18V(0V)
7132 BC847B
0V(0V7)
3134 1K
3133 47K
A8-9 STANDBY
+11V_STBY
3159 10K
3157 10K
2130 10n
+5.2V
1147 1A6 MP160
A1-43
+5.2V_MP
+5V -switch
9126
7141 STP16NE06
5V2 (5V3)
19V(0V)
(0V3)
2147 15n
7140 BC847B
4V6 (0V)
6141 BZM55-C15
5V1 (0V)
+5V
5V(0V)
3141 2K7
3155 100R
3143 100R
2140 10u
3142 3K3
1146
VTUN
+11V
+5.2V_MP
N.C.
3139 123 5523.1
CL 36532058_045.eps 030903
A B C D E F G H
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15

Item	Europe (single range)	Others (full range)	DESCRIPTION
2102	---	v	ELCAP 25V S 100U PM20 COL A
2102	v	---	ELCAP 50V S 10U PM20 COL A
2121	---	v	CAP MPOL 250V S 22N PM10 A
2122	---	v	CAP MPOL 250V S 22N PM10 A
2151	---	v	ELCAP 25V S 100U PM20 COL A
2155	---	v	CER2 0805 X7R 16V 100N COL R
2156	---	v	CER2 0603 X7R 50V 10N COL
2157	---	v	CAP POL 50V S 3N3 PM10 COL A
2159	---	v	CER1 0603 NP0 50V 470P COL
2160	---	v	CER1 0603 NP0 50V 470P COL
3106	---	v	RST CRB 1/6W A 1K PM5 COL A
3106	v	---	RST CRB 1/6W A 2K2 PM5 COL A
3107	---	v	RST CRB 1/6W A 1K PM5 COL A
3107	v	---	RST CRB 1/6W A 2K2 PM5 COL A
3120	v	---	RST SM 0805 10R PM5 COL R
3121	---	v	RST SM 0603 10R PM5 COL
3169	---	v	RST SM 0603 1K PM5 COL
3170	---	v	RST SM 0603 47K PM5 COL
5131	---	v	IND FXD 04 A 100U PM10 COL A
7102	---	v	FET POW STP5NB60FP (ST00) L
7102	v	---	FET POW FQPF3N60 (FSC0) L
7120	---	v	TRA SIG SM BC847B (COL) R
9123	v	---	WR CU-ETP SNPB5-PL 0.58MM COL
9128	v	---	RST SM 0805 JUMP. 0R05 COL R
9129	---	v	RST SM 0805 JUMP. 0R05 COL R

Large Signal Panel: Line Deflection

0040 H2
1417 B7
1424 A12
1430 C9
1491 B13
1492 C13
1493 B10
1495 G13
1498 C13
1499 C13
2400 G2
2401 A8
2402 C12
2405 E9
2409 C3
2412 B3
2413 B3
2414 B3
2415 C2
2417 C4
2418 B5
2419 C6
2420 C5
2421 D6
2422 D6
2423 D6
2424 D8
2425 B5
2426 B5
2430 C7
2431 C7
2432 D7
2433 D7
2434 D7
2435 B5
2440 E3
2441 E12
2442 D10
2443 E12
2444 F10
2445 E12
2450 B10
2460 D13
2461 C12
2462 G11
2463 G11
2464 H11
2465 H11
2468 C11
2469 C10
2488 B6
2492 C1
2494 A5
2495 A6
3400 B11
3401 A9
3402 A9
3404 D3
3406 C2
3407 C2
3409 B4
3410 A4
3411 B3
3414 C2
3415 A3
3416 A3
3417 C4
3423 B6
3425 C6
3426 C6
3431 C8
3435 D8
3436 D8
3437 D11
3440 F2
3441 E2
3442 F2
3443 E3
3444 E11
3445 E11
3446 E12
3447 D12
3448 F10
3450 A10
3451 A10
3452 F10
3453 F11
3454 D11
3460 C11
3461 C11
3462 G10
3463 G10
3464 H10
3465 H10
3469 D12
3498 H12
3499 H12
3689 C10
5400 G2
5401 A8
5402 A6
5410 B3
5411 B4
5421 C7
5422 F6
5423 B6
5424 E6
5425 C5
5426 A5
5430 A9
5461 C11
5463 G10
5465 H10
5466 C10
5469 B10
6400 B11
6401 F12
6406 C2
6407 A2
6408 A2
6409 D10
6410 D11
6411 E10
6412 E10
6413 E10
6414 E10
6415 F10
6421 A6
6422 C6
6423 B6
6434 E8
6435 D8
6460 C12
6462 G11
6463 H11
6464 H11
6465 H11
7407 F11
7408 D3
7409 C3
7421 B4
7445 F2
9401 A8
9410 C10
9417 C4
9423 B6
9425 C5
9426 A5
9484 A12
9623 B4

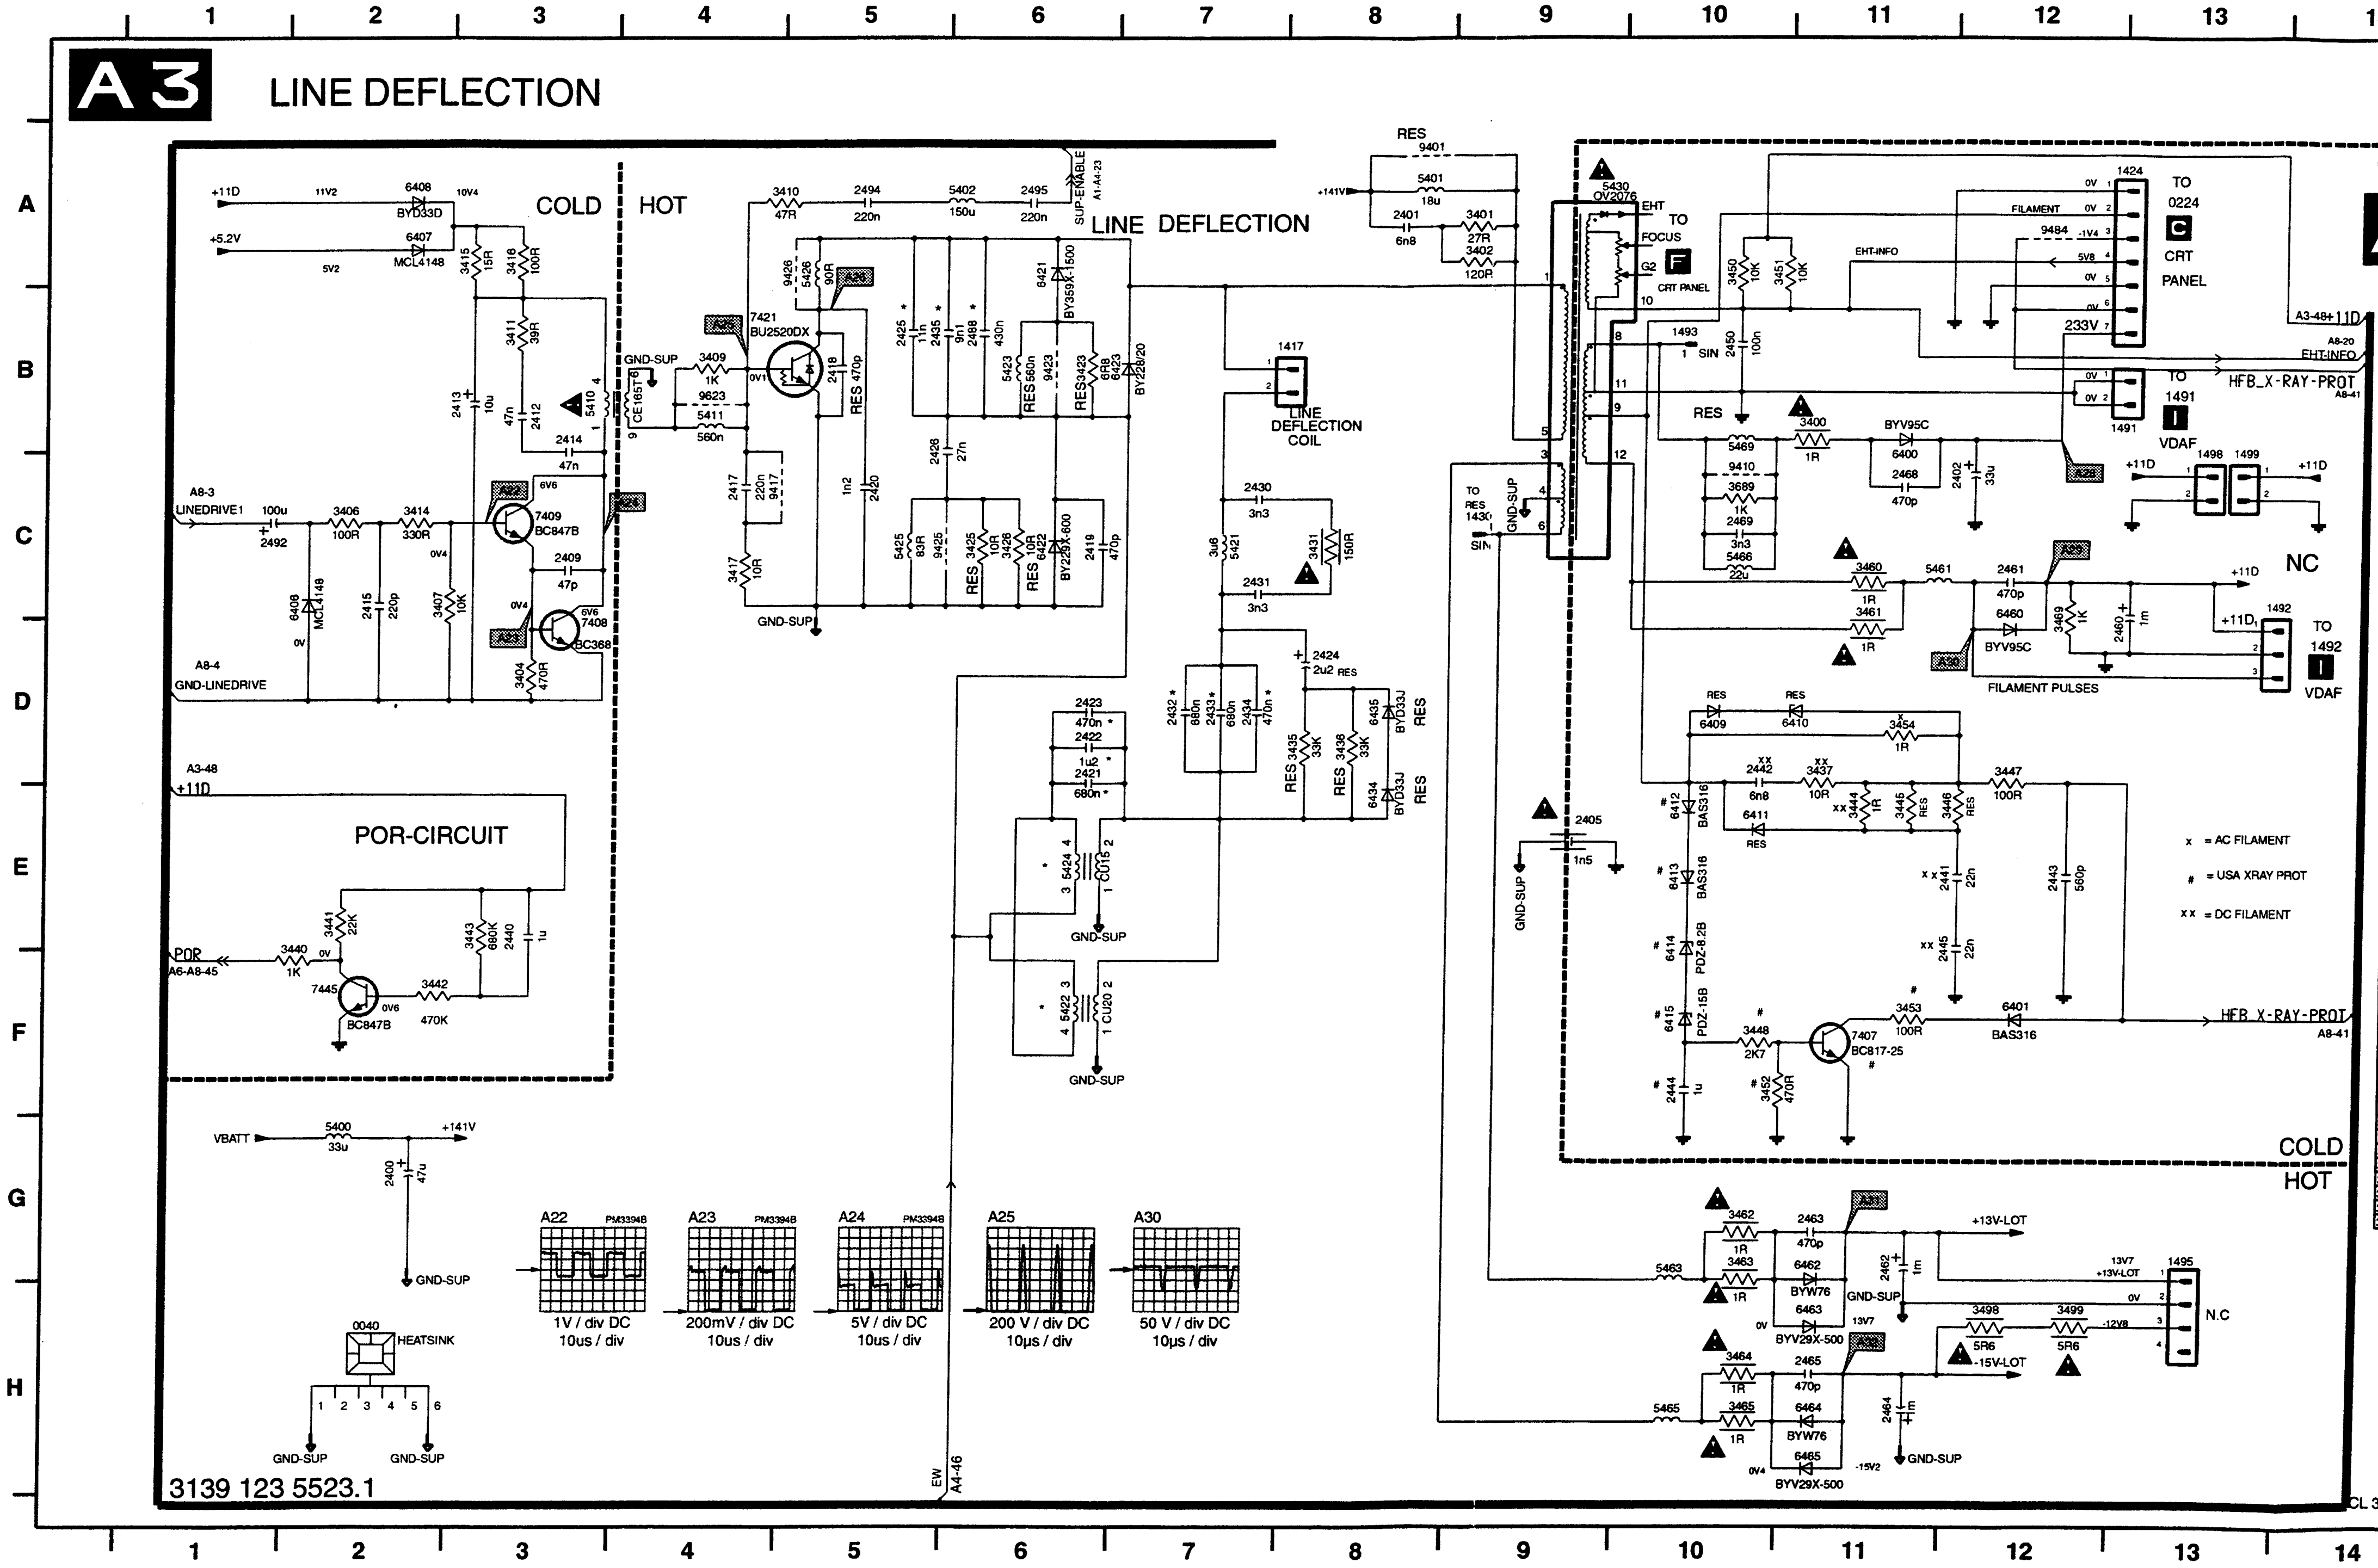
1
2
3
4
5
6
7
8
9
10
11
12
13
14
A
B
C
D
E
F
G
H
A3
LINE DEFLECTION
COLD
HOT
+11D
+5.2V
6408
BYD33D
6407
MCL4148
A8-3
LINEDRIVE1
A8-4
GND-LINEDRIVE
7409
BC847B
7408
BC368
7421
BU2520DX
GND-SUP
SUP-ENABLE
LINE DEFLECTION
1417
LINE DEFLECTION COIL
A3-48
+11D
POR-CIRCUIT
POR
A6-A8-45
7445
BC847B
VBATT
5400
33u
+141V
0040
HEATSINK
A22
A23
A24
A25
A30
1V / div DC
10us / div
200mV / div DC
10us / div
5V / div DC
10us / div
200 V / div DC
10µs / div
50 V / div DC
10µs / div
EW
A4-46
3139 123 5523.1
RES
9401
5401
5430
EHT
TO FOCUS
F
G2
CRT PANEL
1424
TO
0224
C
CRT
PANEL
FILAMENT
EHT-INFO
233V
1491
TO
1491
I
VDAF
A3-48+11D
A8-20
EHT-INFO
HFB_X-RAY-PROT
A8-41
1493
SIN
1498
1499
NC
1492
TO
1492
I
VDAF
FILAMENT PULSES
BYV95C
x = AC FILAMENT
# = USA XRAY PROT
xx = DC FILAMENT
7407
BC817-25
BAS316
HFB_X-RAY-PROT
+13V-LOT
1495
N.C
-15V-LOT
BYW76
BYV29X-500
GND-SUP
CL 36532058_052.eps
030903

Item	Remarks	28WSRF EU LGPD MK2	32RF 4X3 NA TOS	29RF 4X3 AP SAM	32WSRF EU LGPD MK2	28SF 4X3 EU LGPD	32WSRF LA LGPD	36WSRF LA MEC	34WSRF NA MEC	34RF 4X3 AP LGPD	32RF 4X3 NA LGPD	27RF 4X3 NA SAM	30WSRF NA LGPD MK2	29RF 4X3 EU LGPD	36WSRF LGPD	DESCRIPTION
2405		V	—	—	V	—	V	—	—	—	—	—	—	V	—	CERSAF NSA 250V S 1N PM20 B
2405		—	—	—	—	—	—	—	—	—	—	—	—	—	V	CERSAF KX 250V S 470P PM10 B
2420		V	—	V	V	—	V	—	—	—	—	V	—	—	—	CAP PP-MPP 2KV S 1N PM5 B
2420		—	—	—	—	V	—	—	—	—	—	—	—	—	—	CAP PP-MPP 2KV S 1N2 PM5 B
2420		—	—	—	—	—	—	—	—	V	V	—	V	—	—	CAP PP-MPP 2KV S 680P PM5 B
2420		—	V	—	—	—	—	—	—	—	—	—	—	—	—	CAP PP-MPP 2KV S 1N8 PM5 B
2420		—	—	—	—	—	—	—	—	—	—	—	—	V	—	CAP PP-MPP 2KV S 1N5 PM5 B
2420		—	—	—	—	—	—	V	V	—	—	—	—	—	V	CAP PP-MPP 2KV S 820P PM5 B
2421		—	V	V	—	—	—	—	—	—	—	—	—	V	—	CAP MPP 250V S 560N PM5 B
2421		V	—	—	V	V	V	V	V	—	—	V	V	—	V	CAP MPP 250V S 1U2 PM5 B
2421		—	—	—	—	—	—	—	—	V	V	—	—	—	—	CAP MPP 479 250V S 430N PM5 B
2425		—	V	—	—	—	—	—	—	V	V	—	—	—	—	CAP PP-MPP 2KV S 8N2 PM5 B
2425		—	—	V	—	V	—	V	V	—	—	V	—	V	V	CAP PP-MPP 2KV S 9N1 PM5 B
2425		V	—	—	V	—	V	—	—	—	—	—	V	—	—	CAP PP-MPP 2KV S 10N PM5 B
2426		—	—	—	—	—	—	—	—	—	—	V	—	—	—	CAP PP-MPP 630V S 18N PM5 B
2426		V	—	V	V	—	V	V	V	—	—	—	V	V	V	CAP PP-MPP 630V S 22N PM5 B
2426		—	—	—	—	V	—	—	—	—	—	—	—	—	—	CAP PP-MPP 630V S 24N PM5 B
2426		—	V	—	—	—	—	—	—	V	V	—	—	—	—	CAP PP-MPP 630V S 20N PM5 B
2433		—	—	V	—	—	—	—	—	—	—	V	—	V	—	CAP MPP 250V S 510N PM5 B
2433		—	V	—	—	—	—	—	—	—	—	—	—	—	—	CAP MPP 250V S 820N PM5 B
2433		V	—	—	V	V	V	V	V	—	—	—	V	—	V	CAP MPP 250V S 360N PM5 B
2433		—	—	—	—	—	—	—	—	V	V	—	—	—	—	CAP MPP 479 250V S 560N PM5 B
2441		—	—	—	—	—	—	—	—	—	—	—	—	—	V	CER2 0805 X7R 50V 22N COL R
2441		—	—	—	—	—	—	—	—	—	V	V	—	—	—	CER2 0603 X7R 25V 22N COL
2442		—	—	—	—	—	—	—	—	—	V	V	—	—	V	CER2 0805 X7R 50V 6N8 COL R
2443		—	—	—	—	—	—	—	—	—	V	V	—	—	—	CER1 0805 NP0 50V 560P COL R
2443		V	V	V	V	V	V	V	V	V	—	—	V	V	V	CER2 0805 X7R 50V 470P COL R
2444		—	V	—	—	—	—	V	V	—	V	V	V	—	V	CER2 0805 X7R 16V 1U PM10 R
2445		—	—	—	—	—	—	—	—	—	—	—	—	—	V	CER2 0805 X7R 50V 22N COL R
2445		—	—	—	—	—	—	—	—	—	V	V	—	—	—	CER2 0603 X7R 25V 22N COL
2450		—	—	—	—	—	—	V	V	V	V	—	V	—	V	CAP MPOL 63V S 220N PM10 A
2450		—	—	—	—	—	—	—	—	—	—	V	—	—	—	CAP MPOL 63V S 330N PM10 A
2450		V	V	V	V	V	V	—	—	—	—	—	—	V	—	CAP MPOL 100V S 100N PM10 A
2483	in A8	—	—	—	—	—	—	—	—	—	—	—	V	—	—	CER2 0603 X7R 16V 100N COL
2483	in A8	V	—	—	V	—	V	V	V	V	V	—	—	V	V	CER2 0603 X7R 50V 15N COL
2496	in A8	V	—	—	V	—	V	V	V	V	V	—	V	V	V	CER2 0603 X7R 16V 100N COL
2496	in A8	—	—	—	—	—	—	—	—	—	—	V	—	—	—	CER2 0603 X7R 50V 6N8 COL
3427	in A8	—	—	—	—	—	—	—	—	—	—	—	—	V	—	RST SM 0603 100K PM5 COL
3427	in A8	—	—	—	—	—	—	V	V	—	—	V	V	—	V	RST SM 0603 56K PM5 COL
3427	in A8	V	—	—	V	—	V	—	—	V	V	—	—	—	—	RST SM 0603 68K PM5 COL
3428	in A8	—	—	—	—	—	—	—	—	V	V	—	—	—	—	RST SM 0603 RC21 560K PM5 R
3428	in A8	—	—	—	—	—	—	—	—	—	—	—	—	—	V	RST SM 0603 RC21 820K PM5 R
3428	in A8	—	—	—	—	—	—	—	—	—	—	—	V	—	—	RST SM 0603 330K PM5 COL
3428	in A8	V	—	—	V	—	V	V	V	—	—	V	—	V	—	RST SM 0603 680K PM5 COL
3429	in A8	V	—	—	V	—	V	—	—	—	—	—	—	—	V	RST SM 0603 10K PM5 COL
3429	in A8	—	—	—	—	—	—	—	—	—	—	—	V	—	—	RST SM 0603 100K PM5 COL
3429	in A8	—	—	—	—	—	—	—	—	V	V	—	—	V	—	RST SM 0603 22K PM5 COL
3429	in A8	—	—	—	—	—	—	V	V	—	—	—	—	—	—	RST SM 0603 33K PM5 COL
3430	in A8	—	—	—	—	—	—	—	—	—	—	—	V	—	—	RST SM 0603 100K PM5 COL
3430	in A8	V	—	—	V	—	V	—	—	—	—	—	—	—	—	RST SM 0603 12K PM5 COL
3430	in A8	—	—	—	—	—	—	V	V	V	V	—	—	V	V	RST SM 0603 22K PM5 COL
3431		—	—	—	—	—	—	—	—	V	V	—	—	—	—	RST FUSE NFR25 S 220R PM5 A
3431		V	V	V	V	V	V	V	V	—	—	V	V	V	V	RST FUSE NFR25H S 150R PM5 A
3432	in A8	—	—	—	—	—	—	—	—	V	V	—	—	—	—	RST SM 0603 RC21 390K PM5 R
3432	in A8	—	—	—	—	—	—	—	—	—	—	V	—	—	—	RST SM 0603 RC21 470K PM5 R

Large Signal Panel: Frame Deflection & E/W Drive

1625	D12
1627	D12
1693	G4
2403	E3
2404	E2
2448	C11
2451	H2
2454	G2
2457	F3
2458	F1
2466	E12
2480	G9
2481	G8
2482	H9
2487	B12
2490	F7
2491	G12
2493	H3
2497	F11
2498	G13
2499	F12
2603	D6
2604	D9
2605	D5
2620	D9
2621	E9
2622	B10
2623	D3
2624	D10
2625	D10
2627	D11
2628	B7
2629	D12
2630	D8
2631	C8
2633	E6
2635	B8
2642	C11
2653	E10
2656	C2
2657	C3
2659	D1
2660	G11
2661	D7
2662	D2
3403	B13
3412	F5
3418	G9
3419	E2
3420	E3
3421	E1
3422	E3
3449	G2
3455	E1
3456	E1
3457	E3
3458	F3
3459	F2
3466	F12
3467	B12
3472	F11
3474	F12
3475	G11
3476	F11
3478	G10
3479	G10
3480	G10
3481	G9
3482	G9
3483	G8
3484	G8
3485	G7
3486	G3
3487	G3
3488	F9
3489	G9
3490	F5
3491	G11
3492	F7
3493	F8
3495	G12
3496	H8
3497	E13
3610	C4
3611	D3
3620	E10
3621	E10
3622	E10
3623	E9
3624	D10
3625	D11
3626	D11
3627	D11
3628	B6
3629	D12
3630	C8
3631	C7
3632	D6
3633	C6
3634	D8
3635	B8
3636	B9
3637	B9
3638	C8
3639	D5
3640	B7
3641	D5
3642	C7
3643	C8
3644	C11
3645	B11
3646	D11
3647	D11
3648	E11
3652	C12
3653	D11
3654	G3
3655	C2
3656	C2
3657	D3
3658	D2
3659	D1
3660	C6
3661	D12
3662	C6
3663	D12
3664	D2
3665	C11
3688	H9
3690	D7
5467	G10
5620	C11
5621	C5
6405	B11
6442	C11
6455	F2
6456	G3
6457	H2
6458	H2
6480	F10
6481	G9
6482	G8
6483	G9
6491	F13
6493	G11
6494	G11
6499	G13
6614	D5
6615	F5
6616	D5
6617	C6
6618	C6
6619	D11
6620	B9
6621	B10
6622	C10
6623	C11
6624	D12
6625	A7
6626	A6
6627	A6
6628	D12
7440-A	C3
7440-B	E2
7441	E3
7442	E12
7443	B12
7450-A	C4
7450-B	G4
7455	F3
7480	G10
7482	G5
7483	F5
7486	G8
7487	G7
7611	C7
7612	E6
7613	B8
7614	D5
7620	C9
7641	B11
7652	C12
7653	G12
7654	F12
9405	G3
9481	G4
9482	G7
9483	F7
9499	G12
9620	C10
9622	C10

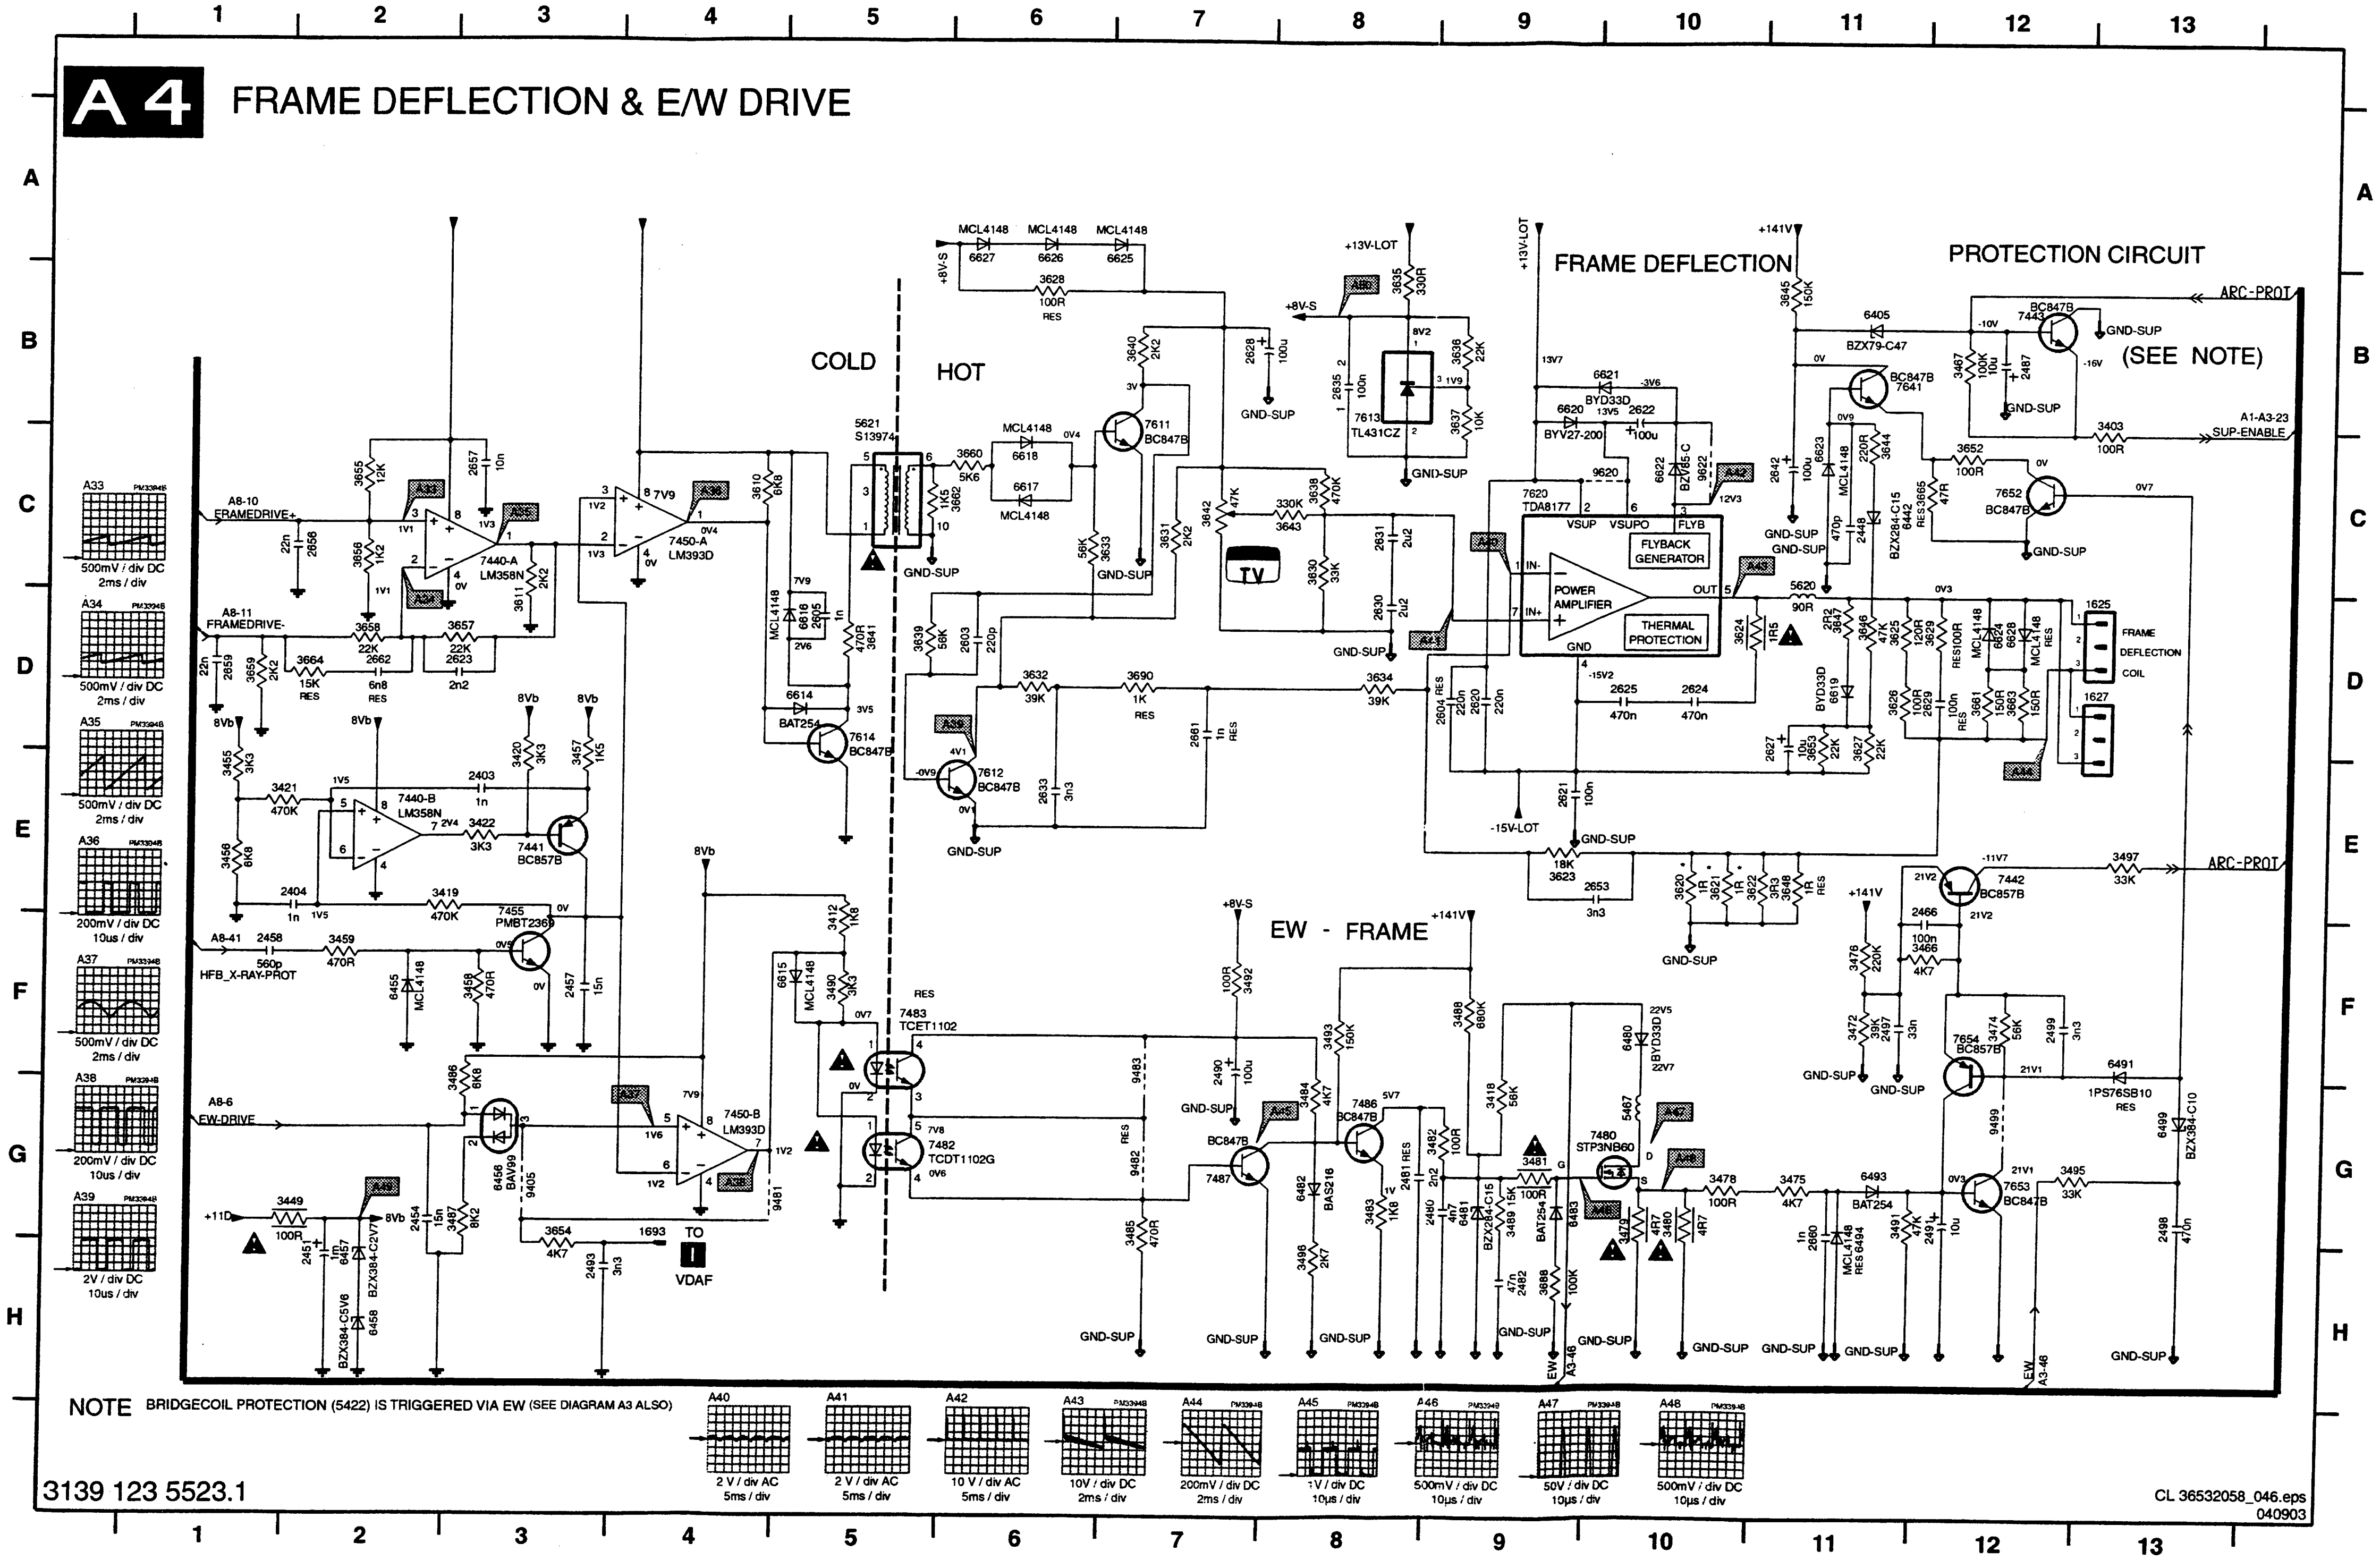
A4
FRAME DEFLECTION & E/W DRIVE
COLD
HOT
FRAME DEFLECTION
PROTECTION CIRCUIT
(SEE NOTE)
EW - FRAME
TV
TDA8177
FLYBACK GENERATOR
POWER AMPLIFIER
THERMAL PROTECTION
VSUP
VSUPO
FLYB
GND
OUT
IN-
IN+
A8-10 FRAMEDRIVE+
A8-11 FRAMEDRIVE-
A8-41 HFB_X-RAY-PROT
A8-6 EW-DRIVE
ARC-PROT
A1-A3-23 SUP-ENABLE
FRAME DEFLECTION COIL
TO VDAF
7440-A LM358N
7440-B LM358N
7450-A LM393D
7450-B LM393D
7620 TDA8177
7480 STP3NB60
7483 TCET1102
7482 TCDT1102G
7613 TL431CZ
5621 S13974
GND-SUP
+13V-LOT
-15V-LOT
+141V
+8V-S
EW A3-46
A33 500mV / div DC 2ms / div
A34 500mV / div DC 2ms / div
A35 500mV / div DC 2ms / div
A36 200mV / div DC 10us / div
A37 500mV / div DC 2ms / div
A38 200mV / div DC 10us / div
A39 2V / div DC 10us / div
A40 2 V / div AC 5ms / div
A41 2 V / div AC 5ms / div
A42 10 V / div AC 5ms / div
A43 10V / div DC 2ms / div
A44 200mV / div DC 2ms / div
A45 1V / div DC 10µs / div
A46 500mV / div DC 10µs / div
A47 50V / div DC 10µs / div
A48 500mV / div DC 10µs / div
1 2 3 4 5 6 7 8 9 10 11 12 13
A B C D E F G H

NOTE BRIDGECOIL PROTECTION (5422) IS TRIGGERED VIA EW (SEE DIAGRAM A3 ALSO)

3139 123 5523.1

CL 36532058_046.eps
040903

Item	28/32" WSRF LGPD	34/36" 4:3 RF TOSJ	29" 4:3 RF SMGK	28" 4:3 SF PHCO	36" WSRF MEC	32RF 4X3 NA LGPD	27RF 4X3 NA SAM	30WSRF NA LGPD	34 4:3RF AP LGPD	32WSRF LGPD MKII	29RF EU LGPD	36WSRF_LGPD	DESCRIPTION
1625	V	V	V	V	---	V	V	V	V	V	V	---	CON V 3P M 2.50 BK EH-A B
1627	---	---	---	---	V	---	---	---	---	---	---	V	CON V 3P M 2.50 BK EH-A B
2490	V	V	V	V	---	---	---	---	---	V	V	---	ELCAP 10V S 100U PM20 COL A
2490	---	---	---	---	V	V	V	V	V	---	---	V	ELCAP 50V S 100U PM20 COL A
2498	V	V	V	V	---	---	---	---	---	V	V	---	CER2 0805 X7R 16V 1U PM10 R
2633	V	V	V	V	---	V	V	V	V	V	V	---	CER2 0603 X7R 50V 3N3 COL
2633	---	---	---	---	V	---	---	---	---	---	---	V	CER2 0603 X7R 50V 6N8 COL
2653	---	---	V	---	---	---	---	---	---	---	V	---	CER2 0603 X7R 50V 2N7 PM10 R
2653	---	---	---	---	V	V	V	V	V	---	---	V	CER2 0603 X7R 50V 2N2 COL
2653	V	V	---	V	---	---	---	---	---	V	---	---	CER2 0603 X7R 50V 3N3 COL
2661	---	---	---	---	V	---	---	---	---	---	---	V	CER2 0603 X7R 50V 6N8 COL
2662	---	---	---	---	V	V	V	V	V	---	---	V	CER2 0603 X7R 50V 3N3 COL
3403	V	V	V	V	V	V	V	V	V	V	V	V	RST CRB 1/6W A 100R PM5 COL A
3412	V	V	V	V	V	V	V	V	V	V	V	V	RST SM 0603 1K2 PM5 COL
3418	---	---	---	---	V	---	---	---	---	---	---	V	RST MFLM MBB0207 A 47K PM1 A
3418	V	V	V	V	---	V	V	V	V	V	V	---	RST MFLM MBB0207 A 56K PM1 A
3480	V	---	---	V	V	---	---	V	---	V	---	V	RST FUSE NFR25 S 4R7 PM5 A
3480	---	V	V	---	---	V	V	---	V	---	V	---	RST FUSE NFR25 S 6R8 PM5 A
3483	V	---	V	V	V	---	V	V	---	V	V	V	RST SM 0603 1K8 PM5 COL
3483	---	V	---	---	---	V	---	---	V	---	---	---	RST SM 0603 2K2 PM5 COL
3484	---	---	---	---	V	V	V	V	V	---	---	V	RST SM 0603 4K7 PM5 COL
3488	V	---	V	V	V	---	V	V	---	V	V	V	RST MFLM MBB0207 A 1M PM1 A
3491	---	---	---	---	---	V	V	V	V	---	---	---	RST SM 0603 27K PM5 COL
3491	---	---	---	---	V	---	---	---	---	---	---	V	RST SM 0603 39K PM5 COL
3491	V	V	V	V	---	---	---	---	---	V	V	---	RST SM 0603 47K PM5 COL
3493	V	V	V	V	---	---	---	---	---	V	V	---	RST MFLM MBB0207 A 150K PM1 A
3495	V	V	V	V	---	---	---	---	---	V	V	---	RST MFLM MBB0207 A 15K PM1 A
3620	V	---	---	---	---	---	---	---	---	V	---	---	RST CRB CFR25S A 1R8 PM5 A
3620	---	---	---	V	V	---	---	---	---	---	---	V	RST CRB CFR25S A 1R5 PM5 A
3620	---	V	---	---	---	---	---	V	---	---	---	---	RST CRB CFR25S A 1R2 PM5 A
3620	---	---	V	---	---	V	V	---	V	---	V	---	RST CRB 1/6W A 1R PM5 COL A
3621	---	---	---	---	V	---	---	V	---	---	---	V	RST CRB CFR25S A 1R5 PM5 A
3621	---	V	---	---	---	---	---	---	V	---	---	---	RST CRB CFR25S A 1R2 PM5 A
3621	V	---	V	V	---	V	V	---	---	V	V	---	RST CRB 1/6W A 1R PM5 COL A
3622	V	---	---	---	---	---	---	---	---	---	---	---	RST CRB ERDS2T A 3R3 PM5 A
3622	---	---	---	V	V	---	---	V	---	---	---	V	RST CRB CFR25S A 1R5 PM5 A
3622	---	V	V	---	---	---	---	---	---	---	---	---	RST CRB CFR25S A 1R2 PM5 A
3622	---	---	---	---	---	---	V	---	---	---	---	---	RST CRB 1/6W A 1R PM5 COL A
3622	---	---	---	---	---	V	---	---	V	V	---	---	RST CRB 1/6W A 2R2 PM5 COL A
3623	V	V	V	V	V	V	---	V	V	V	V	V	RST CRB 1/6W A 18K PM5 COL A
3623	---	---	---	---	---	---	V	---	---	---	---	---	RST CRB 1/6W A 22K PM5 COL A
3625	---	---	V	---	---	V	V	---	V	---	V	---	RST CRB 1/6W A 120R PM5 COL A
3625	---	---	---	---	V	---	---	V	---	---	---	V	RST CRB 1/6W A 220R PM5 COL A
3625	V	V	---	V	---	---	---	---	---	V	---	---	RST CRB 1/6W A 330R PM5 COL A
3626	---	---	V	---	---	V	V	---	V	---	V	---	RST CRB 1/6W A 100R PM5 COL A
3626	---	---	---	---	V	---	---	V	---	---	---	V	RST CRB 1/6W A 220R PM5 COL A
3626	V	V	---	V	---	---	---	---	---	V	---	---	RST CRB 1/6W A 330R PM5 COL A
3627	---	---	---	---	V	V	V	V	V	---	---	V	RST SM 0805 10K PM5 COL R
3627	V	V	V	V	---	---	---	---	---	V	V	---	RST SM 0805 22K PM5 COL R
3630	---	---	---	---	---	V	---	---	V	---	---	---	RST SM 0603 27K PM5 COL
3630	V	V	V	V	V	---	V	V	---	V	V	V	RST SM 0603 33K PM5 COL
3632	---	---	---	---	V	---	---	---	---	---	---	V	RST SM 0603 18K PM5 COL
3632	---	---	---	---	---	V	---	---	V	---	---	---	RST SM 0603 33K PM5 COL
3632	V	V	V	V	---	---	V	V	---	V	V	---	RST SM 0603 39K PM5 COL

Large Signal Panel: Rotation Circuitry

1601 A2
1620 C4
2601 B2
3649 D1
3681 D2
3682 E2
3683 D1
3684 B2
3685 C1
3686 B1
3687 C3
4601 D3
6080 C2
6081 B3
6082 B2
6083 C4
6084 C1
7680 B2
7681 D2
7682 D3

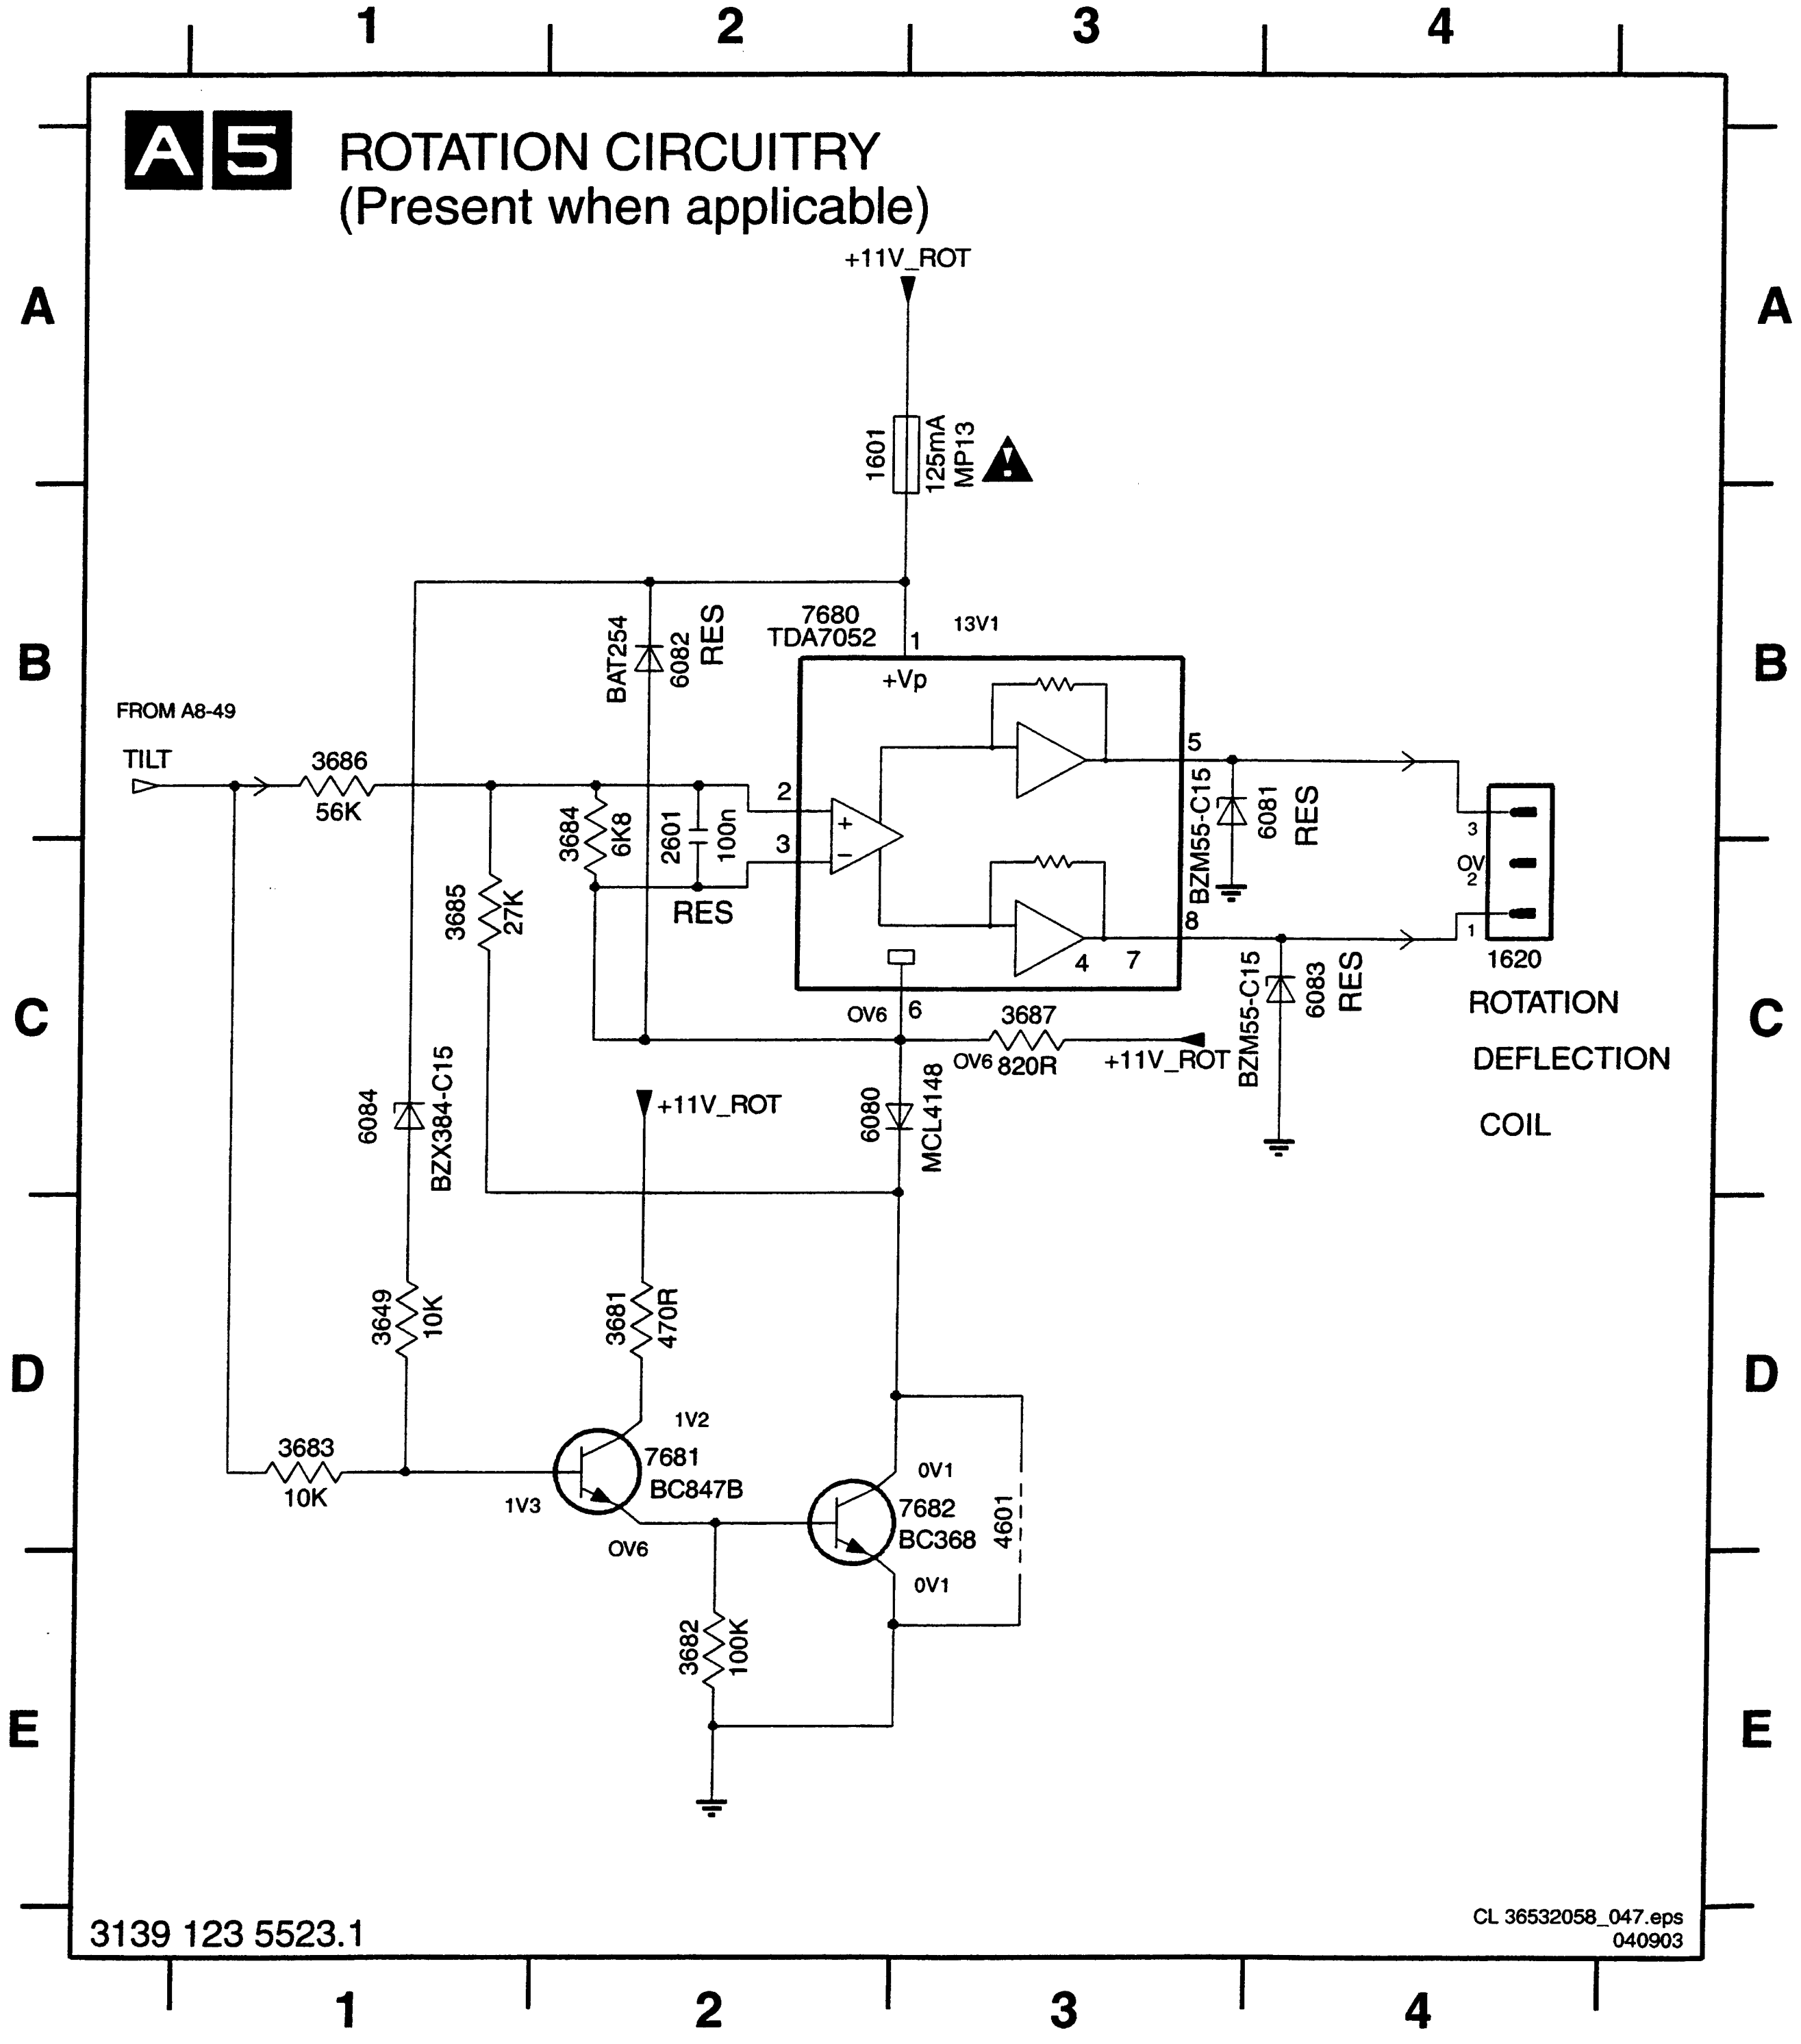
1
2
3
4
A
B
C
D
E
A5 ROTATION CIRCUITRY
(Present when applicable)
+11V_ROT
1601
125mA
MP13
⚠
BAT254
6082
RES
7680
TDA7052
1
13V1
+Vp
FROM A8-49
TILT
3686
56K
3684
6K8
2601
100n
RES
2
3
5
8
4
7
BZM55-C15
6081
RES
3
0V
2
1
1620
ROTATION
DEFLECTION
COIL
3685
27K
0V6
6
3687
820R
+11V_ROT
BZM55-C15
6083
RES
6084
BZX384-C15
+11V_ROT
6080
MCL4148
3649
10K
3681
470R
1V2
3683
10K
7681
BC847B
1V3
0V6
0V1
7682
BC368
4601
0V1
3682
100K
3139 123 5523.1
CL 36532058_047.eps
040903

Large Signal Panel: Headphone Amplifier

2751 B4
2752 B4
2754 B1
2755 C4
2756 C3
2757 C2
2758 D1
2759 E4
2760 E3
2761 E2
2762 C2
2763 D2
2764 B3
3752 B2
3753 C2
3754 C3
3755 C3
3756 C2
3757 C3
3758 D2
3759 D2
3760 E3
3761 E3
3762 E3
3763 E2
3764 A3
4703 E1
4704 C1
4705 B2
5750 A2
7712 B3
7751-A B3
7751-B D3
9716 A2
c703 D4

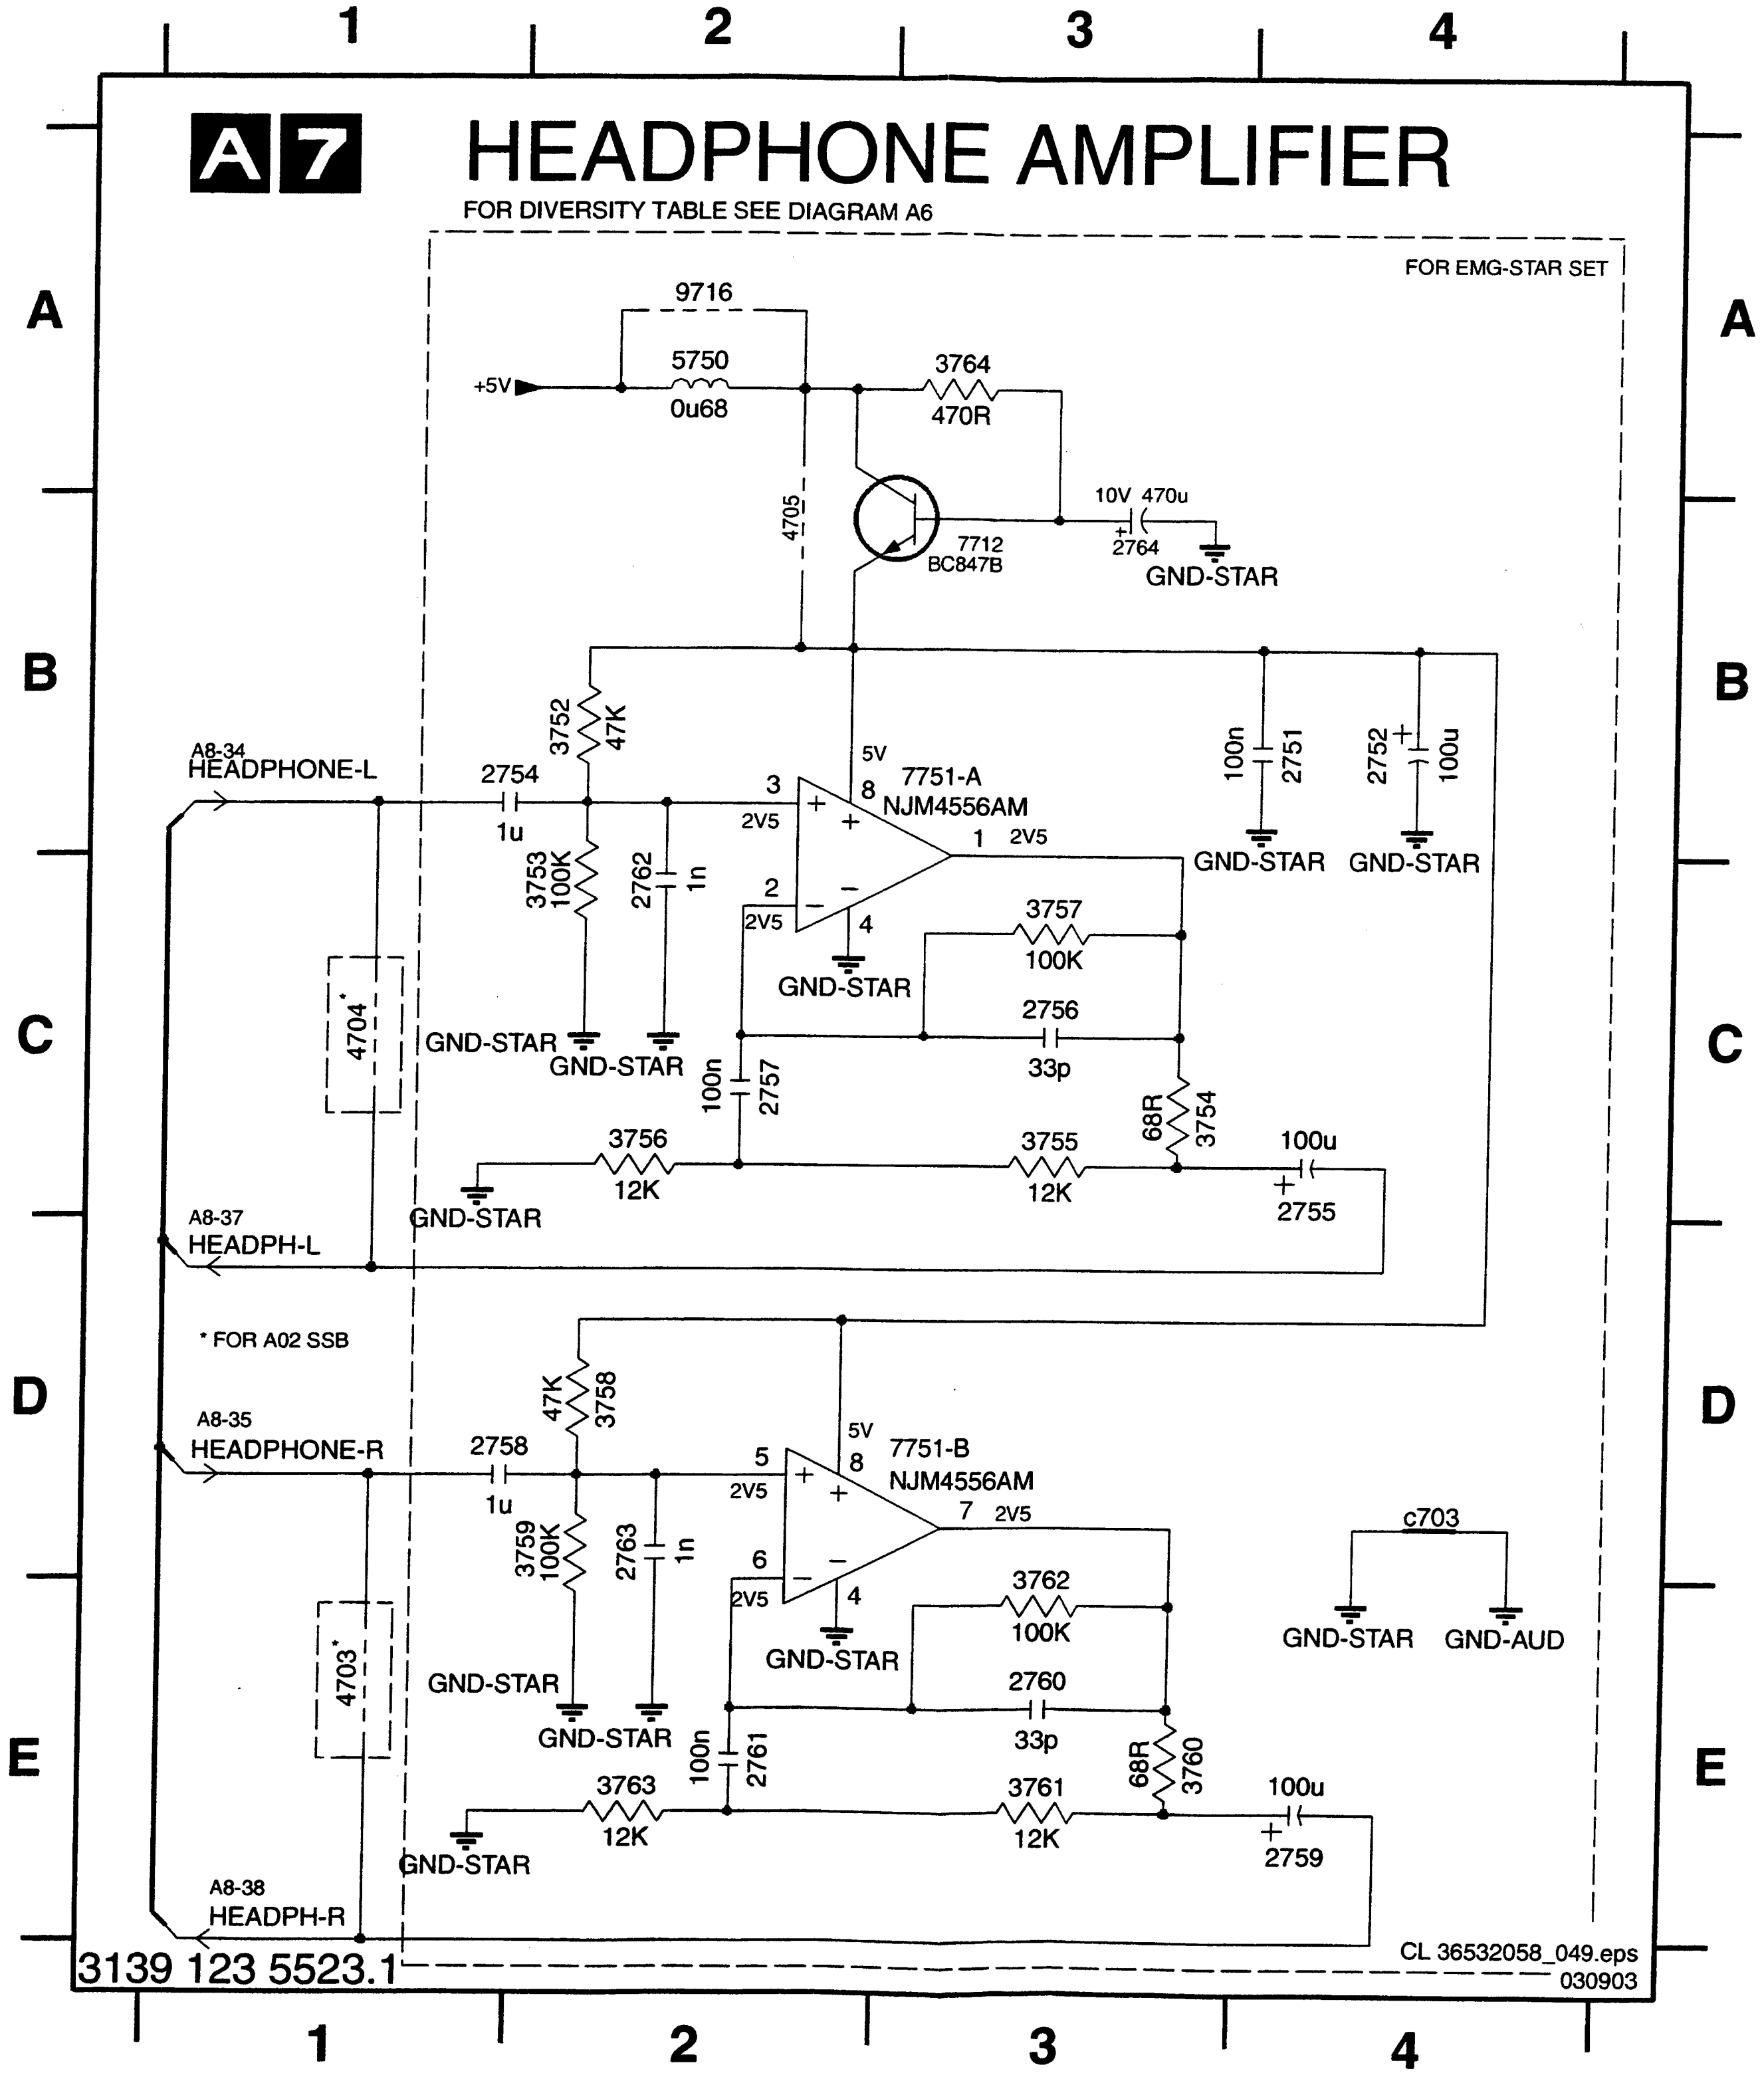
1
2
3
4
A
B
C
D
E
A7 HEADPHONE AMPLIFIER
FOR DIVERSITY TABLE SEE DIAGRAM A6
FOR EMG-STAR SET
9716
5750
0u68
+5V
3764
470R
4705
7712
BC847B
10V 470u
2764
GND-STAR
3752
47K
A8-34
HEADPHONE-L
2754
1u
3
2V5
5V
8
7751-A
NJM4556AM
1
2V5
2
2V5
4
100n
2751
2752
100u
GND-STAR GND-STAR
3753
100K
2762
1n
3757
100K
GND-STAR
2756
33p
4704*
GND-STAR
GND-STAR
100n
2757
68R
3754
3756
12K
3755
12K
100u
2755
GND-STAR
A8-37
HEADPH-L
* FOR A02 SSB
47K
3758
A8-35
HEADPHONE-R
2758
1u
5
2V5
5V
8
7751-B
NJM4556AM
7 2V5
6
2V5
4
c703
GND-STAR GND-AUD
3759
100K
2763
1n
3762
100K
GND-STAR
4703*
GND-STAR
GND-STAR
2760
33p
100n
2761
68R
3760
3763
12K
3761
12K
100u
2759
GND-STAR
A8-38
HEADPH-R
3139 123 5523.1
CL 36532058_049.eps
030903

Large Signal Panel: Audio Amplifier

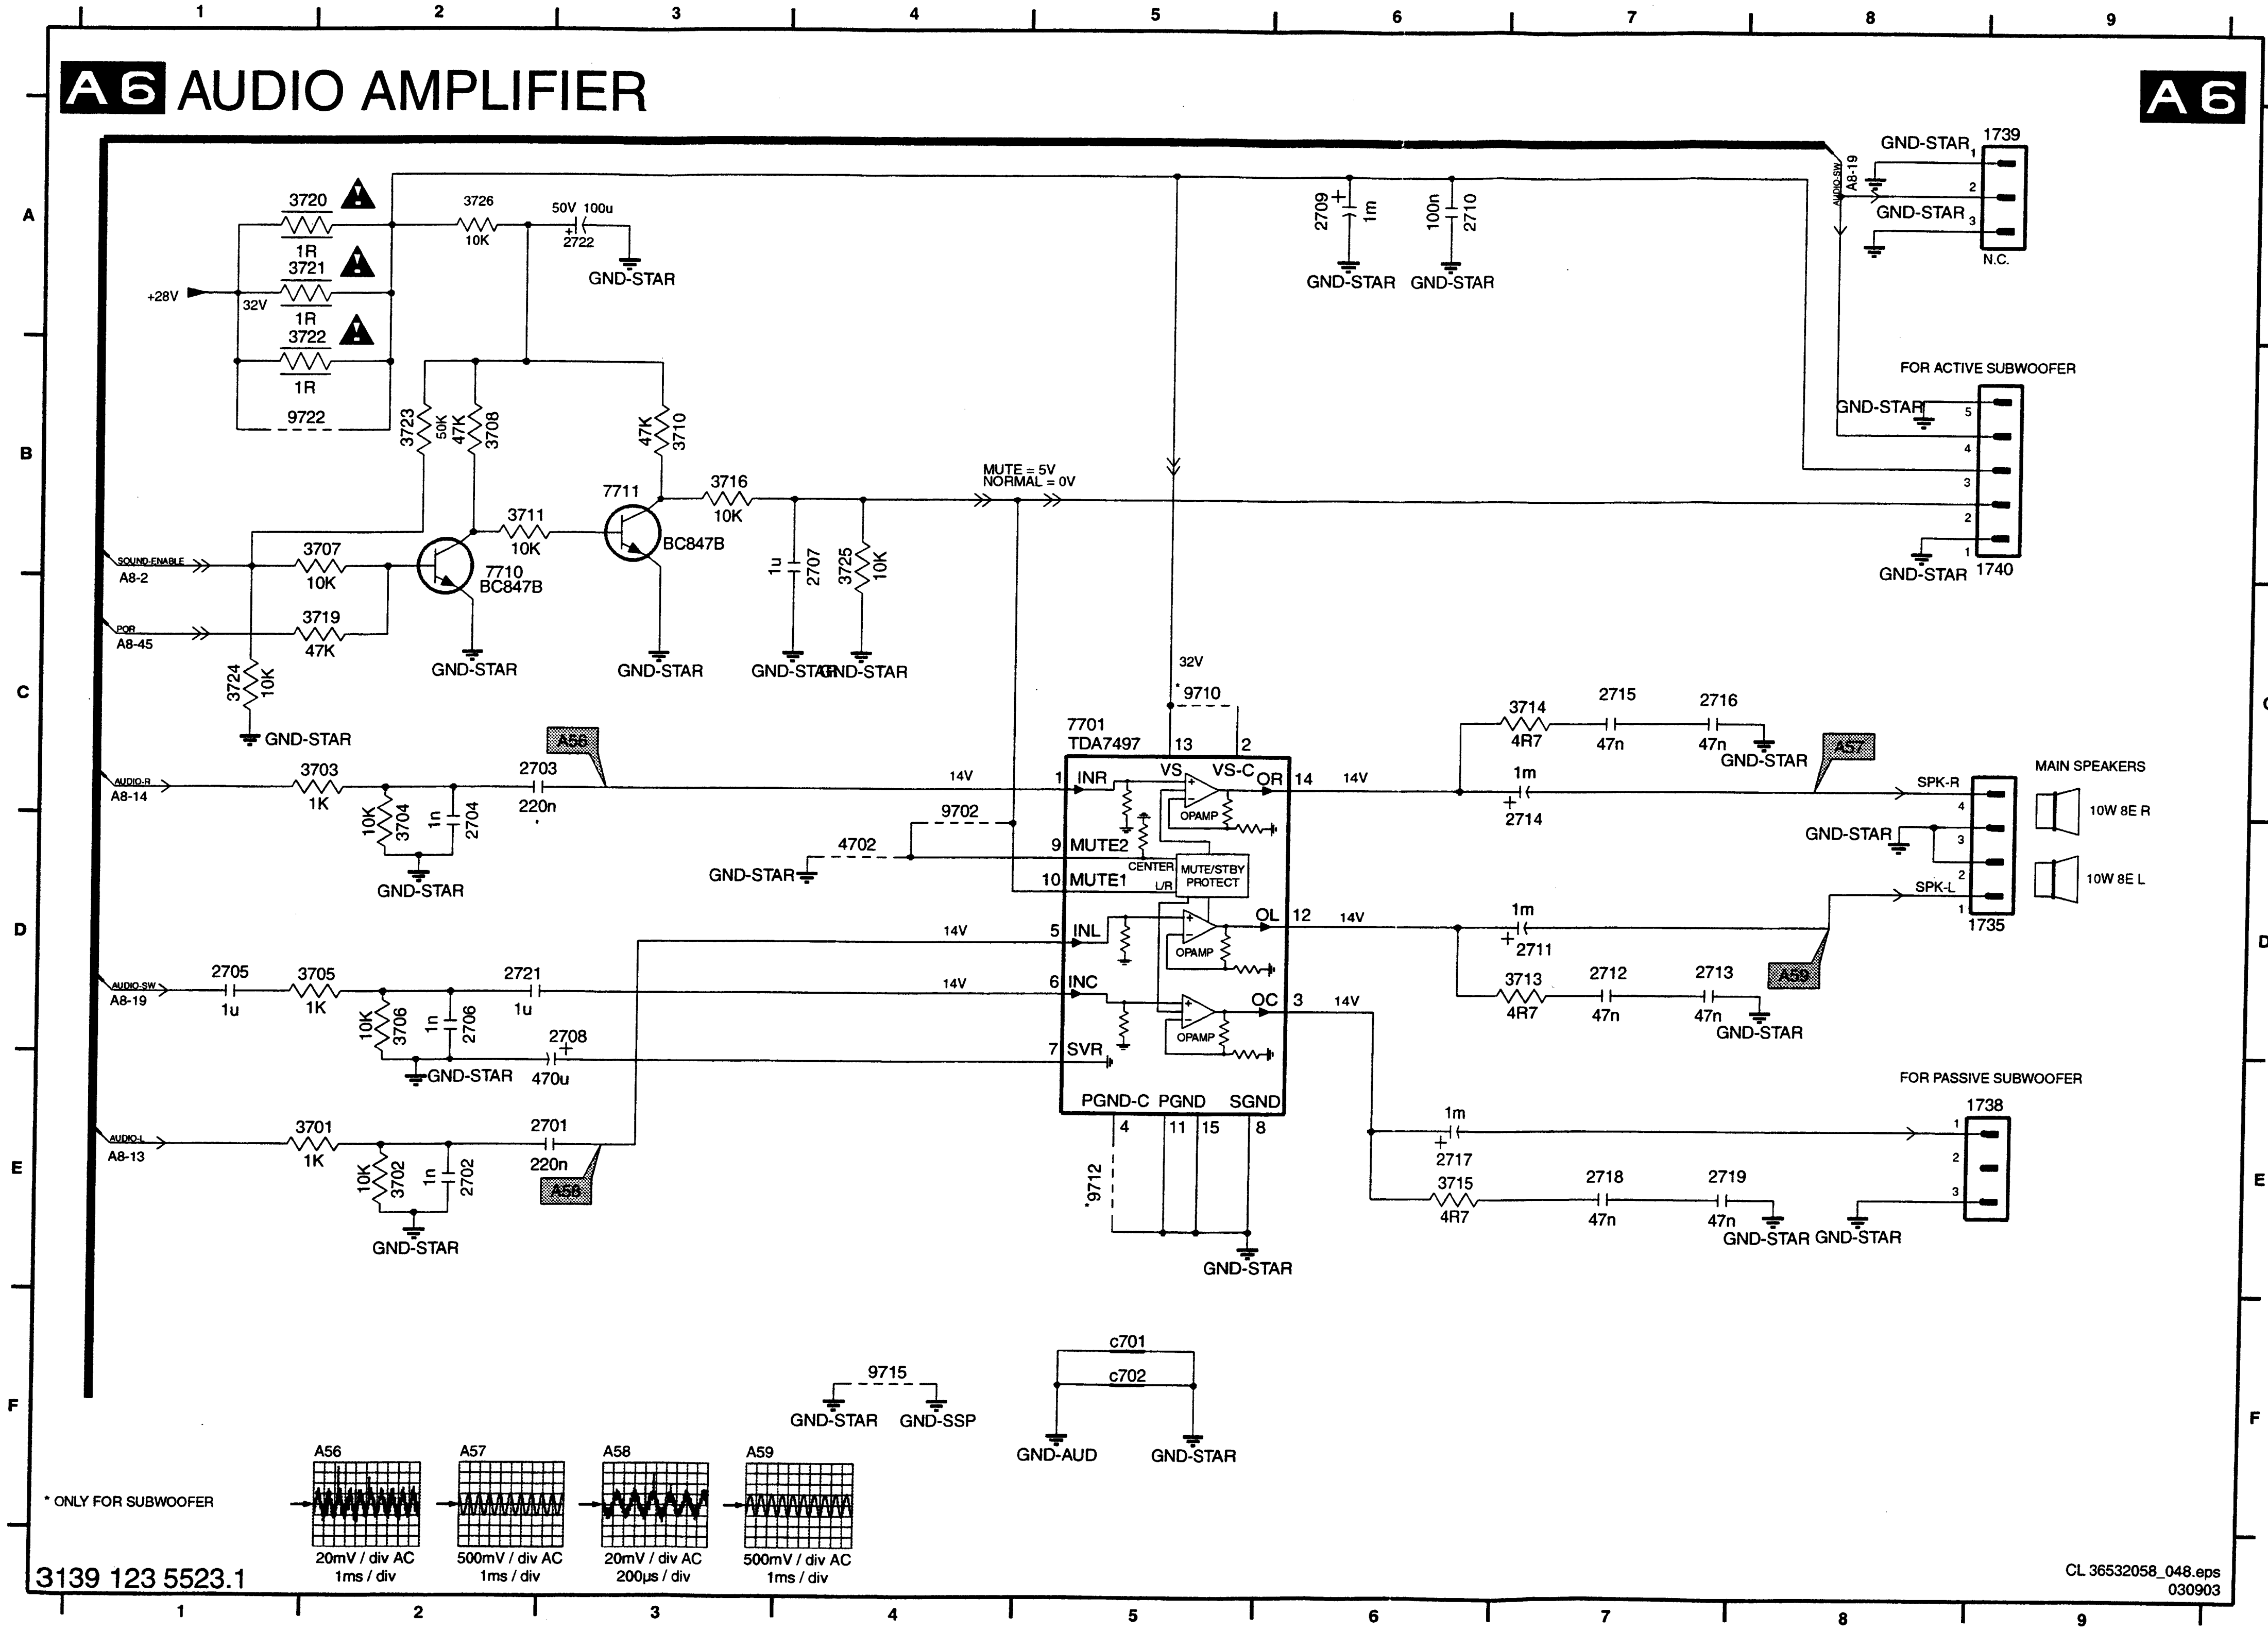
A6 AUDIO AMPLIFIER
A6
3720
3721
3722
1R
9722
+28V
32V
3726
10K
50V 100u
2722
GND-STAR
2709
1m
100n
2710
1739
N.C.
A8-19
AUDIO-SW
FOR ACTIVE SUBWOOFER
1740
3723
50K
47K
3708
3710
7711
3716
10K
3711
3707
7710
BC847B
SOUND-ENABLE
A8-2
POR
A8-45
3719
47K
3724
MUTE = 5V
NORMAL = 0V
1u
2707
3725
32V
9710
7701
TDA7497
INR
VS
VS-C
OR
MUTE2
MUTE1
CENTER
L/R
MUTE/STBY PROTECT
OPAMP
INL
OL
INC
OC
SVR
PGND-C PGND SGND
14V
AUDIO-R
A8-14
3703
1K
2703
220n
3704
2704
1n
9702
4702
AUDIO-SW
A8-19
2705
3705
2721
3706
2706
2708
470u
AUDIO-L
A8-13
3701
2701
3702
2702
9712
3714
4R7
2715
47n
2716
2714
2711
3713
2712
2713
MAIN SPEAKERS
SPK-R
SPK-L
10W 8E R
10W 8E L
1735
FOR PASSIVE SUBWOOFER
1738
2717
3715
2718
2719
A56
A57
A58
A59
9715
GND-SSP
c701
c702
GND-AUD
* ONLY FOR SUBWOOFER
20mV / div AC
1ms / div
500mV / div AC
1ms / div
20mV / div AC
200µs / div
500mV / div AC
1ms / div
3139 123 5523.1
CL 36532058_048.eps
030903
1 2 3 4 5 6 7 8 9
A B C D E F

1735	D8
1738	E8
1739	A8
1740	B8
2701	E3
2702	E2
2703	C2
2704	D2
2705	D1
2706	D2
2707	B4
2708	D3
2709	A6
2710	A6
2711	D7
2712	D7
2713	D7
2714	C7
2715	C7
2716	C7
2717	E6
2718	E7
2719	E7
2721	D2
2722	A3
3701	E2
3702	E2
3703	C2
3704	D2
3705	D2
3706	D2
3707	B2
3708	B2
3710	B3
3711	B2
3713	D7
3714	C7
3715	E6
3716	B3
3719	C2
3720	A1
3721	A1
3722	B1
3723	B2
3724	C1
3725	B4
3726	A2
4702	D4
7701	C5
7710	C2
7711	B3
9702	D4
9710	C5
9712	E5
9715	F4
9722	B1
c701	F5
c702	F5

Item	2x10W w/o HP Amp	3x10W w/o HP Amp + Subwoofer	2x10W with EXT Subwoofer	3x10W with HP amp + Subwoofer	2x10W with HP Amp	DESCRIPTION
1738	---	V	---	V	---	CON BM V 3P M 2.50 EH B
1739	---	---	V	---	---	CON BM V 3P M 2.50 EH B
2701	V	---	V	---	V	CER2 0805 Y5V 16V 1U COL R
2701	---	V	---	V	---	CER2 0603 X7R 16V 100N COL
2702	V	V	V	V	V	CER1 0603 NP0 25V 1N COL
2703	V	---	V	---	V	CER2 0805 Y5V 16V 1U COL R
2703	---	V	---	V	---	CER2 0603 X7R 16V 100N COL
2704	V	V	V	V	V	CER1 0603 NP0 25V 1N COL
2705	---	V	---	V	---	CER2 0805 Y5V 16V 1U COL R
2706	---	V	---	V	---	CER2 0603 X7R 50V 3N3 COL
2711	V	---	V	---	V	ELCAP 25V S 1000U PM20 COL B
2711	---	V	---	V	---	ELCAP 25V S 470U PM20 COL B
2714	V	---	V	---	V	ELCAP 25V S 1000U PM20 COL B
2714	---	V	---	---	---	ELCAP 25V S 470U PM20 COL B
2715	V	V	V	V	V	CER2 0603 X7R 16V 47N COL
2716	V	V	V	V	V	CER2 0603 X7R 16V 47N COL
2717	---	V	---	V	---	ELCAP 25V S 1000U PM20 COL B
2718	---	V	---	V	---	CER2 0603 X7R 16V 47N COL
2719	---	V	---	V	---	CER2 0603 X7R 16V 47N COL
2721	---	---	---	V	---	CER2 0603 X7R 10V 220N COL
2721	---	V	---	---	---	CER2 0603 Y5V 10V 470N COL
2751	---	---	---	V	V	CER2 0805 Y5V 50V 100N P8020 R
2752	---	---	---	V	V	ELCAP 25V S 100U PM20 COL A
2753	---	---	---	V	V	CER2 0805 Y5V 50V 100N P8020 R
2754	---	---	---	V	V	CER2 0805 Y5V 16V 1U COL R
2755	---	---	---	V	V	ELCAP 25V S 100U PM20 COL A
2756	---	---	---	V	V	CER1 0603 NP0 50V 33P COL
2757	---	---	---	V	V	CER2 0603 X7R 16V 100N COL
2758	---	---	---	V	V	CER2 0805 Y5V 16V 1U COL R
2759	---	---	---	V	V	ELCAP 25V S 100U PM20 COL A
2760	---	---	---	V	V	CER1 0603 NP0 50V 33P COL
2761	---	---	---	V	V	CER2 0603 X7R 16V 100N COL
2762	---	---	---	V	V	CER1 0603 NP0 25V 1N COL
2763	---	---	---	V	V	CER1 0603 NP0 25V 1N COL
2764	---	---	---	V	V	ELCAP 10V S 470U PM20 COL A
3703	V	V	V	V	---	RST SM 0603 10K PM5 COL
3703	---	---	---	---	V	RST SM 0603 18K PM5 COL
3704	V	V	V	V	---	RST SM 0603 22K PM5 COL
3704	---	---	---	---	V	RST SM 0805 10K PM5 COL R
3705	---	V	---	V	---	RST SM 0603 10K PM5 COL
3706	---	V	---	---	---	RST SM 0603 22K PM5 COL
3706	---	---	---	---	V	RST SM 0805 10K PM5 COL R
3706	---	---	---	V	---	RST SM 0805 22K PM5 COL R
3715	---	V	---	V	---	RST SM 0603 RC21 8R2 PM5 R
3722	---	V	---	V	---	RST FUSE NFR25 S 1R PM5 A
3751	---	---	---	V	V	RST SM 0603 22K PM5 COL
3752	---	---	---	V	V	RST SM 0603 47K PM5 COL
3753	---	---	---	V	V	RST SM 0603 47K PM5 COL
3754	---	---	---	V	V	RST CRB CFR25S A 3R9 PM5 A
3755	---	---	---	V	V	RST SM 0603 12K PM5 COL
3756	---	---	---	V	V	RST SM 0603 12K PM5 COL
3757	---	---	---	V	V	RST SM 0603 100K PM5 COL

Large Signal Panel: Tuner SIMM Connector (Female)

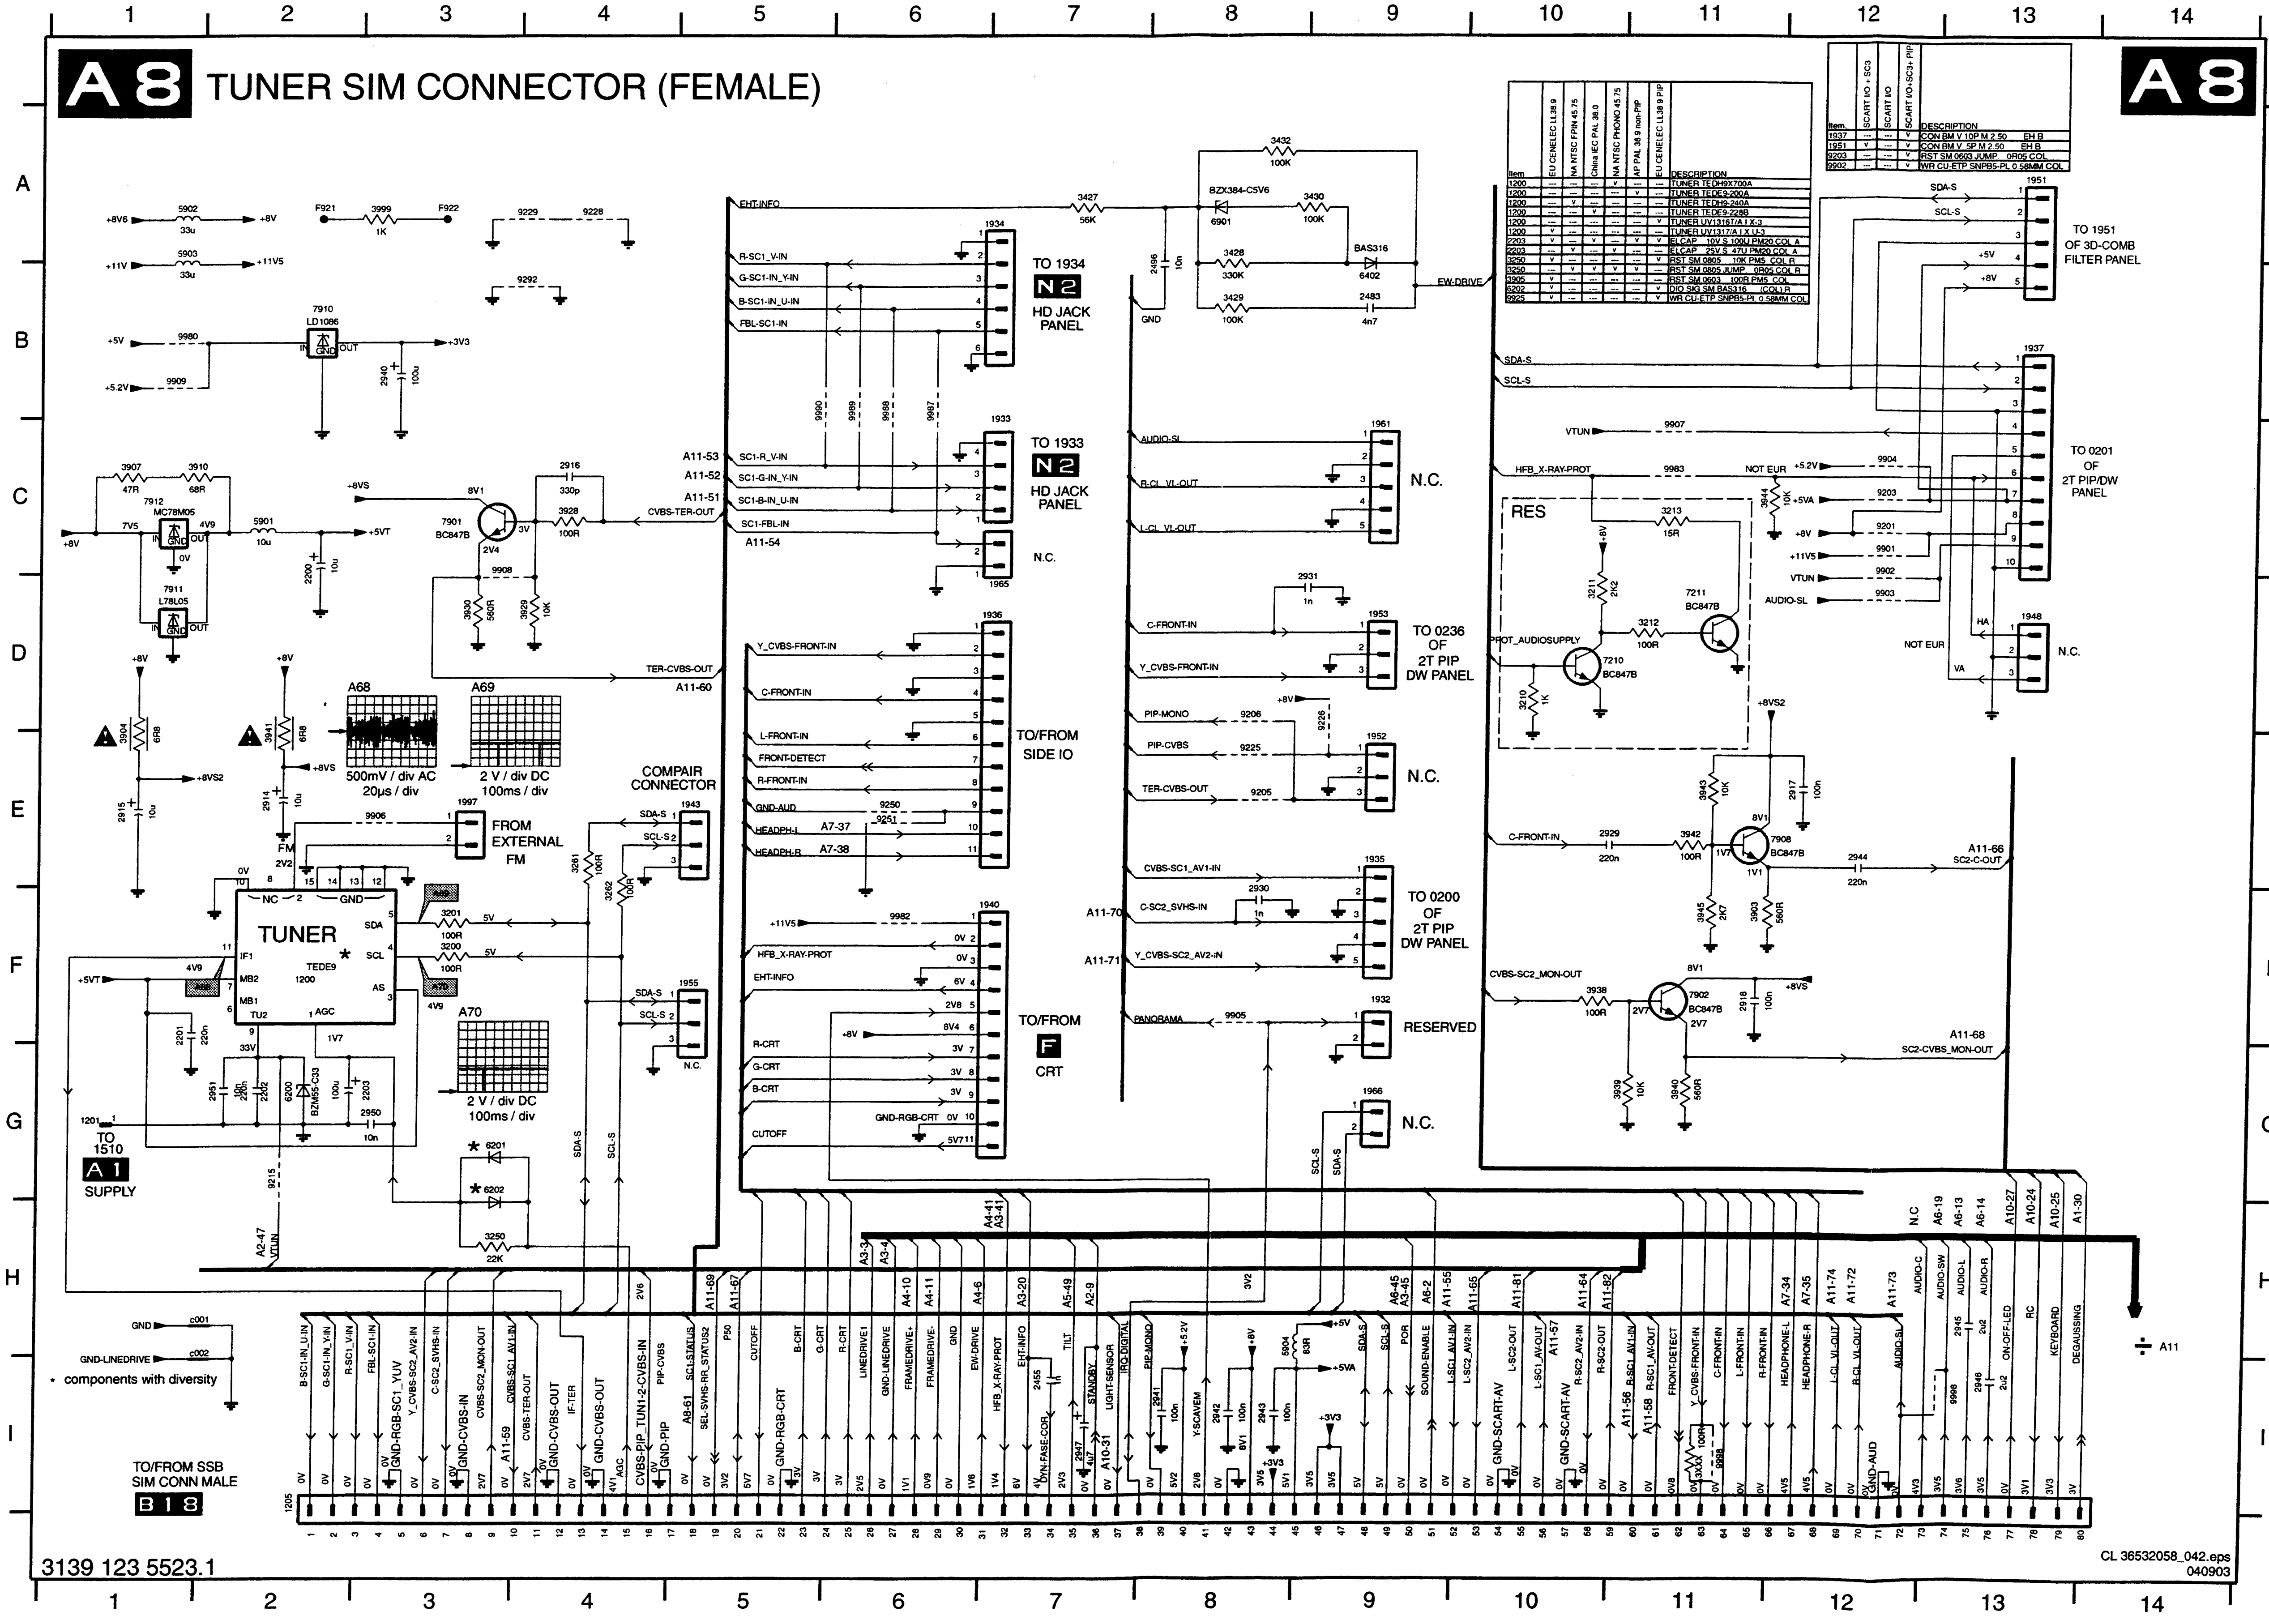
A8
TUNER SIM CONNECTOR (FEMALE)
A8
1 2 3 4 5 6 7 8 9 10 11 12 13 14
A B C D E F G H I
+8V6
5902
33u
+8V
+11V
5903
+11V5
F921
3999
1K
F922
9229
9228
9292
7910
LD1086
+5V
9980
+3V3
+5.2V
9909
2940
100u
3907
47R
3910
68R
7912
MC78M05
4V9
5901
10u
+5VT
+8V
7911
L78L05
2200
10u
+8VS
8V1
7901
BC847B
2V4
3V
2916
330p
3928
100R
CVBS-TER-OUT
9908
3930
560R
3929
10K
TER-CVBS-OUT
A11-60
3904
6R8
3941
6R8
+8VS2
2915
10u
2914
10u
A68
A69
500mV / div AC
20µs / div
2 V / div DC
100ms / div
9906
1997
FROM EXTERNAL FM
COMPAIR CONNECTOR
1943
SDA-S
SCL-S
3261
100R
3262
100R
TUNER
TEDE9
1200
SDA
SCL
AS
AGC
IF1
MB2
MB1
TU2
NC
GND
3201
100R
3200
100R
5V
1955
N.C.
A70
2 V / div DC
100ms / div
2201
220n
2951
2202
6200
BZM55-C33
2203
2950
10n
1201
TO 1510
A1
SUPPLY
9215
A2-47
VTUN
6201
6202
3250
22K
SDA-S
SCL-S
EHT-INFO
R-SC1_V-IN
G-SC1-IN_Y-IN
B-SC1-IN_U-IN
FBL-SC1-IN
1934
TO 1934
N2
HD JACK PANEL
9990
9989
9988
9987
A11-53
A11-52
A11-51
A11-54
SC1-R_V-IN
SC1-G-IN_Y-IN
SC1-B-IN_U-IN
SC1-FBL-IN
1933
TO 1933
N2
HD JACK PANEL
1965
N.C.
1936
Y_CVBS-FRONT-IN
C-FRONT-IN
L-FRONT-IN
FRONT-DETECT
R-FRONT-IN
GND-AUD
HEADPH-L
HEADPH-R
A7-37
A7-38
9250
9251
TO/FROM SIDE IO
1940
+11V5
9982
HFB_X-RAY-PROT
EHT-INFO
R-CRT
G-CRT
B-CRT
GND-RGB-CRT
CUTOFF
TO/FROM
F
CRT
3427
56K
3432
100K
BZX384-C5V6
6901
3430
100K
3428
330K
BAS316
6402
3429
100K
2483
4n7
2496
10n
EW-DRIVE
GND
AUDIO-SL
R-CL_VL-OUT
L-CL_VL-OUT
1961
N.C.
2931
1n
C-FRONT-IN
Y_CVBS-FRONT-IN
1953
TO 0236 OF 2T PIP DW PANEL
PIP-MONO
PIP-CVBS
TER-CVBS-OUT
9206
9225
9226
9205
1952
N.C.
CVBS-SC1_AV1-IN
C-SC2_SVHS-IN
Y_CVBS-SC2_AV2-IN
2930
1n
1935
A11-70
A11-71
TO 0200 OF 2T PIP DW PANEL
PANORAMA
9905
1932
RESERVED
1966
N.C.
SCL-S
SDA-S
SDA-S
SCL-S
1951
TO 1951 OF 3D-COMB FILTER PANEL
+5V
+8V
1937
VTUN
9907
HFB_X-RAY-PROT
9983
NOT EUR
+5.2V
9904
3944
10K
+5VA
9203
+8V
9201
+11V5
9901
VTUN
9902
AUDIO-SL
9903
TO 0201 OF 2T PIP/DW PANEL
RES
3213
15R
3211
2K2
7211
BC847B
3212
100R
PROT_AUDIOSUPPLY
7210
BC847B
3210
1K
1948
HA
VA
NOT EUR
N.C.
+8VS2
3943
10K
2917
100n
C-FRONT-IN
2929
220n
3942
100R
7908
BC847B
2944
220n
A11-66
SC2-C-OUT
3945
2K7
3903
560R
CVBS-SC2_MON-OUT
3938
100R
7902
BC847B
2918
100n
+8VS
A11-68
SC2-CVBS_MON-OUT
3939
10K
3940
560R
N.C
A6-19
A6-13
A6-14
A10-27
A10-24
A10-25
A1-30
A11
GND
c001
GND-LINEDRIVE
c002
* components with diversity
TO/FROM SSB SIM CONN MALE
B18
1205
3139 123 5523.1
CL 36532058_042.eps
040903

Item	EU CENELEC LL38.9	NA NTSC FPIN 45.75	China IEC PAL 38.0	NA NTSC PHONO 45.75	AP PAL 38.9 non-PIP	EU CENELEC LL38 9 PIP	DESCRIPTION
1200	---	---	---	v	---	---	TUNER TEDH9X700A
1200	---	---	---	---	v	---	TUNER TEDE9-200A
1200	---	v	---	---	---	---	TUNER TEDH9-240A
1200	---	---	v	---	---	---	TUNER TEDE9-228B
1200	---	---	---	---	---	v	TUNER UV1316T/A I X-3
1200	v	---	---	---	---	---	TUNER UV1317/A I X U-3
2203	v	---	v	---	v	v	ELCAP 10V S 100U PM20 COL A
2203	---	v	---	v	---	---	ELCAP 25V S 47U PM20 COL A
3250	v	---	---	---	---	v	RST SM 0805 10K PM5 COL R
3250	---	v	v	v	v	---	RST SM 0805 JUMP. 0R05 COL R
3905	v	---	---	---	---	---	RST SM 0603 100R PM5 COL
6202	v	---	---	---	---	v	DIO SIG SM BAS316 (COL) R
9925	v	---	---	---	---	v	WR CU-ETP SNPB5-PL 0.58MM COL

Item.	SCART I/O + SC3	SCART I/O	SCART I/O+SC3+ PIP	DESCRIPTION
1937	---	---	v	CON BM V 10P M 2.50 EH B
1951	v	---	v	CON BM V 5P M 2.50 EH B
9203	---	---	v	RST SM 0603 JUMP. 0R05 COL
9902	---	---	v	WR CU-ETP SNPB5-PL 0.58MM COL

1200	F2
1201	G1
1205	I2
1932	F9
1933	B6
1934	A6
1935	E9
1936	D6
1937	B13
1940	F6
1943	E5
1948	D13
1951	A13
1952	E9
1953	D9
1955	F5
1961	C9
1965	D6
1966	G9
1997	E3
2200	D2
2201	F1
2202	G2
2203	G3
2455	I7
2483	B9
2496	B8
2914	E2
2915	E1
2916	C4
2917	E12
2918	F11
2929	E10
2930	F8
2931	D9
2940	B3
2941	I8
2942	I8
2943	I8
2944	E12
2945	H13
2946	I13
2947	I7
2950	G3
2951	G2
3200	F3
3201	F3
3210	D10
3211	D10
3212	D11
3213	C11
3250	H3
3261	E4
3262	F4
3427	A7
3428	A8
3429	B8
3430	A9
3432	A8
3903	F11
3904	E1
3905	I11
3907	C1
3910	C1
3928	C4
3929	D4
3930	D3
3938	F10
3939	G11
3940	G11
3941	E2
3942	E11
3943	E11
3944	C11
3945	F11
3999	A3
4915	I11
5901	C2
5902	A1
5903	A1
5904	H8
6200	G2
6201	G3
6202	G3
6402	B9
6901	A8
7210	D10
7211	D11
7901	C3
7902	F11
7908	E11
7910	B2
7911	D1
7912	C1
9201	C12
9203	C12
9205	E8
9206	D8
9215	G2
9225	E8
9226	D9
9228	A4
9229	A4
9250	E6
9251	E6
9292	B4
9901	C12
9902	C12
9903	D12
9904	C12
9905	F8
9906	E3
9907	C11
9908	C3
9909	B1
9980	B1
9982	F6
9983	C11
9987	B6
9988	B6
9989	B6
9990	B5
9998	I13
c001	H2
c002	I2

Large Signal Panel: Front

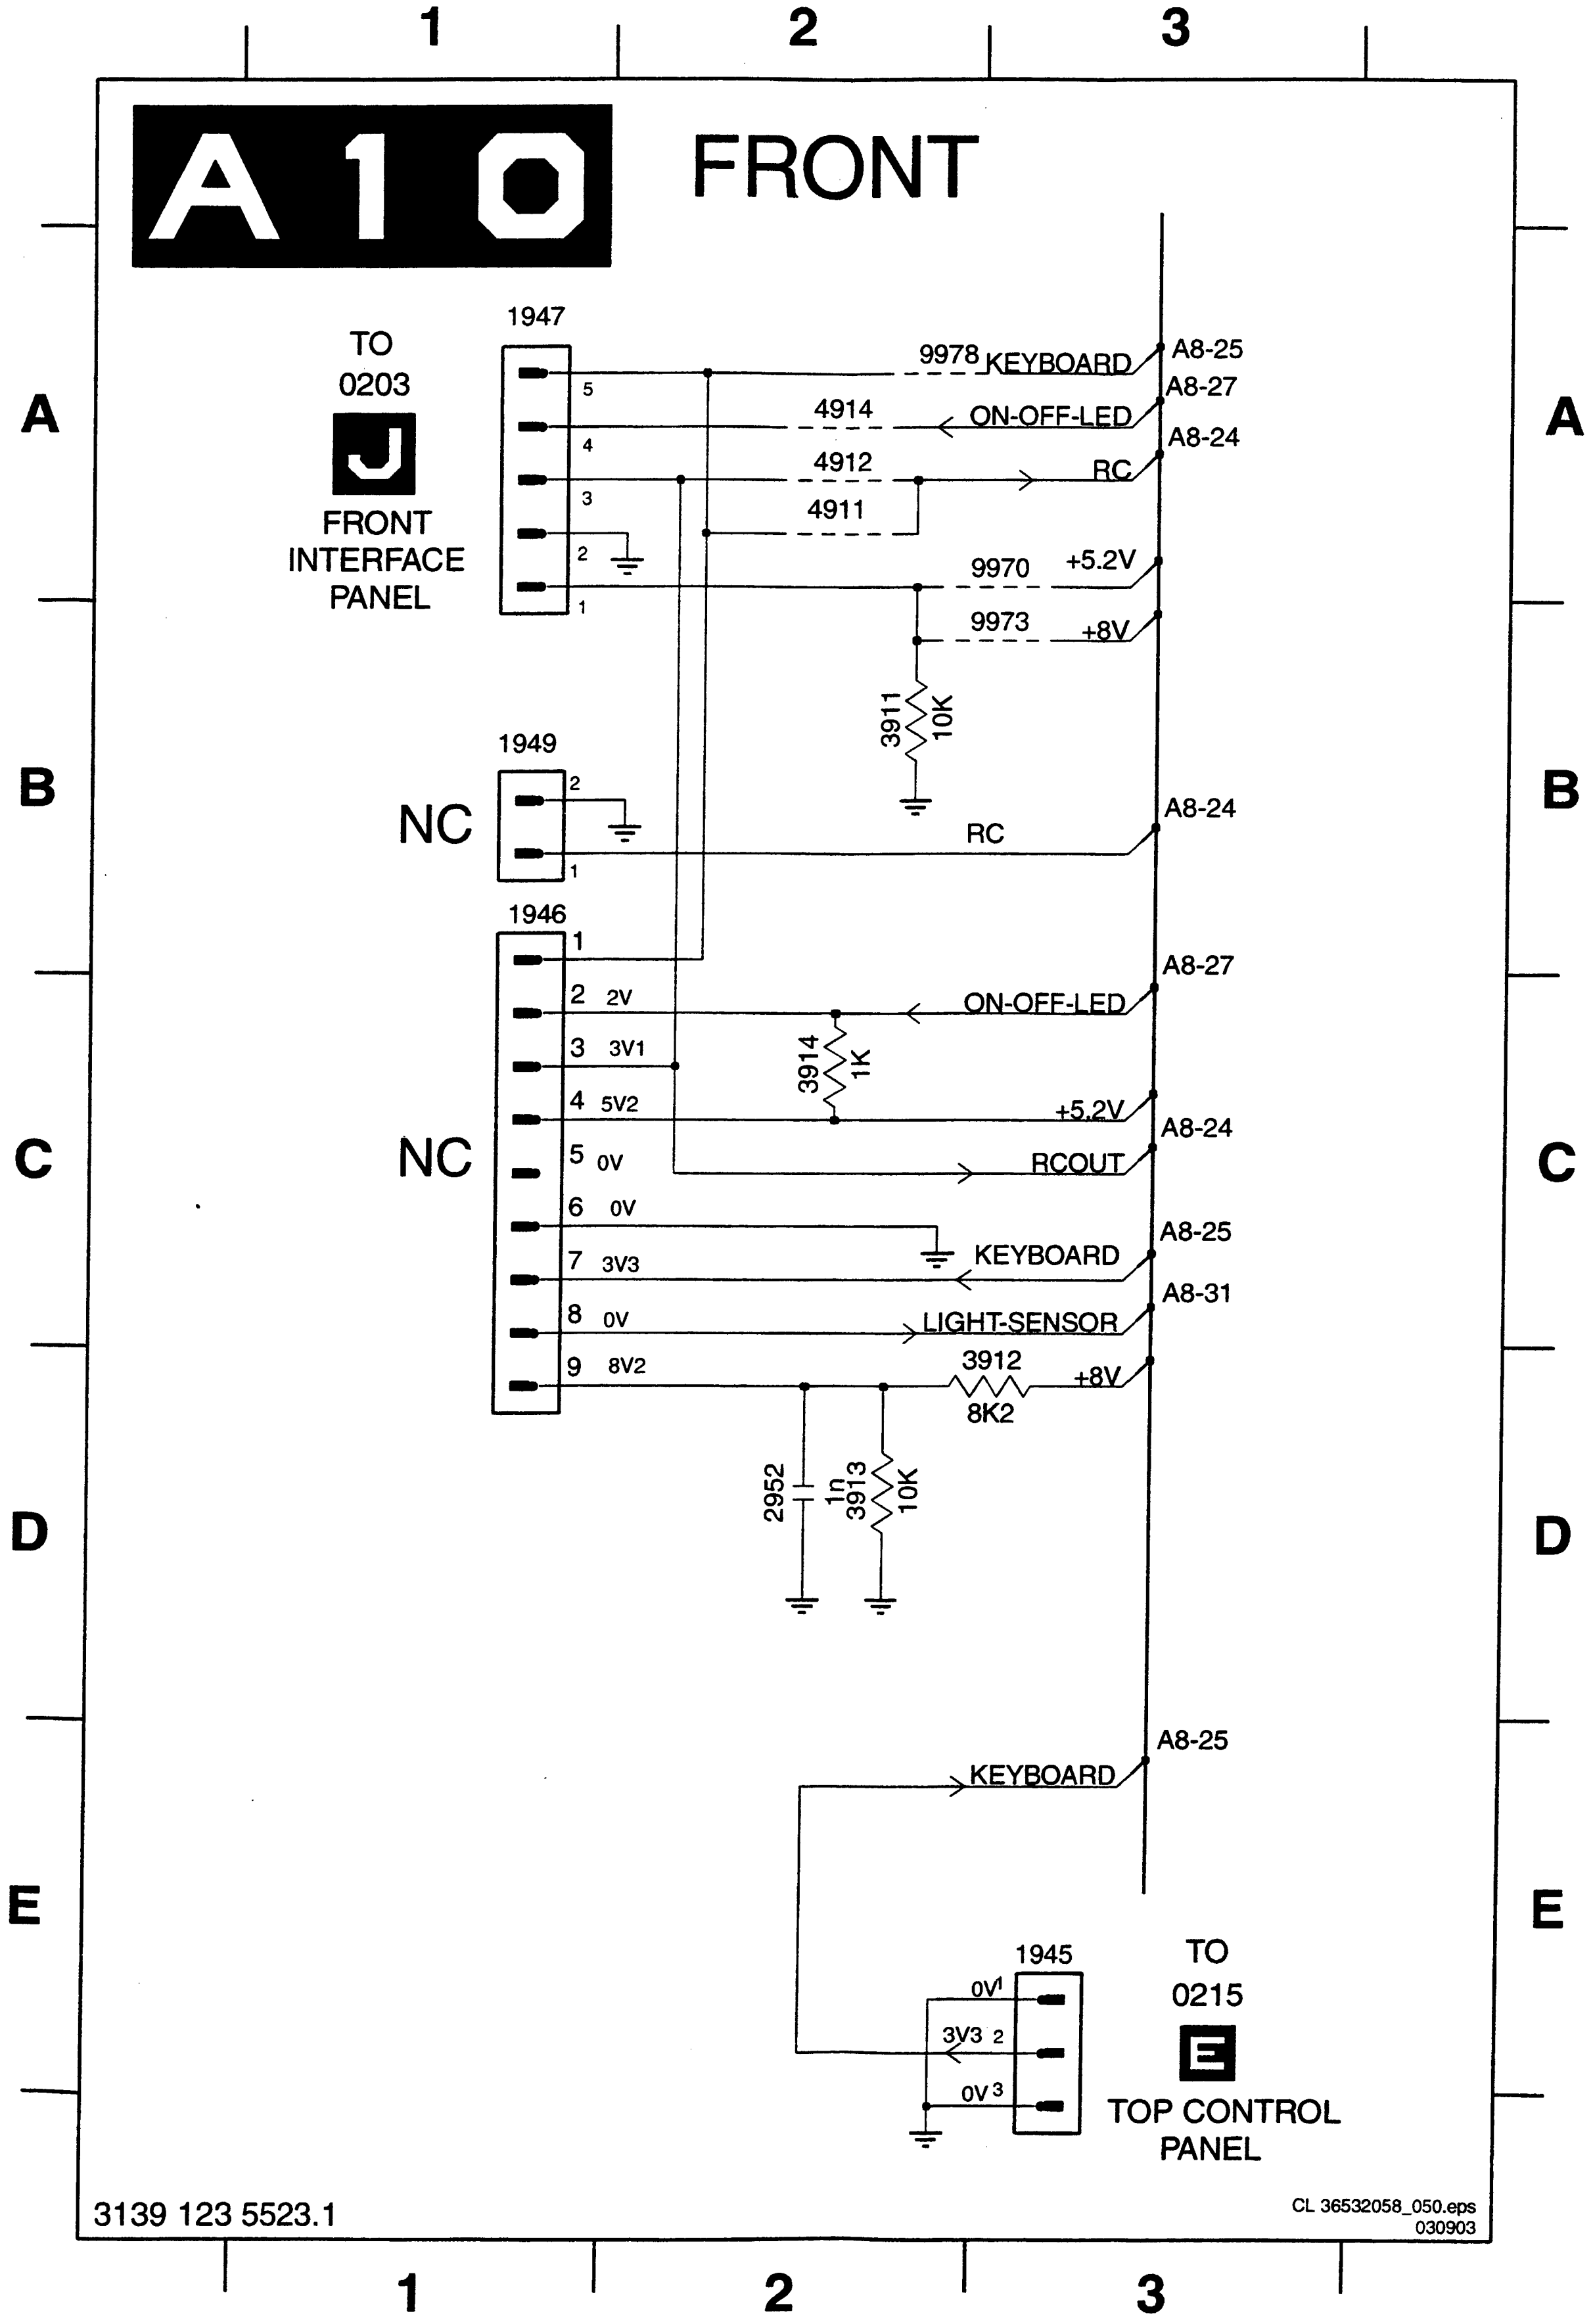
A10 FRONT
TO 0203
J
FRONT INTERFACE PANEL
1947
9978 KEYBOARD
4914 ON-OFF-LED
4912 RC
4911
9970 +5.2V
9973 +8V
A8-25
A8-27
A8-24
3911 10K
1949
NC
RC
1946
1
2 2V
3 3V1
4 5V2
5 0V
6 0V
7 3V3
8 0V
9 8V2
ON-OFF-LED
3914 1K
+5.2V
RCOUT
KEYBOARD
LIGHT-SENSOR
3912 8K2
+8V
A8-31
2952 1n
3913 10K
KEYBOARD
A8-25
1945
0V 1
3V3 2
0V 3
TO 0215
E
TOP CONTROL PANEL
3139 123 5523.1
CL 36532058_050.eps 030903
1 2 3
A B C D E

1945	E3
1946	B1
1947	A1
1949	B1
2952	D2
3911	B2
3912	D3
3913	D2
3914	C2
4911	A2
4912	A2
4914	A2
9970	A3
9973	B3
9978	A2

Personal Notes:

Large Signal Panel: Inputs/Outputs

A11 INPUTS/OUTPUTS

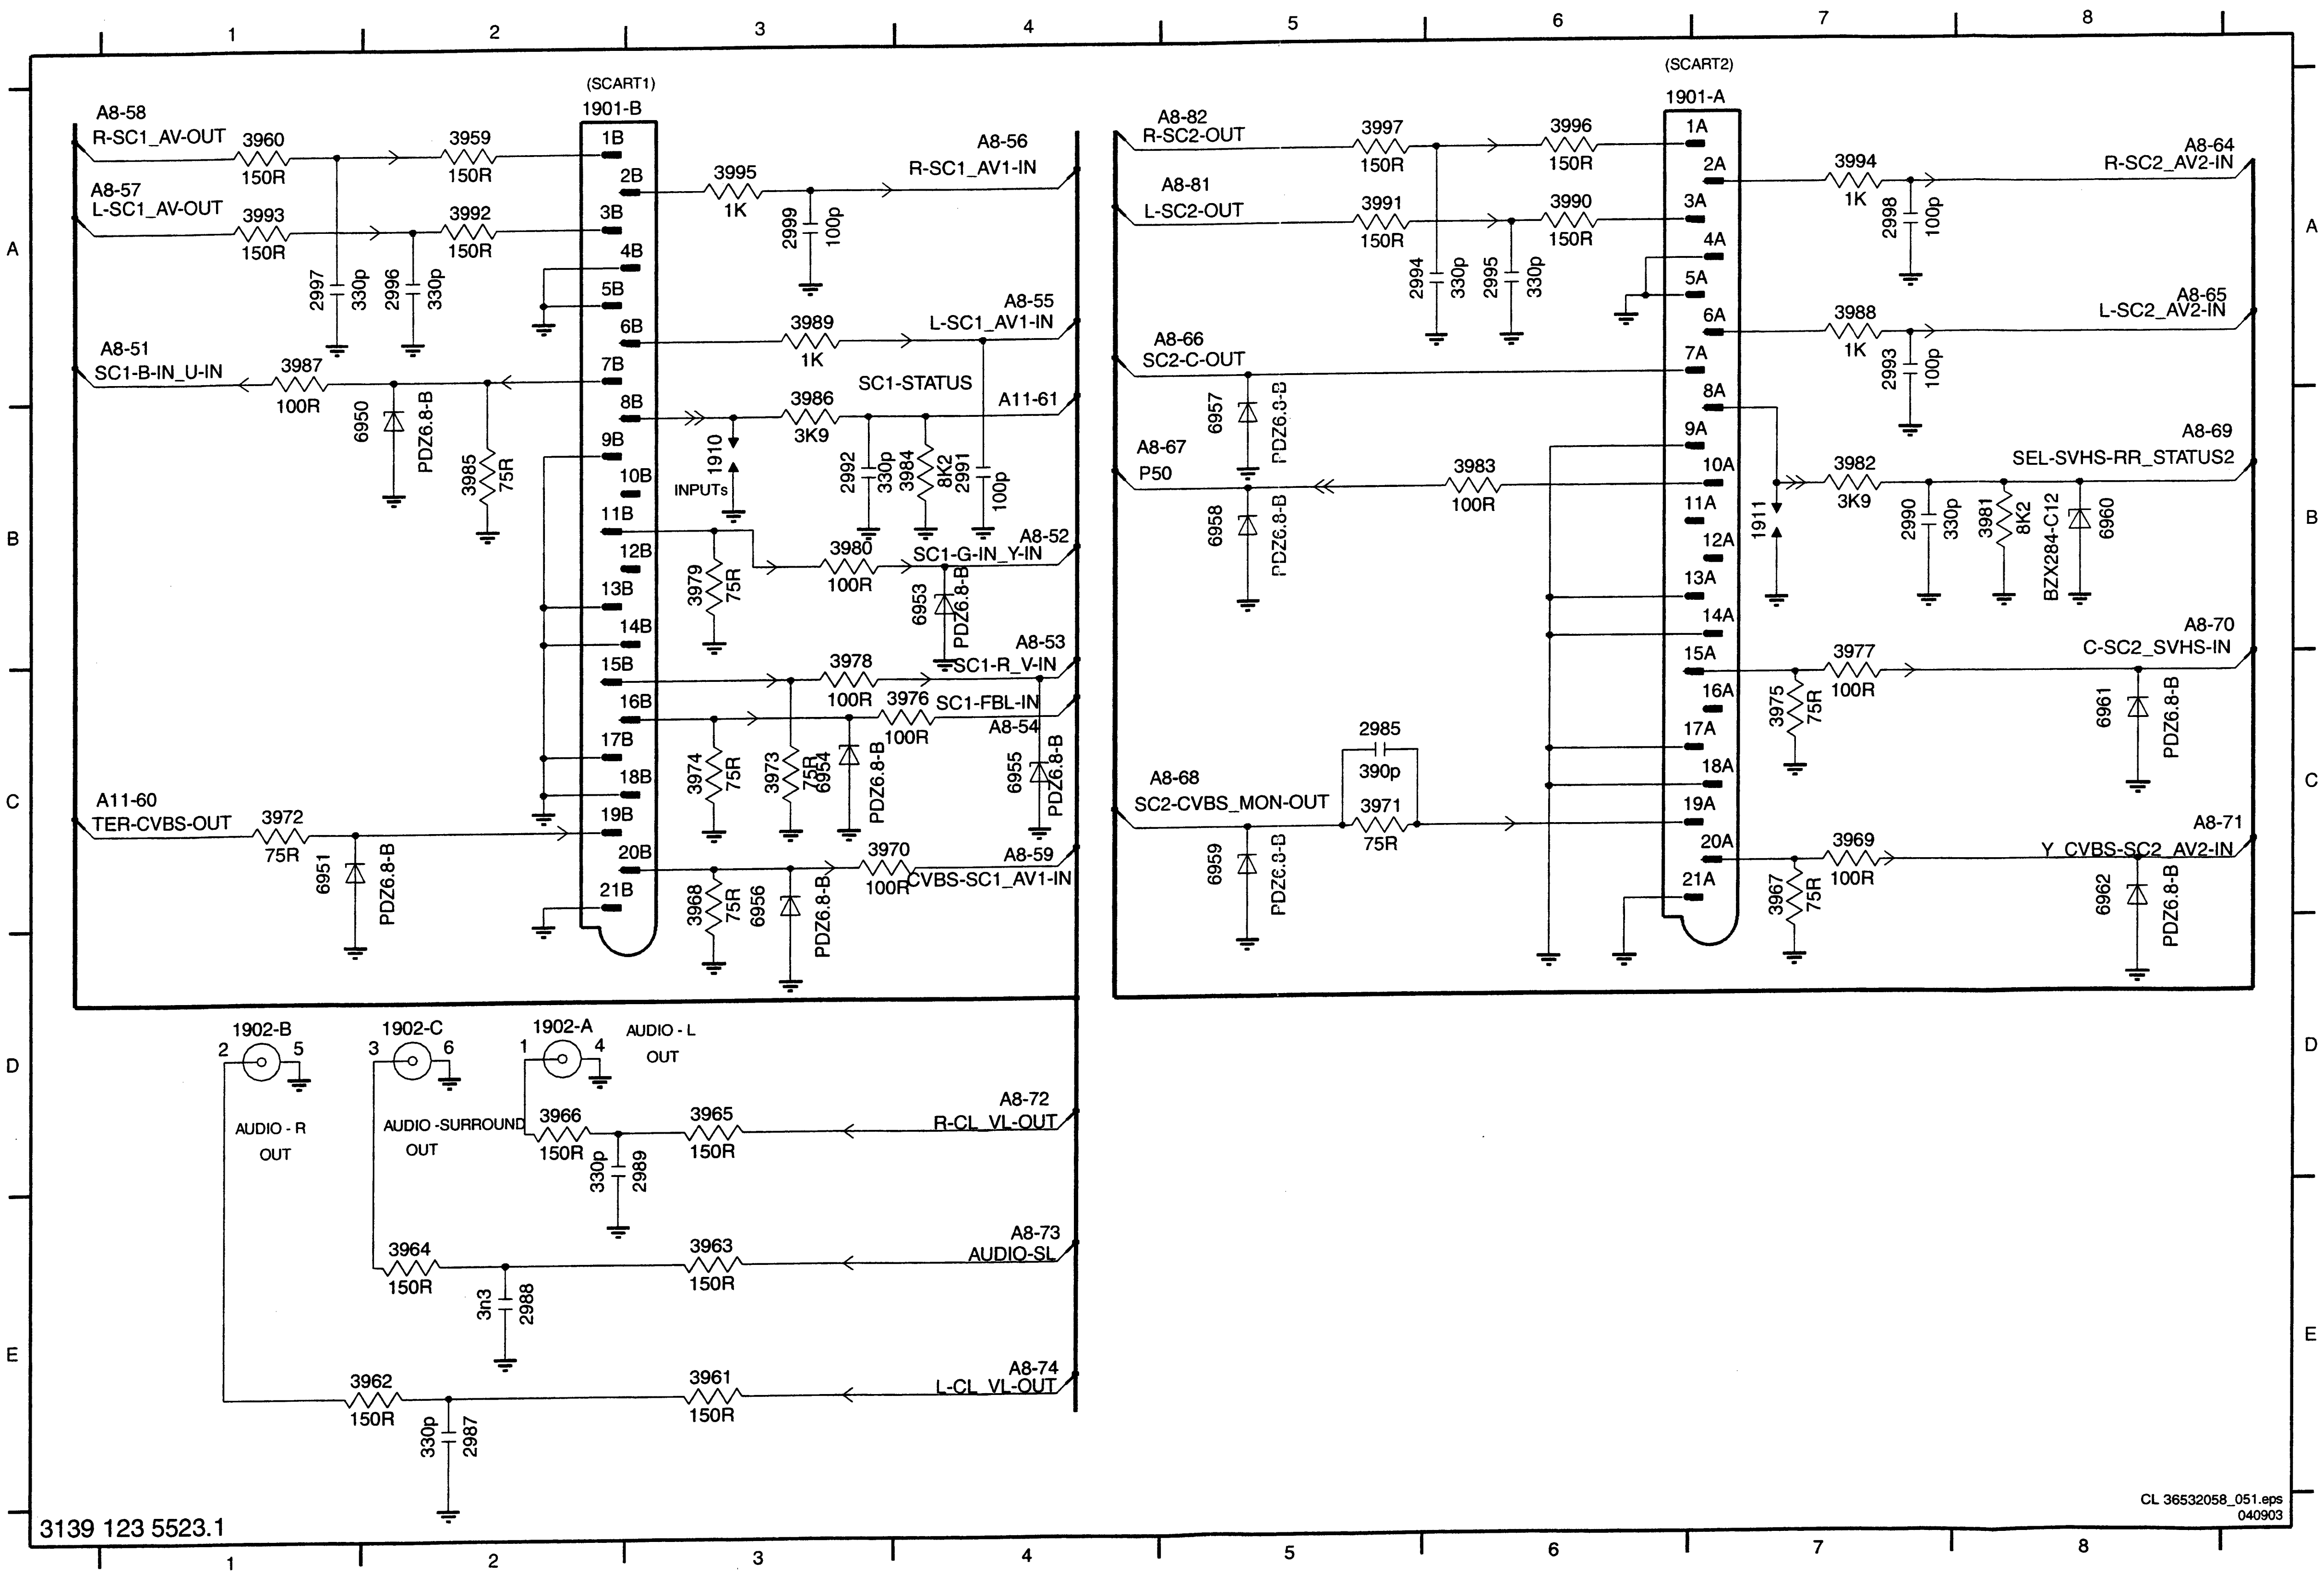
(SCART1)
1901-B
A8-58
R-SC1_AV-OUT
3960 150R
3959 150R
A8-57
L-SC1_AV-OUT
3993 150R
3992 150R
2997 330p
2996 330p
A8-51
SC1-B-IN_U-IN
3987 100R
6950 PDZ6.8-B
3985 75R
A11-60
TER-CVBS-OUT
3972 75R
6951 PDZ6.8-B
1B 2B 3B 4B 5B 6B 7B 8B 9B 10B 11B 12B 13B 14B 15B 16B 17B 18B 19B 20B 21B
3995 1K
2999 100p
A8-56
R-SC1_AV1-IN
3989 1K
A8-55
L-SC1_AV1-IN
SC1-STATUS
3986 3K9
A11-61
1910
INPUTs
2992 330p
3984 8K2
2991 100p
3979 75R
3980 100R
A8-52
SC1-G-IN_Y-IN
6953 PDZ6.8-B
3978 100R
A8-53
SC1-R_V-IN
3976 100R
SC1-FBL-IN
A8-54
3974 75R
3973 75R
6954 PDZ6.8-B
6955 PDZ6.8-B
3970 100R
A8-59
CVBS-SC1_AV1-IN
3968 75R
6956 PDZ6.8-B
(SCART2)
1901-A
A8-82
R-SC2-OUT
3997 150R
3996 150R
A8-81
L-SC2-OUT
3991 150R
3990 150R
2994 330p
2995 330p
1A 2A 3A 4A 5A 6A 7A 8A 9A 10A 11A 12A 13A 14A 15A 16A 17A 18A 19A 20A 21A
3994 1K
2998 100p
A8-64
R-SC2_AV2-IN
3988 1K
2993 100p
A8-65
L-SC2_AV2-IN
A8-66
SC2-C-OUT
6957 PDZ6.8-B
A8-67
P50
6958 PDZ6.8-B
3983 100R
1911
3982 3K9
A8-69
SEL-SVHS-RR_STATUS2
2990 330p
3981 8K2
BZX284-C12
6960
A8-70
C-SC2_SVHS-IN
3977 100R
3975 75R
6961 PDZ6.8-B
2985 390p
A8-68
SC2-CVBS_MON-OUT
3971 75R
6959 PDZ6.8-B
3969 100R
A8-71
Y_CVBS-SC2_AV2-IN
3967 75R
6962 PDZ6.8-B
1902-B
AUDIO - R OUT
1902-C
AUDIO -SURROUND OUT
1902-A
AUDIO - L OUT
3966 150R
2989 330p
3965 150R
A8-72
R-CL_VL-OUT
3964 150R
2988 3n3
3963 150R
A8-73
AUDIO-SL
3962 150R
2987 330p
3961 150R
A8-74
L-CL_VL-OUT
1 2 3 4 5 6 7 8
A B C D E
3139 123 5523.1
CL 36532058_051.eps
040903

1901-A	A6	3982	B7
1901-B	A2	3983	B6
1902-A	D2	3984	B4
1902-B	D1	3985	B2
1902-C	D2	3986	B3
1910	B3	3987	A1
1911	B7	3988	A7
2985	C5	3989	A3
2987	E2	3990	A6
2988	E2	3991	A5
2989	D3	3992	A2
2990	B7	3993	A1
2991	B4	3994	A7
2992	B3	3995	A3
2993	A7	3996	A6
2994	A5	3997	A5
2995	A6	6950	B1
2996	A2	6951	C1
2997	A1	6953	B4
2998	A7	6954	C3
2999	A3	6955	C4
3959	A2	6956	C3
3960	A1	6957	B5
3961	E3	6958	B5
3962	E2	6959	C5
3963	E3	6960	B8
3964	E2	6961	C8
3965	D3	6962	C8
3966	D2		
3967	C7		
3968	C3		
3969	C7		
3970	C3		
3971	C5		
3972	C1		
3973	C3		
3974	C3		
3975	C7		
3976	C4		
3977	C7		
3978	C3		
3979	B3		
3980	B3		
3981	B8		

Layout LSP (Top Side)

0040	B6
0043	C4
1146	E2
1147	E2
1148	E2
1200	E8
1201	E5
1205	E7
1417	A6
1424	A8
1430	B7
1491	A6
1492	A8
1493	A7
1495	B8
1498	A8
1499	C8
1500	A2
1501	A2
1502	A3
1503	B3
1505	A2
1506	B2
1510	C5
1550	B2
1590	A3
1591	A3
1601	E1
1620	D1
1625	A8
1627	A8
1693	C7
1735	E5
1738	E4
1739	D5
1740	C5
1901	D8
1902	D8
1932	D6
1933	D8
1934	D8
1935	D7
1936	D6
1937	E6
1940	E7
1943	E8
1945	E4
1946	E4
1947	E3
1948	E6
1949	E2
1950	A1
1951	E6
1952	E7
1953	D6
1955	E6
1961	E6
1965	D8
1966	D6
1997	E8
2100	D3
2101	C2
2102	C2
2104	D3
2107	D3
2108	B2
2111	C1
2114	B1
2115	D2
2116	D1
2118	D2
2119	E3
2120	E2
2121	D2
2122	C2
2124	B1
2126	E2
2132	E2
2140	E3
2141	E2
2143	D2
2148	D1
2151	C1
2152	D3
2157	C2
2161	B2
2163	B1
2200	E8
2203	E8
2400	A5
2401	A6
2402	A8
2405	A6
2413	C7
2418	B7
2419	B6
2420	B6
2421	A5
2422	A5
2423	A4
2424	B5
2425	B6
2426	B5
2430	A6
2431	A6
2432	A5
2433	A5
2434	A5
2435	B6
2450	A8
2451	C8
2460	A8
2461	A8
2462	B8
2463	B8
2464	B8
2465	B7
2468	A8
2469	A6
2487	A6
2488	B6
2490	B5
2491	A5
2492	C7
2501	C4
2503	C3
2505	C4
2506	D4
2507	A2
2508	A4
2509	A4
2510	C3
2512	E4
2515	C4
2516	B4
2517	B3
2518	B2
2519	E4
2520	A3
2521	A2
2523	C3
2526	C3
2527	B3
2531	D4
2537	A3
2539	B4
2540	D3
2541	B3
2542	E4
2546	E4
2547	A3
2622	B8
2624	A8
2625	B8
2627	A8
2628	B8
2642	A5
2708	D5
2709	C5
2711	E5
2714	C5
2717	E4
2722	C6
2752	C6
2755	D6
2759	D6
2764	C6
2900	A1
2914	E8
2915	D7
2940	E6
2947	E2
3101	B2
3102	C2
3103	C2
3104	C2
3105	C2
3106	C1
3107	C1
3108	B2
3111	C2
3113	D2
3114	D1
3115	E2
3116	E2
3117	C2
3118	B2
3123	D1
3124	D1
3125	C1
3126	C1
3127	C1
3137	E1
3141	E3
3144	D2
3161	D2
3162	D2
3171	D1
3172	D1
3213	E6
3400	A7
3401	A6
3402	A6
3403	A6
3409	B7
3411	C7
3415	C7
3416	C7
3417	B7
3418	B5
3423	B6
3425	B5
3426	B5
3431	A6
3435	A5
3436	A5
3449	C7
3450	A8
3451	A8
3460	A8
3461	A8
3462	B7
3463	B7
3464	B7
3465	B7
3469	A8
3476	A5
3478	B5
3479	B5
3480	B5
3488	B5
3492	C6
3493	B5
3495	A5
3498	B8
3499	B8
3500	A4
3501	A3
3502	C5
3503	C5
3505	C3
3507	D4
3508	C3
3509	A2
3511	C3
3513	B2
3514	C4
3515	C4
3516	B3
3518	B3
3520	D3
3521	A2
3526	C4
3533	D3
3537	A3
3540	D3
3541	C4
3542	D4
3543	C3
3545	C3
3546	C3
3548	B4
3550	B3
3551	B4
3554	B4
3559	B4
3562	A3
3620	B8
3621	B8
3622	B8
3623	B8
3624	A8
3625	B8
3626	B8
3628	C7
3634	B8
3635	B7
3641	C8
3642	B8
3645	A5
3648	B8
3661	B8
3663	B8
3681	E1
3687	E1
3689	A7
3716	C5
3720	C5
3721	C5
3722	C5
3725	C5
3726	C5
3754	D6
3760	D6
3904	D7
3941	E8
3967	D8
3968	D8
3971	D8
3972	D8
3973	D8
3974	D8
3975	D8
3979	D8
3983	D8
3985	D8
3986	C8
3987	C8
3989	C8
3993	C8
5100	D2
5101	B2
5102	C1
5103	D2
5104	C2
5105	D2
5108	B2
5109	B2
5110	D1
5111	D2
5112	D2
5113	C2
5130	E2
5131	C2
5400	B5
5401	A6
5402	A6
5410	C7
5411	B7
5421	A6
5422	A5
5423	B5
5424	A5
5425	B5
5426	B6
5430	A7
5461	A8
5463	B8
5465	B7
5466	A7
5467	B5
5469	A6
5502	A4
5503	A3
5504	A3
5505	C3
5506	D4
5507	E4
5511	A4
5512	D4
5514	E4
5515	A3
5516	A4
5517	C3
5518	C4
5520	C3
5620	A8
5621	C8
5750	C6
5901	E7
5902	E2
5903	E1
5904	E7
6103	C2
6105	C2
6106	B1
6107	D3
6109	B2
6110	D1
6111	D2
6113	D2
6114	C2
6120	D1
6121	D1
6122	D1
6130	E2
6147	B2
6148	D2
6400	A7
6405	A6
6408	C7
6421	C6
6422	C6
6423	B6
6434	B5
6435	B5
6460	A8
6462	B8
6463	B8
6464	B7
6465	B7
6480	B6
6505	C3
6510	B3
6514	B4
6515	C4
6519	C3
6520	C3
6525	B4
6530	C3
6534	C3
6535	E3
6539	E3
6619	A8
6620	B8
6621	B8
6622	B8
6900	A1
7100	C1
7101	B2
7102	C2
7103	D1
7104	D1
7105	B1
7131	E2
7141	E3
7408	C6
7421	C7
7440	C7
7480	C5
7482	C6
7483	C6
7502	C3
7503	C4
7504	C3
7506	D3
7507	D3
7508	B4
7528	B2
7529	D3
7613	B8
7620	B8
7680	E1
7682	E1
7701	D5
7910	E5
7911	E8
7912	E7
9101	B2
9102	E3
9112	D2
9114	C2
9117	D2
9118	E2
9119	E2
9120	E2
9121	E3
9122	E2
9123	C1
9124	D2
9125	E2
9126	E3
9127	C2
9223	E6
9224	E6
9227	E5
9250	D6
9260	E8
9292	E5
9401	A6
9402	A4
9403	B4
9404	B4
9405	C7
9406	A6
9408	B8
9409	A8
9410	A7
9411	A8
9412	C7
9413	C7
9414	C7
9415	C7
9423	B6
9425	B5
9426	B6
9484	A8
9501	A2
9502	A2
9503	A4
9504	A4
9507	A3
9508	C4
9509	B4
9510	B3
9511	B3
9513	A4
9516	A3
9517	C3
9518	B3
9519	B3
9551	A4
9552	D4
9554	B4
9556	C4
9557	D3
9558	D3
9563	C4
9564	B3
9565	A3
9566	C3
9570	D4
9571	C4
9572	E4
9620	B8
9622	B8
9623	B7
9650	B8
9652	A8
9655	A8
9656	A8
9658	B7
9659	A5
9660	A5
9661	A4
9663	A5
9664	B8
9665	B7
9666	B6
9667	B6
9669	C6
9670	B6
9671	A5
9674	A6
9675	A8
9678	A8
9700	C5
9701	D5
9702	D5
9703	D5
9704	C6
9705	D5
9706	D5
9707	D5
9708	C5
9709	D5
9710	D5
9711	D4
9712	D5
9713	D6
9714	D4
9715	E5
9716	C6
9717	C6
9718	D4
9719	E5
9722	C5
9901	E6
9902	E6
9903	E6
9906	E8
9907	E6
9909	E5
9910	D6
9911	D7
9912	D7
9913	D7
9914	D7
9915	D7
9916	D7
9917	D7
9918	C8
9919	D7
9920	D7
9921	D7
9922	D8
9923	D8
9924	D8
9925	D8
9926	D8
9929	E7
9930	E7
9931	E8
9932	E7
9933	D8
9934	E8
9935	E8
9936	E8
9937	E6
9938	E7
9939	E6
9940	E7
9942	E6
9943	E7
9944	E7
9945	E7
9946	E7
9947	E7
9948	D7
9949	D6
9950	E6
9951	E1
9952	E5
9953	E5
9954	E6
9955	E5
9956	E5
9957	A1
9958	A1
9959	E8
9961	D6
9963	E8
9964	E3
9965	E3
9967	E5
9968	D7
9969	D7
9971	E8
9972	E8
9973	E4
9974	E5
9975	E3
9976	A1
9977	D7
9980	E5
9982	E6
9996	E6

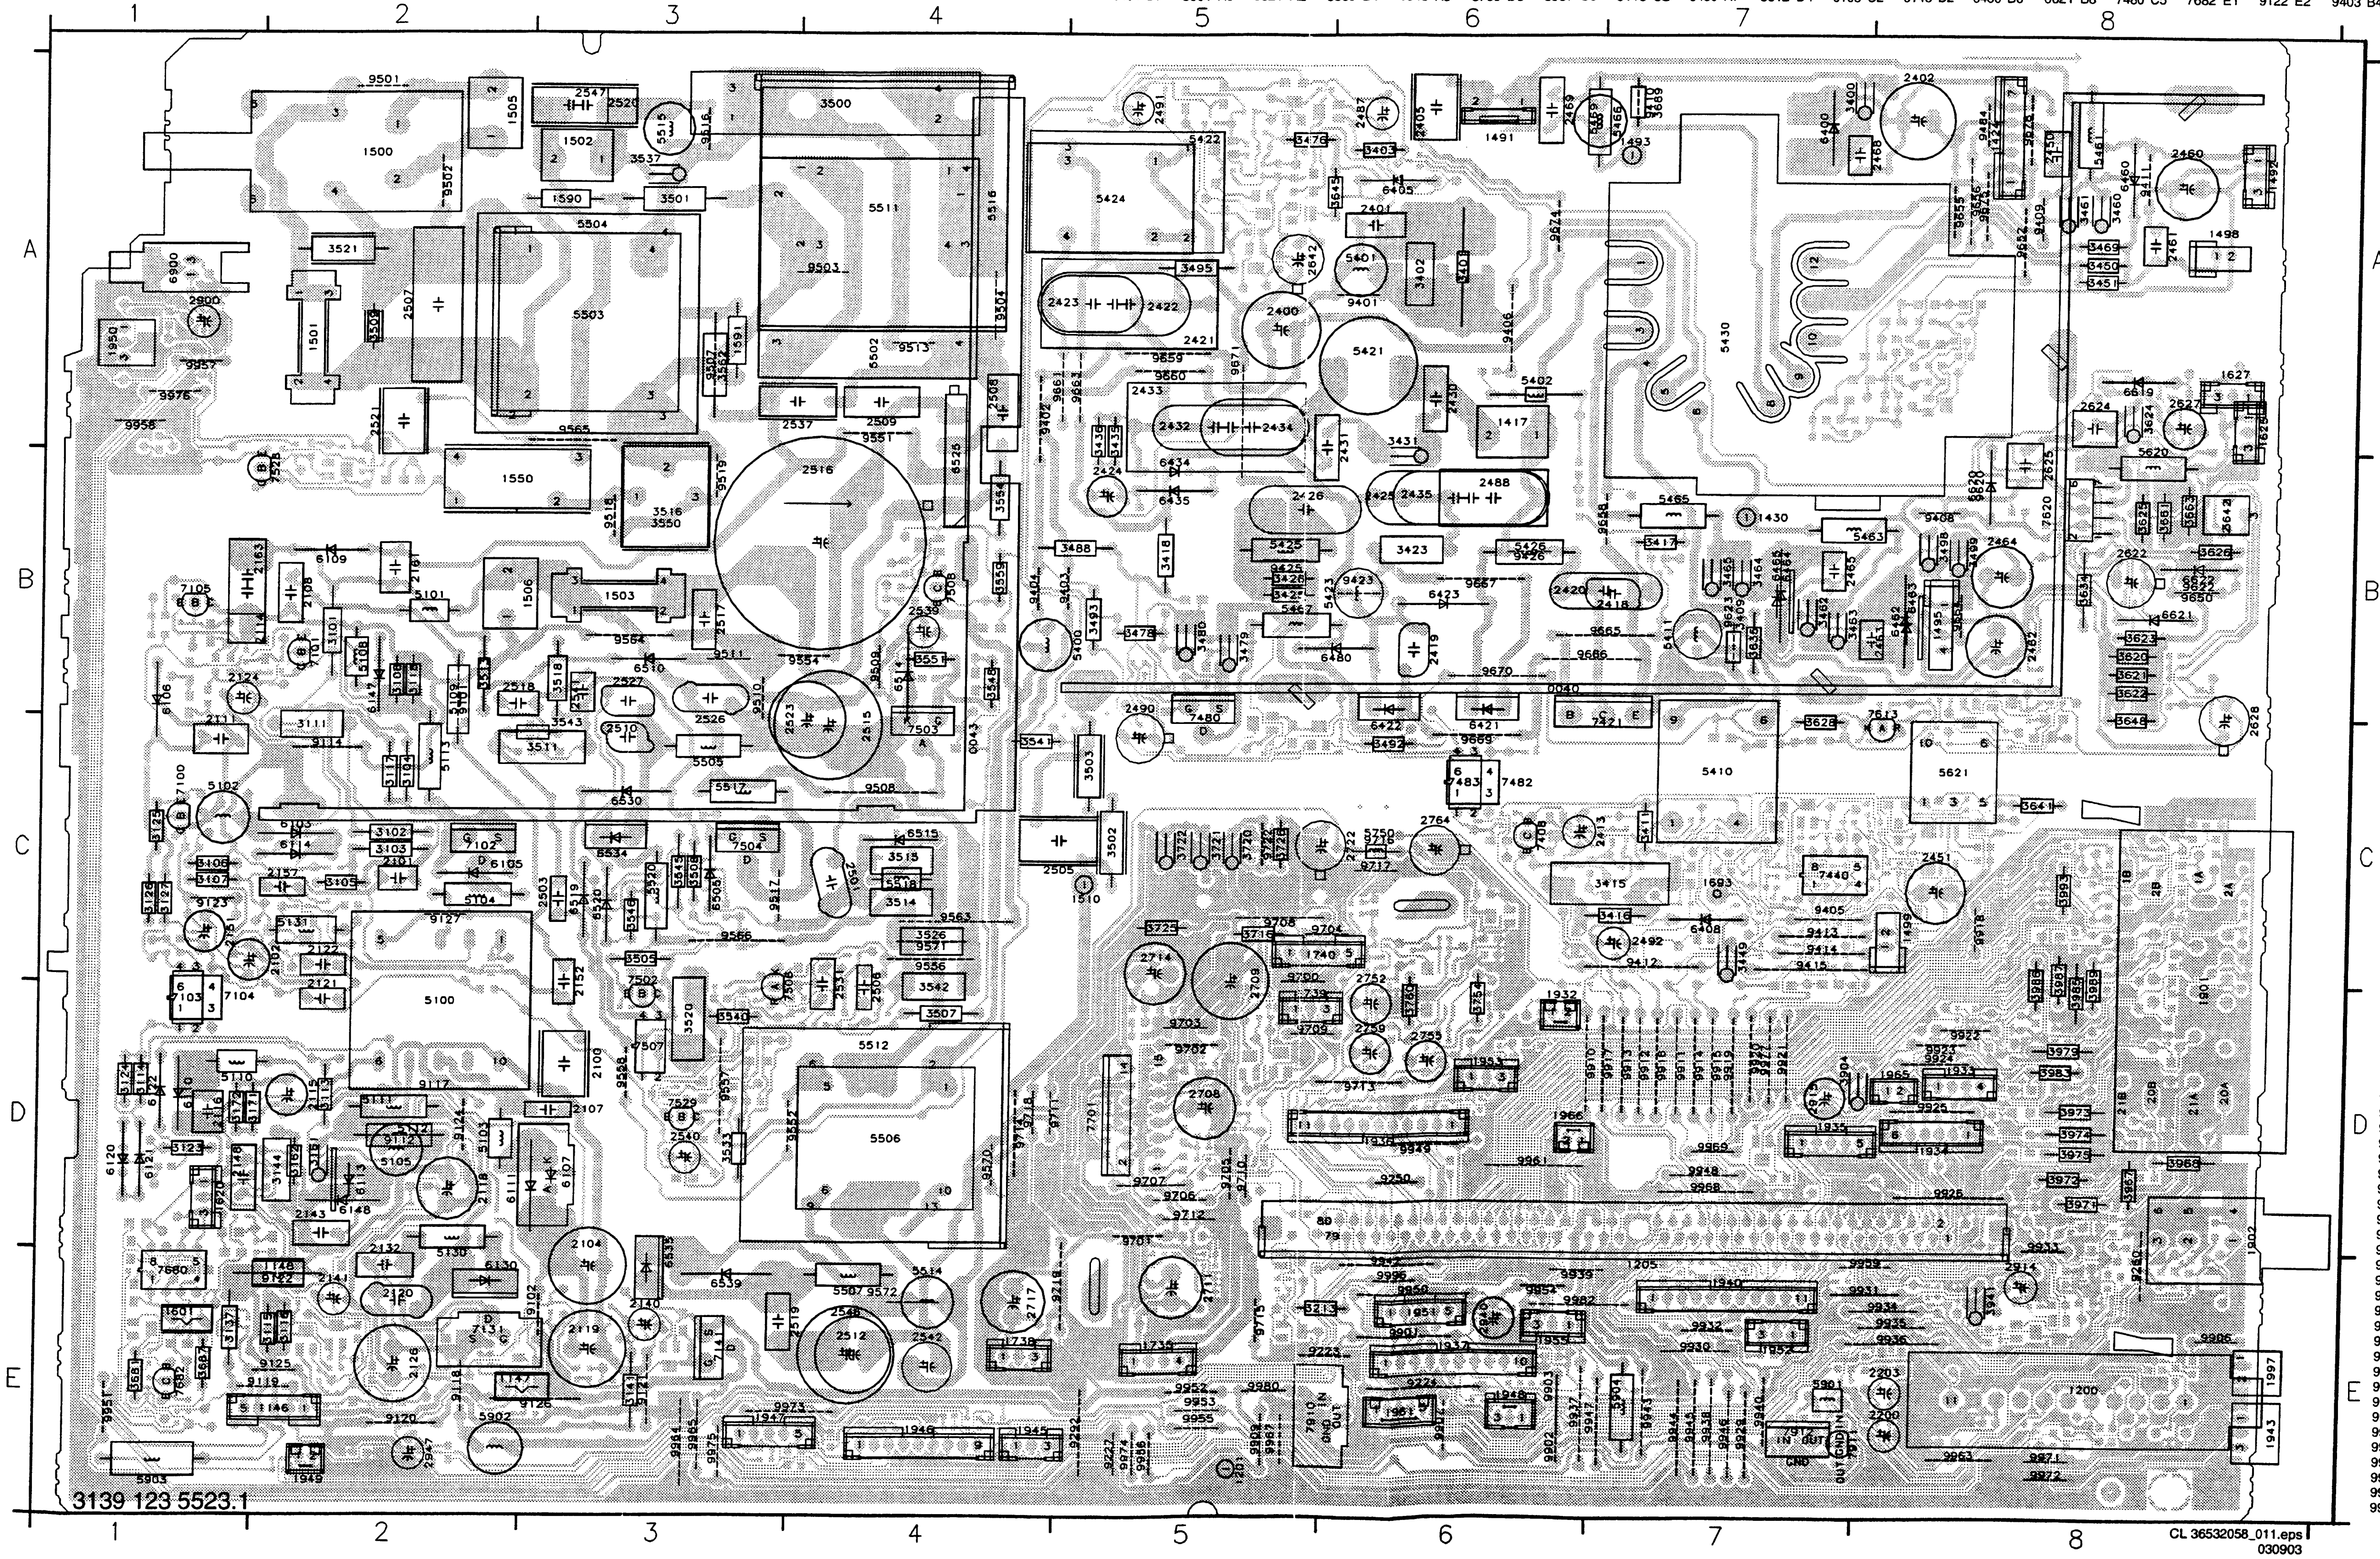

CL 36532058_011.eps
030903

Layout LSP (Overview Bottom Side)

0201 B5	1902 D7	1915 D6	1928 D5	1938 D4	1955 D3	1965 D2	1975 D2	2008 B7	2030 A6	2068 B7	2083 B7	2318 C4	2362 C3	2397 C5	3009 A7	3154 B7	3316 C4	3331 C4	3360 C3	3372 D3	3386 C4	3509 C5	4152 C7	6361 C2	6398 C5	7356 C5
0202 B5	1903 D7	1918 D6	1929 D5	1939 D4	1956 D3	1966 D2	1976 D2	2012 B5	2037 A5	2069 C7	2084 B7	2319 C4	2363 C3	2932 C5	3022 A5	3155 A7	3317 C4	3332 C4	3361 C3	3373 C3	3391 C5	3510 C5	4361 D3	6365 C3	7100 B6	7361 C2
0290 C2	1904 D6	1919 D6	1931 D5	1941 D4	1958 D3	1967 D2	1977 D2	2013 B6	2041 A7	2070 B7	2085 B7	2321 D4	2364 C3	2933 C5	3064 C7	3307 C3	3319 D4	3333 C4	3362 D3	3376 C3	3392 C5	3936 D6	4363 C2	6367 C3	7300 B3	7365 D3
0291 B2	1906 D6	1920 D5	1932 D5	1948 D3	1959 D3	1968 D2	1978 D2	2018 B6	2042 A7	2071 B7	2086 B7	2327 C4	2365 C3	2935 D5	3065 B7	3308 C4	3320 D4	3338 C4	3363 C3	3377 D3	3393 C5	3939 D6	4501 A2	6368 C3	7301 C3	7382 C4
1112 B5	1907 D6	1921 D5	1933 D5	1949 D3	1960 D3	1969 D2	1979 D1	2019 B5	2063 C7	2072 A7	2087 B7	2328 C4	2366 D3	2936 D5	3071 C7	3309 D3	3321 C4	3339 C4	3364 C3	3378 D3	3394 C5	4101 C6	5129 B5	6381 C5	7302 C4	7383 C5
1114 C6	1909 D6	1923 D5	1934 D5	1950 D3	1961 D3	1970 D2	1980 D1	2024 B6	2064 C7	2073 A7	2307 C3	2329 C4	2380 C5	3003 B5	3072 A7	3310 D4	3322 C4	3345 C6	3365 D3	3380 C5	3395 C5	4102 C6	5307 C4	6382 D5	7303 C4	7393 C5
1115 A7	1910 D6	1924 D5	1935 D5	1951 D3	1962 D3	1972 D2	2003 A5	2025 B5	2065 B7	2074 A7	2308 C4	2331 D4	2384 C5	3005 B5	3073 A7	3311 C3	3323 C4	3353 C5	3366 D3	3382 C4	3396 C5	4103 C6	5317 C4	6384 C5	7310 D3	7730 A2
1117 B7	1911 D6	1925 D5	1936 D4	1952 D3	1963 D2	1973 D2	2005 A6	2027 B6	2066 B7	2075 A7	2311 C4	2339 C4	2386 C4	3007 A5	3074 A7	3312 C3	3329 D4	3354 C5	3367 C3	3384 C5	3397 C5	4104 C6	5327 C4	6385 C4	7320 D4	7790 C2
1901 D7	1913 D6	1926 D5	1937 D4	1953 D3	1964 D2	1974 D2	2007 C7	2028 B5	2067 B7	2076 A7	2317 C4	2361 C3	2395 C5	3008 A7	3153 B7	3313 C3	3330 D4	3356 D5	3368 D3	3385 C5	3398 C5	4107 C6	6353 C5	6397 C5	7330 D4	

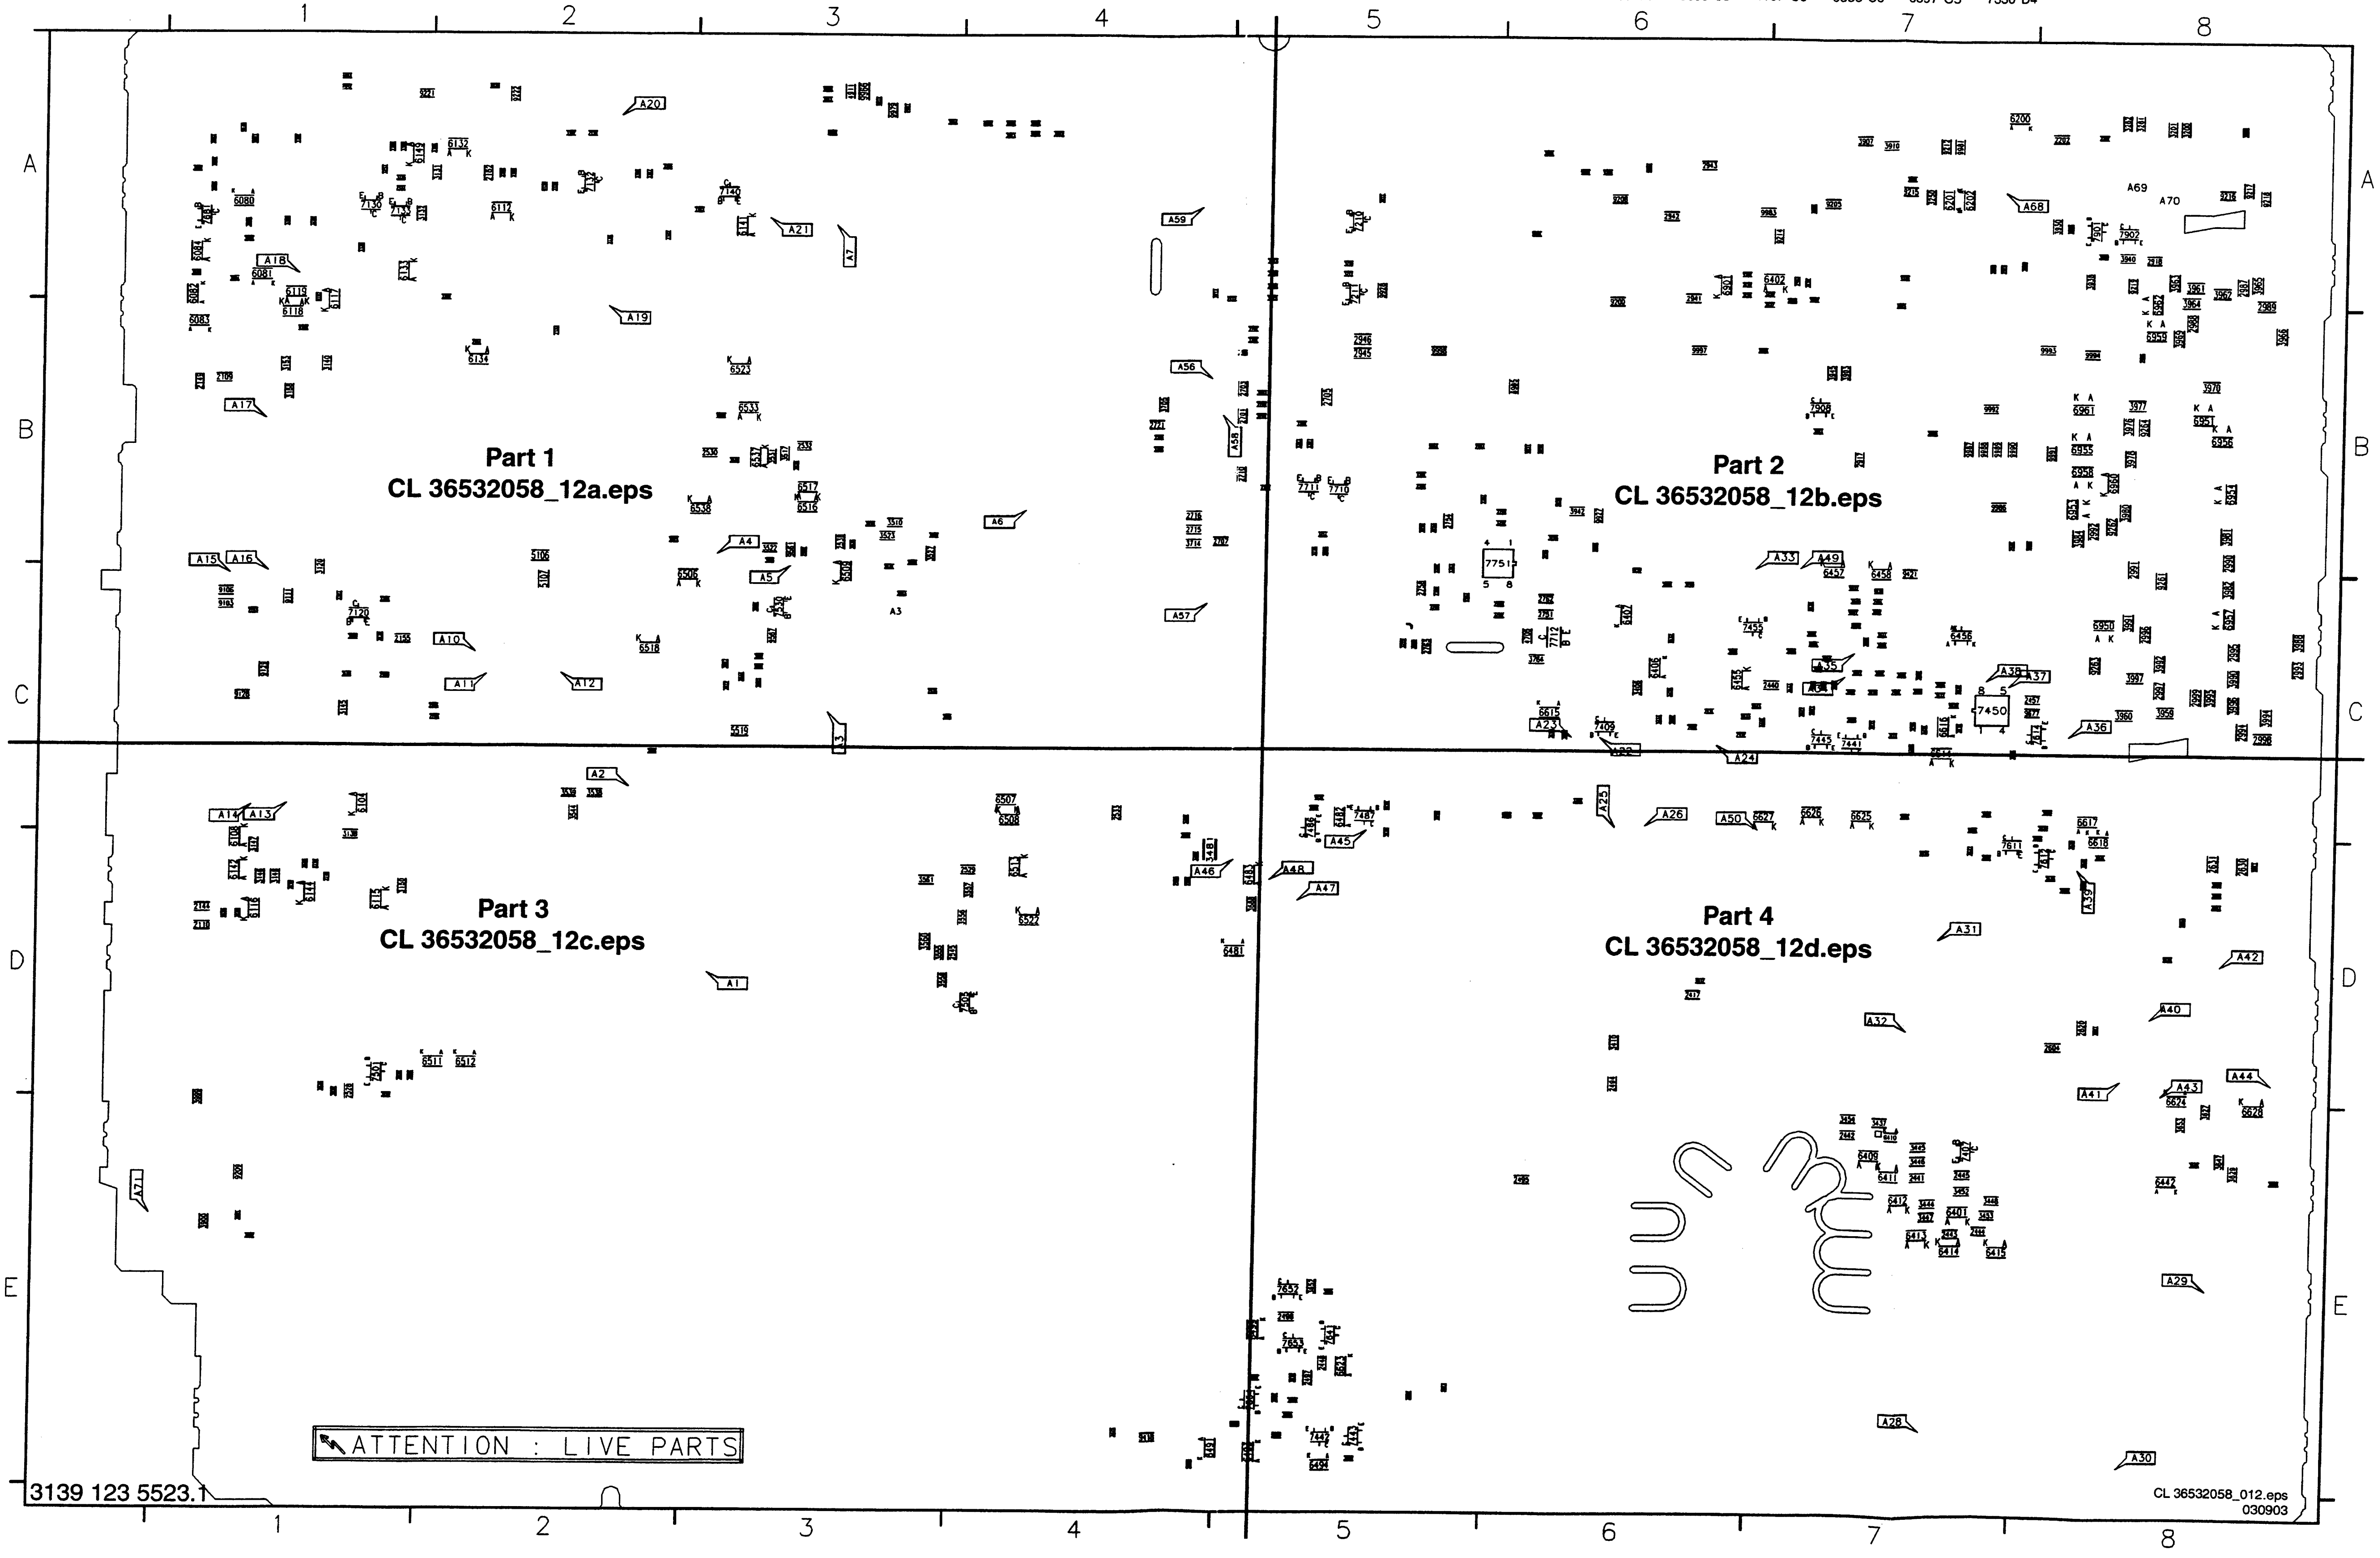

Layout LSP (Part 1 Bottom Side)

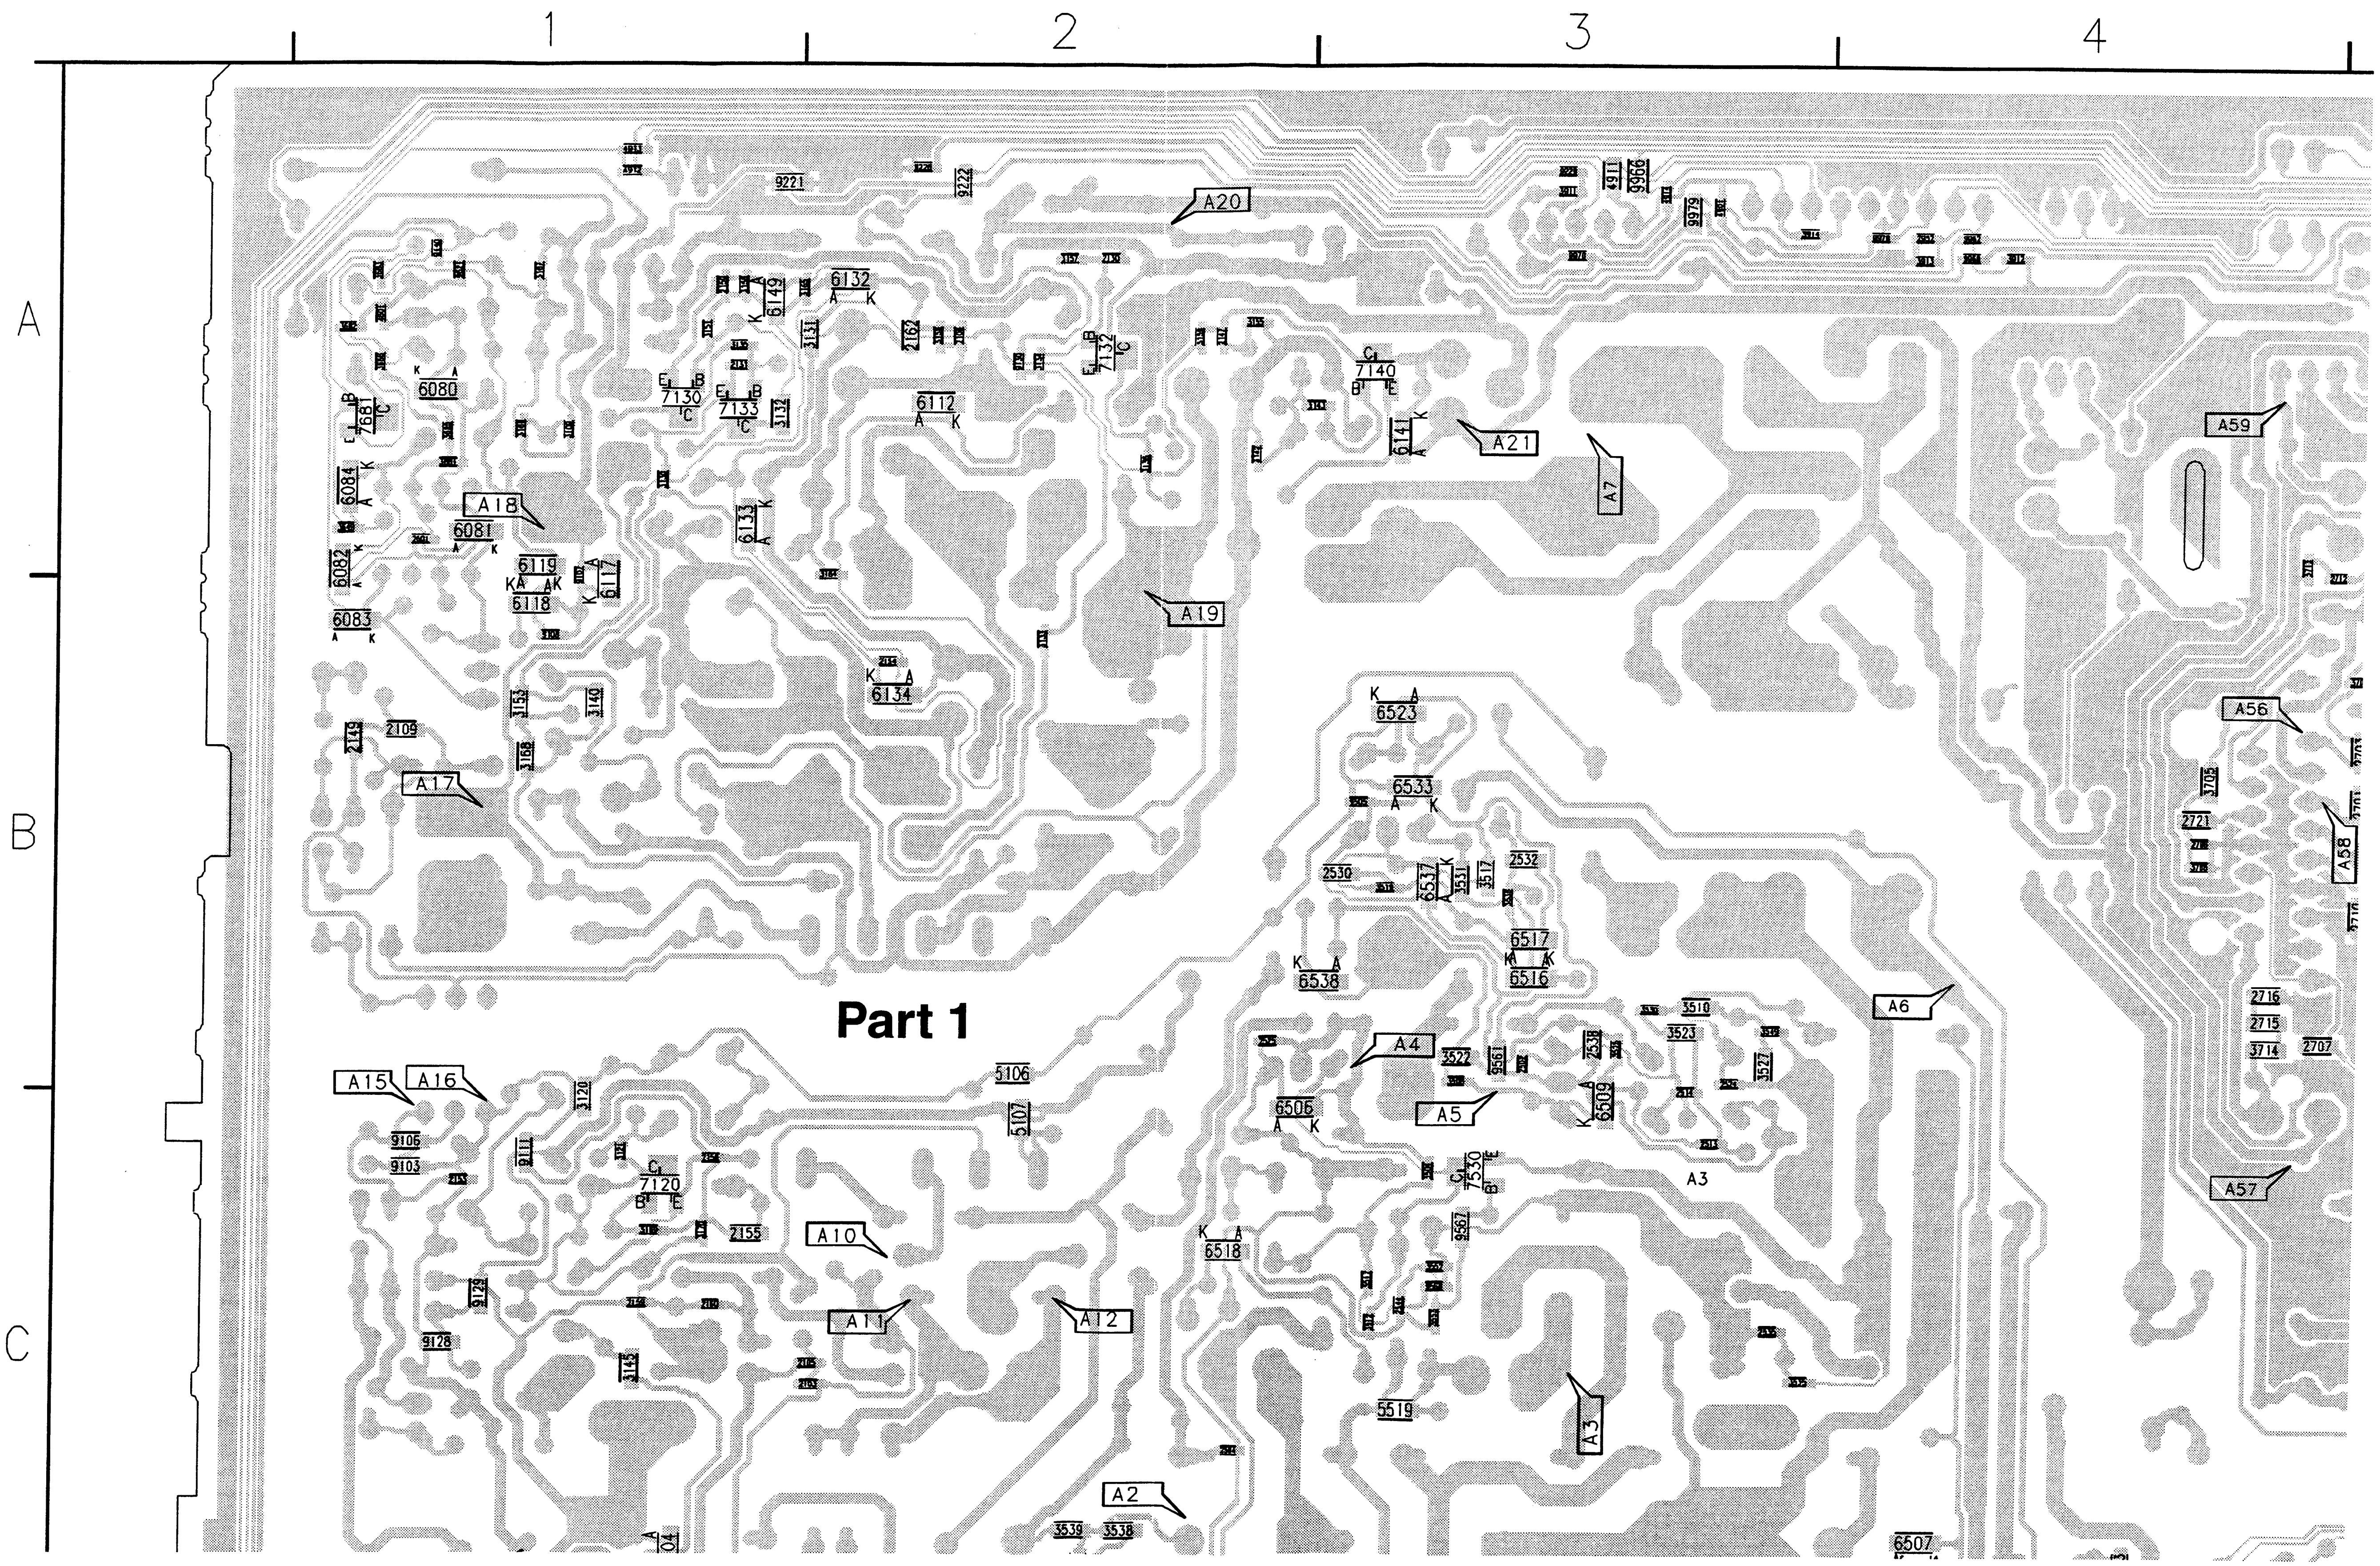
1
2
3
4
A
B
C
Part 1
A20
A21
A7
A59
A18
A19
A56
A58
A17
A6
A4
A5
A15
A16
A10
A11
A12
A57
A3
A2
9221
9222
6132
6149
7130
7133
6080
7681
6084
6081
6082
6083
6119
6117
6118
6112
7132
7140
6141
6133
6134
3140
3156
3158
2149
2109
6523
6533
2530
6537
2532
6517
6516
6538
3510
3523
3522
6509
6506
7530
5106
5107
3120
9106
9103
7120
2155
9129
9128
3145
6518
9567
5519
3539
3538
6507
3705
2721
2716
2715
3714
2707

CL 36532058_12a.eps
210803

Layout LSP (Part 2 Bottom Side)

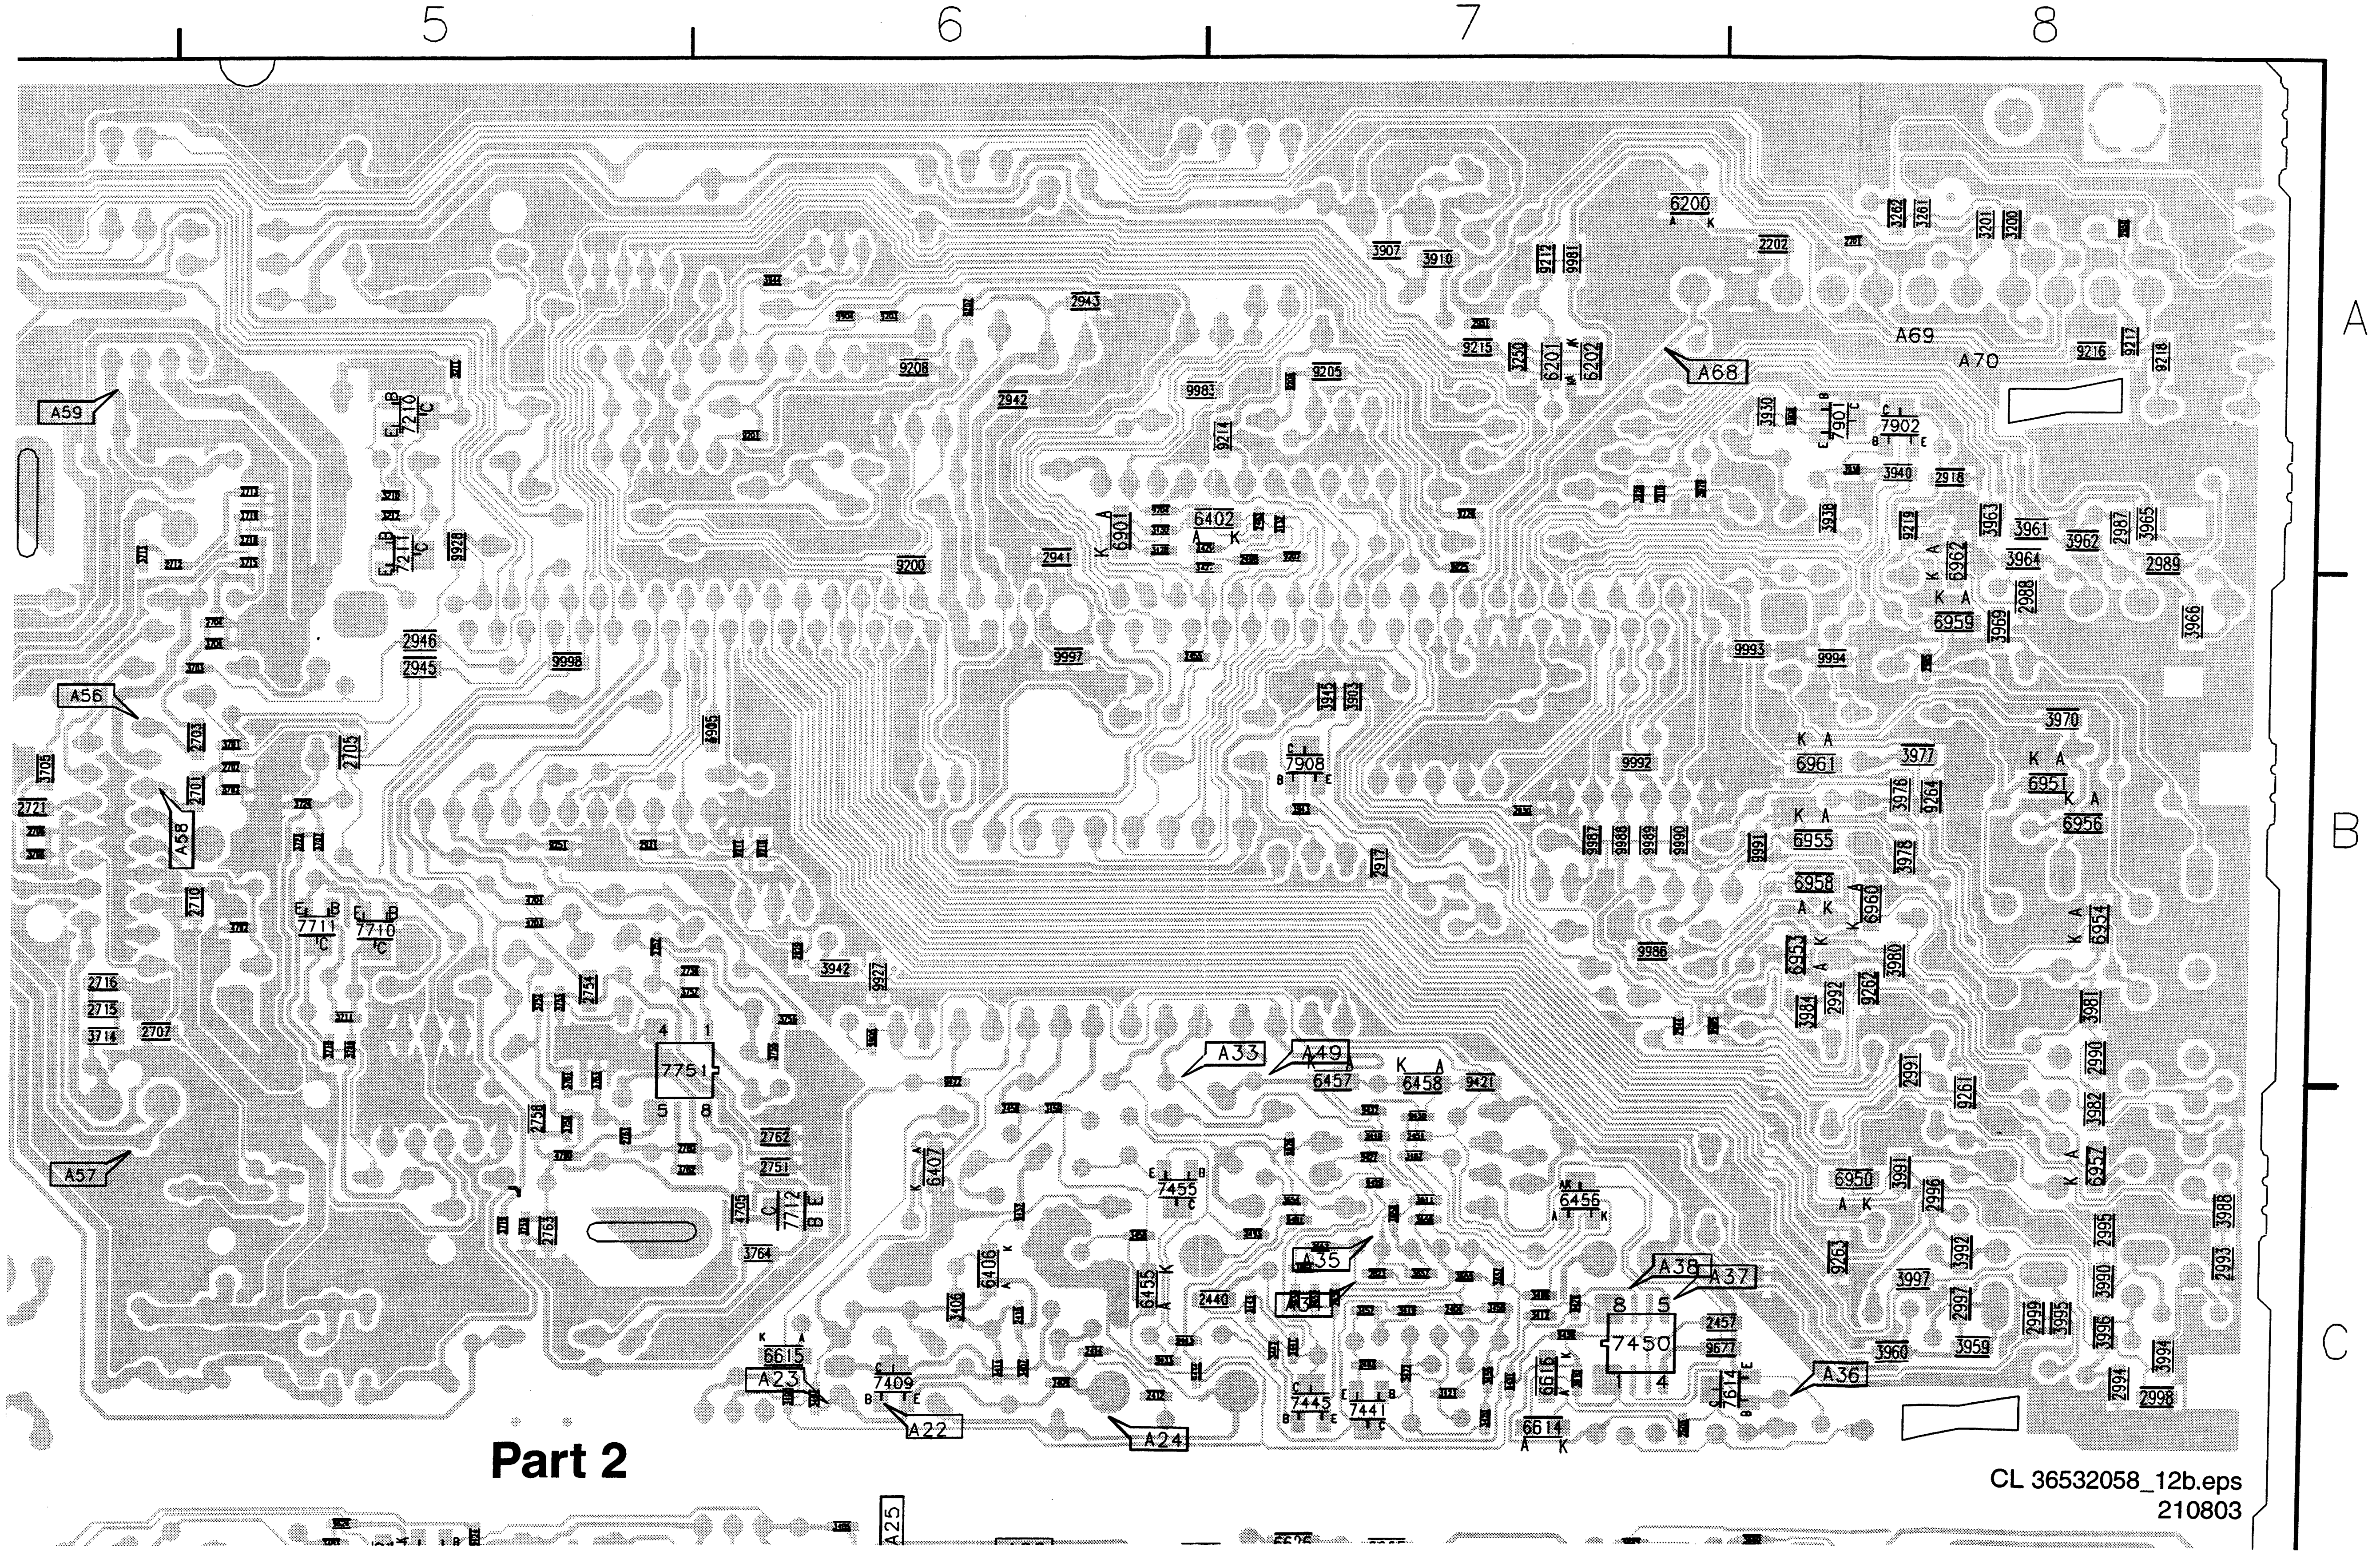
5
6
7
8
A
B
C
Part 2
A59
A56
A58
A57
A68
A69
A70
A33
A49
A35
A34
A38
A37
A36
A22
A23
A24
A25
6200
2202
3907
3910
9212
9981
9215
6201
6202
9216
9217
9218
2943
9208
2942
9205
9983
9214
7210
7211
3928
7901
7902
3930
3940
2918
6901
6402
2941
9200
3938
9219
6962
3963
3961
3962
2987
3965
3964
2989
6959
3969
2988
3966
2946
2945
9998
9997
9993
9994
3970
3705
2721
2703
2701
2705
3985
7908
9992
6961
3977
6951
3976
9264
6956
6955
3978
9982
9988
9989
9990
3991
6958
6960
2917
2710
7711
7710
3986
6953
3984
2992
9262
3980
6954
3942
3927
2716
2715
3714
2707
7751
6457
6458
9421
3981
2990
2991
9261
3982
2758
2762
2751
6407
7455
6456
6950
3991
2996
6957
2708
7712
3764
6406
6455
2440
3406
9263
3997
3992
2997
3995
3990
3996
2993
3988
7450
2457
9677
6616
7614
3960
3959
2999
3994
2994
2998
6615
7409
7445
7441
6614

CL 36532058_12b.eps
210803

Layout LSP (Part 3 Bottom Side)

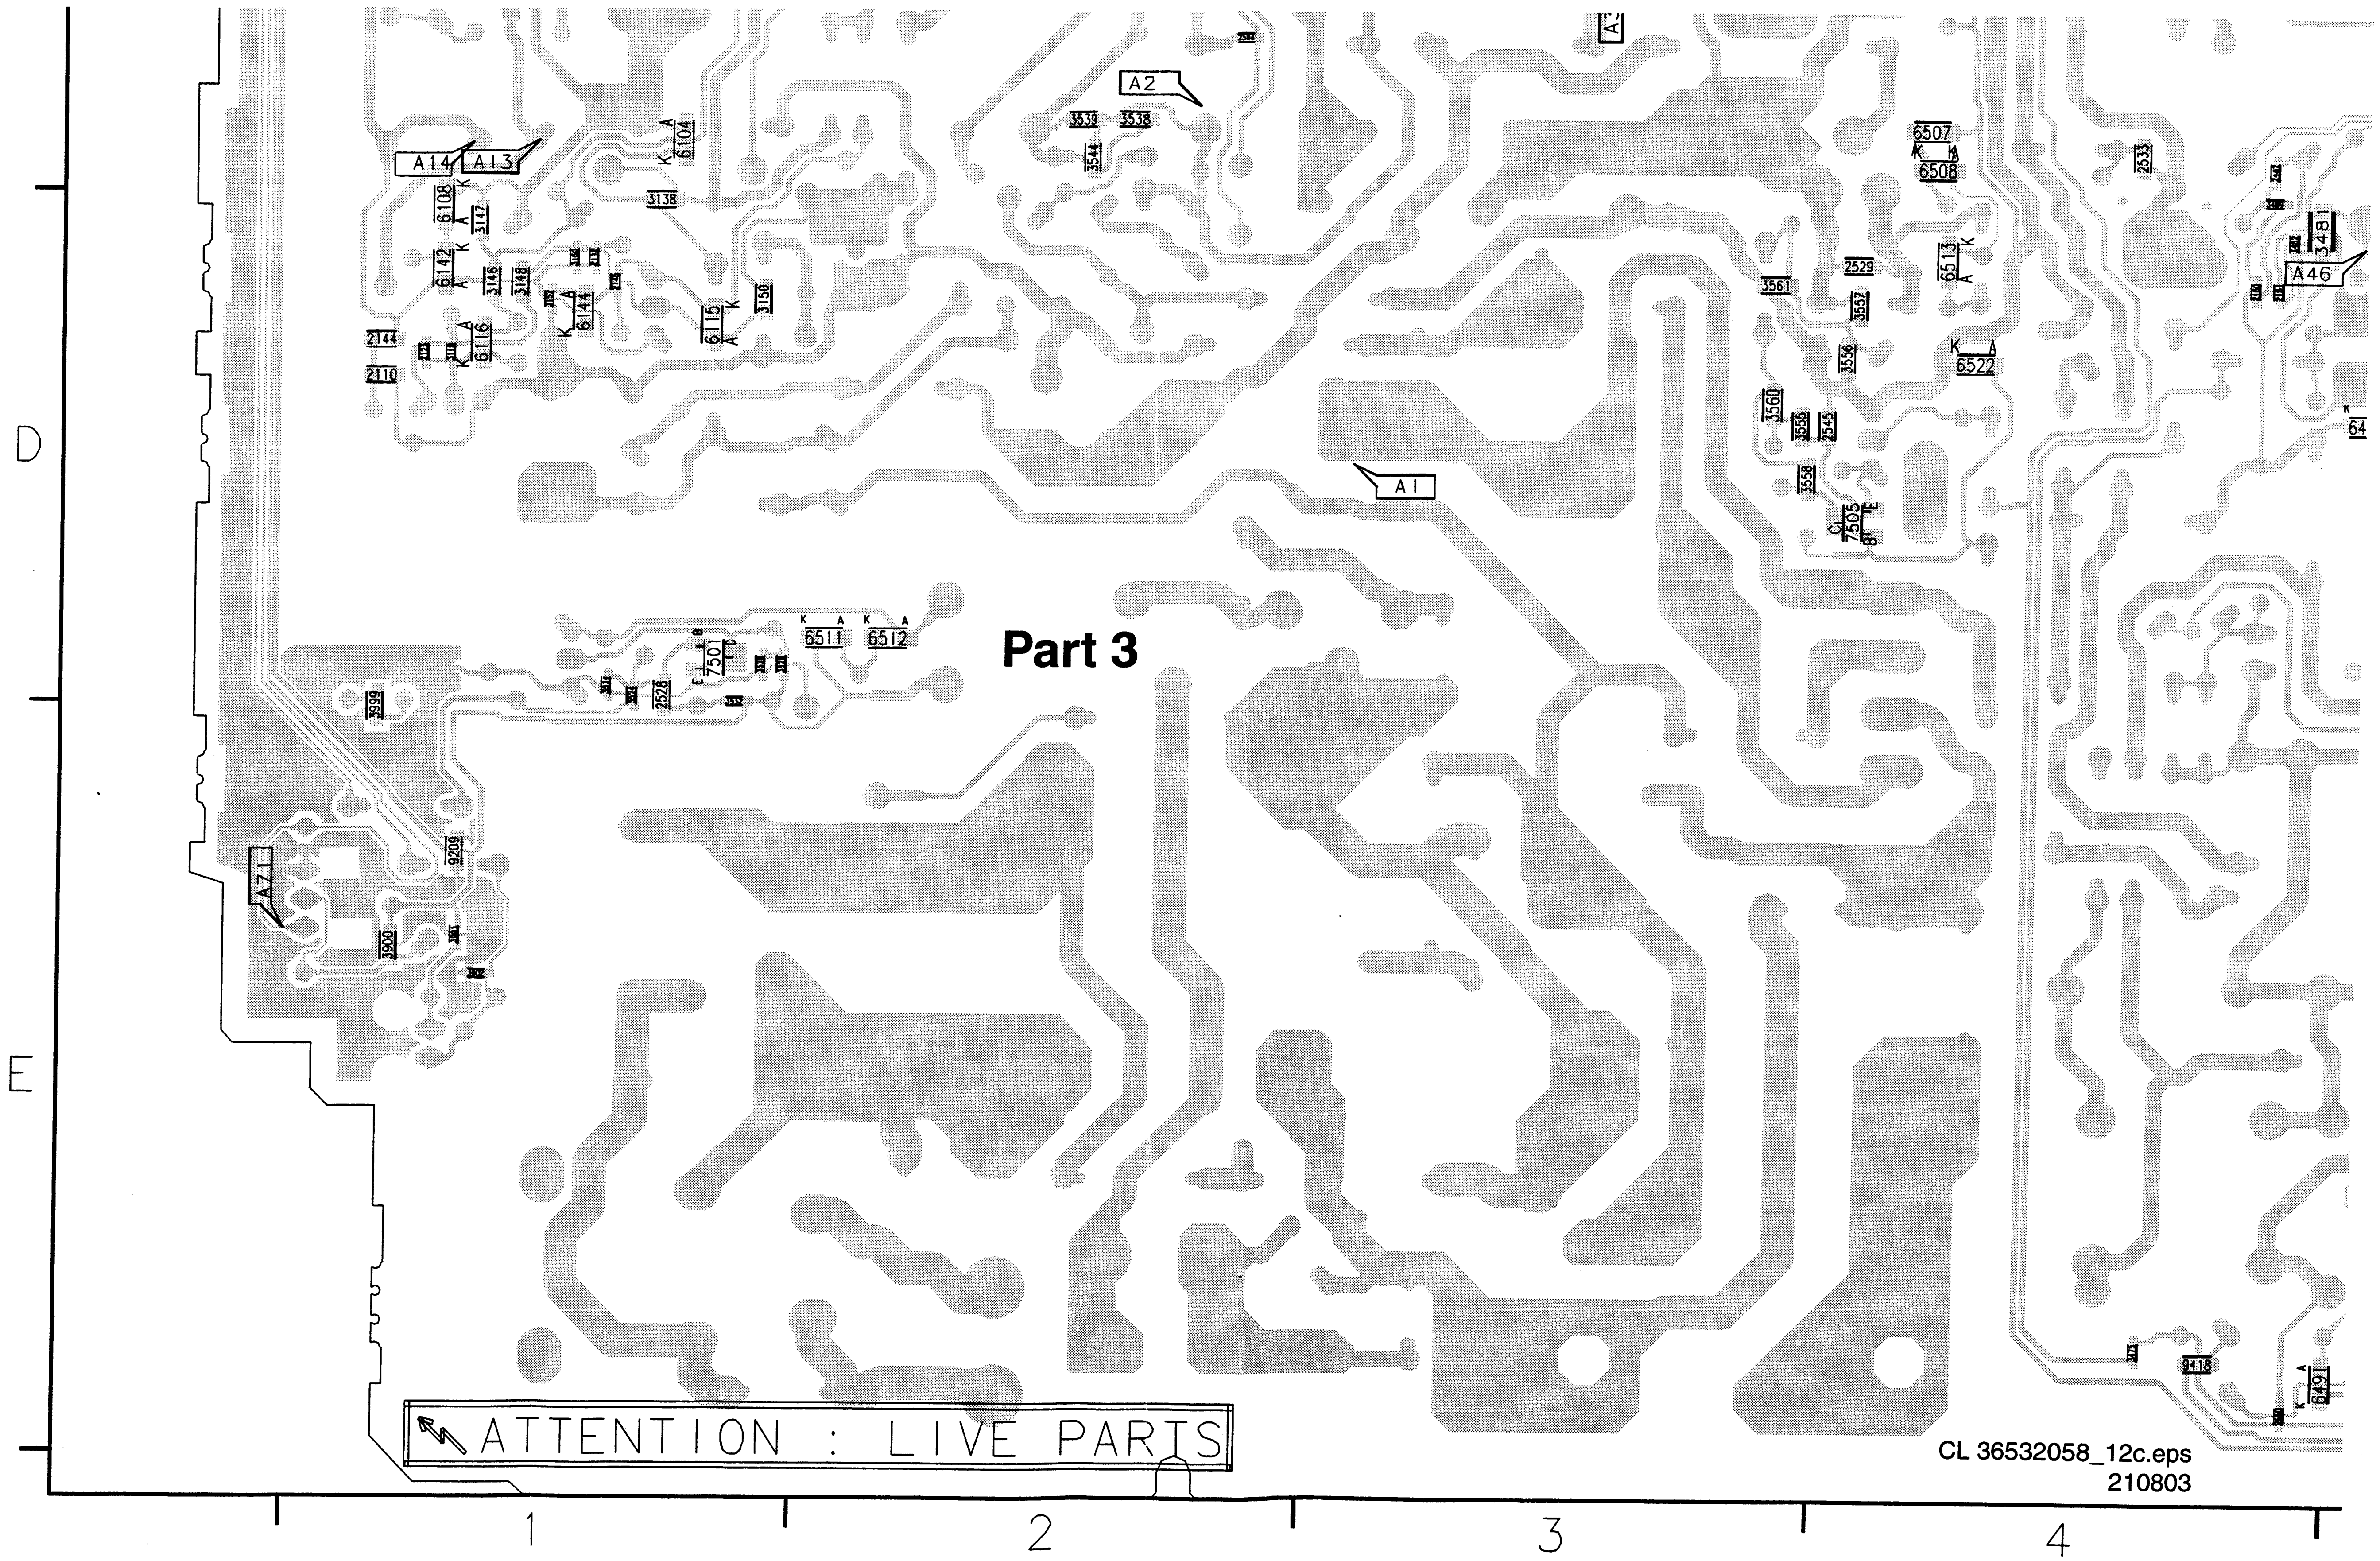
A14
A13
6108
6104
3138
3147
6142
3146
3148
6144
6115
3150
6116
2144
2110
A2
3539
3538
3544
6507
6508
2533
3561
2529
3557
6513
3556
6522
3560
3555
2545
3558
7505
A1
A46
3481
6511
6512
7501
2528
3999
9209
A71
3900
Part 3
9418
6491
ATTENTION : LIVE PARTS
D
E
1
2
3
4

CL 36532058_12c.eps
210803

Layout LSP (Part 4 Bottom Side)

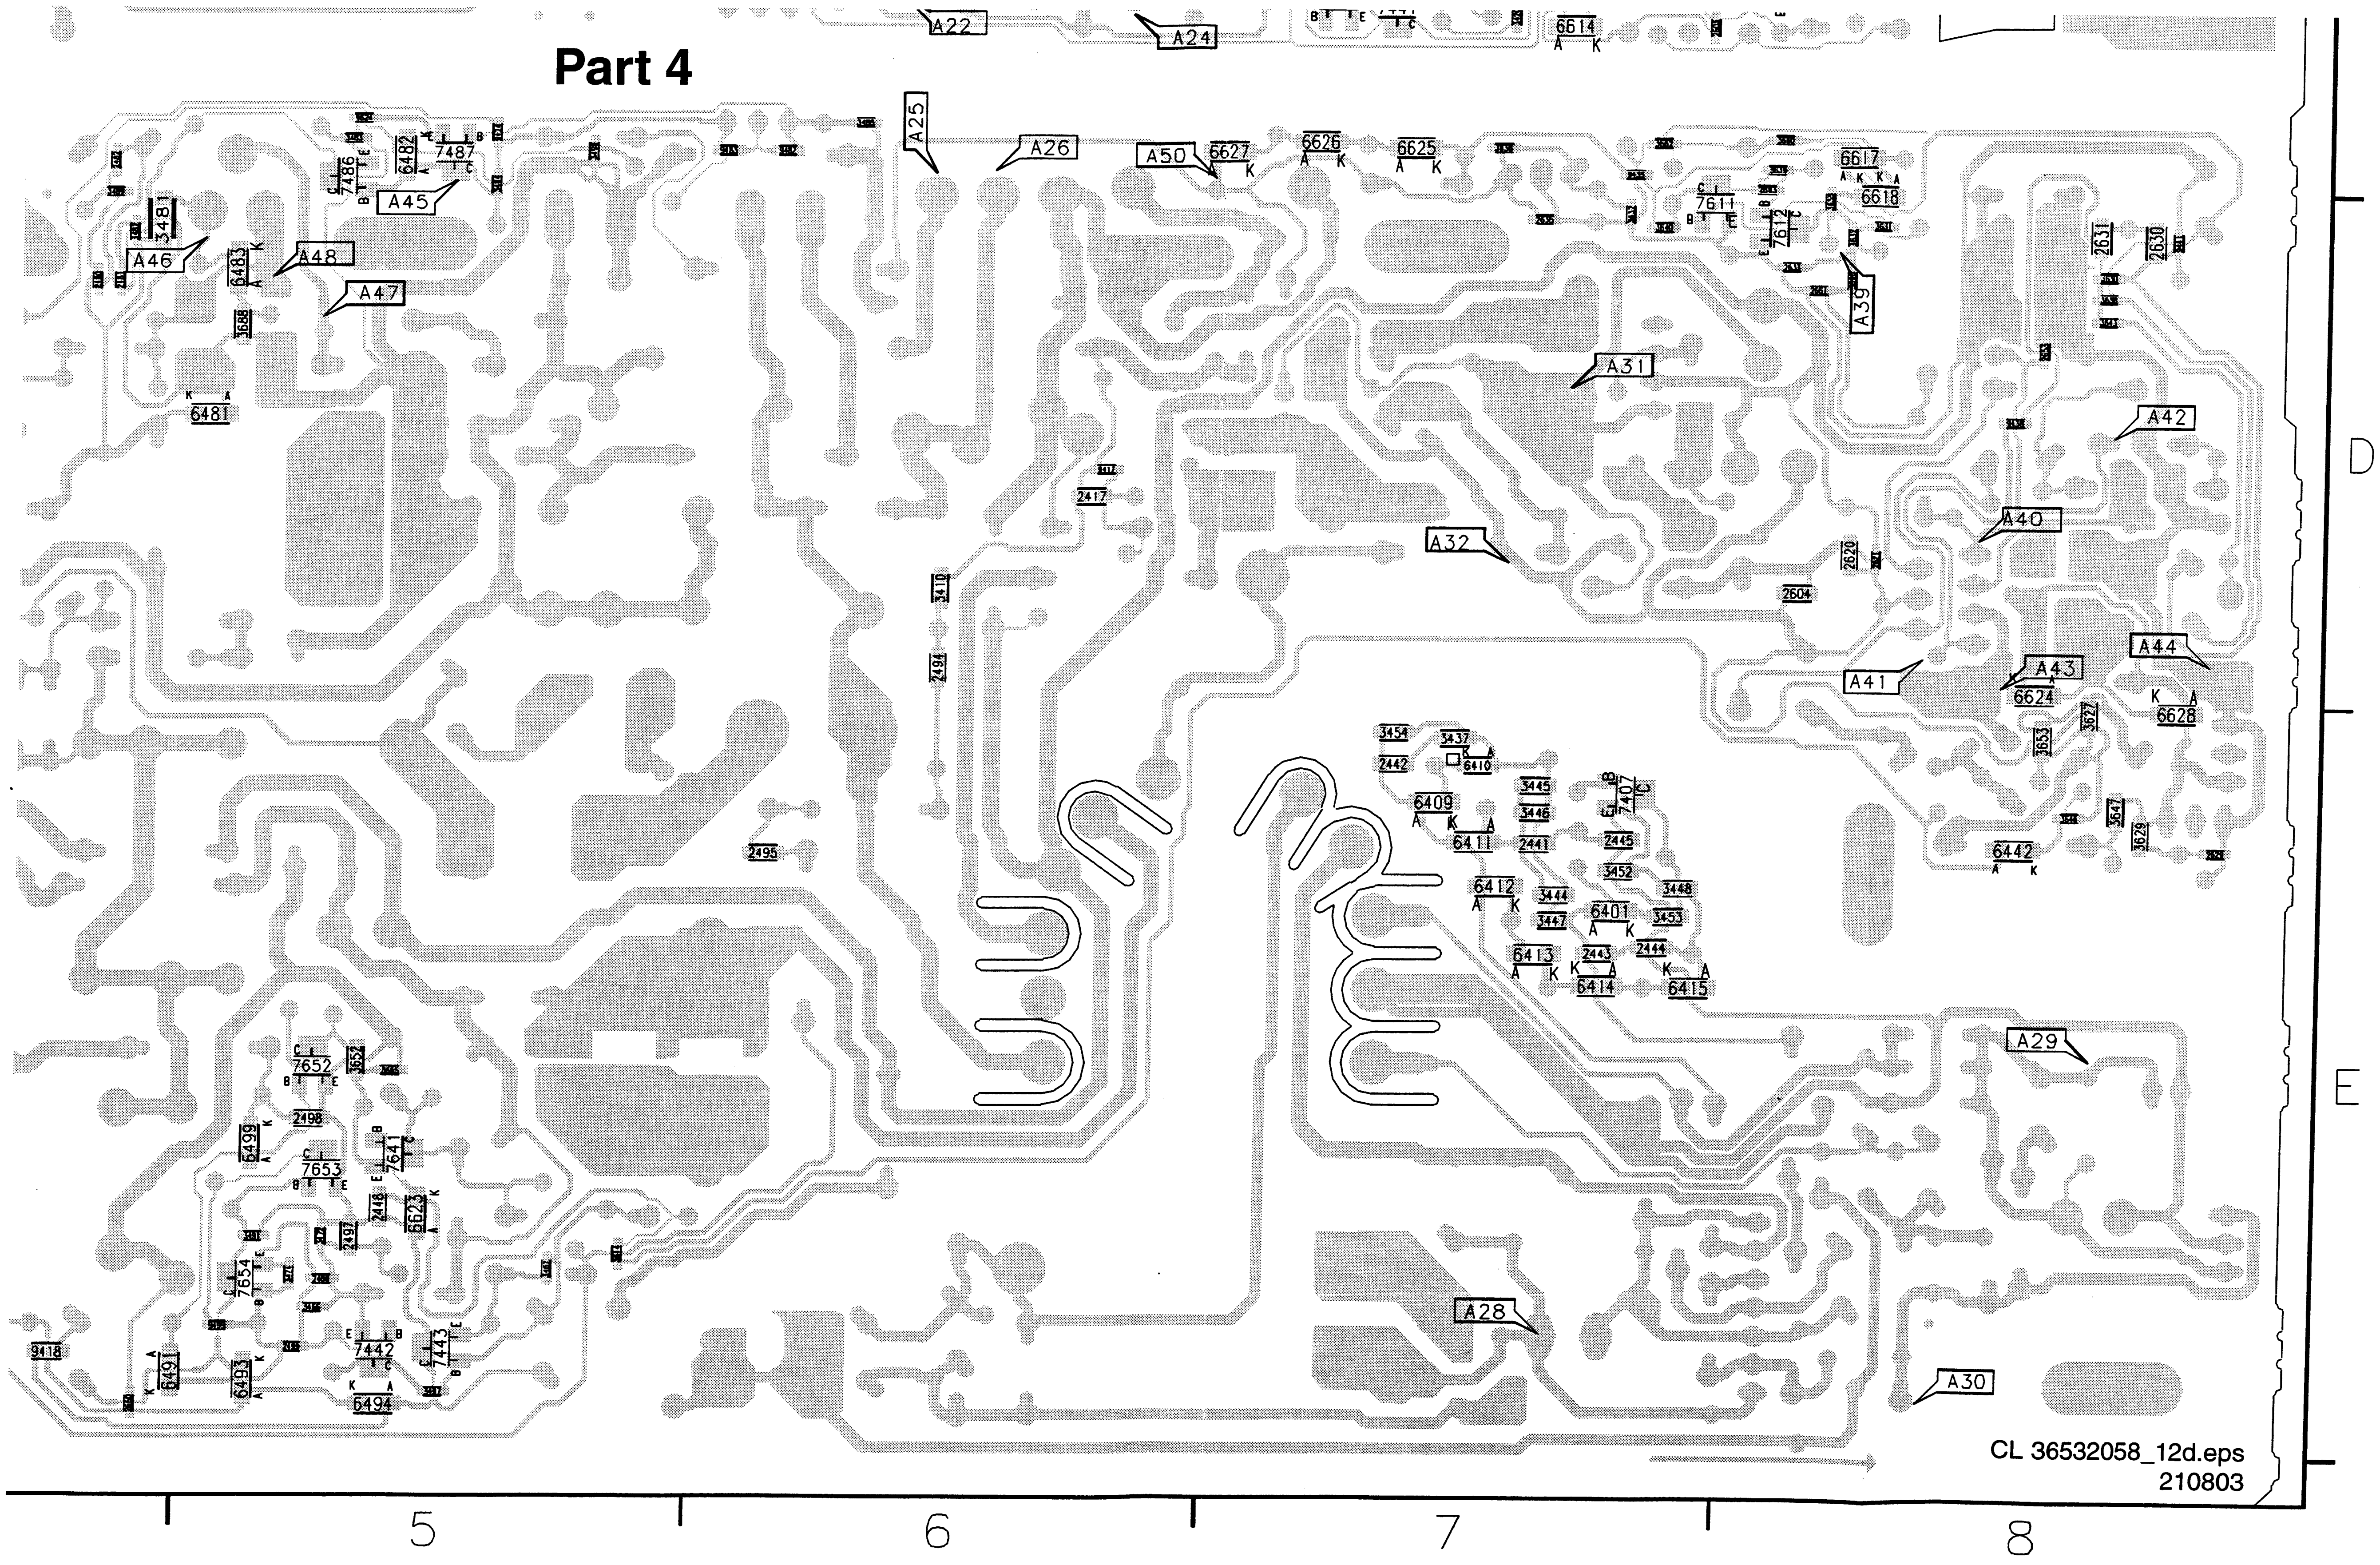
Part 4
A22
A24
6614
A25
A26
A50
6627
6626
6625
6617
6618
7611
7612
2631
2630
A39
7486
6482
7487
A45
3481
A46
6483
A48
A47
3688
6481
A31
A42
A40
A32
2417
3410
2494
2620
2604
A41
A43
6624
A44
6628
3627
3653
3454
3437
2442
6410
3445
7407
6409
3446
6411
2441
2445
3452
6412
3444
3448
6401
3447
3453
6413
2443
2444
6414
6415
3647
3629
6442
2495
7652
3652
2498
6499
7653
7641
2416
6623
2497
7654
9418
6491
6493
7442
7443
6494
A29
A28
A30
D
E
5
6
7
8

CL 36532058_12d.eps
210803

Small Signal Board: If & SAW Filter

1112-A	A4
1112-B	A10
1113-A	B4
1113-B	A10
1114-A	B5
1114-B	A10
1115	D10
2101	C1
2102	A1
2103	D2
2115	D5
2119	B2
2126	A6
2127	A6
2128	C6
2130	E7
2132	B10
2133	B1
2134	A2
2135	B1
2136	C10
2137	B2
2138	A2
3101	C2
3102	C4
3103	B3
3104	B3
3105	D3
3106	D1
3112	D3
3116	D6
3131	D7
3132	D7
3133	E7
3134	B1
3135	B9
3137	C10
3138	A6
4101	A3
4102	A3
4103	B3
4104	B3
4107	A3
4108	A3
5101	C1
5102	A1
5112	B2
5128	B6
5129	B6
5134	A2
5135	A2
6101	C2
6102	C4
7100-C	A6
7101	D2
7104	D4
7131	B10
F114	E10
F115	D10
F116	E10
F132	E10
F134	D6
F135	A9
F137	D3
F138	B4
F139	A8
I101	B1
I102	A4
I103	A4
I104	B6
I105	B6
I106	C6
I107	C9
I108	E6

B1 IF & SAW FILTER

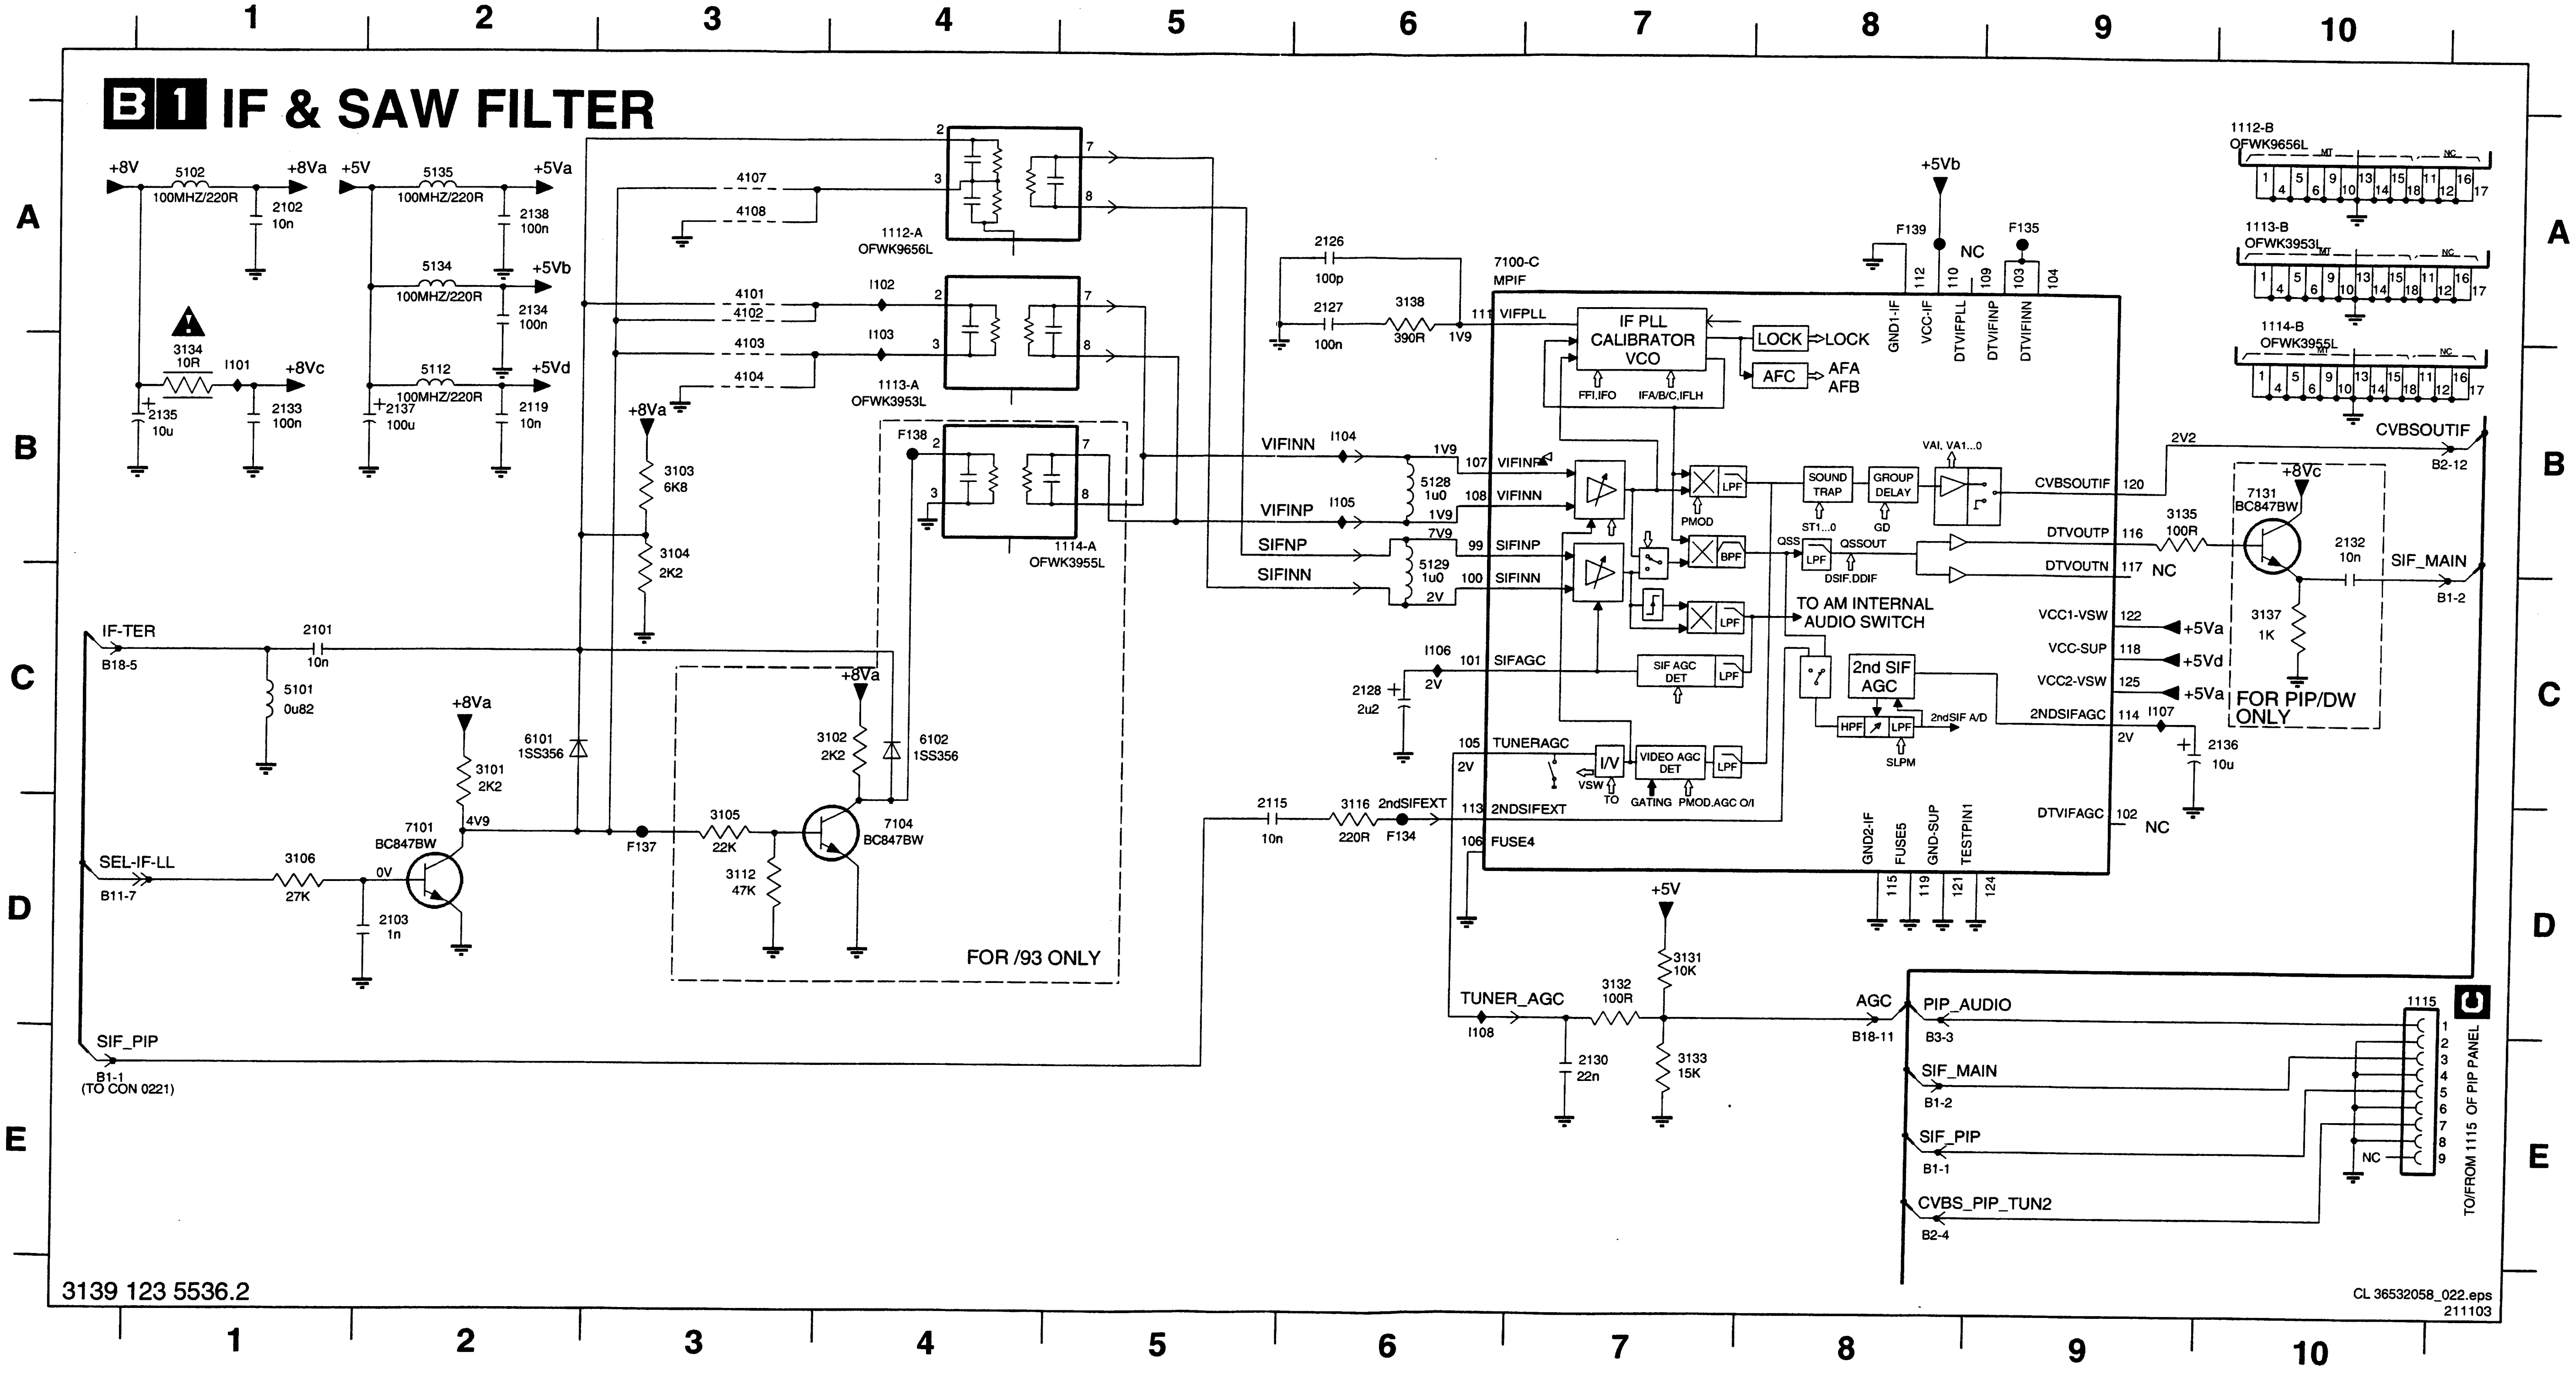
1 2 3 4 5 6 7 8 9 10
A B C D E
+8V
5102
100MHZ/220R
+8Va
2102
10n
+5V
5135
100MHZ/220R
+5Va
2138
100n
5134
100MHZ/220R
+5Vb
2134
100n
3134
10R
I101
+8Vc
2135
10u
2133
100n
5112
100MHZ/220R
+5Vd
2137
100u
2119
10n
4107
4108
1112-A
OFWK9656L
4101
4102
I102
4103
I103
4104
1113-A
OFWK3953L
+8Va
3103
6K8
3104
2K2
F138
1114-A
OFWK3955L
IF-TER
B18-5
2101
10n
5101
0u82
+8Va
3101
2K2
6101
1SS356
6102
1SS356
3102
2K2
7101
BC847BW
4V9
SEL-IF-LL
B11-7
3106
27K
0V
2103
1n
F137
3105
22K
3112
47K
7104
BC847BW
FOR /93 ONLY
SIF_PIP
B1-1
(TO CON 0221)
VIFINN
I104
VIFINP
I105
SIFNP
SIFINN
5128
1u0
5129
1u0
1V9
7V9
2V
2126
100p
2127
100n
3138
390R
1V9
7100-C
MPIF
111 VIFPLL
IF PLL CALIBRATOR VCO
FFI,IFO
IFA/B/C,IFLH
LOCK
LOCK
AFC
AFA
AFB
107 VIFINP
108 VIFINN
99 SIFINP
100 SIFINN
PMOD
LPF
BPF
SOUND TRAP
GROUP DELAY
ST1...0
GD
VAI, VA1...0
QSS
QSSOUT
DSIF,DDIF
TO AM INTERNAL AUDIO SWITCH
I106
101 SIFAGC
2128
2u2
2V
SIF AGC DET
2nd SIF AGC
HPF
2ndSIF A/D
SLPM
105 TUNERAGC
I/V
VSW
TO
VIDEO AGC DET
GATING
PMOD,AGC O/I
2115
10n
3116
220R
2ndSIFEXT
F134
113 2NDSIFEXT
106 FUSE4
+5Vb
F139
F135
NC
GND1-IF
VCC-IF
DTVIFPLL
DTVIFINP
DTVIFINN
112 110 109 103 104
CVBSOUTIF 120
DTVOUTP 116
DTVOUTN 117 NC
VCC1-VSW 122
VCC-SUP 118
VCC2-VSW 125
2NDSIFAGC 114
DTVIFAGC 102 NC
+5Va
+5Vd
+5Va
I107
2V
2136
10u
GND2-IF
FUSE5
GND-SUP
TESTPIN1
115 119 121 124
2V2
3135
100R
7131
BC847BW
+8Vc
2132
10n
3137
1K
FOR PIP/DW ONLY
CVBSOUTIF
B2-12
SIF_MAIN
B1-2
1112-B
OFWK9656L
1113-B
OFWK3953L
1114-B
OFWK3955L
MT
NC
+5V
3131
10K
TUNER_AGC
I108
3132
100R
2130
22n
3133
15K
AGC
B18-11
PIP_AUDIO
B3-3
SIF_MAIN
B1-2
SIF_PIP
B1-1
CVBS_PIP_TUN2
B2-4
1115
C
NC
TO/FROM 1115 OF PIP PANEL
3139 123 5536.2
CL 36532058_022.eps
211103

Small Signal Board: Video Source Selection & Data Link

1116 E1
2060 A3
2062 B4
2063 C2
2064 C2
2065 C2
2066 D2
2067 D2
2068 D2
2069 D2
2070 D2
2071 D2
2072 E2
2073 E2
2074 E2
2075 E2
2076 E2
2078 E3
2079 F4
2081 F3
2082 A7
2083 C4
2084 C4
2085 D3
2086 D4
2087 C2
2088 A8
3060 A2
3061 A8
3062 B3
3063 B3
3064 C2
3065 C2
3066 A8
3067 B7
3068 B7
3070 B1
3071 B3
3072 E3
3073 E3
3074 E3
4062 E2
4152 D1
4153 E2
5060 E3
5061 F3
5063 A8
7060-A A3
7060-B B2
7062 B8
7063 B7
7100-B B4
F060 B1
F064 B7
F074 E2
F075 F1
F076 E1
F077 E1
F078 E1
F080 B4
F088 F7
F089 F7
I061 C3
I062 C3
I063 D3
I064 D3

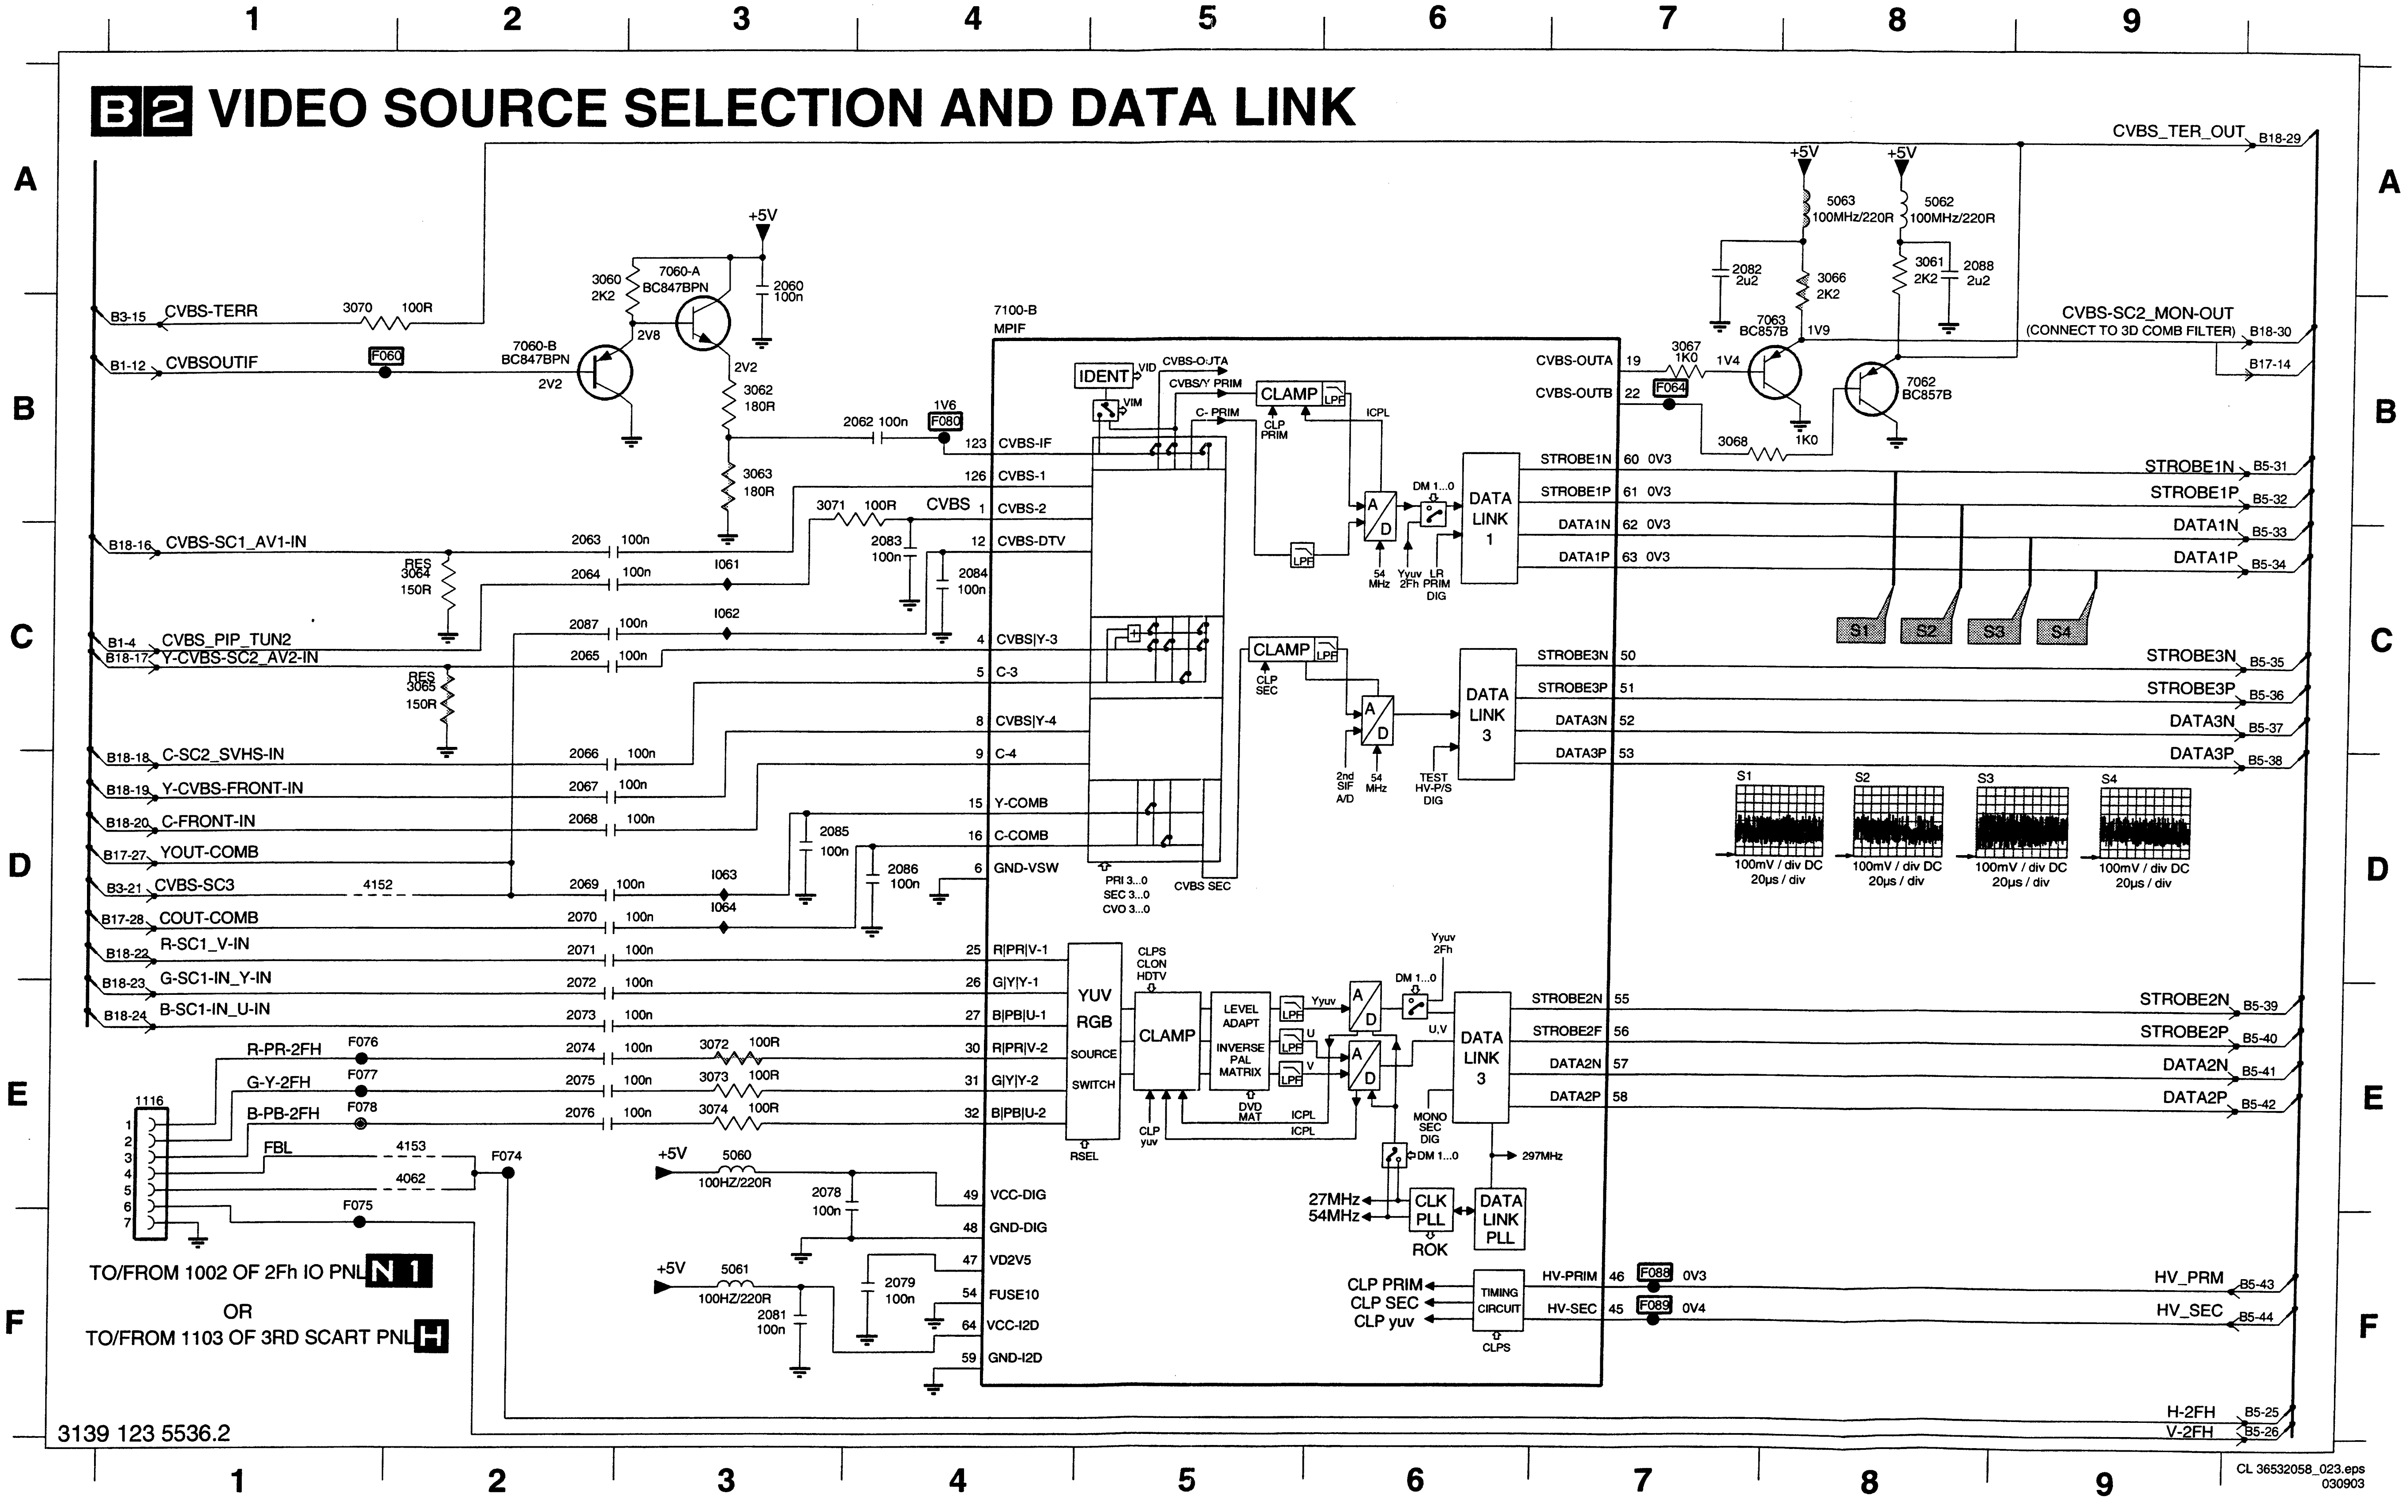
B2 VIDEO SOURCE SELECTION AND DATA LINK

1
2
3
4
5
6
7
8
9
A
B
C
D
E
F
CVBS_TER_OUT B18-29
CVBS-SC2_MON-OUT (CONNECT TO 3D COMB FILTER) B18-30
B17-14
B3-15 CVBS-TERR
3070 100R
B1-12 CVBSOUTIF
F060
7060-B BC847BPN
2V2
3060 2K2
7060-A BC847BPN
2V8
+5V
2060 100n
2V2
3062 180R
3063 180R
2062 100n
1V6
F080
3071 100R
CVBS
2083 100n
2084 100n
I061
I062
B18-16 CVBS-SC1_AV1-IN
RES 3064 150R
B1-4 CVBS_PIP_TUN2
B18-17 Y-CVBS-SC2_AV2-IN
RES 3065 150R
B18-18 C-SC2_SVHS-IN
B18-19 Y-CVBS-FRONT-IN
B18-20 C-FRONT-IN
B17-27 YOUT-COMB
B3-21 CVBS-SC3
4152
B17-28 COUT-COMB
B18-22 R-SC1_V-IN
B18-23 G-SC1-IN_Y-IN
B18-24 B-SC1-IN_U-IN
2063 100n
2064 100n
2087 100n
2065 100n
2066 100n
2067 100n
2068 100n
2069 100n
2070 100n
2071 100n
2072 100n
2073 100n
2085 100n
2086 100n
I063
I064
1116
R-PR-2FH F076
G-Y-2FH F077
B-PB-2FH F078
FBL
4153
4062
F074
F075
2074 100n 3072 100R
2075 100n 3073 100R
2076 100n 3074 100R
+5V 5060 100HZ/220R
2078 100n
+5V 5061 100HZ/220R
2081 100n
2079 100n
TO/FROM 1002 OF 2Fh IO PNL N1
OR
TO/FROM 1103 OF 3RD SCART PNL H
7100-B MPIF
123 CVBS-IF
126 CVBS-1
1 CVBS-2
12 CVBS-DTV
4 CVBS|Y-3
5 C-3
8 CVBS|Y-4
9 C-4
15 Y-COMB
16 C-COMB
6 GND-VSW
25 R|PR|V-1
26 G|Y|Y-1
27 B|PB|U-1
30 R|PR|V-2
31 G|Y|Y-2
32 B|PB|U-2
49 VCC-DIG
48 GND-DIG
47 VD2V5
54 FUSE10
64 VCC-I2D
59 GND-I2D
IDENT
VID
VIM
CVBS-OUTA
CVBS/Y PRIM
C-PRIM
CLAMP
LPF
CLP PRIM
ICPL
A/D
DM 1...0
DATA LINK 1
54 MHz
Yyuv 2Fh
LR PRIM DIG
PRI 3...0
SEC 3...0
CVO 3...0
CVBS SEC
CLP SEC
DATA LINK 3
2nd SIF A/D
TEST HV-P/S DIG
YUV RGB SOURCE SWITCH
RSEL
CLPS CLON HDTV
LEVEL ADAPT
INVERSE PAL MATRIX
DVD MAT
ICPL
CLP yuv
Yyuv
U
V
U,V
MONO SEC DIG
DM 1...0
297MHz
27MHz
54MHz
CLK PLL
ROK
DATA LINK PLL
DATA LINK 3
CLP PRIM
CLP SEC
CLP yuv
TIMING CIRCUIT
CLPS
CVBS-OUTA 19
CVBS-OUTB 22
F064
3067 1K0
1V4
3068 1K0
7063 BC857B
1V9
7062 BC857B
5063 100MHz/220R
5062 100MHz/220R
2082 2u2
3066 2K2
3061 2K2
2088 2u2
STROBE1N 60 0V3
STROBE1P 61 0V3
DATA1N 62 0V3
DATA1P 63 0V3
STROBE3N 50
STROBE3P 51
DATA3N 52
DATA3P 53
STROBE2N 55
STROBE2F 56
DATA2N 57
DATA2P 58
HV-PRIM 46 F088 0V3
HV-SEC 45 F089 0V4
STROBE1N B5-31
STROBE1P B5-32
DATA1N B5-33
DATA1P B5-34
S1
S2
S3
S4
STROBE3N B5-35
STROBE3P B5-36
DATA3N B5-37
DATA3P B5-38
100mV / div DC 20µs / div
STROBE2N B5-39
STROBE2P B5-40
DATA2N B5-41
DATA2P B5-42
HV_PRM B5-43
HV_SEC B5-44
H-2FH B5-25
V-2FH B5-26
3139 123 5536.2

CL 36532058_023.eps
030903

Small Signal Board: Audio Source Select

1009 A8	2005 A8	2011 D1	2018 C2	2027 E2	2033 D9	2042 E4	2048 A2	3004 C2	3010 A2	3019 A1	3029 A10	6030 A10	7031-2 E9	F020 E8	F047 E2	I006 A8
1117 E1	2006 A8	2012 B2	2019 C2	2028 E2	2037 C9	2043 E3	2049 A2	3005 C2	3011 B2	3022 D9	3030 C10	7029-1 A9	7100-A A4	F021 E8	I001 B3	I007 C9
1118 B9	2007 B2	2013 C2	2021 D2	2029 A10	2038 C9	2044 E3	2050 A2	3006 A9	3012 E3	3024 E9	3031 D10	7029-2 A9	F014 E8	F041 E2	I002 E3	I008 C9
2002 A9	2008 B2	2014 C3	2022 D2	2030 D9	2039 D9	2045 A2	2051 B2	3007 A9	3013 E3	3026 C9	3032 D10	7030-1 C9	F015 E8	F042 E2	I003 E3	I009 D9
2003 A9	2009 C1	2015 C2	2024 D2	2031 C9	2040 D9	2046 A2	3002 D2	3008 E3	3016 A1	3027 D9	3033 E10	7030-2 D9	F016 E8	F045 B10	I004 E3	I010 D9
2004 C1	2010 C1	2016 C2	2025 D2	2032 E9	2041 E4	2047 A2	3003 C2	3009 E3	3018 A1	3028 A10	6029 A10	7031-1 D9	F017 E8	F046 E2	I005 E3	

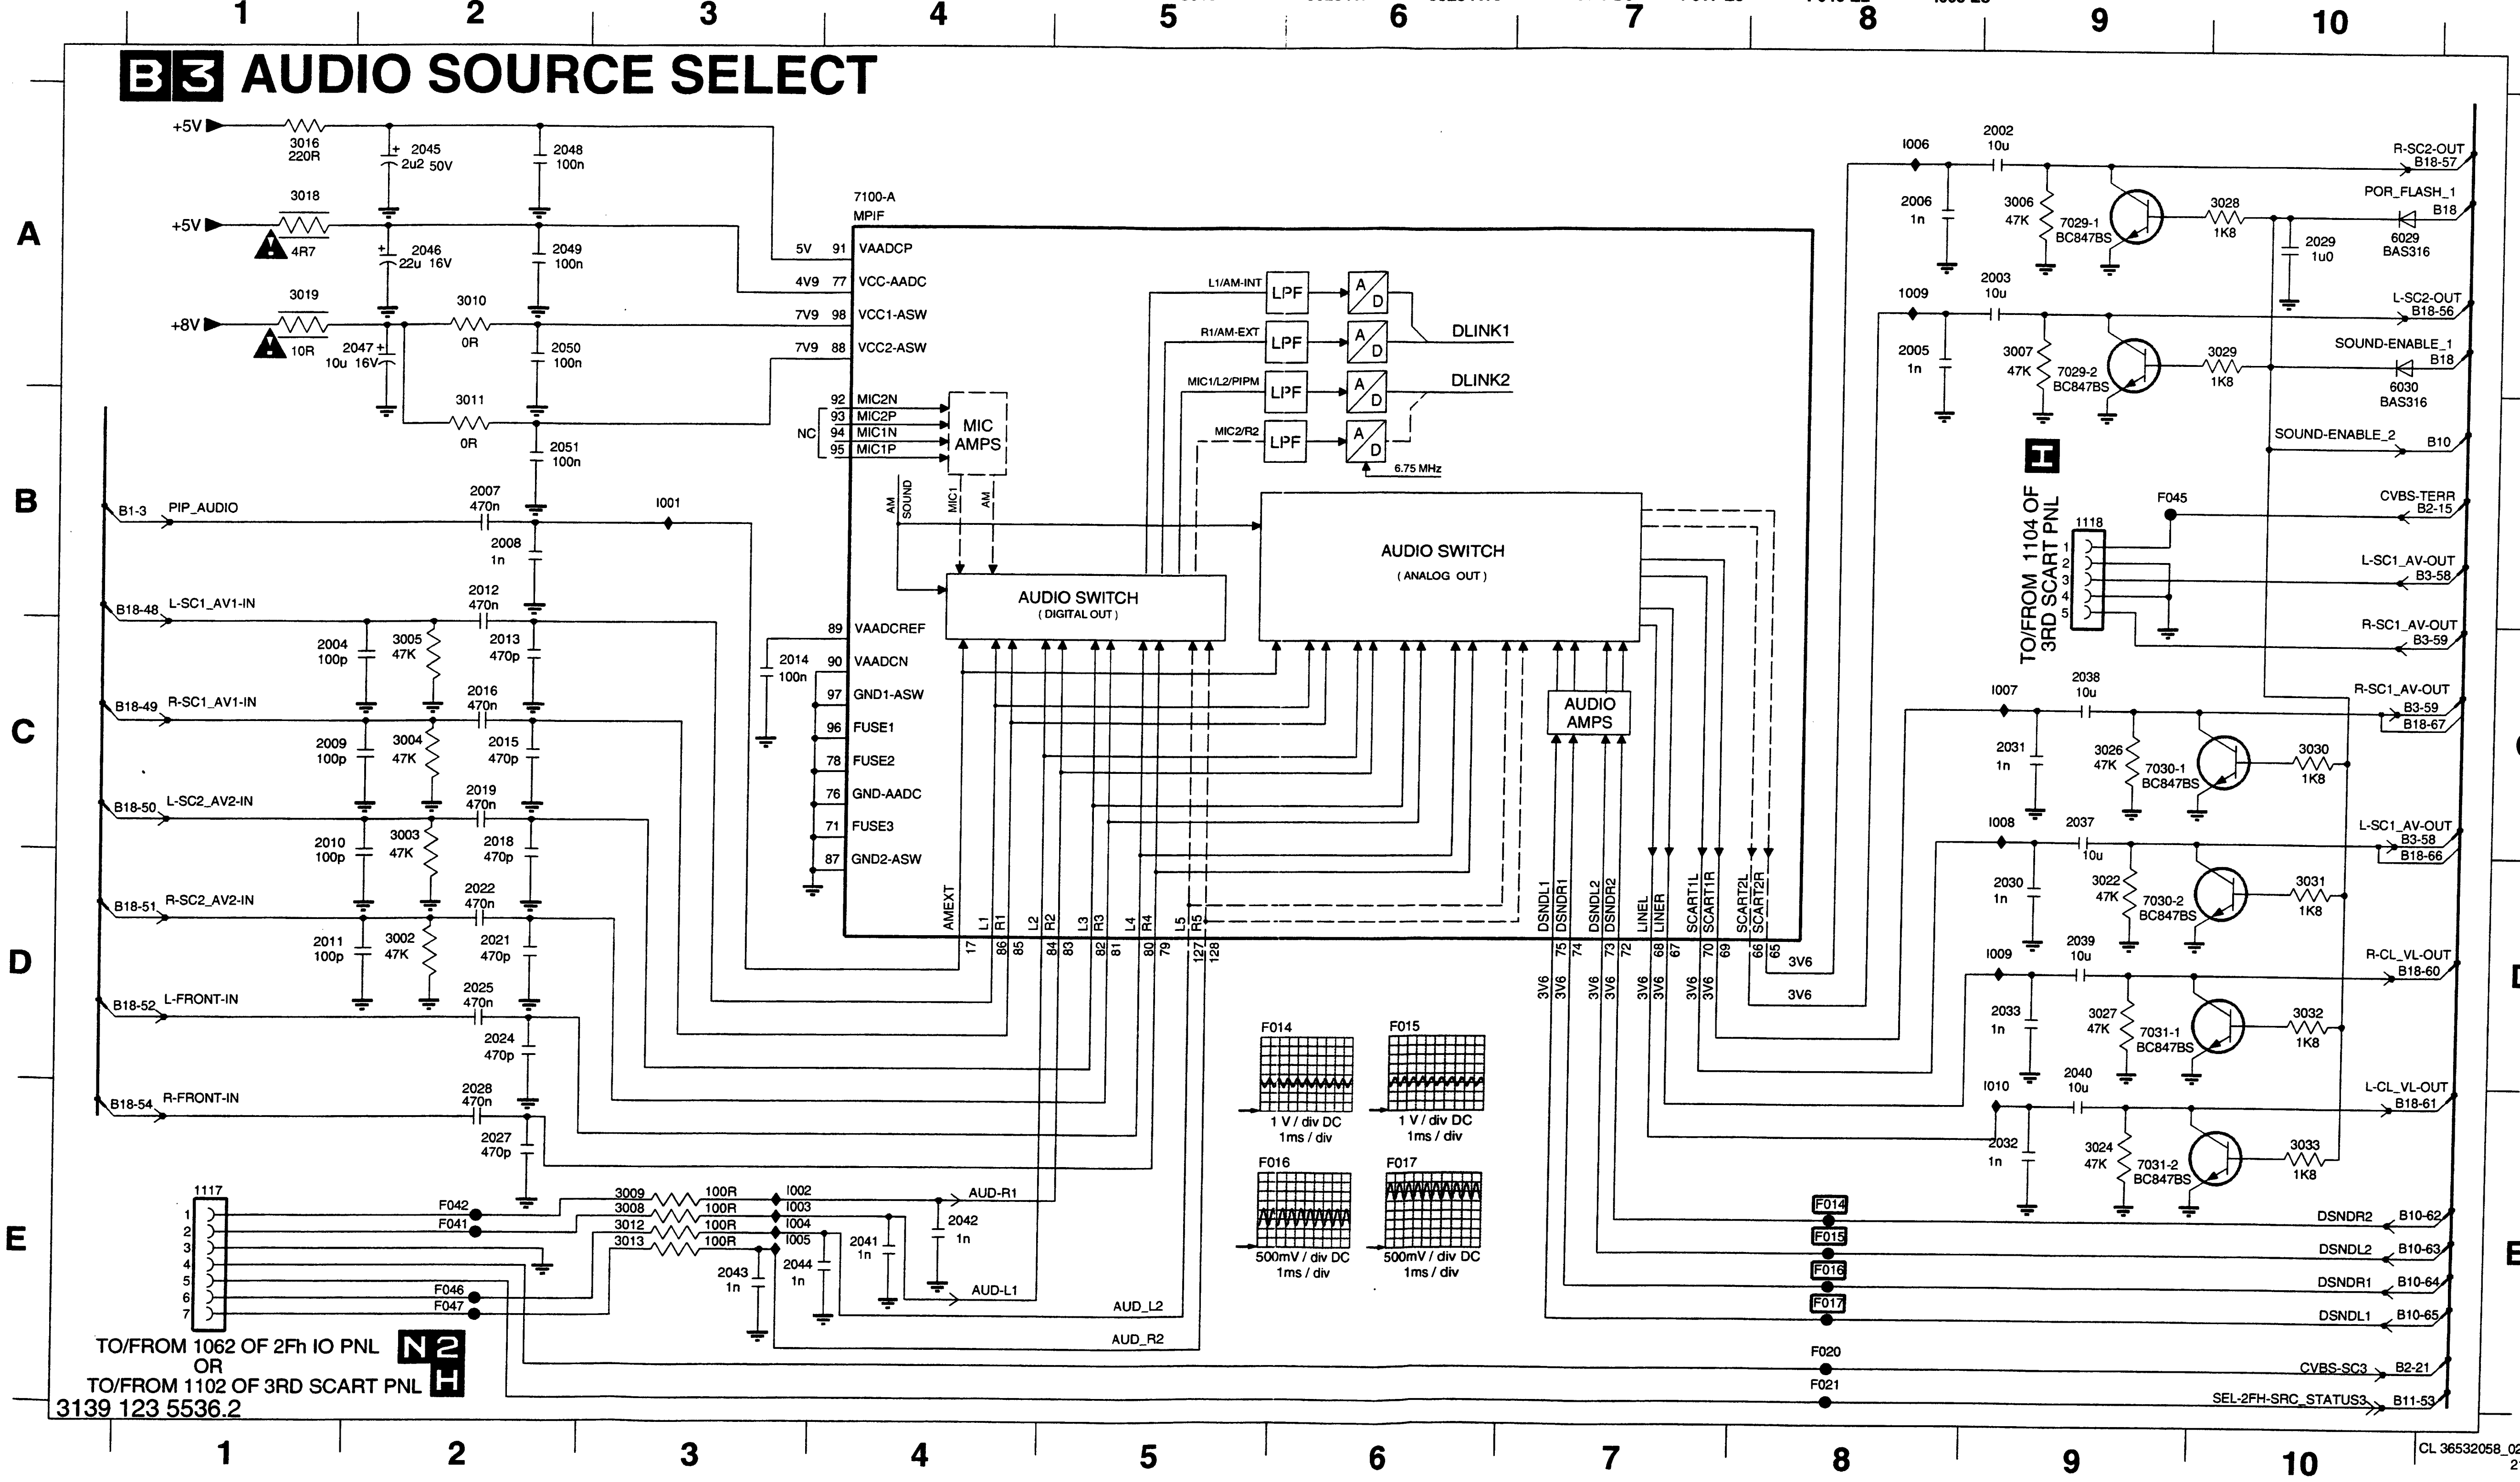
1
2
3
4
5
6
7
8
9
10
A
B
C
D
E
B3 AUDIO SOURCE SELECT
+5V
3016 220R
2045 2u2 50V
2048 100n
3018 4R7
2046 22u 16V
2049 100n
+8V
3019 10R
2047 10u 16V
3010 0R
2050 100n
3011 0R
2051 100n
7100-A MPIF
5V 91 VAADCP
4V9 77 VCC-AADC
7V9 98 VCC1-ASW
7V9 88 VCC2-ASW
92 MIC2N
93 MIC2P
94 MIC1N
95 MIC1P
NC
MIC AMPS
L1/AM-INT
R1/AM-EXT
MIC1/L2/PIPM
MIC2/R2
LPF
A D
DLINK1
DLINK2
6.75 MHz
AM
SOUND
MIC1
AM
AUDIO SWITCH (DIGITAL OUT)
AUDIO SWITCH (ANALOG OUT)
AUDIO AMPS
89 VAADCREF
90 VAADCN
97 GND1-ASW
96 FUSE1
78 FUSE2
76 GND-AADC
71 FUSE3
87 GND2-ASW
2014 100n
AMEXT L1 R1 L2 R2 L3 R3 L4 R4 L5 R5
17 86 85 84 83 82 81 80 79 127 128
DSNDL1 DSNDR1 DSNDL2 DSNDR2 LINEL LINER SCART1L SCART1R SCART2L SCART2R
75 74 73 72 68 67 70 69 66 65
3V6
B1-3 PIP_AUDIO
2007 470n
2008 1n
I001
B18-48 L-SC1_AV1-IN
2012 470n
2004 100p
3005 47K
2013 470p
B18-49 R-SC1_AV1-IN
2016 470n
2009 100p
3004 47K
2015 470p
B18-50 L-SC2_AV2-IN
2019 470n
2010 100p
3003 47K
2018 470p
B18-51 R-SC2_AV2-IN
2022 470n
2011 100p
3002 47K
2021 470p
B18-52 L-FRONT-IN
2025 470n
2024 470p
B18-54 R-FRONT-IN
2028 470n
2027 470p
1117
F042
F041
F046
F047
3009 100R
3008 100R
3012 100R
3013 100R
I002
I003
I004
I005
AUD-R1
AUD-L1
AUD_L2
AUD_R2
2041 1n
2042 1n
2043 1n
2044 1n
F014
F015
F016
F017
1 V / div DC 1ms / div
500mV / div DC 1ms / div
F020
F021
I006
2002 10u
2006 1n
3006 47K
7029-1 BC847BS
3028 1K8
2029 1u0
6029 BAS316
R-SC2-OUT B18-57
POR_FLASH_1 B18
I009
2003 10u
2005 1n
3007 47K
7029-2 BC847BS
3029 1K8
6030 BAS316
L-SC2-OUT B18-56
SOUND-ENABLE_1 B18
SOUND-ENABLE_2 B10
H
TO/FROM 1104 OF 3RD SCART PNL
1118
F045
CVBS-TERR B2-15
L-SC1_AV-OUT B3-58
R-SC1_AV-OUT B3-59
I007
2038 10u
2031 1n
3026 47K
7030-1 BC847BS
3030 1K8
R-SC1_AV-OUT B3-59 B18-67
I008
2037 10u
2030 1n
3022 47K
7030-2 BC847BS
3031 1K8
L-SC1_AV-OUT B3-58 B18-66
I009
2039 10u
2033 1n
3027 47K
7031-1 BC847BS
3032 1K8
R-CL_VL-OUT B18-60
I010
2040 10u
2032 1n
3024 47K
7031-2 BC847BS
3033 1K8
L-CL_VL-OUT B18-61
DSNDR2 B10-62
DSNDL2 B10-63
DSNDR1 B10-64
DSNDL1 B10-65
CVBS-SC3 B2-21
SEL-2FH-SRC_STATUS3 B11-53
TO/FROM 1062 OF 2Fh IO PNL N2
OR
TO/FROM 1102 OF 3RD SCART PNL H
3139 123 5536.2

CL 36532058_024.eps
211103

Small Signal Board: MPIF-Supply, E/W, & Control

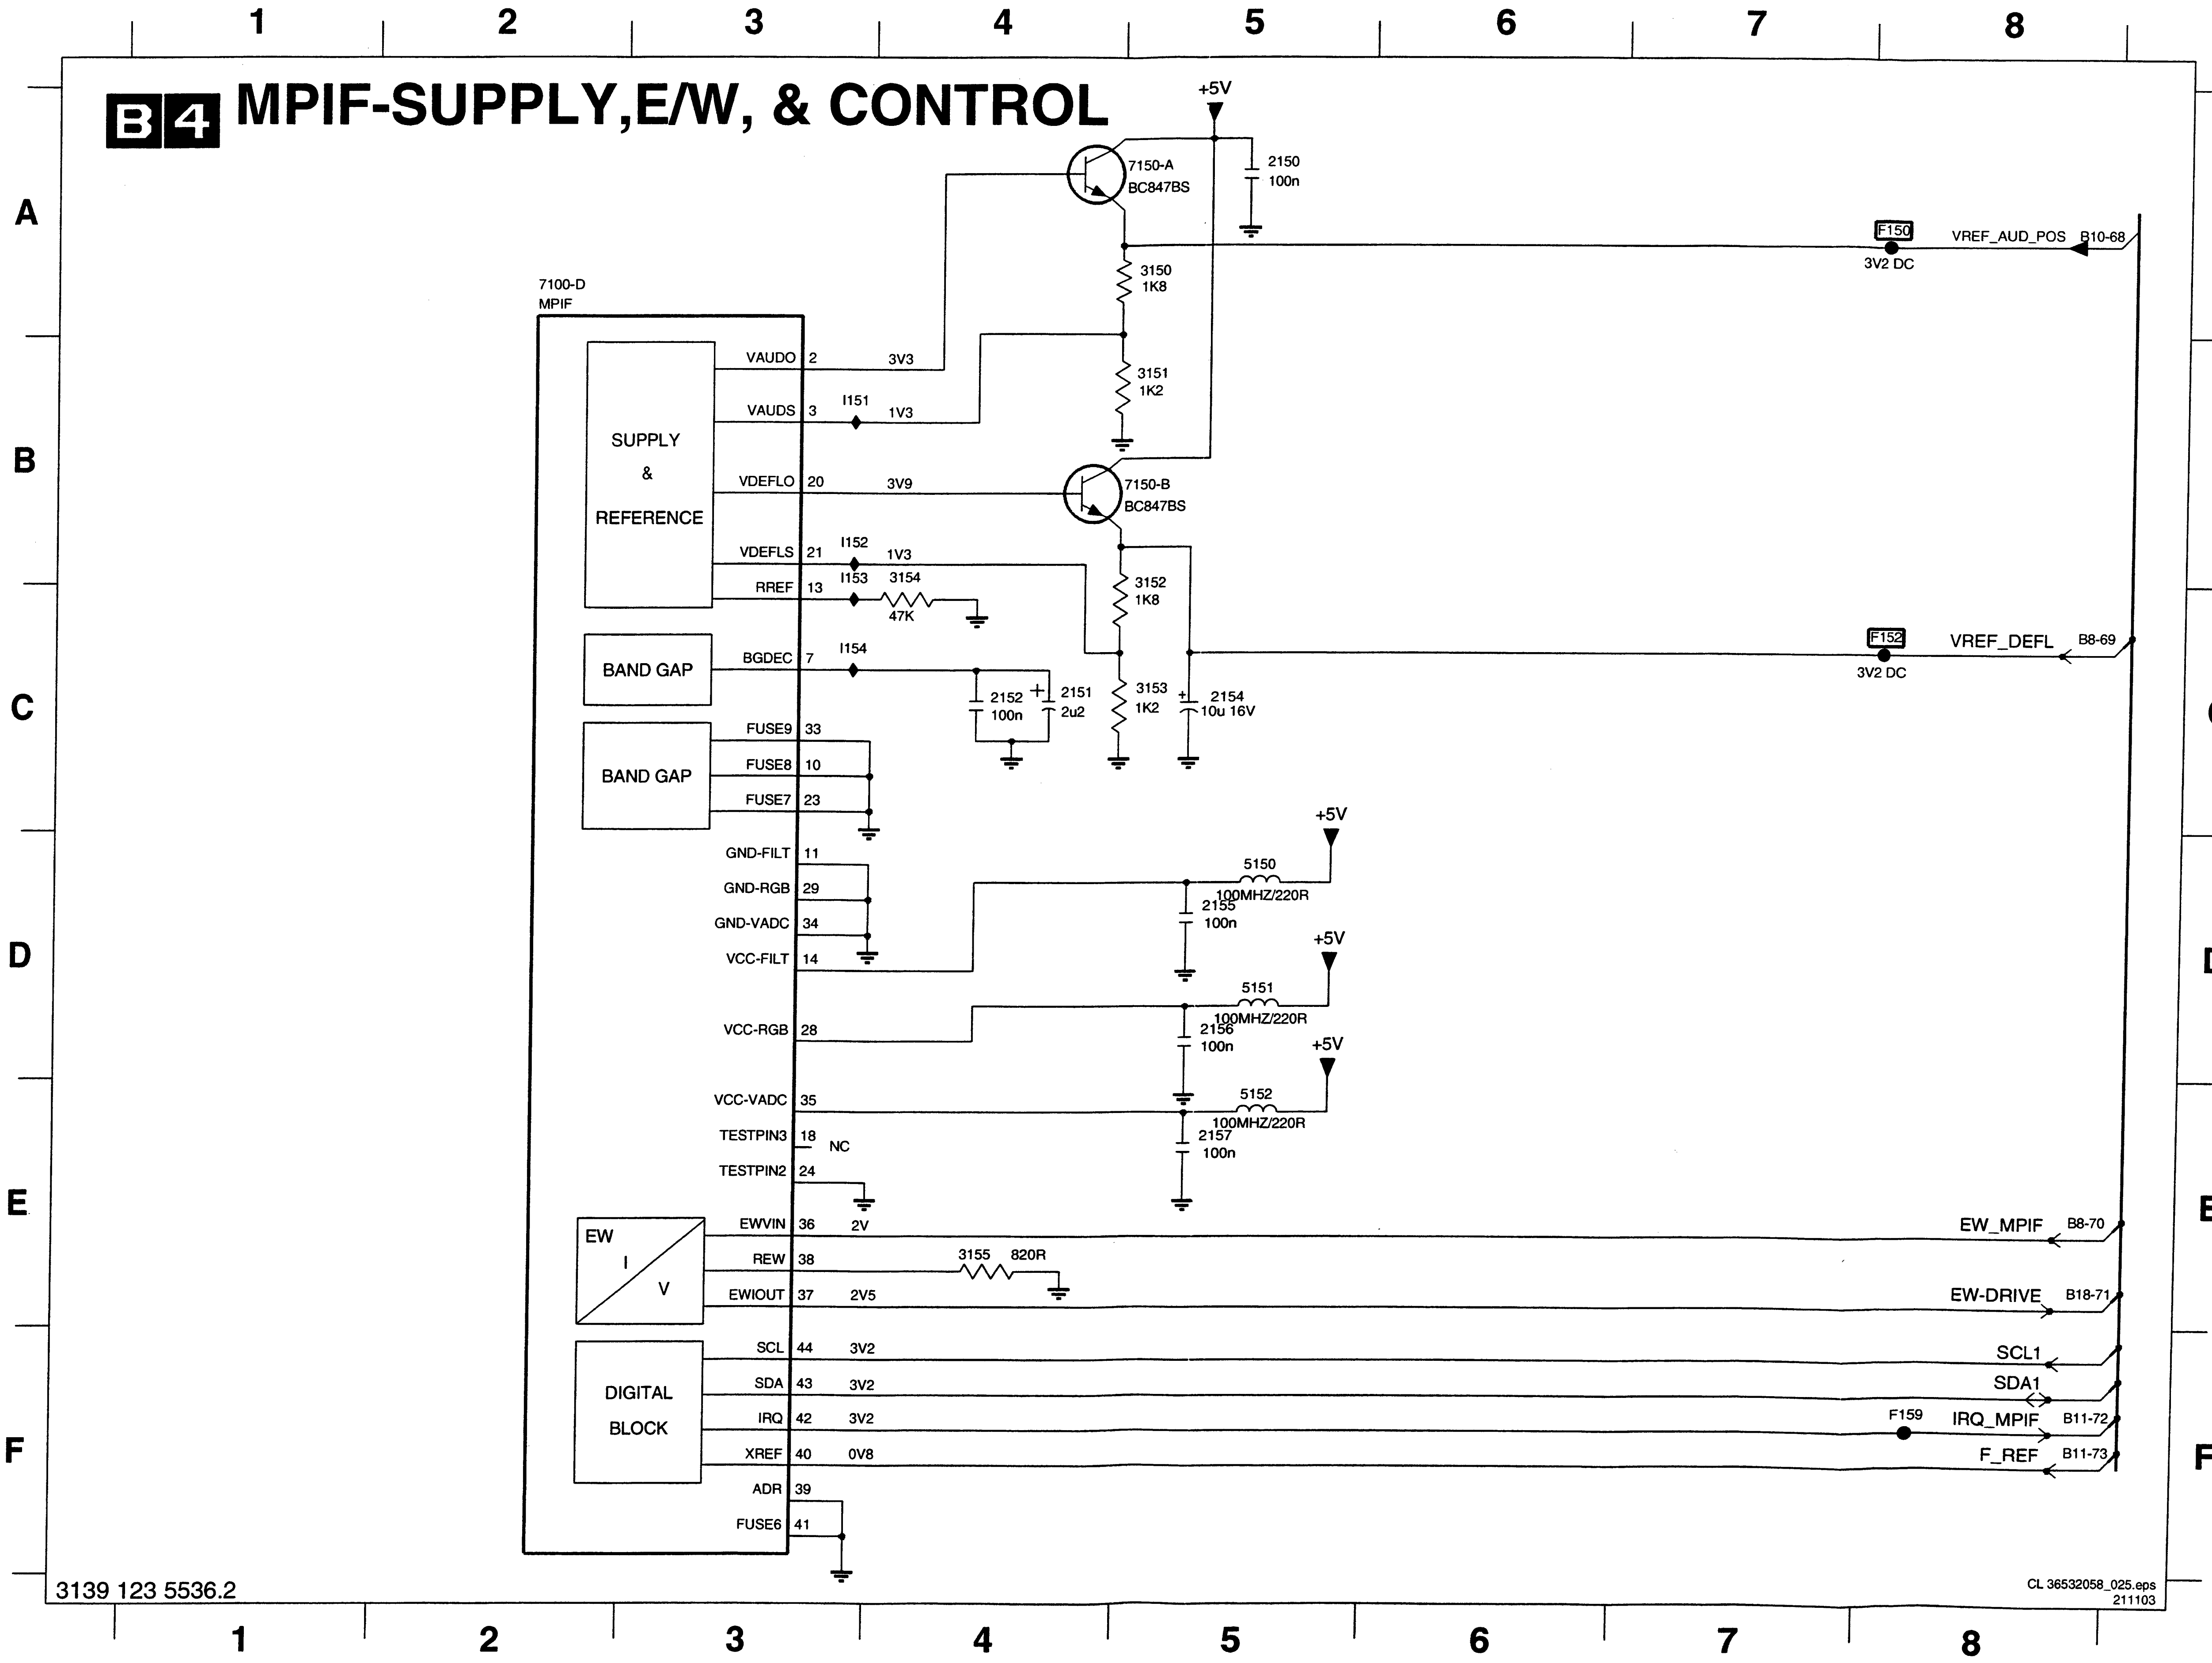
B4 MPIF-SUPPLY,E/W, & CONTROL
1 2 3 4 5 6 7 8
A B C D E F
7100-D
MPIF
SUPPLY
&
REFERENCE
BAND GAP
BAND GAP
EW
I
V
DIGITAL
BLOCK
VAUDO 2 3V3
VAUDS 3 I151 1V3
VDEFLO 20 3V9
VDEFLS 21 I152 1V3
RREF 13 I153 3154 47K
BGDEC 7 I154
FUSE9 33
FUSE8 10
FUSE7 23
GND-FILT 11
GND-RGB 29
GND-VADC 34
VCC-FILT 14
VCC-RGB 28
VCC-VADC 35
TESTPIN3 18 NC
TESTPIN2 24
EWVIN 36 2V
REW 38
EWIOUT 37 2V5
SCL 44 3V2
SDA 43 3V2
IRQ 42 3V2
XREF 40 0V8
ADR 39
FUSE6 41
+5V
7150-A
BC847BS
2150
100n
3150
1K8
3151
1K2
7150-B
BC847BS
3152
1K8
3153
1K2
2152
100n
2151
2u2
2154
10u 16V
F150
3V2 DC
VREF_AUD_POS B10-68
F152
3V2 DC
VREF_DEFL B8-69
+5V
5150
100MHZ/220R
2155
100n
+5V
5151
100MHZ/220R
2156
100n
+5V
5152
100MHZ/220R
2157
100n
3155 820R
EW_MPIF B8-70
EW-DRIVE B18-71
SCL1
SDA1
F159
IRQ_MPIF B11-72
F_REF B11-73
3139 123 5536.2
CL 36532058_025.eps
211103

2150	A5
2151	C4
2152	C4
2154	C5
2155	D5
2156	D5
2157	E5
3150	A5
3151	B5
3152	B5
3153	C5
3154	B4
3155	E4
5150	D5
5151	D5
5152	E5
7100-D	A2
7150-A	A5
7150-B	B5
F150	A8
F152	C8
F159	F8
I151	B3
I152	B3
I153	B3
I154	C3

Small Signal Board: Video Decoder

2281	2282	2284	2285	3281	3282	3283	3284	5281	5282	5283	5285	7300-J	F281	F282	I281
A9	C9	D9	D9	C1	D2	D2	D2	A9	C9	D9	D9	A3	D9	C2	D2

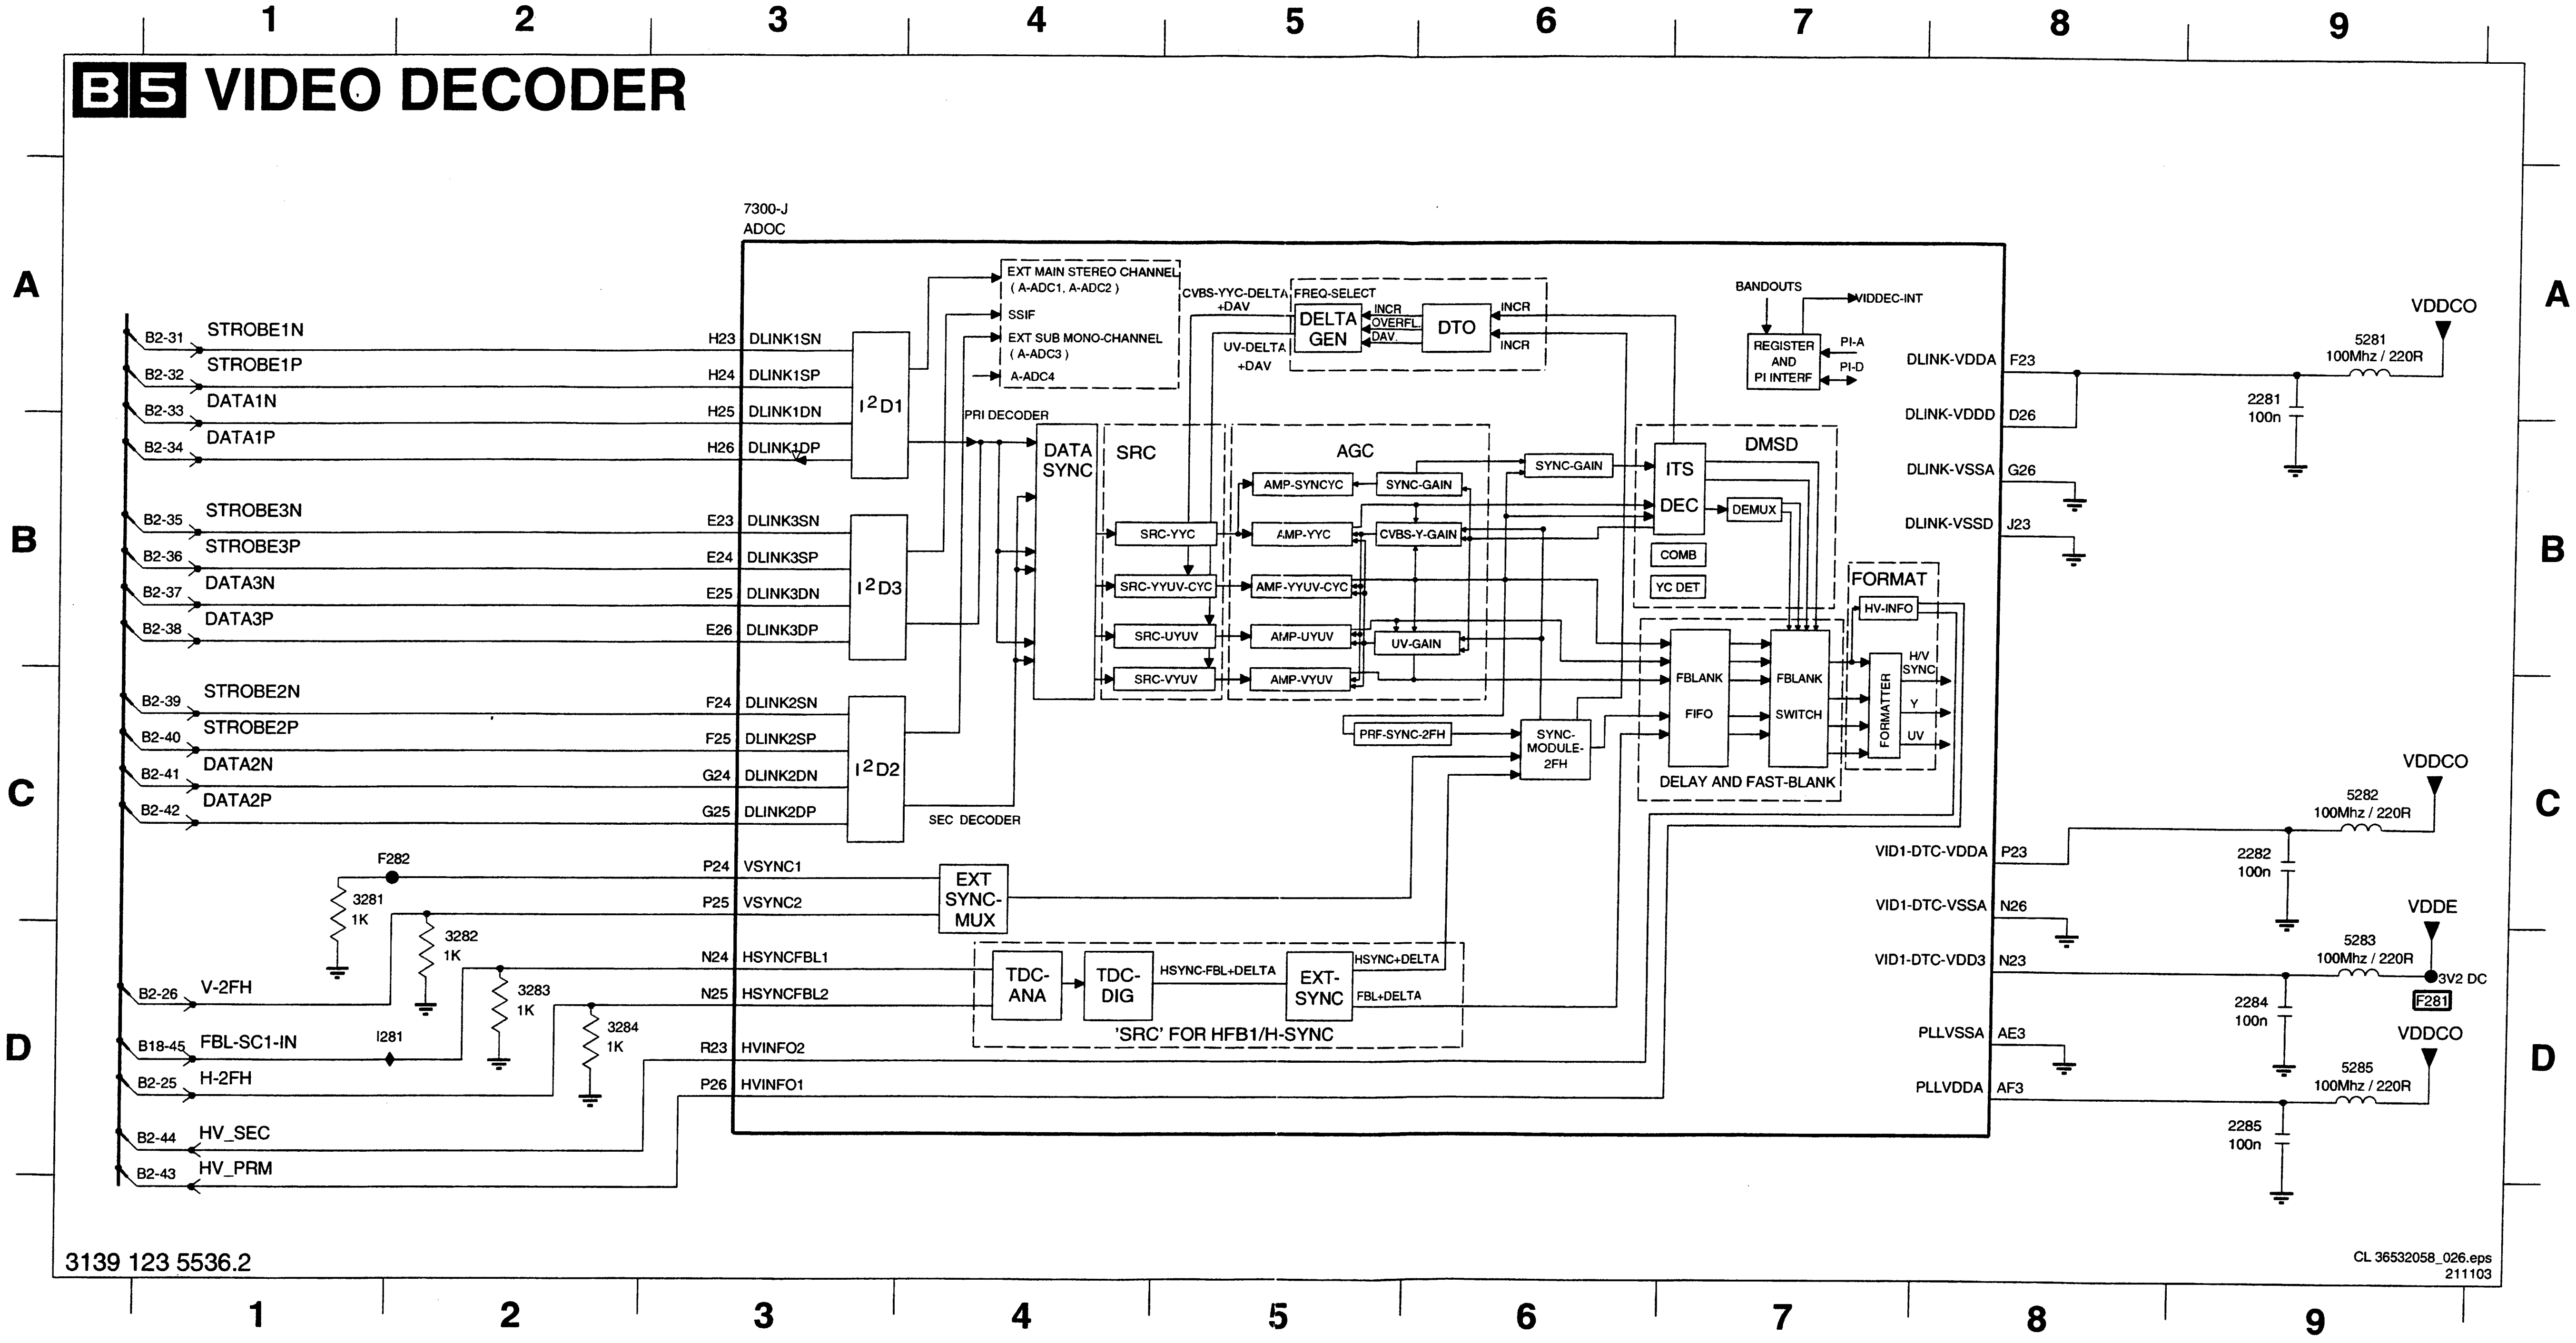
B5 VIDEO DECODER
1
2
3
4
5
6
7
8
9
A
B
C
D
7300-J
ADOC
B2-31 STROBE1N
B2-32 STROBE1P
B2-33 DATA1N
B2-34 DATA1P
B2-35 STROBE3N
B2-36 STROBE3P
B2-37 DATA3N
B2-38 DATA3P
B2-39 STROBE2N
B2-40 STROBE2P
B2-41 DATA2N
B2-42 DATA2P
H23 DLINK1SN
H24 DLINK1SP
H25 DLINK1DN
H26 DLINK1DP
E23 DLINK3SN
E24 DLINK3SP
E25 DLINK3DN
E26 DLINK3DP
F24 DLINK2SN
F25 DLINK2SP
G24 DLINK2DN
G25 DLINK2DP
I2D1
I2D3
I2D2
PRI DECODER
SEC DECODER
EXT MAIN STEREO CHANNEL
(A-ADC1, A-ADC2)
SSIF
EXT SUB MONO-CHANNEL
(A-ADC3)
A-ADC4
CVBS-YYC-DELTA
+DAV
UV-DELTA
+DAV
FREQ-SELECT
DELTA GEN
INCR
OVERFL.
DAV.
DTO
INCR
INCR
BANDOUTS
VIDDEC-INT
REGISTER AND PI INTERF
PI-A
PI-D
DATA SYNC
SRC
SRC-YYC
SRC-YYUV-CYC
SRC-UYUV
SRC-VYUV
AGC
AMP-SYNCYC
SYNC-GAIN
AMP-YYC
CVBS-Y-GAIN
AMP-YYUV-CYC
AMP-UYUV
UV-GAIN
AMP-VYUV
SYNC-GAIN
DMSD
ITS
DEC
DEMUX
COMB
YC DET
FORMAT
HV-INFO
FBLANK FIFO
FBLANK SWITCH
FORMATTER
H/V SYNC
Y
UV
DELAY AND FAST-BLANK
PRF-SYNC-2FH
SYNC-MODULE-2FH
DLINK-VDDA F23
DLINK-VDDD D26
DLINK-VSSA G26
DLINK-VSSD J23
VID1-DTC-VDDA P23
VID1-DTC-VSSA N26
VID1-DTC-VDD3 N23
PLLVSSA AE3
PLLVDDA AF3
VDDCO
5281
100Mhz / 220R
2281
100n
VDDCO
5282
100Mhz / 220R
2282
100n
VDDE
5283
100Mhz / 220R
3V2 DC
F281
2284
100n
VDDCO
5285
100Mhz / 220R
2285
100n
F282
3281
1K
3282
1K
3283
1K
3284
1K
I281
P24 VSYNC1
P25 VSYNC2
N24 HSYNCFBL1
N25 HSYNCFBL2
R23 HVINFO2
P26 HVINFO1
EXT SYNC-MUX
TDC-ANA
TDC-DIG
HSYNC-FBL+DELTA
EXT-SYNC
HSYNC+DELTA
FBL+DELTA
'SRC' FOR HFB1/H-SYNC
B2-26 V-2FH
B18-45 FBL-SC1-IN
B2-25 H-2FH
B2-44 HV_SEC
B2-43 HV_PRM
3139 123 5536.2
CL 36532058_026.eps
211103

Small Signal Board: Feature Box

B6 FEATURE BOX

7300
BACK END PROCESSING

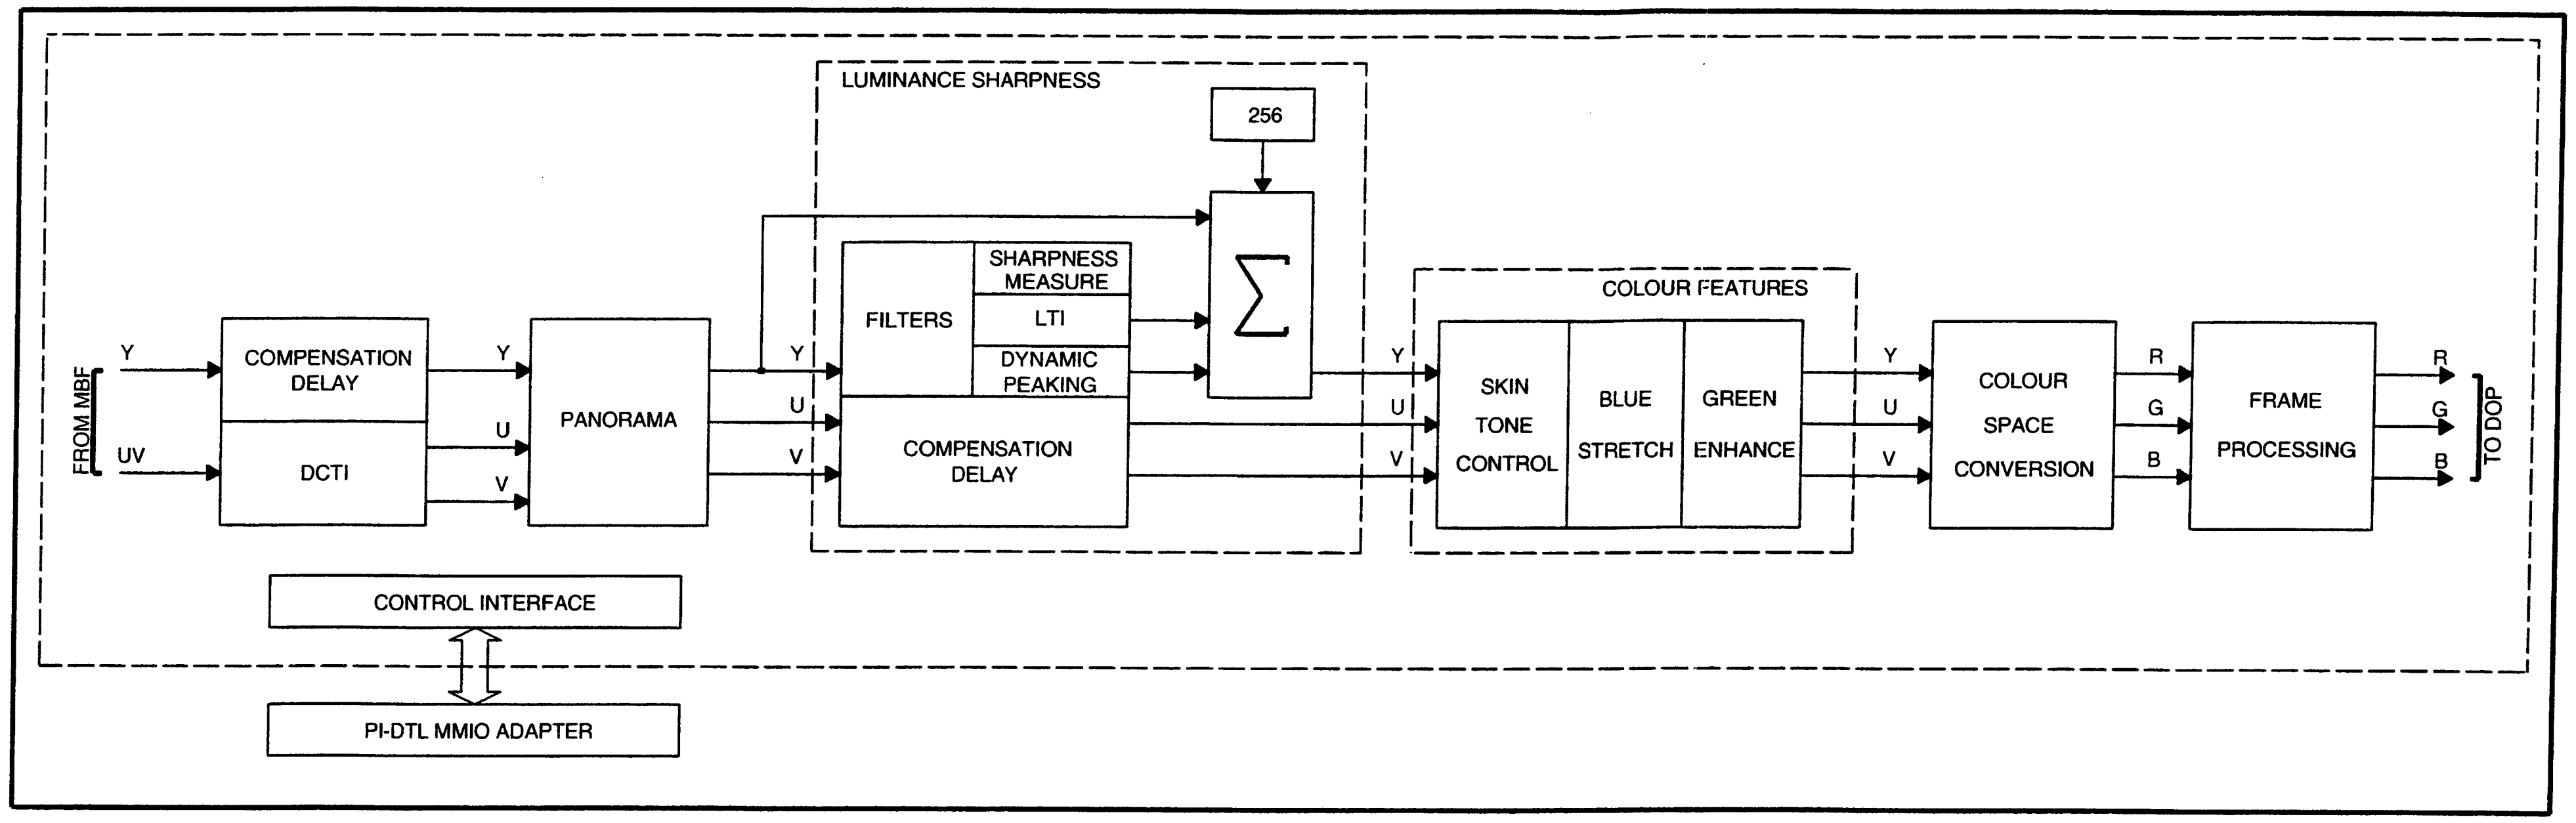
LUMINANCE SHARPNESS
256
Σ
FILTERS
SHARPNESS MEASURE
LTI
DYNAMIC PEAKING
COMPENSATION DELAY
FROM MBF
Y
UV
COMPENSATION DELAY
DCTI
Y
U
V
PANORAMA
Y
U
V
COMPENSATION DELAY
COLOUR FEATURES
Y
U
V
SKIN TONE CONTROL
BLUE STRETCH
GREEN ENHANCE
Y
U
V
COLOUR SPACE CONVERSION
R
G
B
FRAME PROCESSING
R
G
B
TO DOP
CONTROL INTERFACE
PI-DTL MMIO ADAPTER

7300
MEMORY BASED PROCESSING

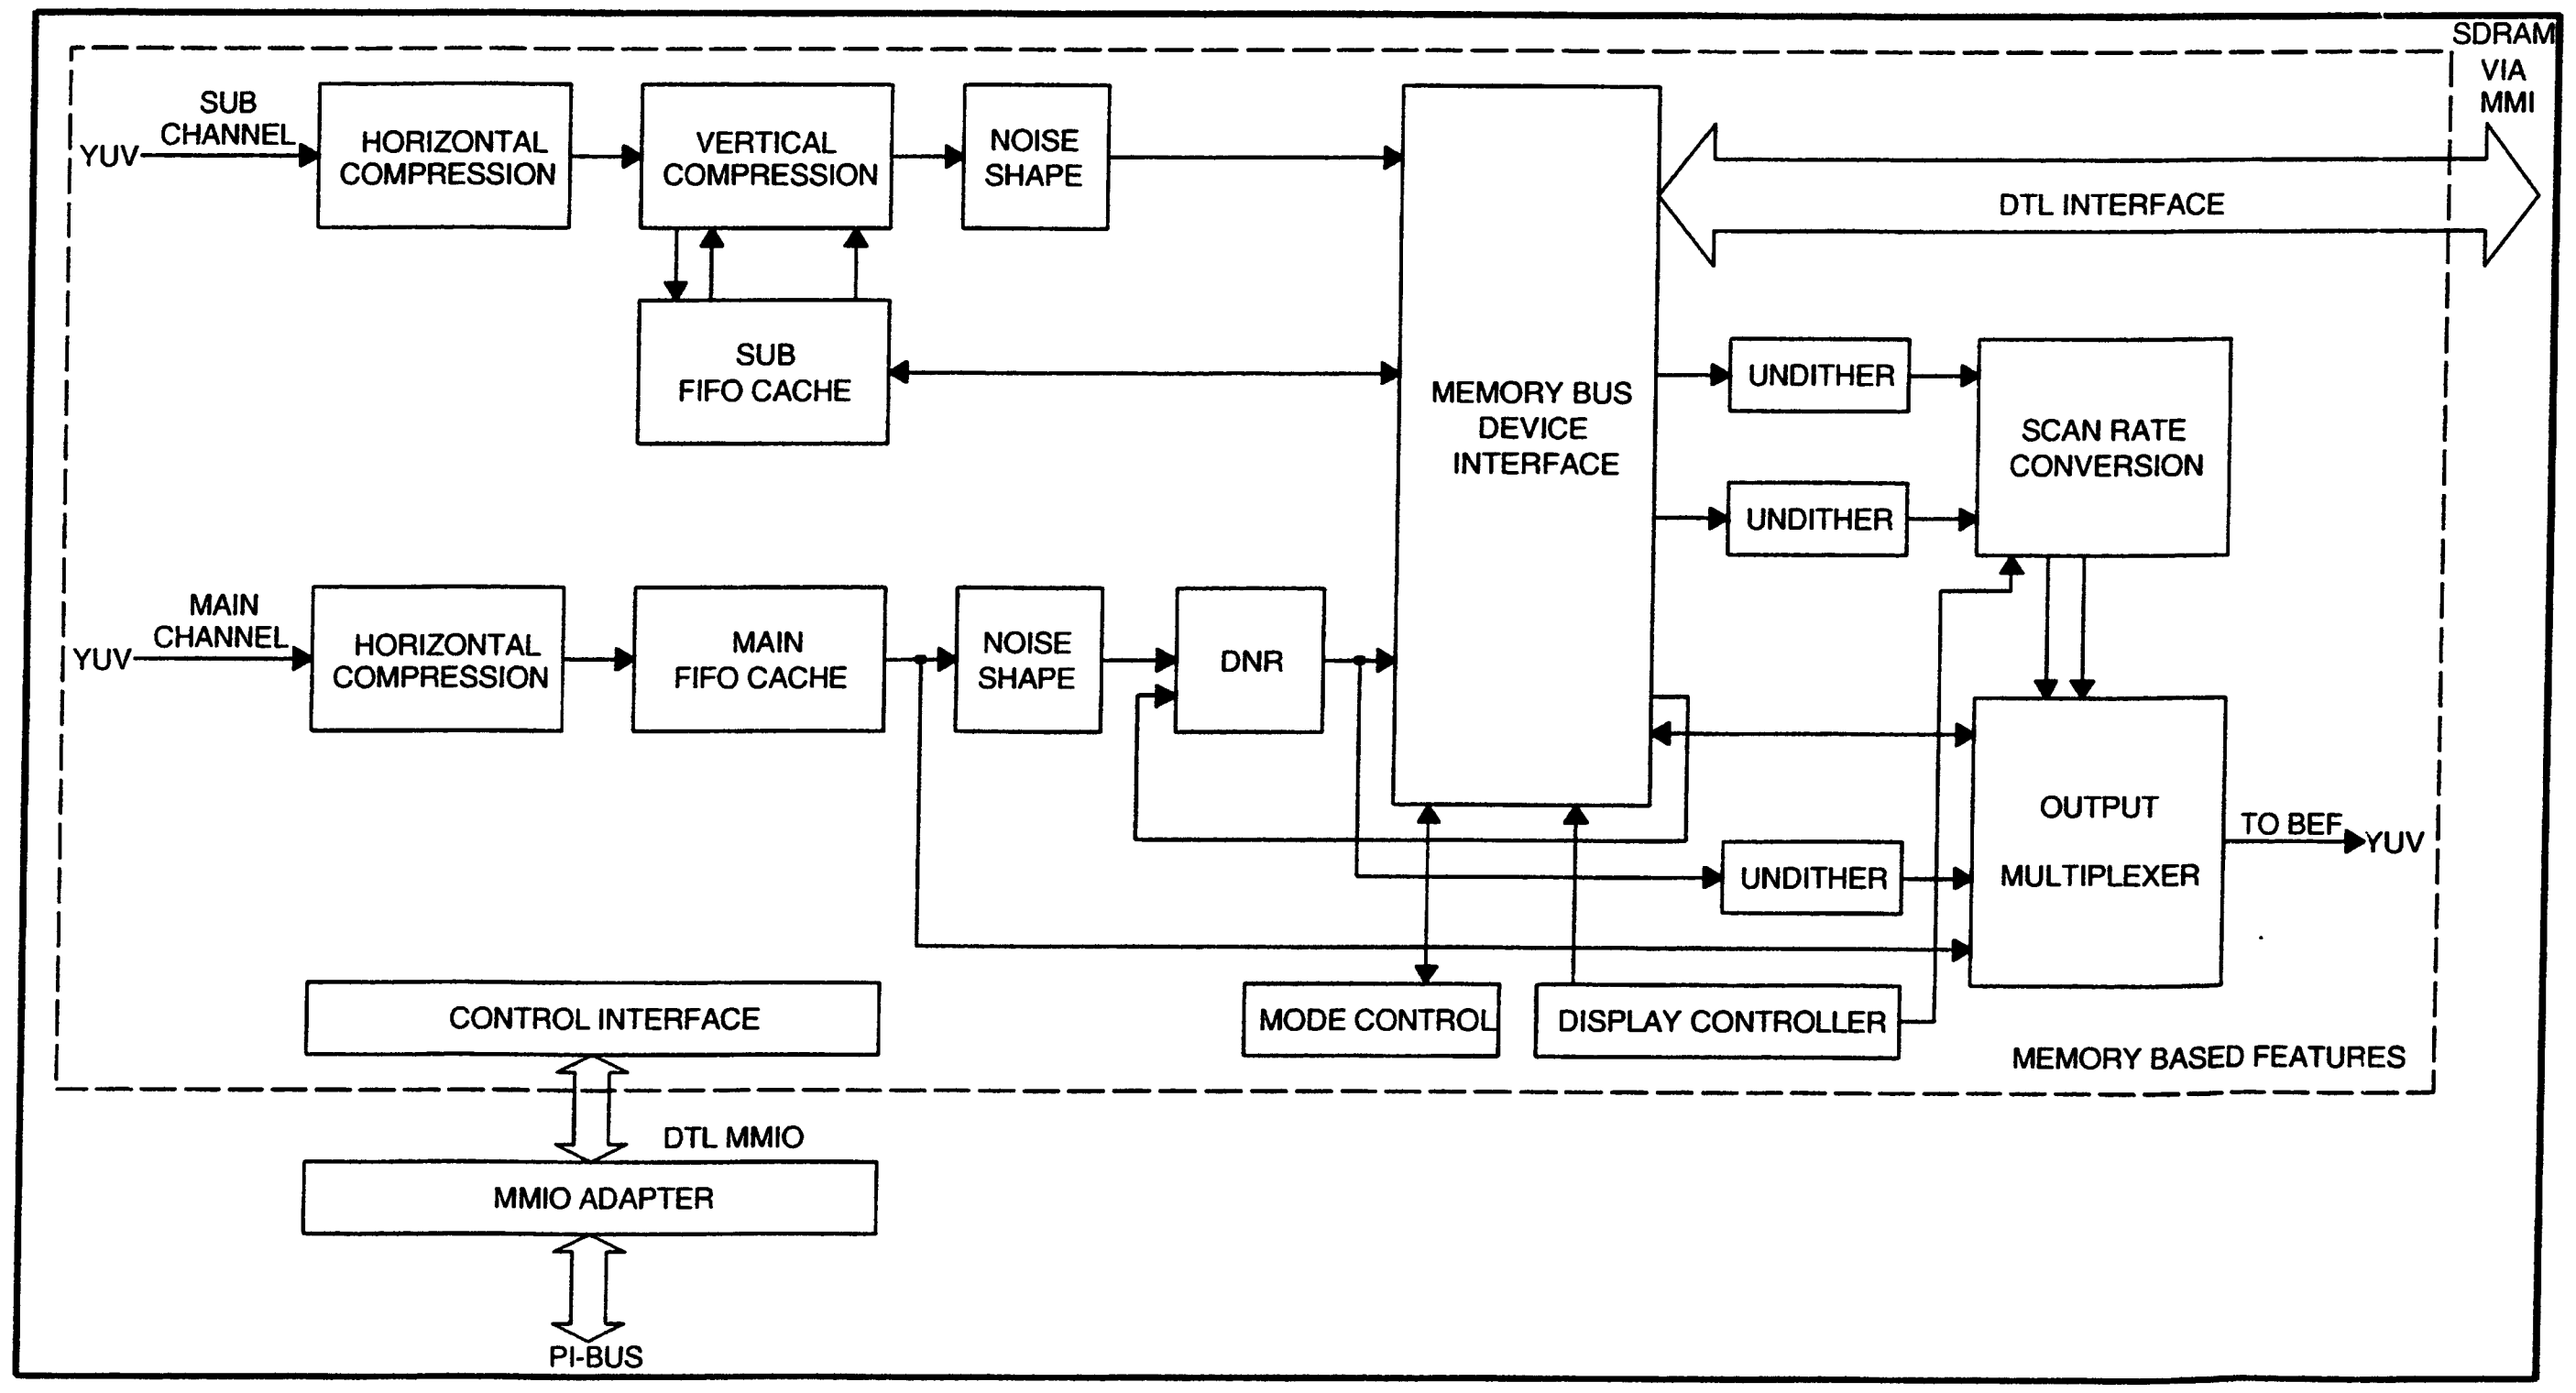
SDRAM VIA MMI
YUV
SUB CHANNEL
HORIZONTAL COMPRESSION
VERTICAL COMPRESSION
NOISE SHAPE
SUB FIFO CACHE
MEMORY BUS DEVICE INTERFACE
DTL INTERFACE
UNDITHER
UNDITHER
SCAN RATE CONVERSION
YUV
MAIN CHANNEL
HORIZONTAL COMPRESSION
MAIN FIFO CACHE
NOISE SHAPE
DNR
OUTPUT MULTIPLEXER
TO BEF
YUV
UNDITHER
CONTROL INTERFACE
MODE CONTROL
DISPLAY CONTROLLER
MEMORY BASED FEATURES
DTL MMIO
MMIO ADAPTER
PI-BUS

7300
FRONT END PROCESSING

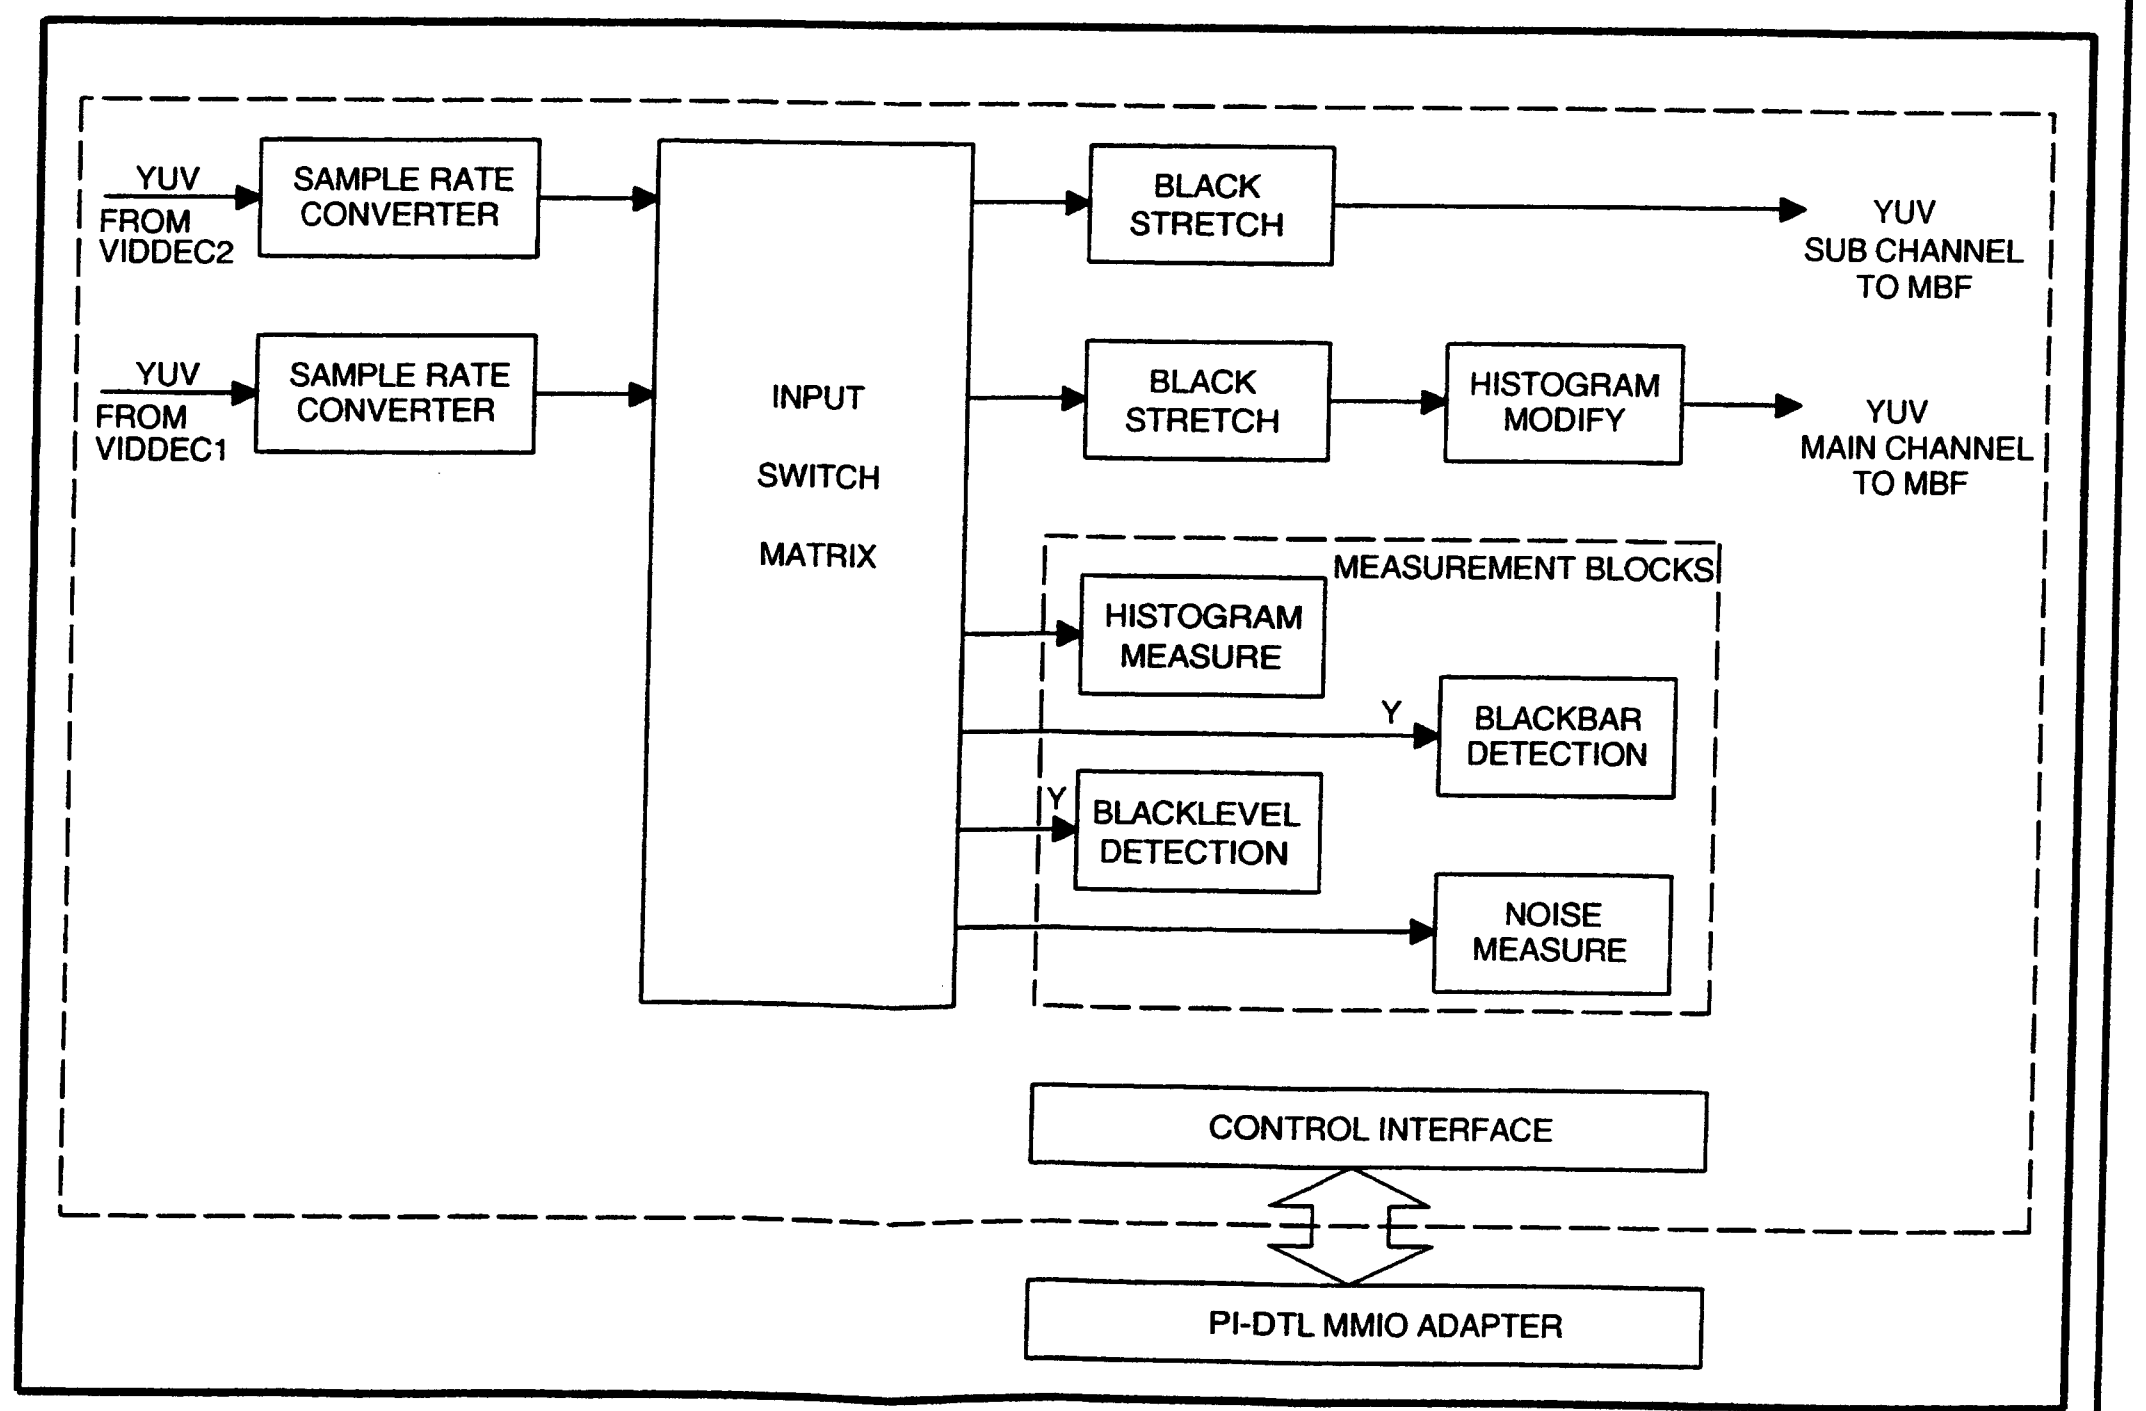
YUV
FROM VIDDEC2
SAMPLE RATE CONVERTER
YUV
FROM VIDDEC1
SAMPLE RATE CONVERTER
INPUT SWITCH MATRIX
BLACK STRETCH
YUV SUB CHANNEL TO MBF
BLACK STRETCH
HISTOGRAM MODIFY
YUV MAIN CHANNEL TO MBF
MEASUREMENT BLOCKS
HISTOGRAM MEASURE
Y
BLACKBAR DETECTION
Y
BLACKLEVEL DETECTION
NOISE MEASURE
CONTROL INTERFACE
PI-DTL MMIO ADAPTER

3139 123 5536.2

CL 36532058_027.eps
020903

Small Signal Board: RGB Processing

2300 B1	2311 A9	2324 D4	2329 B8	3303 D7	3308 A5	3313 A8	3320 B8	3326 D4	3332 D8	3337 B4	3347 D6	5307 A5	6326 D4	7303 D8	7320-B B9	I301 C5	I306 A6
2305 E6	2317 B6	2325 C5	2331 C9	3304 D7	3309 A8	3316 B8	3321 C8	3328 C5	3333 D8	3338 D8	3348 D6	5317 B5	6327 E5	7304 D7	7330-A D8	I302 C6	I307 A5
2307 A6	2318 B5	2326 C6	2339 D8	3305 E7	3310 A8	3317 A5	3322 C8	3329 C8	3334 A4	3339 B5	3349 C6	5327 B5	7300-H A1	7310-A A8	7330-B D9	I303 D4	I308 A6
2308 A5	2319 A8	2327 B6	2346 E5	3306 E7	3311 A8	3318 D5	3323 C8	3330 C8	3335 B4	3343 E4	3356 E5	5328 C5	7301 A8	7310-B A9	7346 D5	I304 D5	I309 B5
2310 A9	2321 B9	2328 B5	3302 B1	3307 A8	3312 A8	3319 B8	3324 D5	3331 D8	3336 B4	3345 E5	5300 A1	6301 E7	7302 C8	7320-A B8	7356 E5	I305 A5	I310 B6

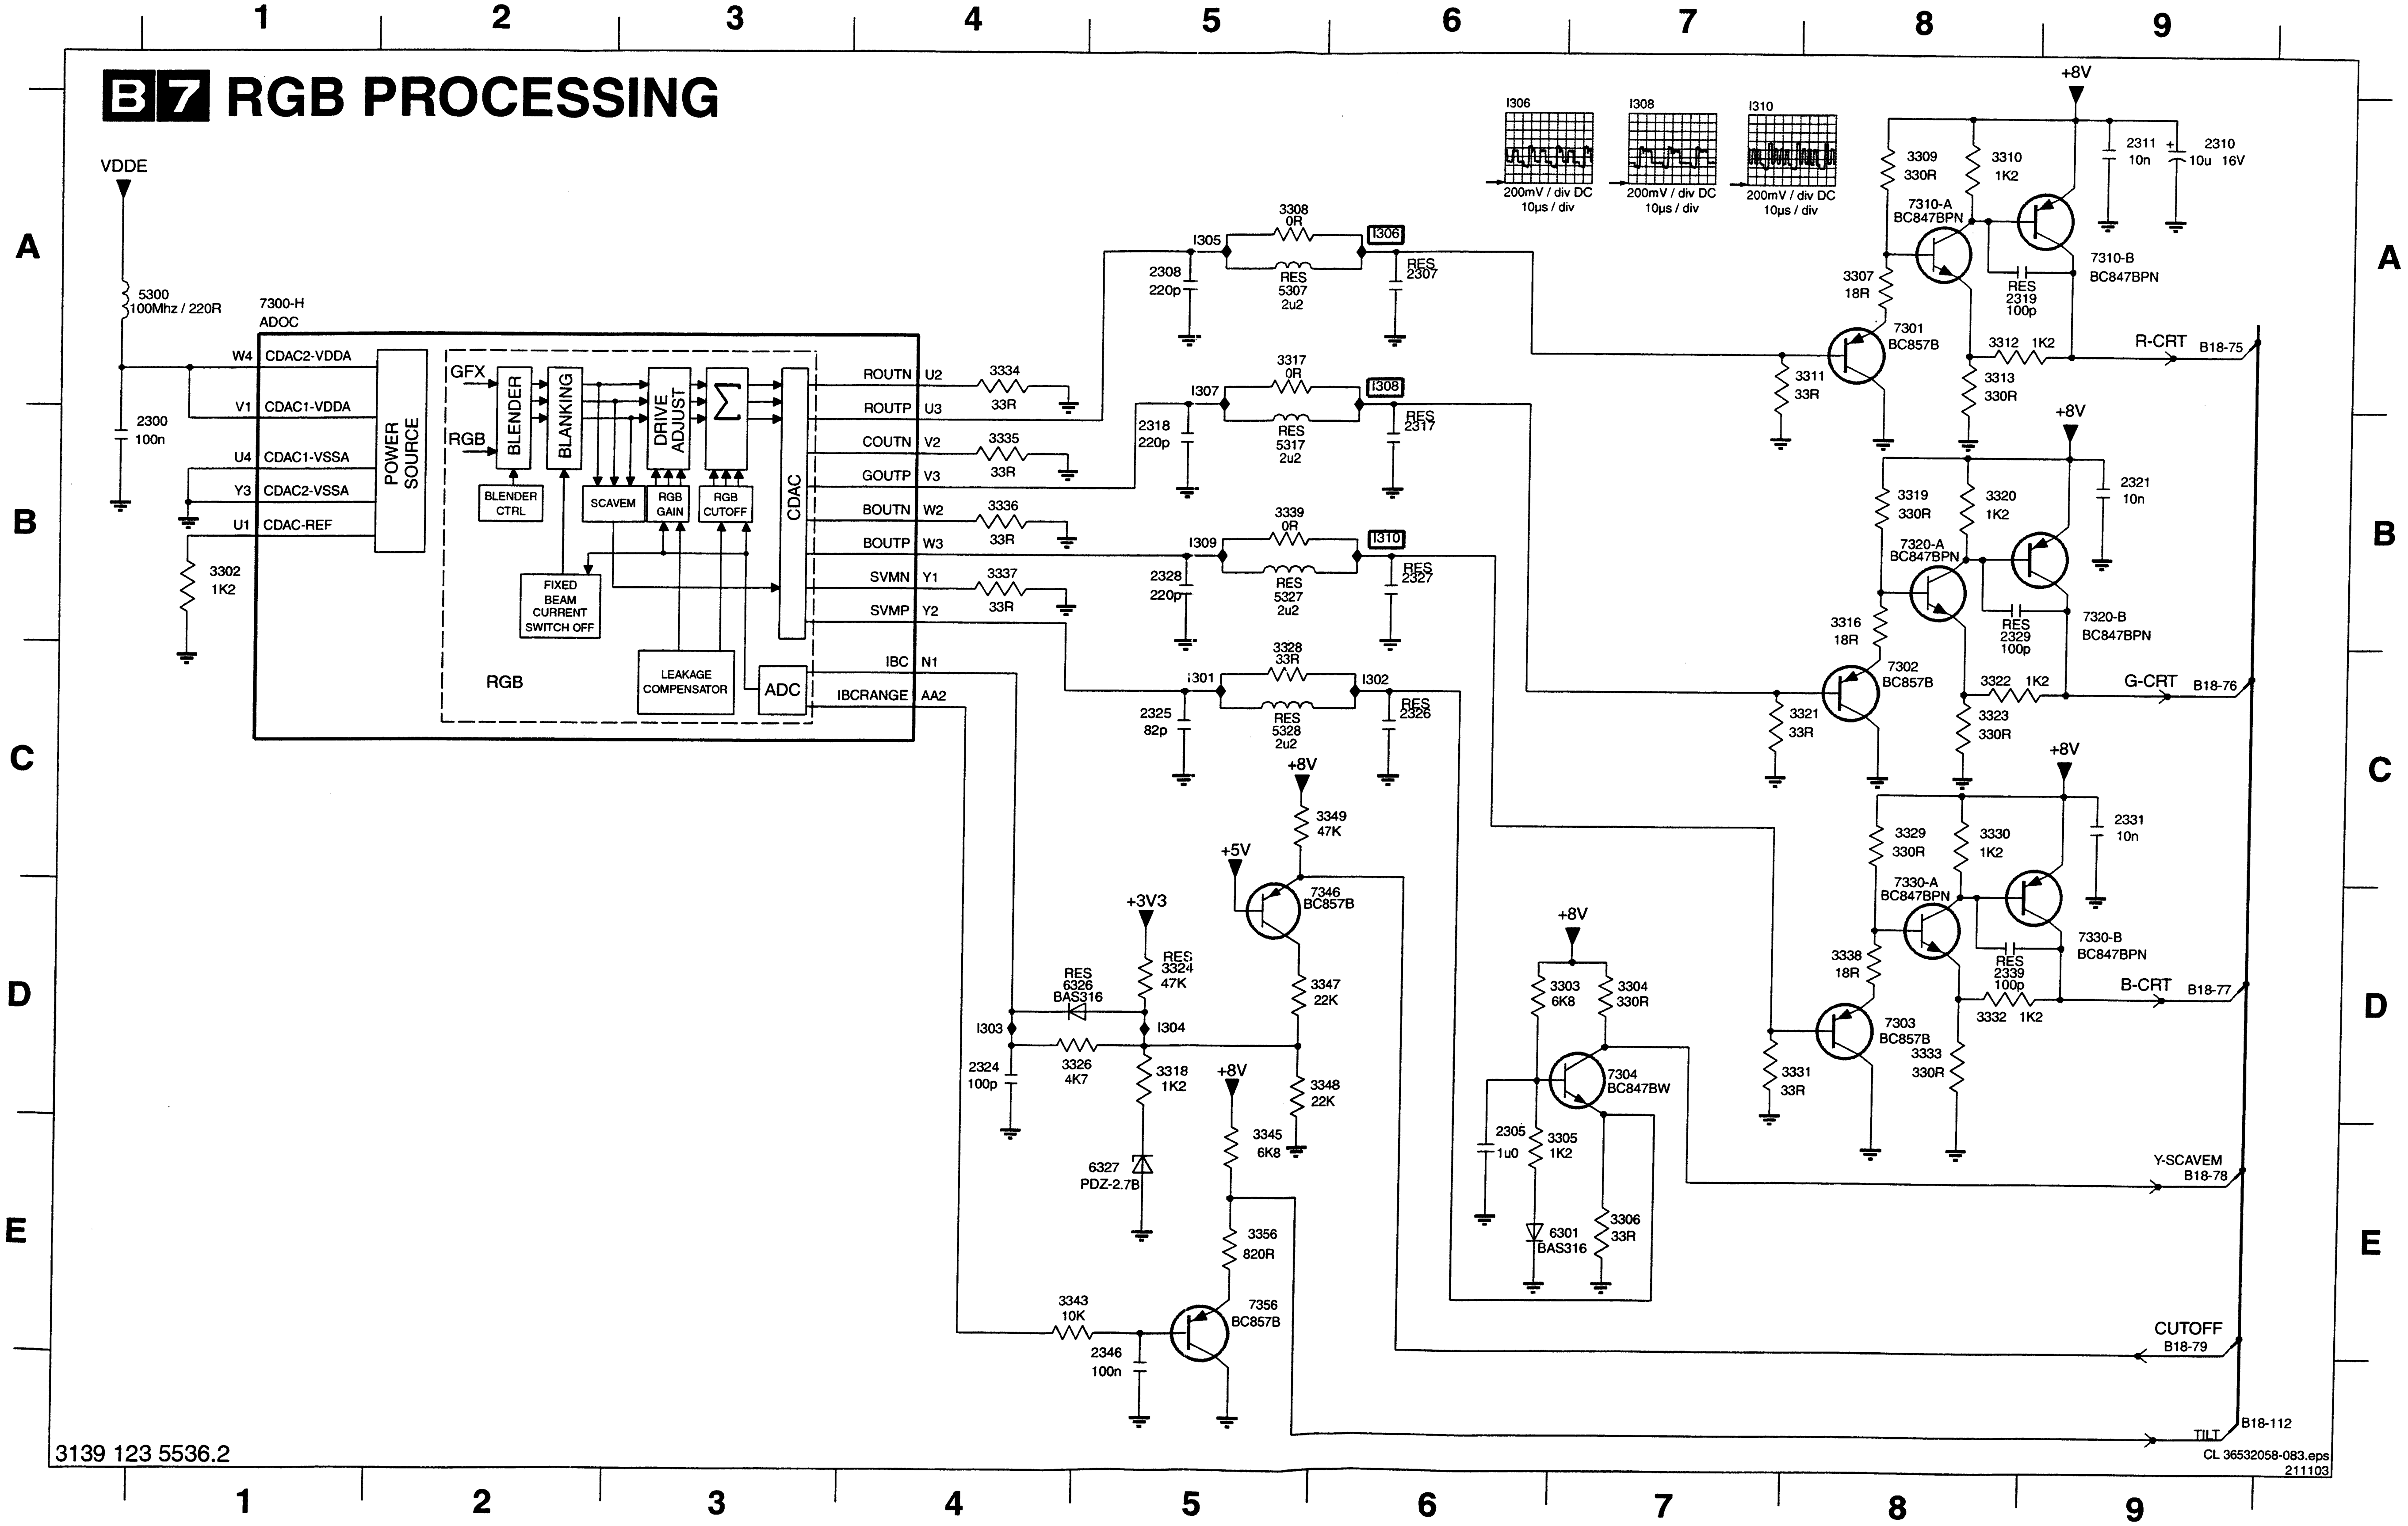
1
2
3
4
5
6
7
8
9
A
B
C
D
E
B7 RGB PROCESSING
VDDE
5300
100Mhz / 220R
2300
100n
3302
1K2
7300-H
ADOC
W4 CDAC2-VDDA
V1 CDAC1-VDDA
U4 CDAC1-VSSA
Y3 CDAC2-VSSA
U1 CDAC-REF
POWER SOURCE
GFX
RGB
BLENDER
BLANKING
DRIVE ADJUST
Σ
CDAC
BLENDER CTRL
SCAVEM
RGB GAIN
RGB CUTOFF
FIXED BEAM CURRENT SWITCH OFF
LEAKAGE COMPENSATOR
ADC
RGB
ROUTN U2
ROUTP U3
COUTN V2
GOUTP V3
BOUTN W2
BOUTP W3
SVMN Y1
SVMP Y2
IBC N1
IBCRANGE AA2
3334 33R
3335 33R
3336 33R
3337 33R
I305
3308 0R
I306
2308 220p
RES 5307 2u2
RES 2307
I307
3317 0R
I308
2318 220p
RES 5317 2u2
RES 2317
I309
3339 0R
I310
2328 220p
RES 5327 2u2
RES 2327
I301
3328 33R
I302
2325 82p
RES 5328 2u2
RES 2326
I306
I308
I310
200mV / div DC 10µs / div
200mV / div DC 10µs / div
200mV / div DC 10µs / div
+8V
3309 330R
3310 1K2
2311 10n
2310 10u 16V
7310-A BC847BPN
7310-B BC847BPN
3307 18R
RES 2319 100p
7301 BC857B
3311 33R
3312 1K2
3313 330R
R-CRT B18-75
+8V
3319 330R
3320 1K2
2321 10n
7320-A BC847BPN
7320-B BC847BPN
3316 18R
RES 2329 100p
7302 BC857B
3321 33R
3322 1K2
3323 330R
G-CRT B18-76
+8V
3329 330R
3330 1K2
2331 10n
7330-A BC847BPN
7330-B BC847BPN
3338 18R
RES 2339 100p
7303 BC857B
3331 33R
3332 1K2
3333 330R
B-CRT B18-77
+8V
3349 47K
+5V
7346 BC857B
3347 22K
3348 22K
+3V3
RES 3324 47K
RES 6326 BAS316
I303
I304
3326 4K7
2324 100p
3318 1K2
+8V
3345 6K8
6327 PDZ-2.7B
3356 820R
3343 10K
2346 100n
7356 BC857B
+8V
3303 6K8
3304 330R
7304 BC847BW
2305 1u0
3305 1K2
6301 BAS316
3306 33R
Y-SCAVEM B18-78
CUTOFF B18-79
TILT B18-112
3139 123 5536.2
CL 36532058-083.eps 211103

Small Signal Board: Sync & Deflection Processing

2341 B2
2342 C2
2343 C2
2344 C1
2345 C1
2350 A7
2351 A8
2352 A9
2358 D7
2359 C6
2360 C6
2361 C8
2362 B9
2363 B7
2364 C8
2365 D8
2366 C9
2371 D9
2372 D9
2377 E10
2379 E10
3340 A2
3341 B2
3346 D2
3350 A8
3351 A7
3352 A9
3353 A9
3354 A10
3355 C6
3357 C7
3358 A6
3360 B8
3361 B8
3362 B9
3363 B9
3364 B9
3365 C8
3366 C9
3367 B10
3368 C10
3371 D9
3372 C8
3373 C8
3374 E9
3375 E9
3376 D8
3377 C8
3378 B8
4361 C9
4363 B8
5342 C2
5343 C2
5344 C1
5345 C1
6341 C1
6353 A9
6361 B9
6365 C9
6367 C9
6368 C9
7300-F B3
7361 B8
7365 C8
F341 C3
F346 E3
F348 D10
F351 E6
F354 A9
F355 B8
F357 C8
F358 C9
I341 C6
I342 C6
I343 C6
I344 C7
I345 B9
I346 B8
I347 C8
I348 C9
I349 E10
I350 E10

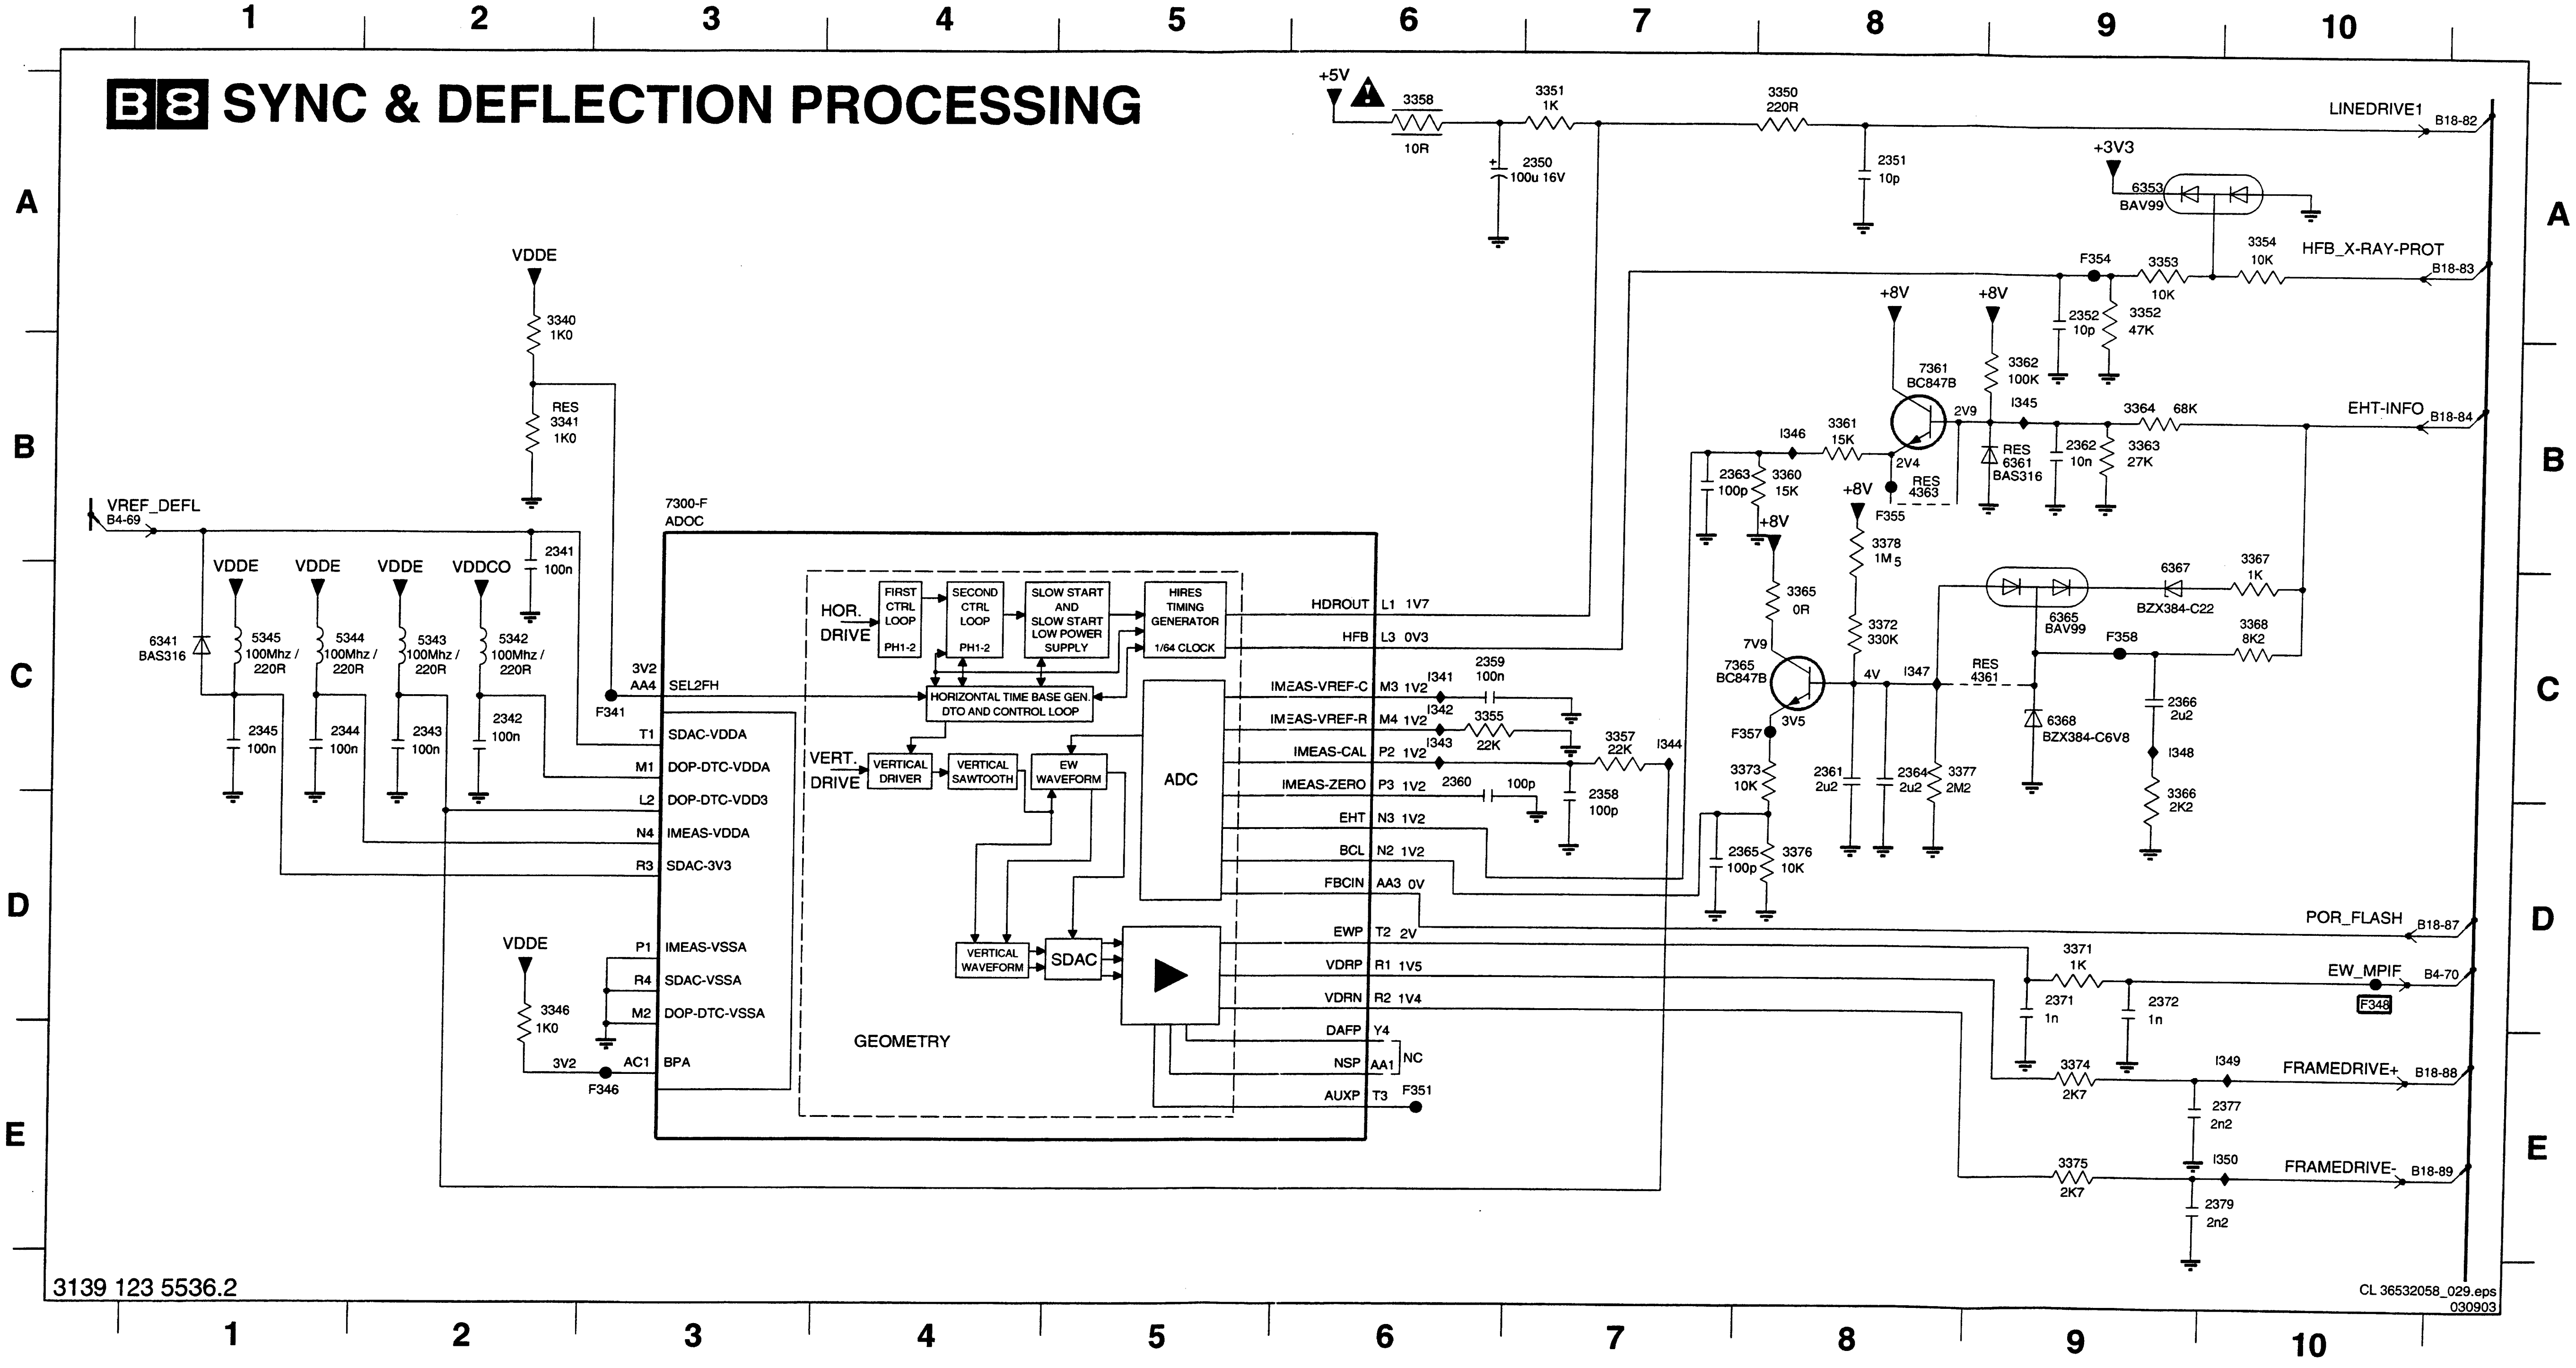
B8 SYNC & DEFLECTION PROCESSING
1 2 3 4 5 6 7 8 9 10
A B C D E
VDDE
3340 1K0
RES 3341 1K0
VREF_DEFL B4-69
VDDE VDDE VDDE VDDCO
2341 100n
6341 BAS316
5345 100Mhz / 220R
5344 100Mhz / 220R
5343 100Mhz / 220R
5342 100Mhz / 220R
2345 100n
2344 100n
2343 100n
2342 100n
7300-F ADOC
3V2 AA4 SEL2FH
F341
T1 SDAC-VDDA
M1 DOP-DTC-VDDA
L2 DOP-DTC-VDD3
N4 IMEAS-VDDA
R3 SDAC-3V3
VDDE
3346 1K0
P1 IMEAS-VSSA
R4 SDAC-VSSA
M2 DOP-DTC-VSSA
3V2 AC1 BPA
F346
HOR. DRIVE
FIRST CTRL LOOP PH1-2
SECOND CTRL LOOP PH1-2
SLOW START AND SLOW START LOW POWER SUPPLY
HIRES TIMING GENERATOR 1/64 CLOCK
HORIZONTAL TIME BASE GEN. DTO AND CONTROL LOOP
VERT. DRIVE
VERTICAL DRIVER
VERTICAL SAWTOOTH
EW WAVEFORM
ADC
VERTICAL WAVEFORM
SDAC
GEOMETRY
HDROUT L1 1V7
HFB L3 0V3
IMEAS-VREF-C M3 1V2
IMEAS-VREF-R M4 1V2
IMEAS-CAL P2 1V2
IMEAS-ZERO P3 1V2
EHT N3 1V2
BCL N2 1V2
FBCIN AA3 0V
EWP T2 2V
VDRP R1 1V5
VDRN R2 1V4
DAFP Y4
NSP AA1 NC
AUXP T3 F351
I341 I342 I343 I344
2359 100n
3355 22K
3357 22K
2360 100p
2358 100p
+5V
3358 10R
3351 1K
2350 100u 16V
3350 220R
2351 10p
LINEDRIVE1 B18-82
+3V3
6353 BAV99
3354 10K
HFB_X-RAY-PROT B18-83
F354
3353 10K
2352 10p
3352 47K
+8V +8V
7361 BC847B
3362 100K
I345
2V9
3364 68K
EHT-INFO B18-84
I346
3361 15K
2V4
2363 100p
3360 15K
+8V
RES 4363
F355
RES 6361 BAS316
2362 10n
3363 27K
+8V
3378 1M5
3365 0R
7V9
7365 BC847B
3372 330K
4V I347
RES 4361
6365 BAV99
6367 BZX384-C22
3367 1K
3368 8K2
F358
2366 2u2
I348
3366 2K2
6368 BZX384-C6V8
F357 3V5
3373 10K
2361 2u2
2364 2u2
3377 2M2
2365 100p
3376 10K
POR_FLASH B18-87
3371 1K
2371 1n
2372 1n
EW_MPIF B4-70
F348
3374 2K7
I349
FRAMEDRIVE+ B18-88
2377 2n2
3375 2K7
I350
FRAMEDRIVE- B18-89
2379 2n2
3139 123 5536.2
CL 36532058_029.eps 030903

Small Signal Board: Protection

2380	B2
2386	B5
2395	E5
2395	D6
2397	D3
3380	B2
3382	A4
3384	E5
3385	B5
3386	B5
3388	C5
3390	C5
3391	E4
3392	E3
3393	D5
3394	D4
3395	E5
3396	D4
3397	C4
3398	C2
6381	A3
6382	A3
6384	B3
6385	A4
6397	C3
6398	C3
7300-G	C6
7382	A4
7383-A	E6
7383-B	E5
7393	D5
F381	C6
F382	C6
F383	C6
F384	A4
F385	B3
F386	B2
F387	E4
F389	C3
F390	C4
F391	B4
I381	A2
I382	C4

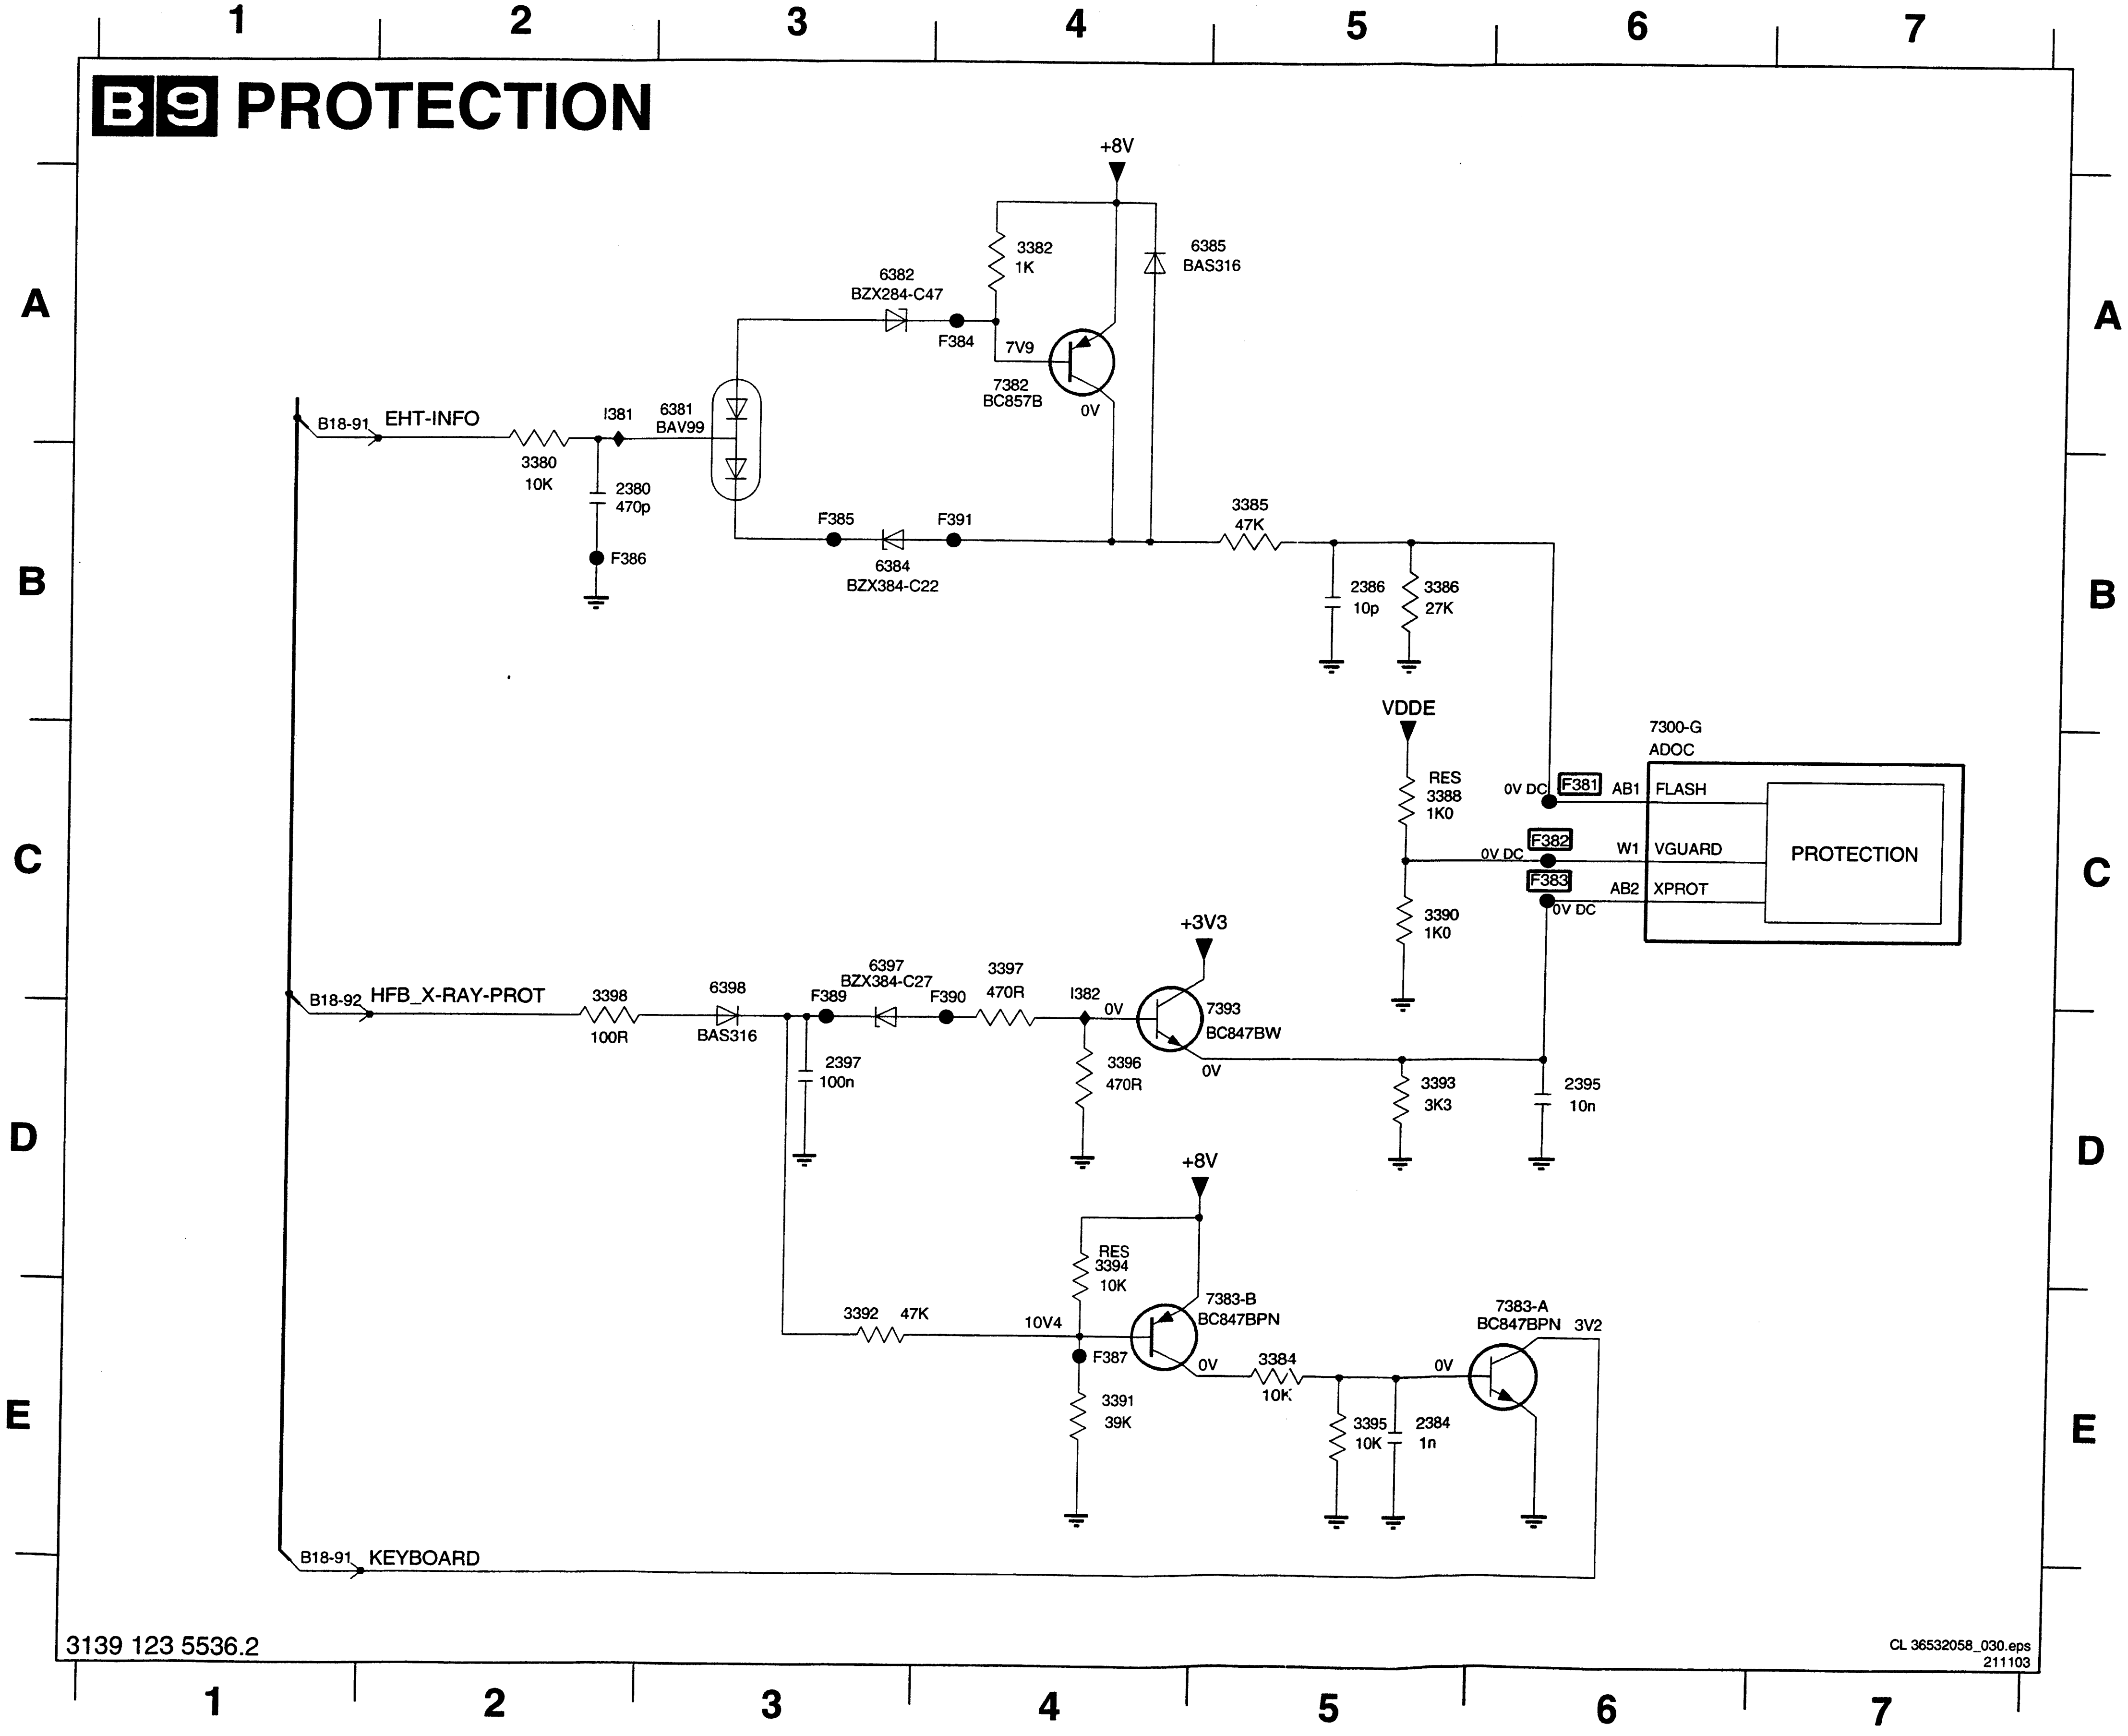
1
2
3
4
5
6
7
A
B
C
D
E
B9 PROTECTION
+8V
3382
1K
6385
BAS316
6382
BZX284-C47
F384
7V9
7382
BC857B
0V
B18-91
EHT-INFO
I381
6381
BAV99
3380
10K
2380
470p
F386
F385
F391
6384
BZX384-C22
3385
47K
2386
10p
3386
27K
VDDE
RES
3388
1K0
3390
1K0
7300-G
ADOC
0V DC
F381
AB1
FLASH
0V DC
F382
W1
VGUARD
F383
AB2
XPROT
0V DC
PROTECTION
+3V3
B18-92
HFB_X-RAY-PROT
3398
100R
6398
BAS316
6397
BZX384-C27
F389
F390
3397
470R
I382
0V
7393
BC847BW
0V
2397
100n
3396
470R
3393
3K3
2395
10n
+8V
RES
3394
10K
7383-B
BC847BPN
3392
47K
10V4
F387
0V
3384
10K
7383-A
BC847BPN
3V2
0V
3391
39K
3395
10K
2384
1n
B18-91
KEYBOARD
3139 123 5536.2
CL 36532058_030.eps
211103

Small Signal Board: Audio Processing

2430	C7
2431	C6
2432	C6
2433	C5
2434	C5
2435	C6
2436	C6
2437	C7
2438	B9
2439	B9
2440	D7
2441	D7
2442	D8
2443	E7
2444	E7
2445	E7
2447	D1
2450	C4
2451	A8
2452	C4
2453	A7
2454	A4
2457	A2
2458	C6
2461	E9
2462	E9
2465	A5
2467	C6
2468	B6
2480	C8
2481	E8
2483	C9
2484	D8
2485	E9
2486	C9
2487	C9
2488	D10
2489	D10
3433	B9
3434	B8
3435	A8
3436	A8
3437	A8
3439	A7
3440	A7
3441	A7
3442	B7
3443	B7
3444	A7
3445	A4
3446	A4
3447	B4
3448	B4
3449	A5
3450	A4
3452	A3
3453	A2
3454	A3
3455	B3
3456	B3
3457	A3
3458	A5
3459	A5
3460	A6
3461	B5
3462	B6
3463	A6
3465	A9
3468	B6
3480	C8
3481	E8
3482	D8
3483	C9
3484	D9
3485	E9
3486	D10
3487	E10
4430	B3
4431	B4
4432	B6
4433	B7
4434	B8
4435	E3
4436	E3
4437	E3
4450	A10
4451	A10
4452	A10
4453	A10
4480	C8
4481	E8
5450	C4
5452	C4
5480	C8
6480	D10
6481	E10
7300-B	C2
7430-A	A8
7430-B	A9
7431-A	A7
7431-B	A7
7432-A	A4
7432-B	A4
7433-A	A3
7433-B	A3
7434-A	A6
7434-B	A6
7480-A	D9
7480-B	E9
7486-A	D10
7486-B	E10
F437	E4
F438	E4
F439	E4
F448	C4
F449	C4
F480	C7
F481	E8
I431	A2
I432	A4
I433	A5
I434	A7
I435	A8
I436	C5
I437	C6
I438	C6
I439	C6
I440	C7
I441	D5
I442	D5
I443	E5
I444	E5
I445	C8
I446	D8
I447	D10
I448	E10

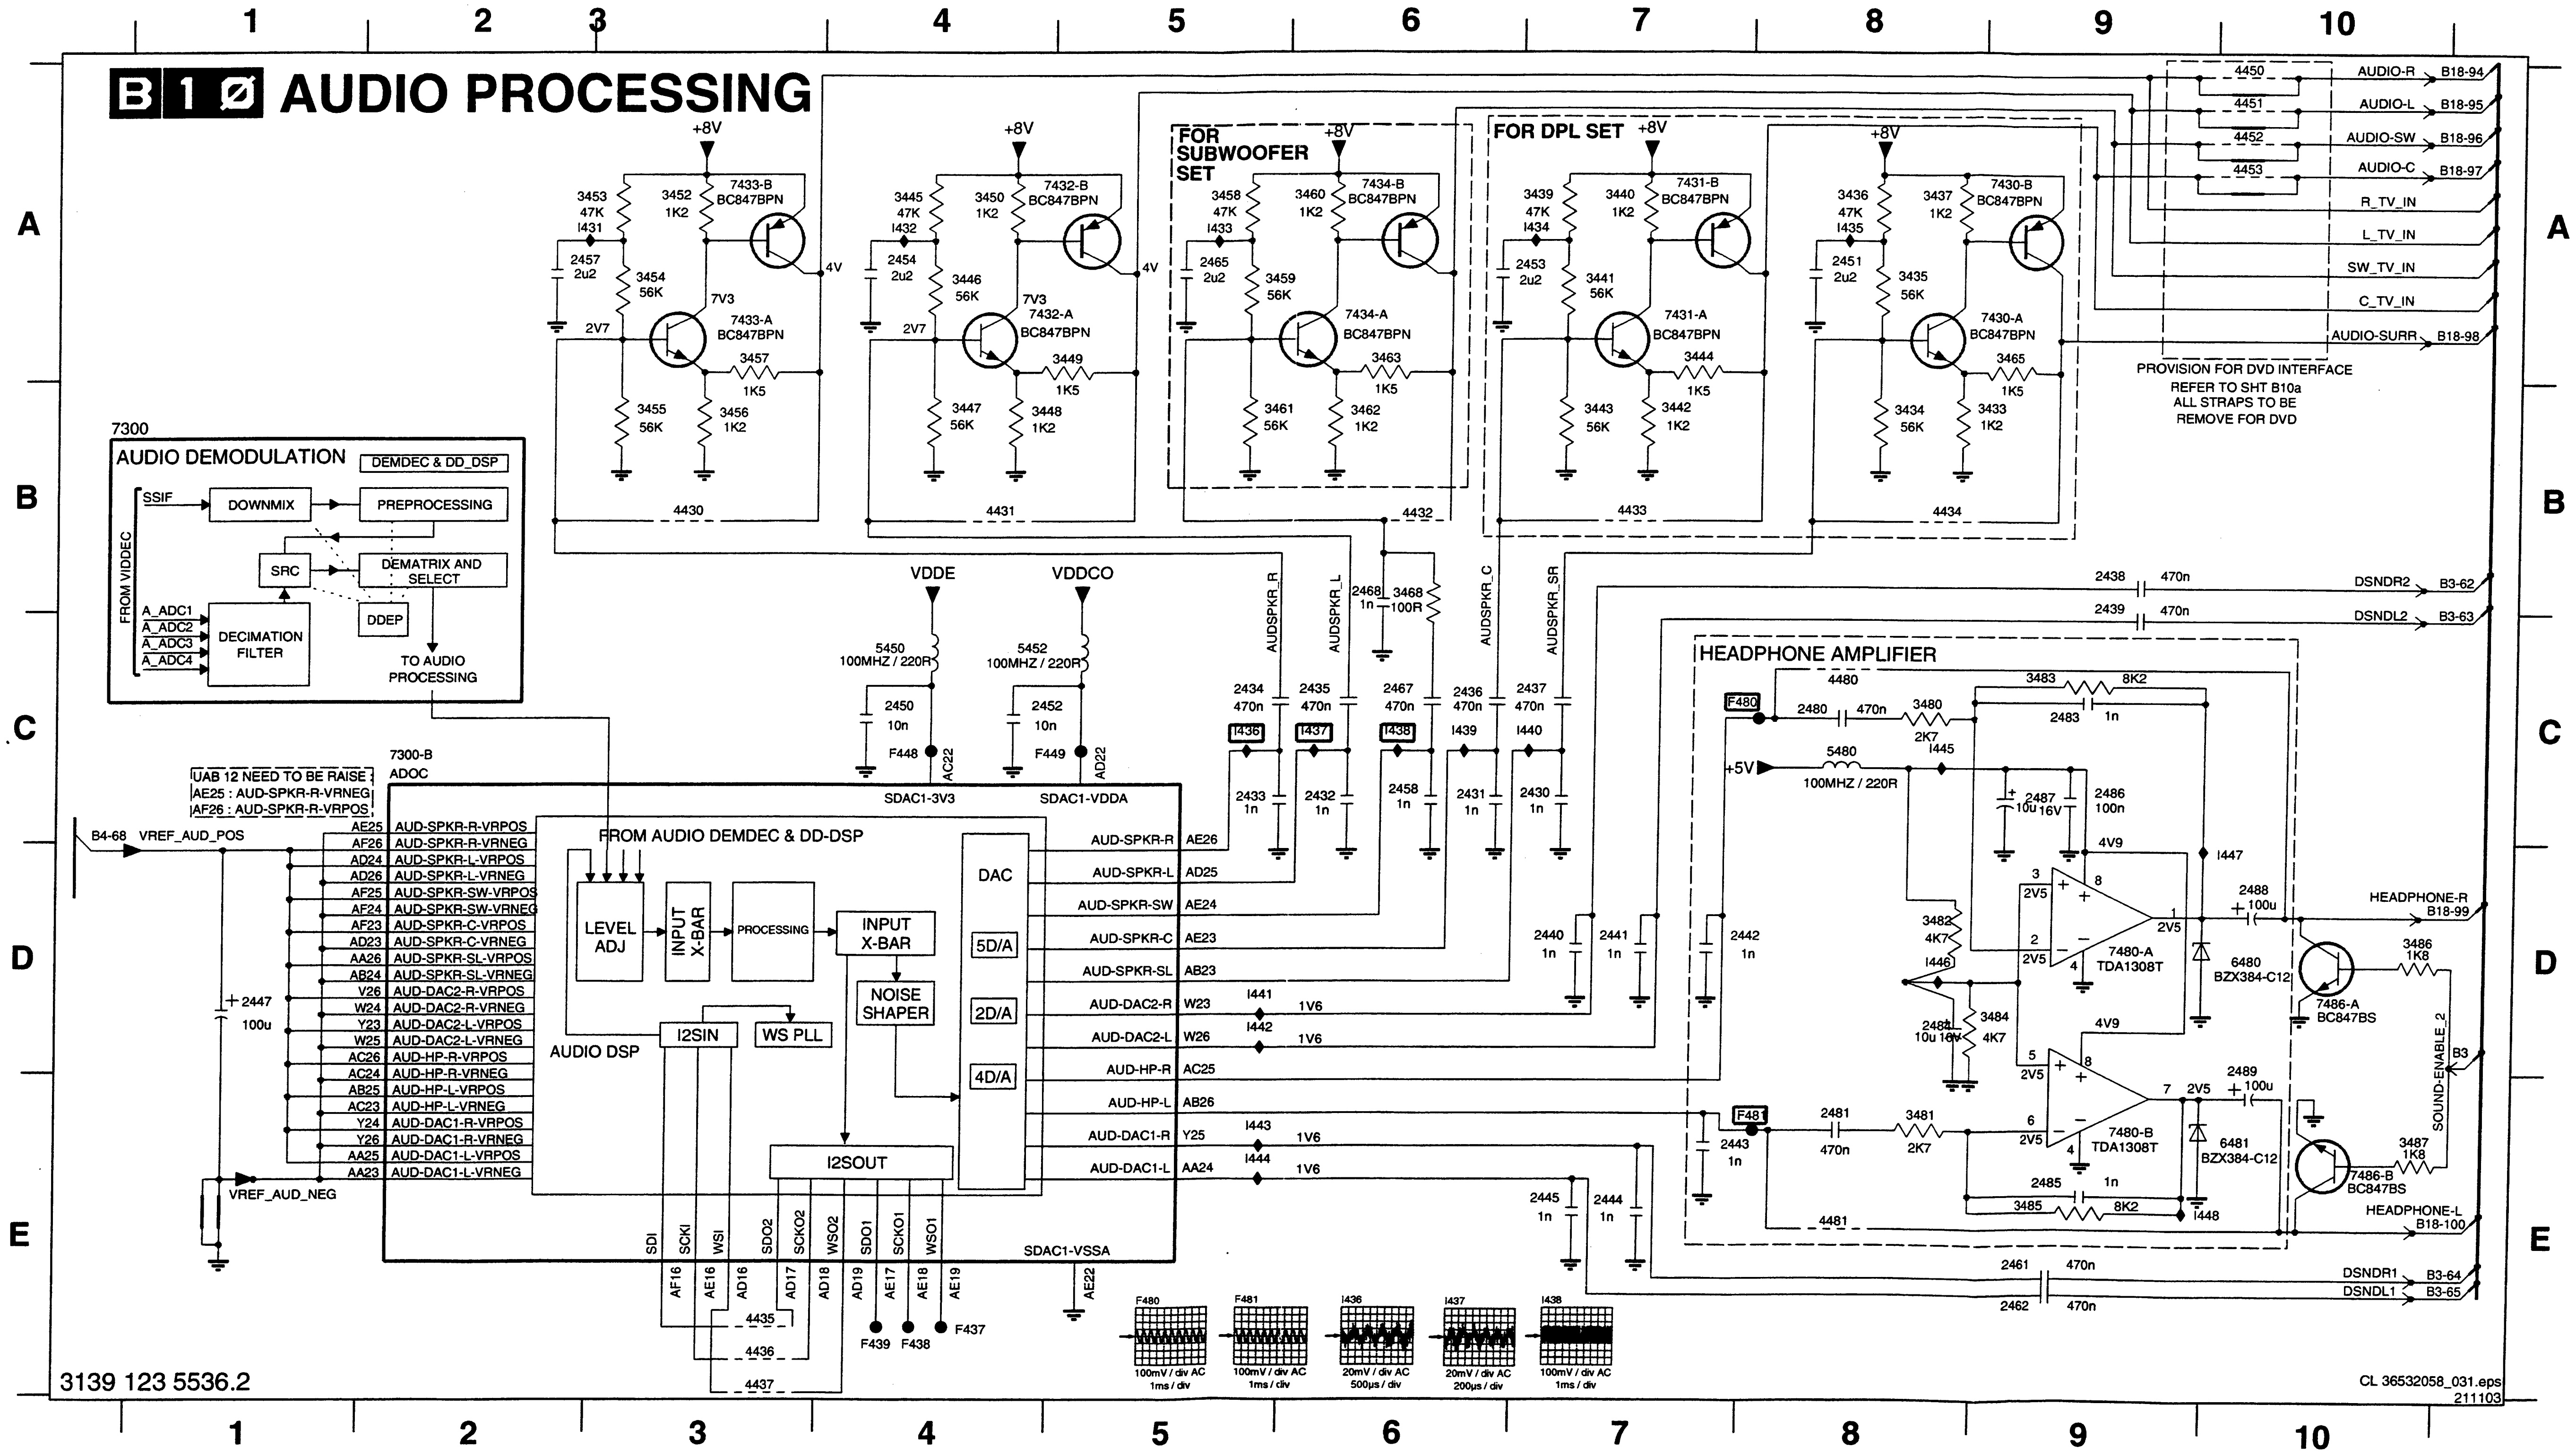
1 2 3 4 5 6 7 8 9 10
A B C D E
B10 AUDIO PROCESSING
+8V
FOR SUBWOOFER SET
FOR DPL SET
7433-B BC847BPN
7433-A BC847BPN
7432-B BC847BPN
7432-A BC847BPN
7434-B BC847BPN
7434-A BC847BPN
7431-B BC847BPN
7431-A BC847BPN
7430-B BC847BPN
7430-A BC847BPN
4V
7V3
2V7
7300
AUDIO DEMODULATION
DEMDEC & DD_DSP
SSIF
DOWNMIX
PREPROCESSING
SRC
DEMATRIX AND SELECT
DDEP
DECIMATION FILTER
FROM VIDDEC
A_ADC1
A_ADC2
A_ADC3
A_ADC4
TO AUDIO PROCESSING
VDDE
VDDCO
5450 100MHZ / 220R
5452 100MHZ / 220R
F448
F449
AUDSPKR_R
AUDSPKR_L
AUDSPKR_C
AUDSPKR_SR
7300-B ADOC
UAB 12 NEED TO BE RAISE
AE25 : AUD-SPKR-R-VRNEG
AF26 : AUD-SPKR-R-VRPOS
B4-68 VREF_AUD_POS
VREF_AUD_NEG
AUD-SPKR-R-VRPOS
AUD-SPKR-R-VRNEG
AUD-SPKR-L-VRPOS
AUD-SPKR-L-VRNEG
AUD-SPKR-SW-VRPOS
AUD-SPKR-SW-VRNEG
AUD-SPKR-C-VRPOS
AUD-SPKR-C-VRNEG
AUD-SPKR-SL-VRPOS
AUD-SPKR-SL-VRNEG
AUD-DAC2-R-VRPOS
AUD-DAC2-R-VRNEG
AUD-DAC2-L-VRPOS
AUD-DAC2-L-VRNEG
AUD-HP-R-VRPOS
AUD-HP-R-VRNEG
AUD-HP-L-VRPOS
AUD-HP-L-VRNEG
AUD-DAC1-R-VRPOS
AUD-DAC1-R-VRNEG
AUD-DAC1-L-VRPOS
AUD-DAC1-L-VRNEG
FROM AUDIO DEMDEC & DD-DSP
LEVEL ADJ
INPUT X-BAR
PROCESSING
NOISE SHAPER
AUDIO DSP
I2SIN
WS PLL
I2SOUT
DAC
5D/A
2D/A
4D/A
SDAC1-3V3
SDAC1-VDDA
SDAC1-VSSA
AUD-SPKR-R AE26
AUD-SPKR-L AD25
AUD-SPKR-SW AE24
AUD-SPKR-C AE23
AUD-SPKR-SL AB23
AUD-DAC2-R W23
AUD-DAC2-L W26
AUD-HP-R AC25
AUD-HP-L AB26
AUD-DAC1-R Y25
AUD-DAC1-L AA24
1V6
SDI SCKI WSI SDO2 SCKO2 WSO2 SDO1 SCKO1 WSO1
F439 F438 F437
4435 4436 4437
AUDIO-R B18-94
AUDIO-L B18-95
AUDIO-SW B18-96
AUDIO-C B18-97
R_TV_IN
L_TV_IN
SW_TV_IN
C_TV_IN
AUDIO-SURR B18-98
PROVISION FOR DVD INTERFACE REFER TO SHT B10a ALL STRAPS TO BE REMOVE FOR DVD
DSNDR2 B3-62
DSNDL2 B3-63
HEADPHONE AMPLIFIER
+5V
5480 100MHZ / 220R
7480-A TDA1308T
7480-B TDA1308T
6480 BZX384-C12
6481 BZX384-C12
7486-A BC847BS
7486-B BC847BS
HEADPHONE-R B18-99
HEADPHONE-L B18-100
SOUND-ENABLE_2 B3
DSNDR1 B3-64
DSNDL1 B3-65
F480 F481 I436 I437 I438
100mV / div AC 1ms / div
100mV / div AC 1ms / div
20mV / div AC 500µs / div
20mV / div AC 200µs / div
100mV / div AC 1ms / div
3139 123 5536.2
CL 36532058_031.eps 211103

Small Signal Board: Control

0201 A10
0202 A10
1581 C5
1582 E4
2514 B1
2516 C1
2525 C3
2546 C9
2557 C9
2571 E7
2581 C4
2582 C4
2583 D5
2584 D5
3501 A3
3502 A4
3503 A2
3504 A2
3507 B3
3508 B2
3509 B3
3510 B3
3511 B1
3512 B1
3513 B2
3515 B2
3518 A3
3523 C3
3530 E3
3541 A10
3542 A9
3543 B9
3544 A9
3546 B9
3547 C9
3548 B9
3549 B9
3550 A9
3557 C9
3561 D8
3563 D8
3564 D9
3565 D8
3570 E8
3571 E9
3572 E9
3573 E8
3580 C3
3581 C4
3582 E4
3583 E6
3586 E6
3590 D6
4501 E9
4560 D8
4570 E9
4571 E9
4573 E9
5570 E7
5583 D4
6589 C10
7300-A E8
7300-C A4
7300-D A8
7300-K C6
7525 D2
7581 E5
F508 B1
F509 B1
F510 C10
F511 C10
F512 C10
F513 C10
F514 B10
F515 B10
F516 B9
F517 B9
F518 B9
F519 C10
F520 A9
F521 A9
F522 A9
F523 A9
F524 A4
F527 A1
F532 D2
F533 B7
F534 B3
F537 A4
F538 B3
F539 B7
F540 B7
F541 B7
F542 B7
F543 B7
F544 B7
F550 B9
F551 B3
F570 E7
F582 E5
F584 D6
I501 A1
I502 E6

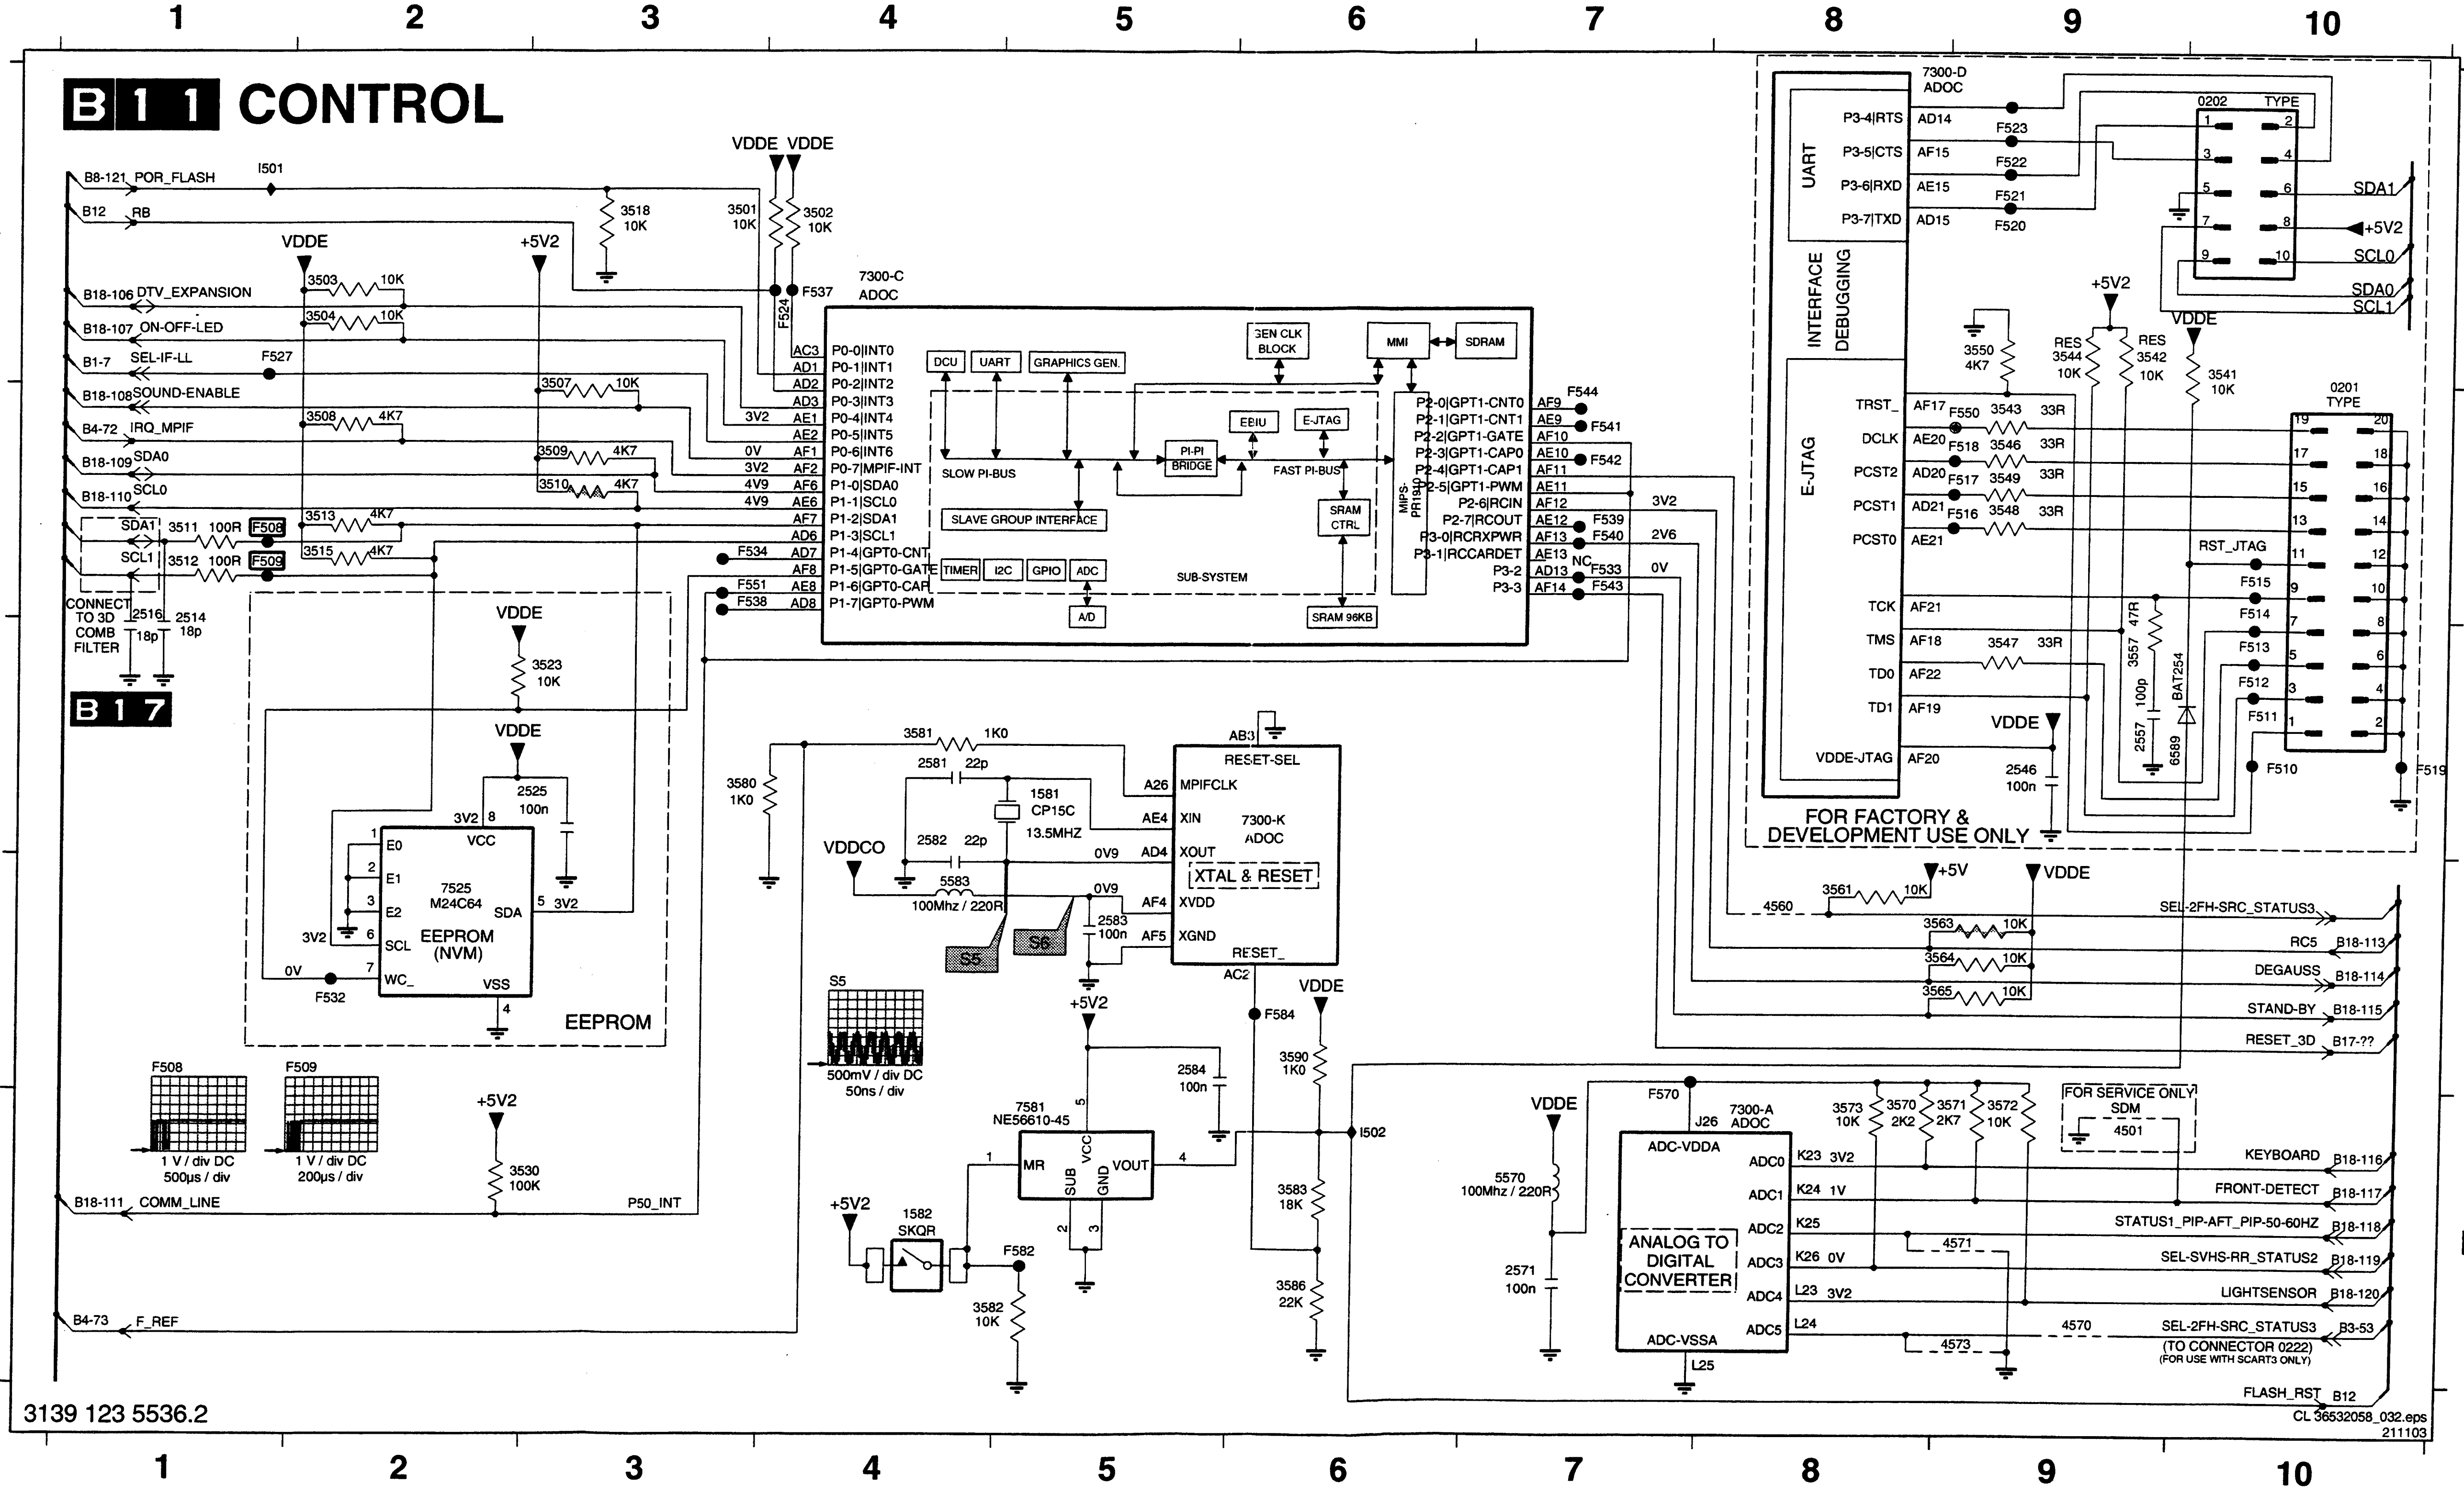
1 2 3 4 5 6 7 8 9 10
A B C D E
B11 CONTROL
B17
VDDE VDDE
B8-121 POR_FLASH
I501
B12 RB
3518 10K
3501 10K
3502 10K
VDDE
+5V2
B18-106 DTV_EXPANSION
3503 10K
B18-107 ON-OFF-LED
3504 10K
F537
F524
7300-C ADOC
B1-7 SEL-IF-LL
F527
B18-108 SOUND-ENABLE
3507 10K
B4-72 IRQ_MPIF
3508 4K7
B18-109 SDA0
3509 4K7
B18-110 SCL0
3510 4K7
SDA1
SCL1
3511 100R
3512 100R
F508
F509
3513 4K7
3515 4K7
CONNECT TO 3D COMB FILTER
2516 18p
2514 18p
AC3 P0-0|INT0
AD1 P0-1|INT1
AD2 P0-2|INT2
AD3 P0-3|INT3
AE1 P0-4|INT4
AE2 P0-5|INT5
AF1 P0-6|INT6
AF2 P0-7|MPIF-INT
AF6 P1-0|SDA0
AE6 P1-1|SCL0
AF7 P1-2|SDA1
AD6 P1-3|SCL1
AD7 P1-4|GPT0-CNT
AF8 P1-5|GPT0-GATE
AE8 P1-6|GPT0-CAP
AD8 P1-7|GPT0-PWM
3V2 0V 3V2 4V9 4V9
F534 F551 F538
DCU UART GRAPHICS GEN.
GEN CLK BLOCK
MMI SDRAM
EBIU E-JTAG
PI-PI BRIDGE
SLOW PI-BUS
FAST PI-BUS
SLAVE GROUP INTERFACE
SRAM CTRL
MIPS-PR1910
TIMER I2C GPIO ADC
A/D
SUB-SYSTEM
SRAM 96KB
P2-0|GPT1-CNT0 AF9
P2-1|GPT1-CNT1 AE9
P2-2|GPT1-GATE AF10
P2-3|GPT1-CAP0 AE10
P2-4|GPT1-CAP1 AE11
P2-5|GPT1-PWM AE11
P2-6|RCIN AF12
P2-7|RCOUT AE12
P3-0|RCRXPWR AF13
P3-1|RCCARDET AE13
P3-2 AD13
P3-3 AF14
F544 F541 F542 F539 F540 F533 F543
3V2 2V6 0V NC
7300-D ADOC
UART
P3-4|RTS AD14 F523
P3-5|CTS AF15 F522
P3-6|RXD AE15 F521
P3-7|TXD AD15 F520
INTERFACE DEBUGGING
E-JTAG
TRST_ AF17 F550 3543 33R
DCLK AE20 F518 3546 33R
PCST2 AD20 F517 3549 33R
PCST1 AD21 F516 3548 33R
PCST0 AE21
TCK AF21
TMS AF18 3547 33R
TDO AF22
TDI AF19
VDDE-JTAG AF20
0202 TYPE
0201 TYPE
SDA1 +5V2 SCL0 SDA0 SCL1
+5V2 VDDE
3550 4K7
RES 3544 10K
RES 3542 10K
3541 10K
RST_JTAG
F515 F514 F513 F512 F511 F510 F519
3557 47R
100p 2557
BAT254 6589
VDDE
2546 100n
FOR FACTORY & DEVELOPMENT USE ONLY
VDDE
3523 10K
VDDE
2525 100n
7525 M24C64
EEPROM (NVM)
E0 E1 E2 SCL WC_ VCC SDA VSS
3V2 3V2 0V
F532
EEPROM
3581 1K0
3580 1K0
2581 22p
1581 CP15C 13.5MHZ
2582 22p
VDDCO
5583 100Mhz / 220R
S5 S6
2583 100n
0V9 0V9
7300-K ADOC
AB3 RESET-SEL
A26 MPIFCLK
AE4 XIN
AD4 XOUT
AF4 XVDD
AF5 XGND
XTAL & RESET
RESET_
AC2
F584
VDDE
3590 1K0
+5V2
2584 100n
I502
3583 18K
3586 22K
7581 NE56610-45
MR VCC SUB GND VOUT
+5V2
1582 SKQR
F582
3582 10K
S5
500mV / div DC 50ns / div
F508
1 V / div DC 500µs / div
F509
1 V / div DC 200µs / div
+5V2
3530 100K
B18-111 COMM_LINE
P50_INT
B4-73 F_REF
4560
3561 10K
+5V VDDE
3563 10K
3564 10K
3565 10K
SEL-2FH-SRC_STATUS3
RC5 B18-113
DEGAUSS B18-114
STAND-BY B18-115
RESET_3D B17-??
VDDE
F570
7300-A ADOC
J26
ADC-VDDA
ADC0 K23 3V2
ADC1 K24 1V
ADC2 K25
ADC3 K26 0V
ADC4 L23 3V2
ADC5 L24
ADC-VSSA L25
ANALOG TO DIGITAL CONVERTER
5570 100Mhz / 220R
2571 100n
3573 10K
3570 2K2
3571 2K7
3572 10K
FOR SERVICE ONLY SDM 4501
KEYBOARD B18-116
FRONT-DETECT B18-117
STATUS1_PIP-AFT_PIP-50-60HZ B18-118
SEL-SVHS-RR_STATUS2 B18-119
LIGHTSENSOR B18-120
SEL-2FH-SRC_STATUS3 B3-53
(TO CONNECTOR 0222) (FOR USE WITH SCART3 ONLY)
4570 4571 4573
FLASH_RST B12
3139 123 5536.2
CL 36532058_032.eps 211103

Small Signal Board: Control-Memory Interface (EBIU)

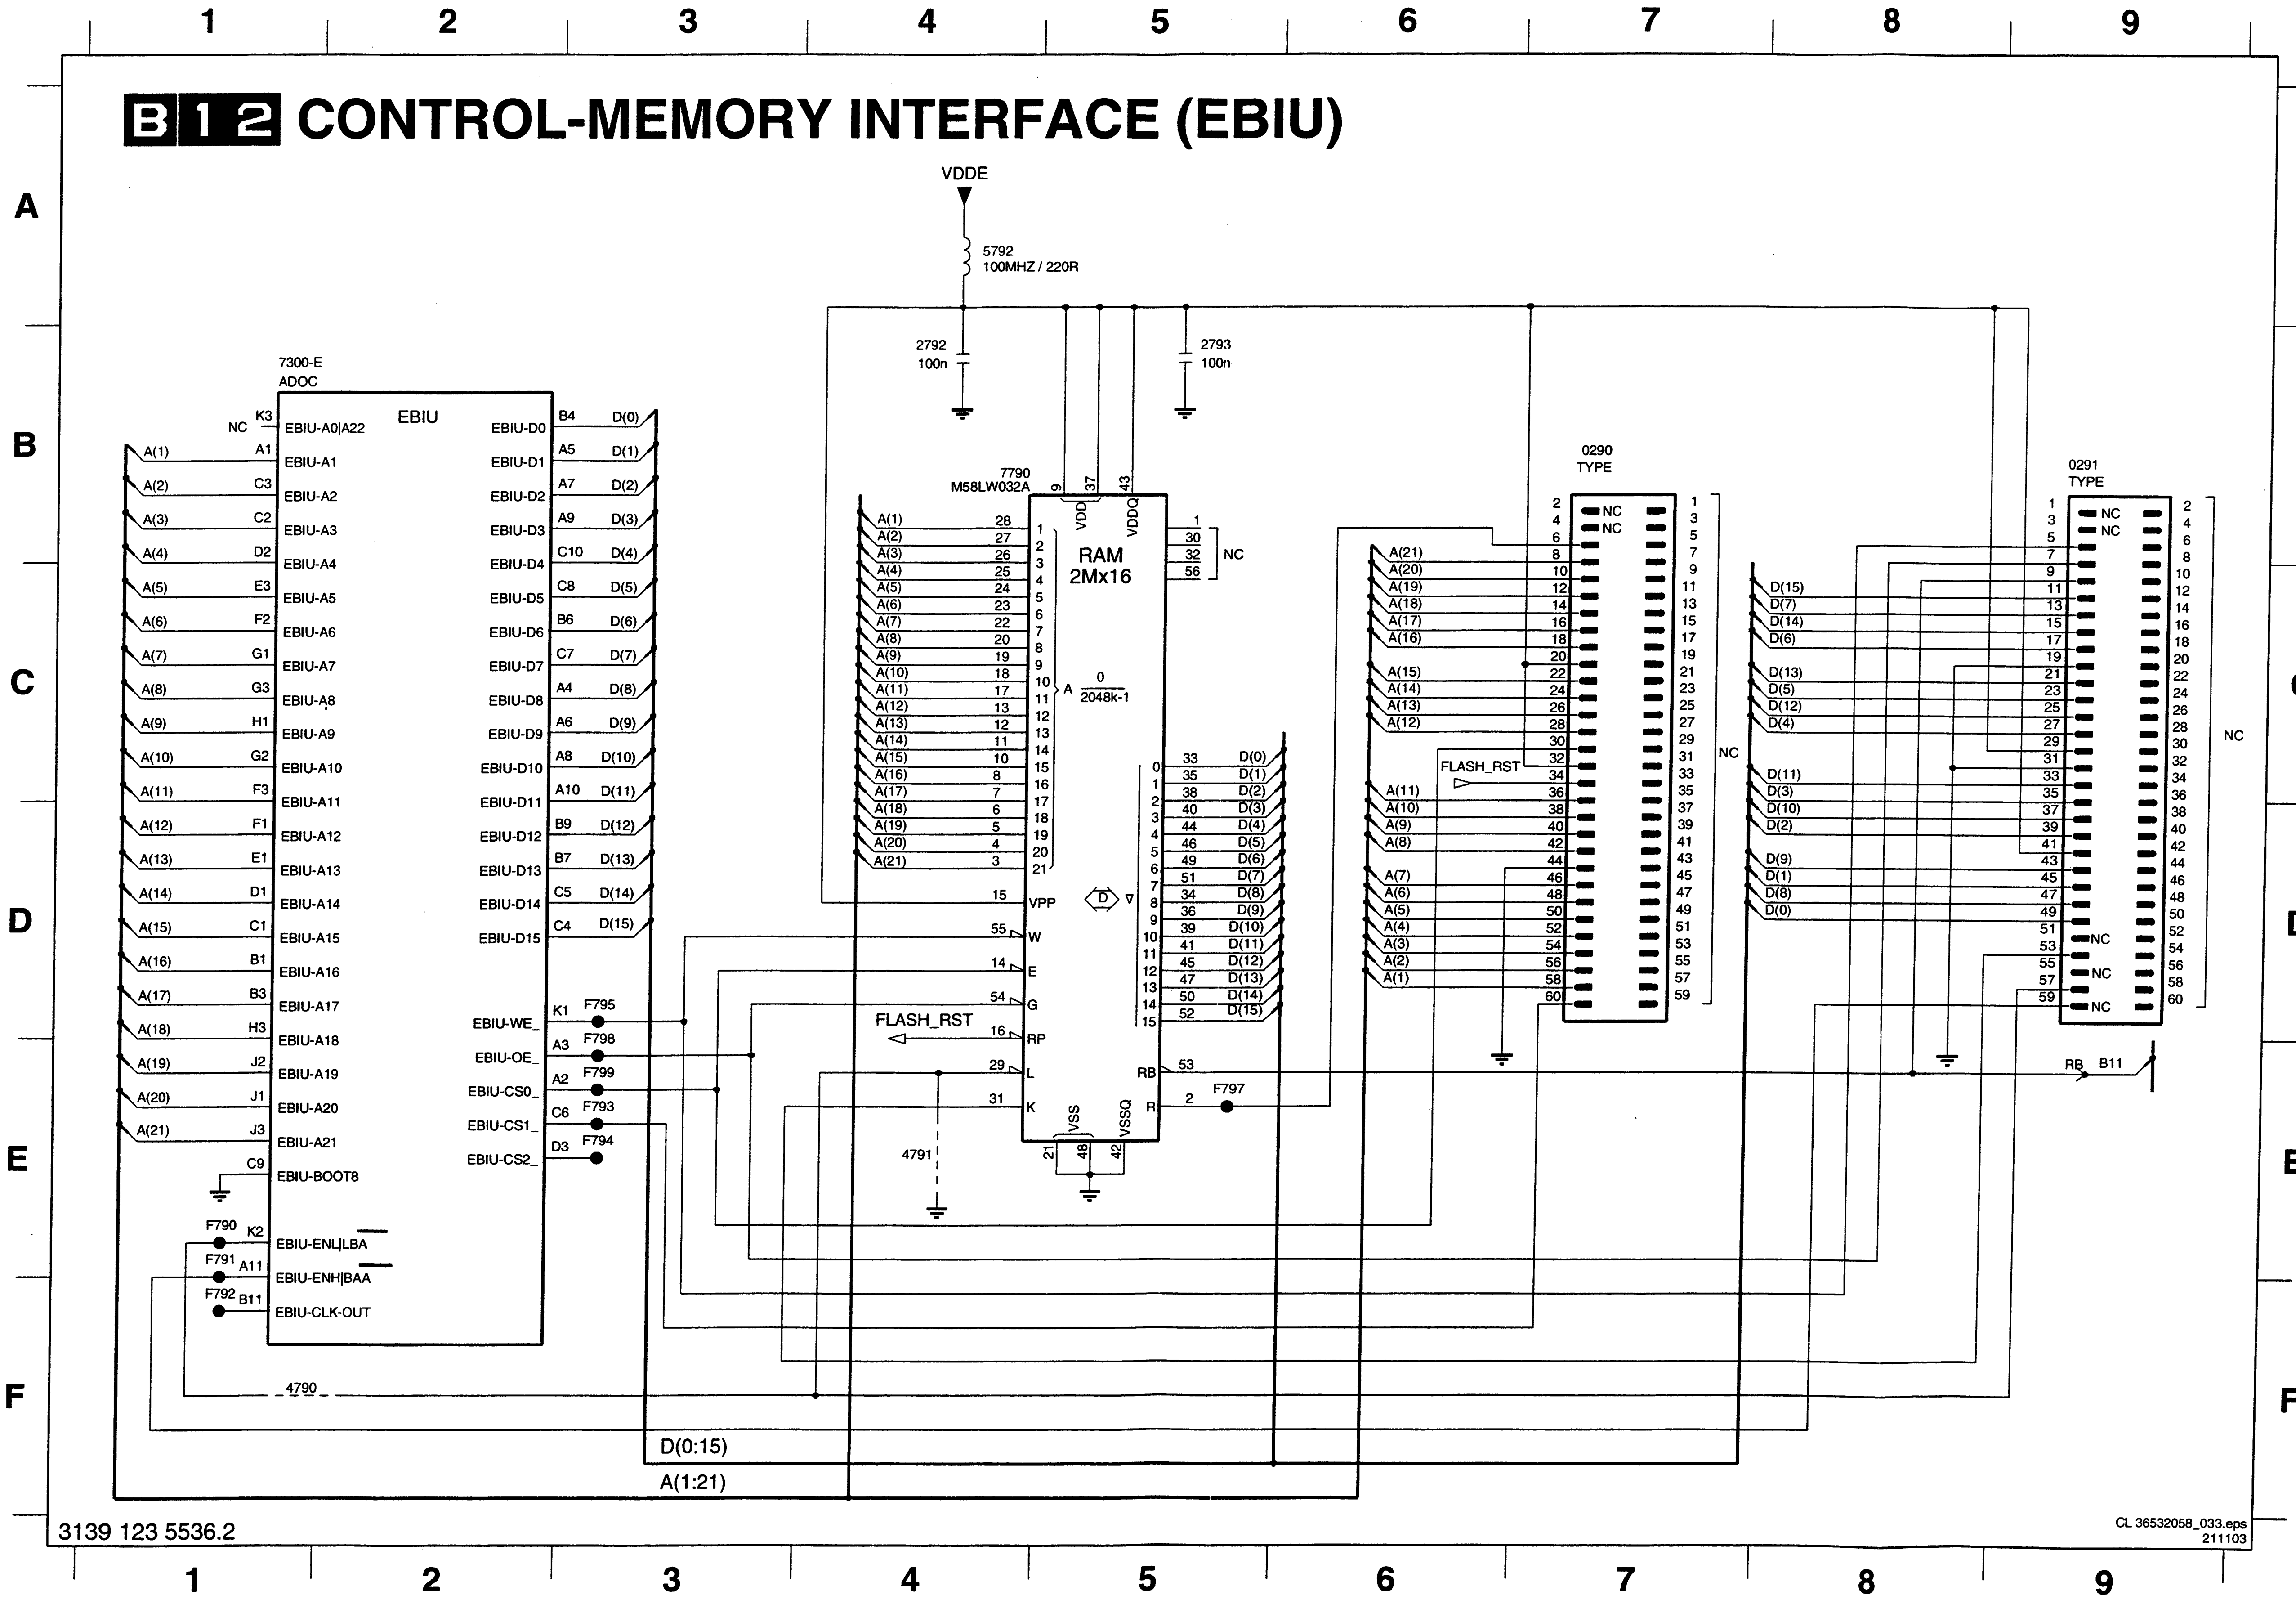
B12 CONTROL-MEMORY INTERFACE (EBIU)
VDDE
5792 100MHZ / 220R
2792 100n
2793 100n
7300-E ADOC
EBIU
EBIU-A0|A22
EBIU-A1 … EBIU-A21
EBIU-BOOT8
EBIU-ENL|LBA
EBIU-ENH|BAA
EBIU-CLK-OUT
EBIU-D0 … EBIU-D15
EBIU-WE_
EBIU-OE_
EBIU-CS0_
EBIU-CS1_
EBIU-CS2_
F790
F791
F792
F793
F794
F795
F797
F798
F799
7790 M58LW032A
RAM 2Mx16
VDD
VDDQ
VSS
VSSQ
VPP
W
E
G
RP
L
K
RB
R
NC
0 2048k-1
FLASH_RST
4791
4790
0290 TYPE
0291 TYPE
RB B11
D(0:15)
A(1:21)
3139 123 5536.2
CL 36532058_033.eps 211103

0290	B7
0291	B9
2792	B4
2793	B6
4790	F1
4791	E4
5792	A4
7300-E	B1
7790	B4
F790	E1
F791	E1
F792	F1
F793	E3
F794	E3
F795	D3
F797	E5
F798	E3
F799	E3

Small Signal Board: Control-Memory Interface (SDRAM)

B13 CONTROL-MEMORY INTERFACE (SDRAM)

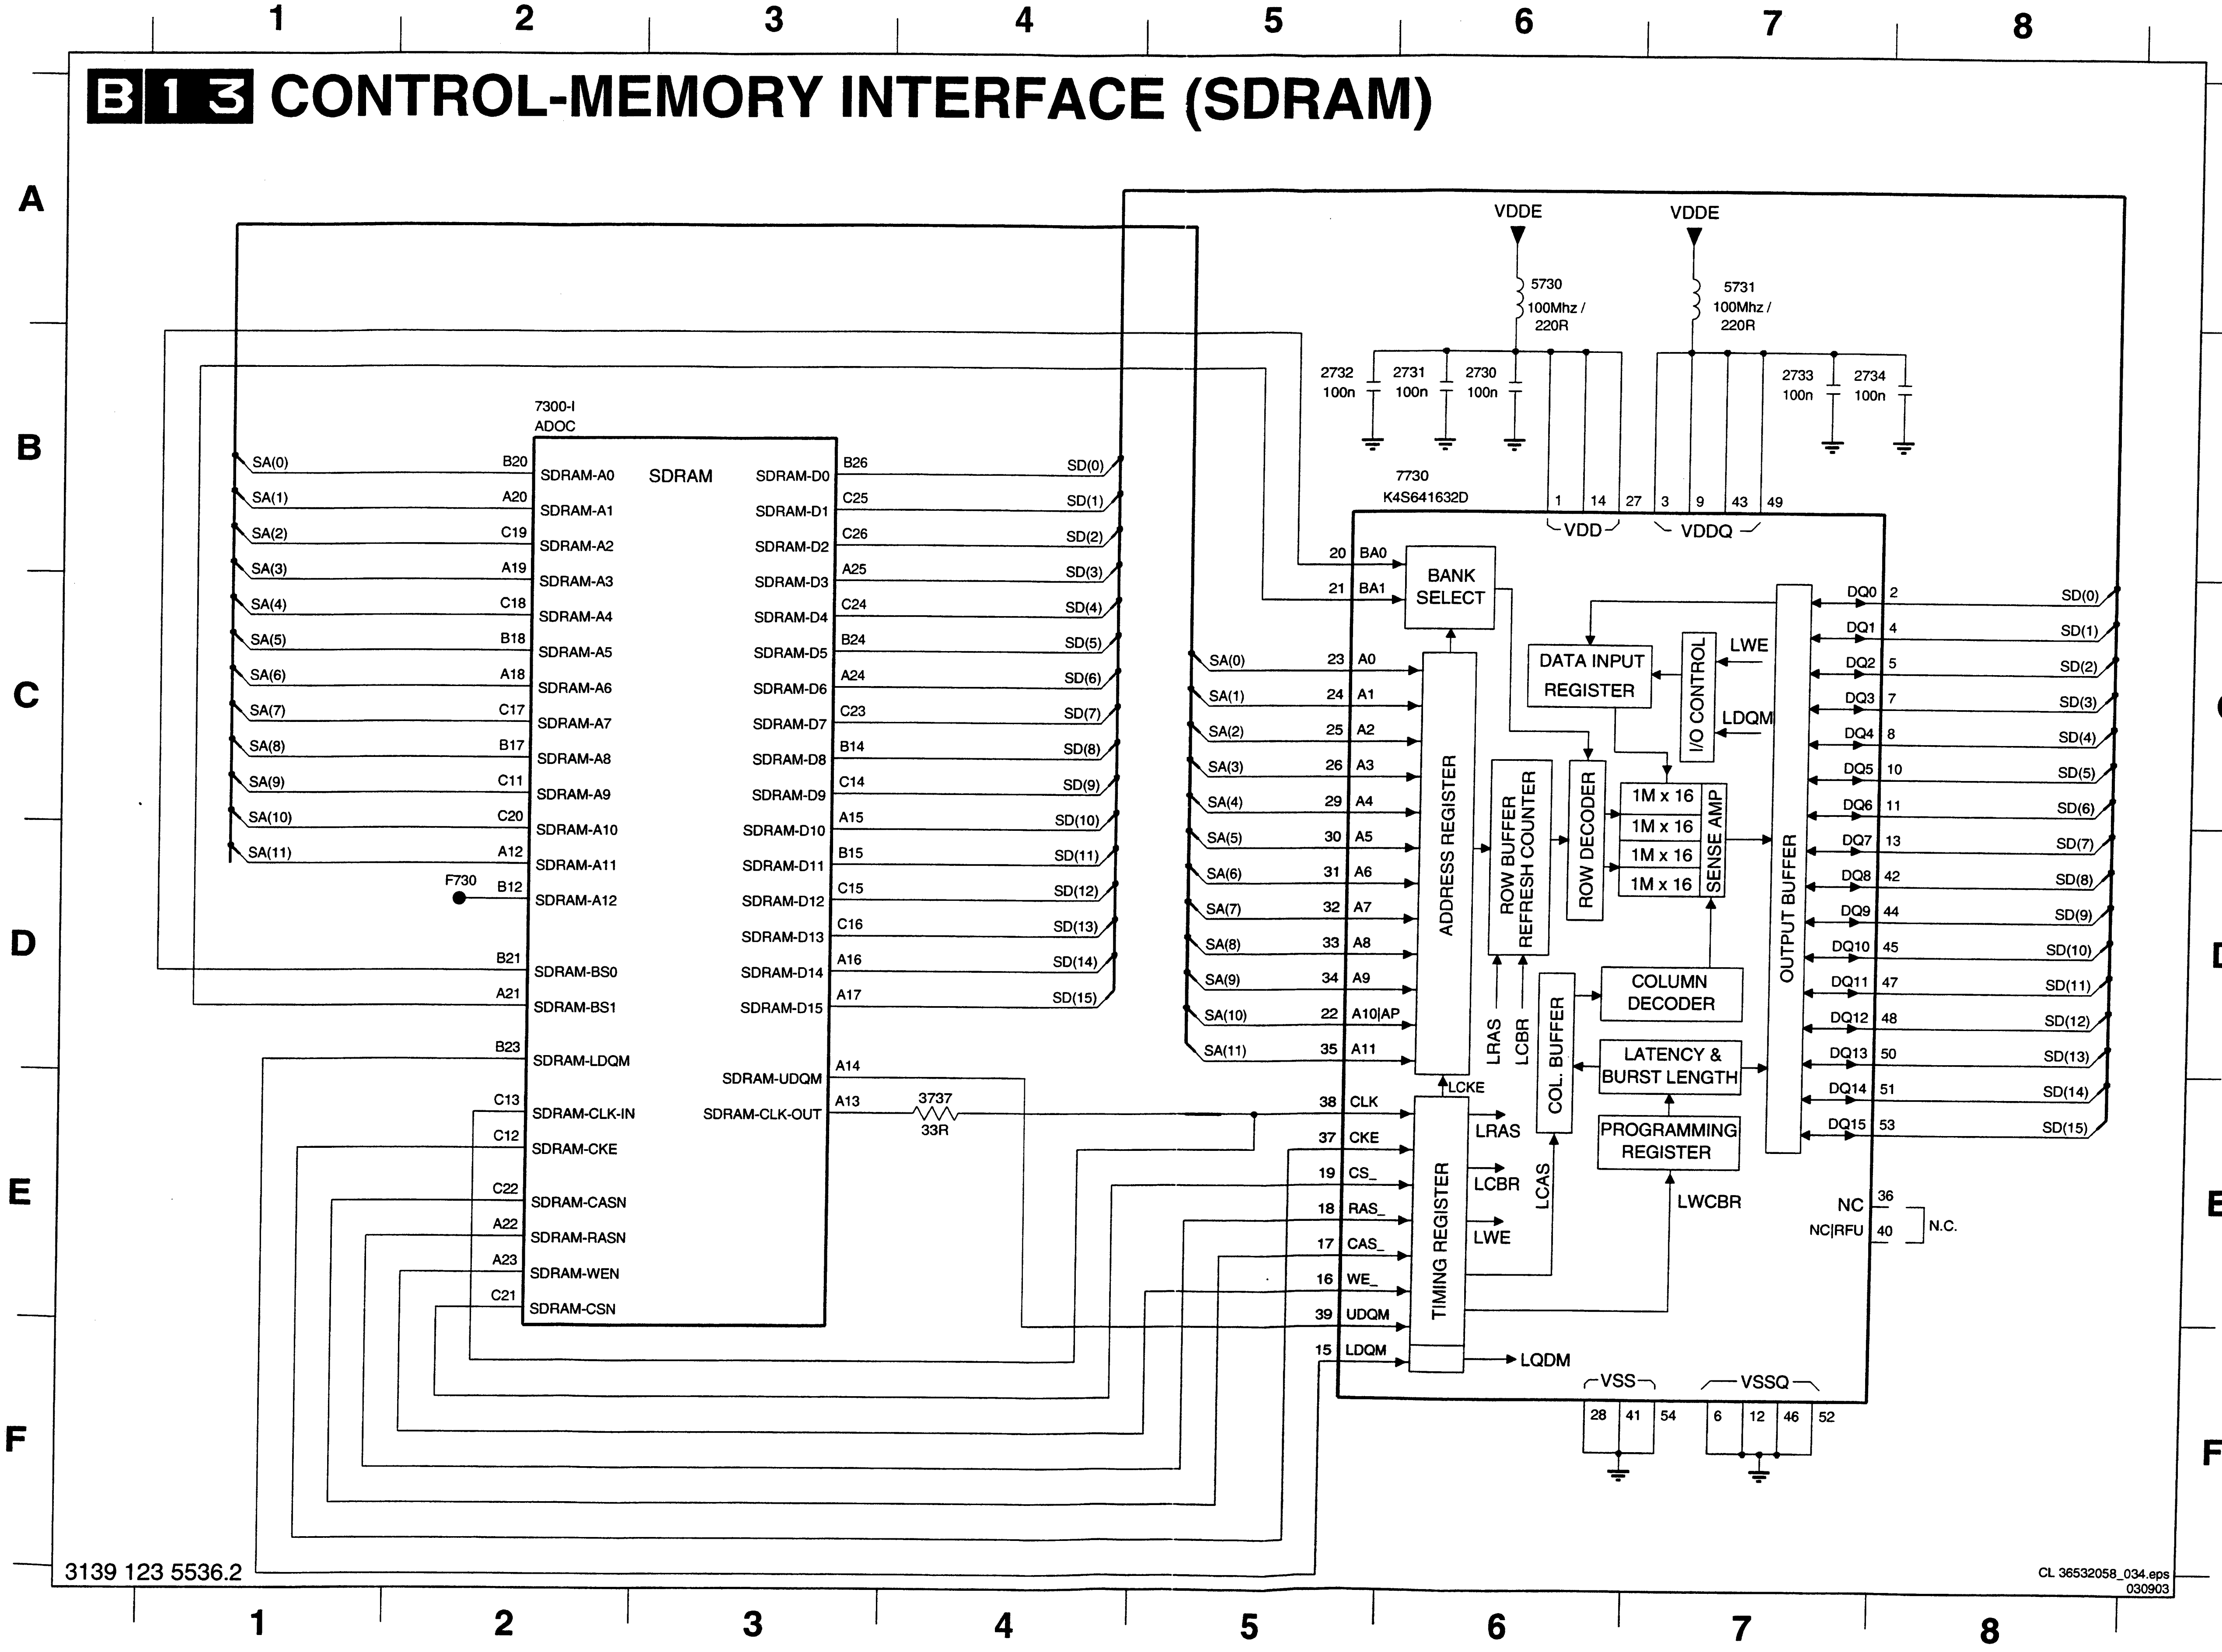
1
2
3
4
5
6
7
8
A
B
C
D
E
F
7300-I
ADOC
SDRAM
SA(0)
SA(1)
SA(2)
SA(3)
SA(4)
SA(5)
SA(6)
SA(7)
SA(8)
SA(9)
SA(10)
SA(11)
B20
A20
C19
A19
C18
B18
A18
C17
B17
C11
C20
A12
B12
F730
B21
A21
B23
C13
C12
C22
A22
A23
C21
SDRAM-A0
SDRAM-A1
SDRAM-A2
SDRAM-A3
SDRAM-A4
SDRAM-A5
SDRAM-A6
SDRAM-A7
SDRAM-A8
SDRAM-A9
SDRAM-A10
SDRAM-A11
SDRAM-A12
SDRAM-BS0
SDRAM-BS1
SDRAM-LDQM
SDRAM-CLK-IN
SDRAM-CKE
SDRAM-CASN
SDRAM-RASN
SDRAM-WEN
SDRAM-CSN
SDRAM-D0
SDRAM-D1
SDRAM-D2
SDRAM-D3
SDRAM-D4
SDRAM-D5
SDRAM-D6
SDRAM-D7
SDRAM-D8
SDRAM-D9
SDRAM-D10
SDRAM-D11
SDRAM-D12
SDRAM-D13
SDRAM-D14
SDRAM-D15
SDRAM-UDQM
SDRAM-CLK-OUT
B26
C25
C26
A25
C24
B24
A24
C23
B14
C14
A15
B15
C15
C16
A16
A17
A14
A13
3737
33R
SD(0)
SD(1)
SD(2)
SD(3)
SD(4)
SD(5)
SD(6)
SD(7)
SD(8)
SD(9)
SD(10)
SD(11)
SD(12)
SD(13)
SD(14)
SD(15)
VDDE
VDDE
5730
100Mhz /
220R
5731
100Mhz /
220R
2732
100n
2731
100n
2730
100n
2733
100n
2734
100n
7730
K4S641632D
1
14
27
3
9
43
49
VDD
VDDQ
20
BA0
21
BA1
BANK SELECT
23 A0
24 A1
25 A2
26 A3
29 A4
30 A5
31 A6
32 A7
33 A8
34 A9
22 A10|AP
35 A11
38 CLK
37 CKE
19 CS_
18 RAS_
17 CAS_
16 WE_
39 UDQM
15 LDQM
ADDRESS REGISTER
LCKE
ROW BUFFER REFRESH COUNTER
ROW DECODER
DATA INPUT REGISTER
I/O CONTROL
LWE
LDQM
1M x 16
1M x 16
1M x 16
1M x 16
SENSE AMP
OUTPUT BUFFER
COL. BUFFER
COLUMN DECODER
LATENCY & BURST LENGTH
PROGRAMMING REGISTER
LWCBR
LRAS
LCBR
LRAS
LCBR
LWE
LCAS
TIMING REGISTER
LQDM
DQ0 2
DQ1 4
DQ2 5
DQ3 7
DQ4 8
DQ5 10
DQ6 11
DQ7 13
DQ8 42
DQ9 44
DQ10 45
DQ11 47
DQ12 48
DQ13 50
DQ14 51
DQ15 53
NC 36
NC|RFU 40
N.C.
VSS
VSSQ
28
41
54
6
12
46
52
3139 123 5536.2
CL 36532058_034.eps
030903

2730	B6
2731	B6
2732	B5
2733	B7
2734	B7
3737	E4
5730	A6
5731	A7
7300-I	B2
7730	B6
F730	D2

Small Signal Board: ADOC Supply

2600 C10	2604 C10	2609 C9	2612 C9	2618 C8	2622 C7	2628 C7	2630 C6	2634 C6	2644 D7	2649 C2	5601 D7	7300-M A1	I601 D8
2601 C10	2607 C9	2611 C9	2615 C8	2620 C8	2623 C7	2629 C6	2633 C6	2638 C2	2645 C1	5600 C1	7300-L B6	F601 C1	

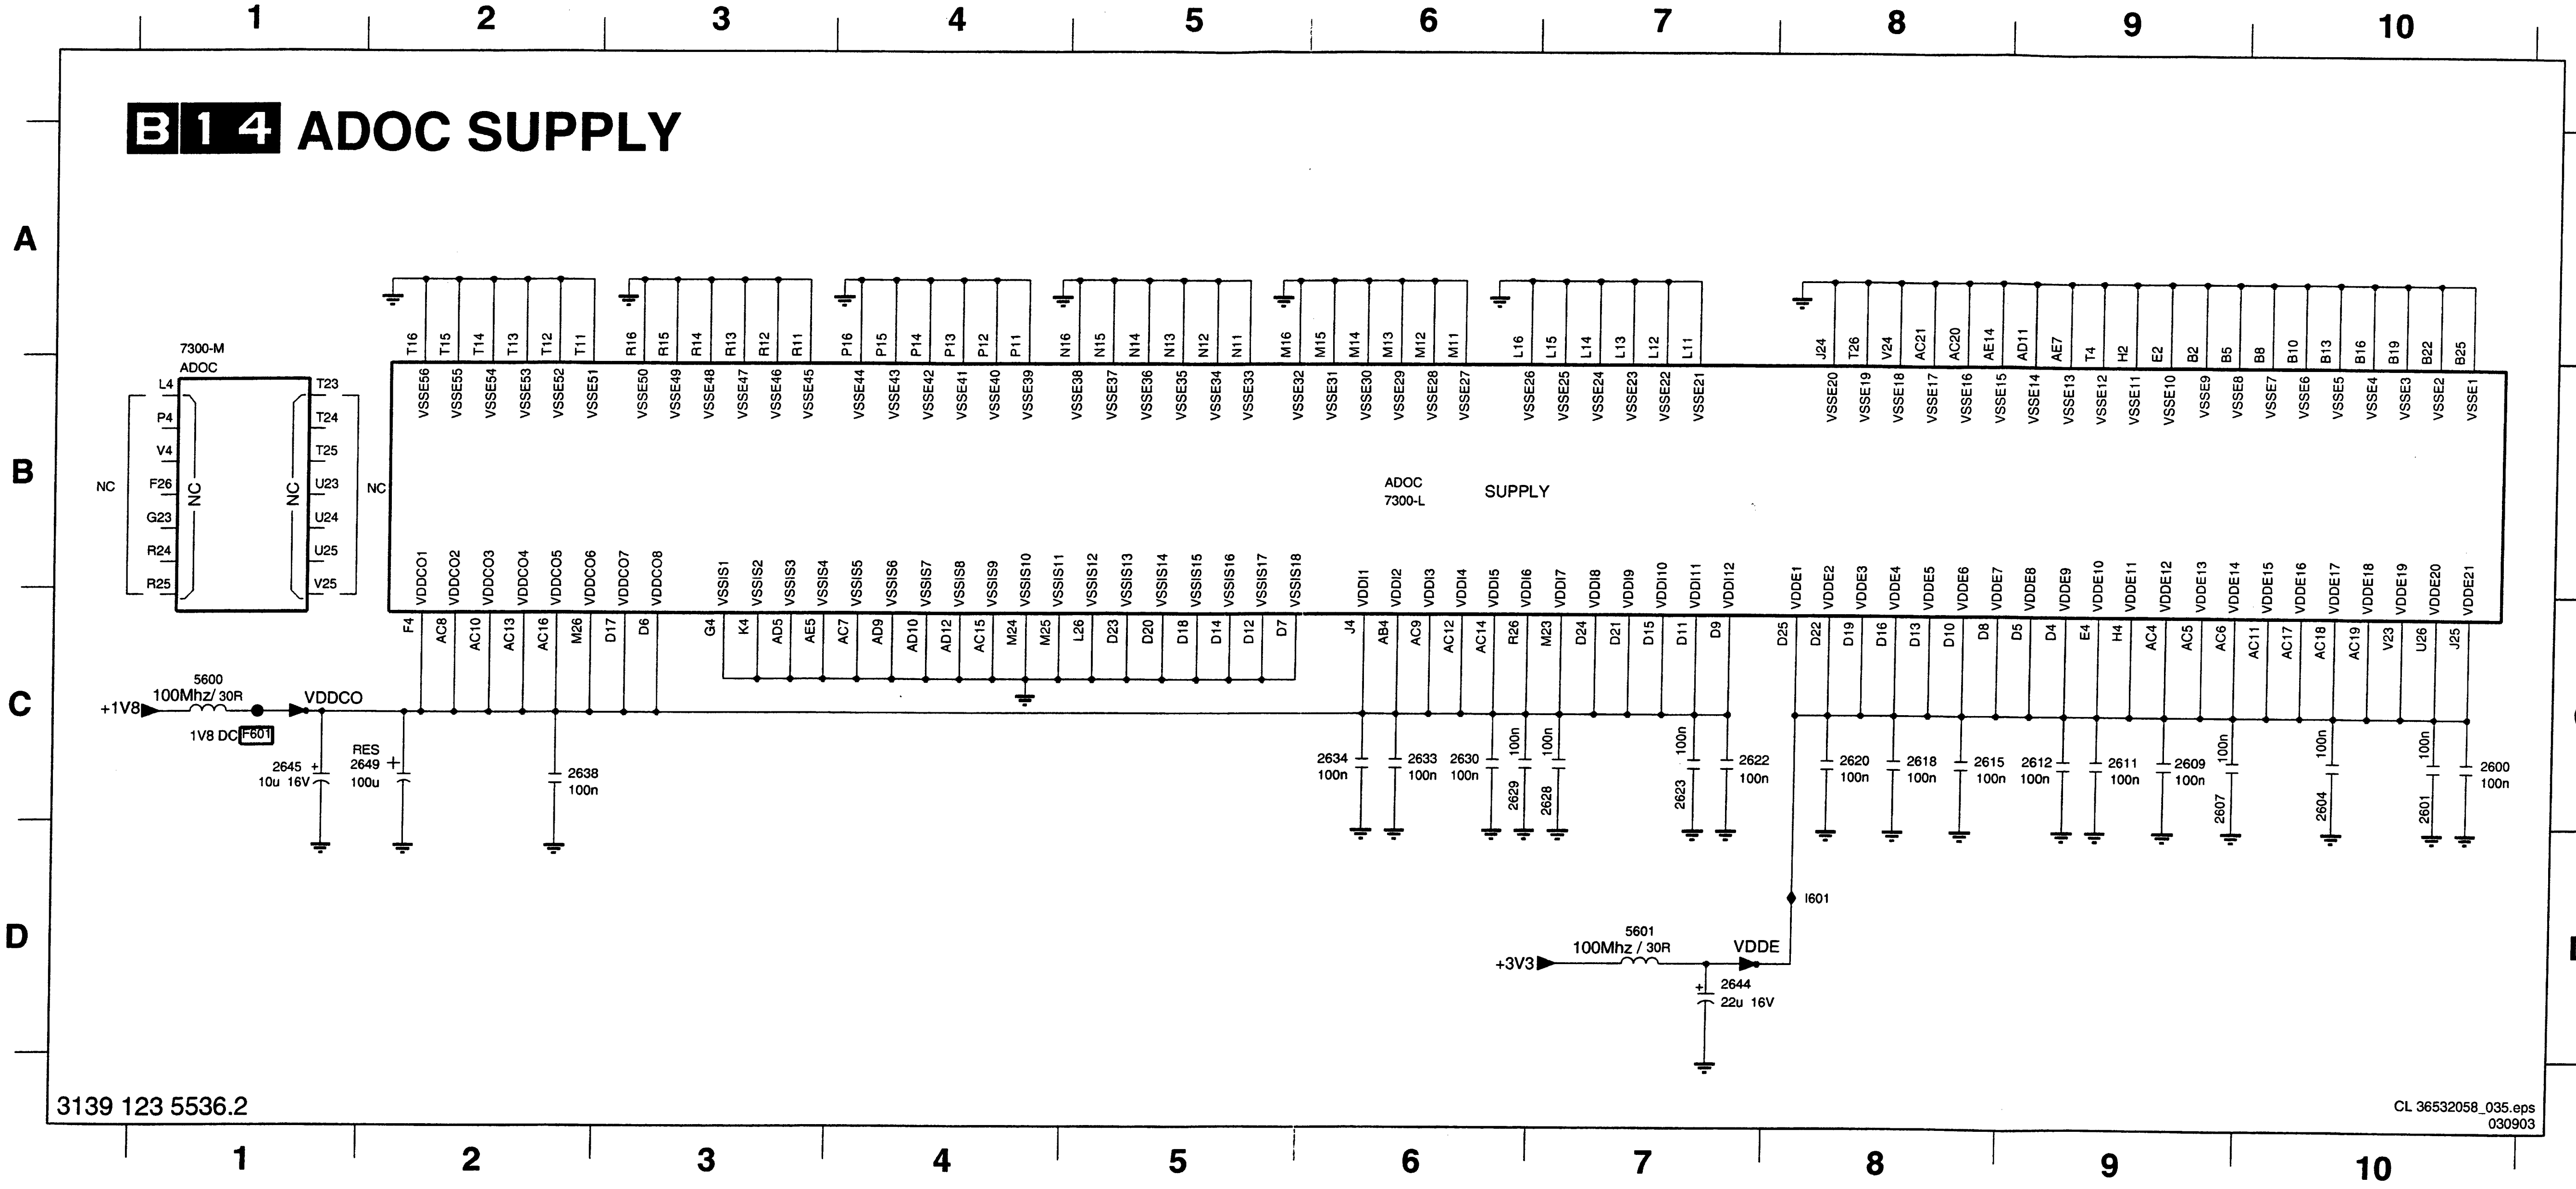
B14 ADOC SUPPLY
1 2 3 4 5 6 7 8 9 10
A B C D
7300-M
ADOC
L4 P4 V4 F26 G23 R24 R25
T23 T24 T25 U23 U24 U25 V25
NC
T16 T15 T14 T13 T12 T11
VSSE56 VSSE55 VSSE54 VSSE53 VSSE52 VSSE51
R16 R15 R14 R13 R12 R11
VSSE50 VSSE49 VSSE48 VSSE47 VSSE46 VSSE45
P16 P15 P14 P13 P12 P11
VSSE44 VSSE43 VSSE42 VSSE41 VSSE40 VSSE39
N16 N15 N14 N13 N12 N11
VSSE38 VSSE37 VSSE36 VSSE35 VSSE34 VSSE33
M16 M15 M14 M13 M12 M11
VSSE32 VSSE31 VSSE30 VSSE29 VSSE28 VSSE27
L16 L15 L14 L13 L12 L11
VSSE26 VSSE25 VSSE24 VSSE23 VSSE22 VSSE21
J24 T26 V24 AC21 AC20 AE14 AD11 AE7 T4 H2 E2 B2 B5 B8 B10 B13 B16 B19 B22 B25
VSSE20 VSSE19 VSSE18 VSSE17 VSSE16 VSSE15 VSSE14 VSSE13 VSSE12 VSSE11 VSSE10 VSSE9 VSSE8 VSSE7 VSSE6 VSSE5 VSSE4 VSSE3 VSSE2 VSSE1
ADOC
7300-L
SUPPLY
VDDCO1 VDDCO2 VDDCO3 VDDCO4 VDDCO5 VDDCO6 VDDCO7 VDDCO8
F4 AC8 AC10 AC13 AC16 M26 D17 D6
VSSIS1 VSSIS2 VSSIS3 VSSIS4 VSSIS5 VSSIS6 VSSIS7 VSSIS8 VSSIS9 VSSIS10 VSSIS11 VSSIS12 VSSIS13 VSSIS14 VSSIS15 VSSIS16 VSSIS17 VSSIS18
G4 K4 AD5 AE5 AC7 AD9 AD10 AD12 AC15 M24 M25 L26 D23 D20 D18 D14 D12 D7
VDDI1 VDDI2 VDDI3 VDDI4 VDDI5 VDDI6 VDDI7 VDDI8 VDDI9 VDDI10 VDDI11 VDDI12
J4 AB4 AC9 AC12 AC14 R26 M23 D24 D21 D15 D11 D9
VDDE1 VDDE2 VDDE3 VDDE4 VDDE5 VDDE6 VDDE7 VDDE8 VDDE9 VDDE10 VDDE11 VDDE12 VDDE13 VDDE14 VDDE15 VDDE16 VDDE17 VDDE18 VDDE19 VDDE20 VDDE21
D25 D22 D19 D16 D13 D10 D8 D5 D4 E4 H4 AC4 AC5 AC6 AC11 AC17 AC18 AC19 V23 U26 J25
5600
100Mhz/ 30R
+1V8
1V8 DC
F601
VDDCO
2645 10u 16V
RES 2649 100u
2638 100n
2634 100n
2633 100n
2630 100n
2629 100n
2628 100n
2623 100n
2622 100n
2620 100n
2618 100n
2615 100n
2612 100n
2611 100n
2609 100n
2607 100n
2604 100n
2601 100n
2600 100n
I601
5601
100Mhz / 30R
+3V3
VDDE
2644 22u 16V
3139 123 5536.2
CL 36532058_035.eps
030903

Small Signal Board: Low Voltage Supply ADOC

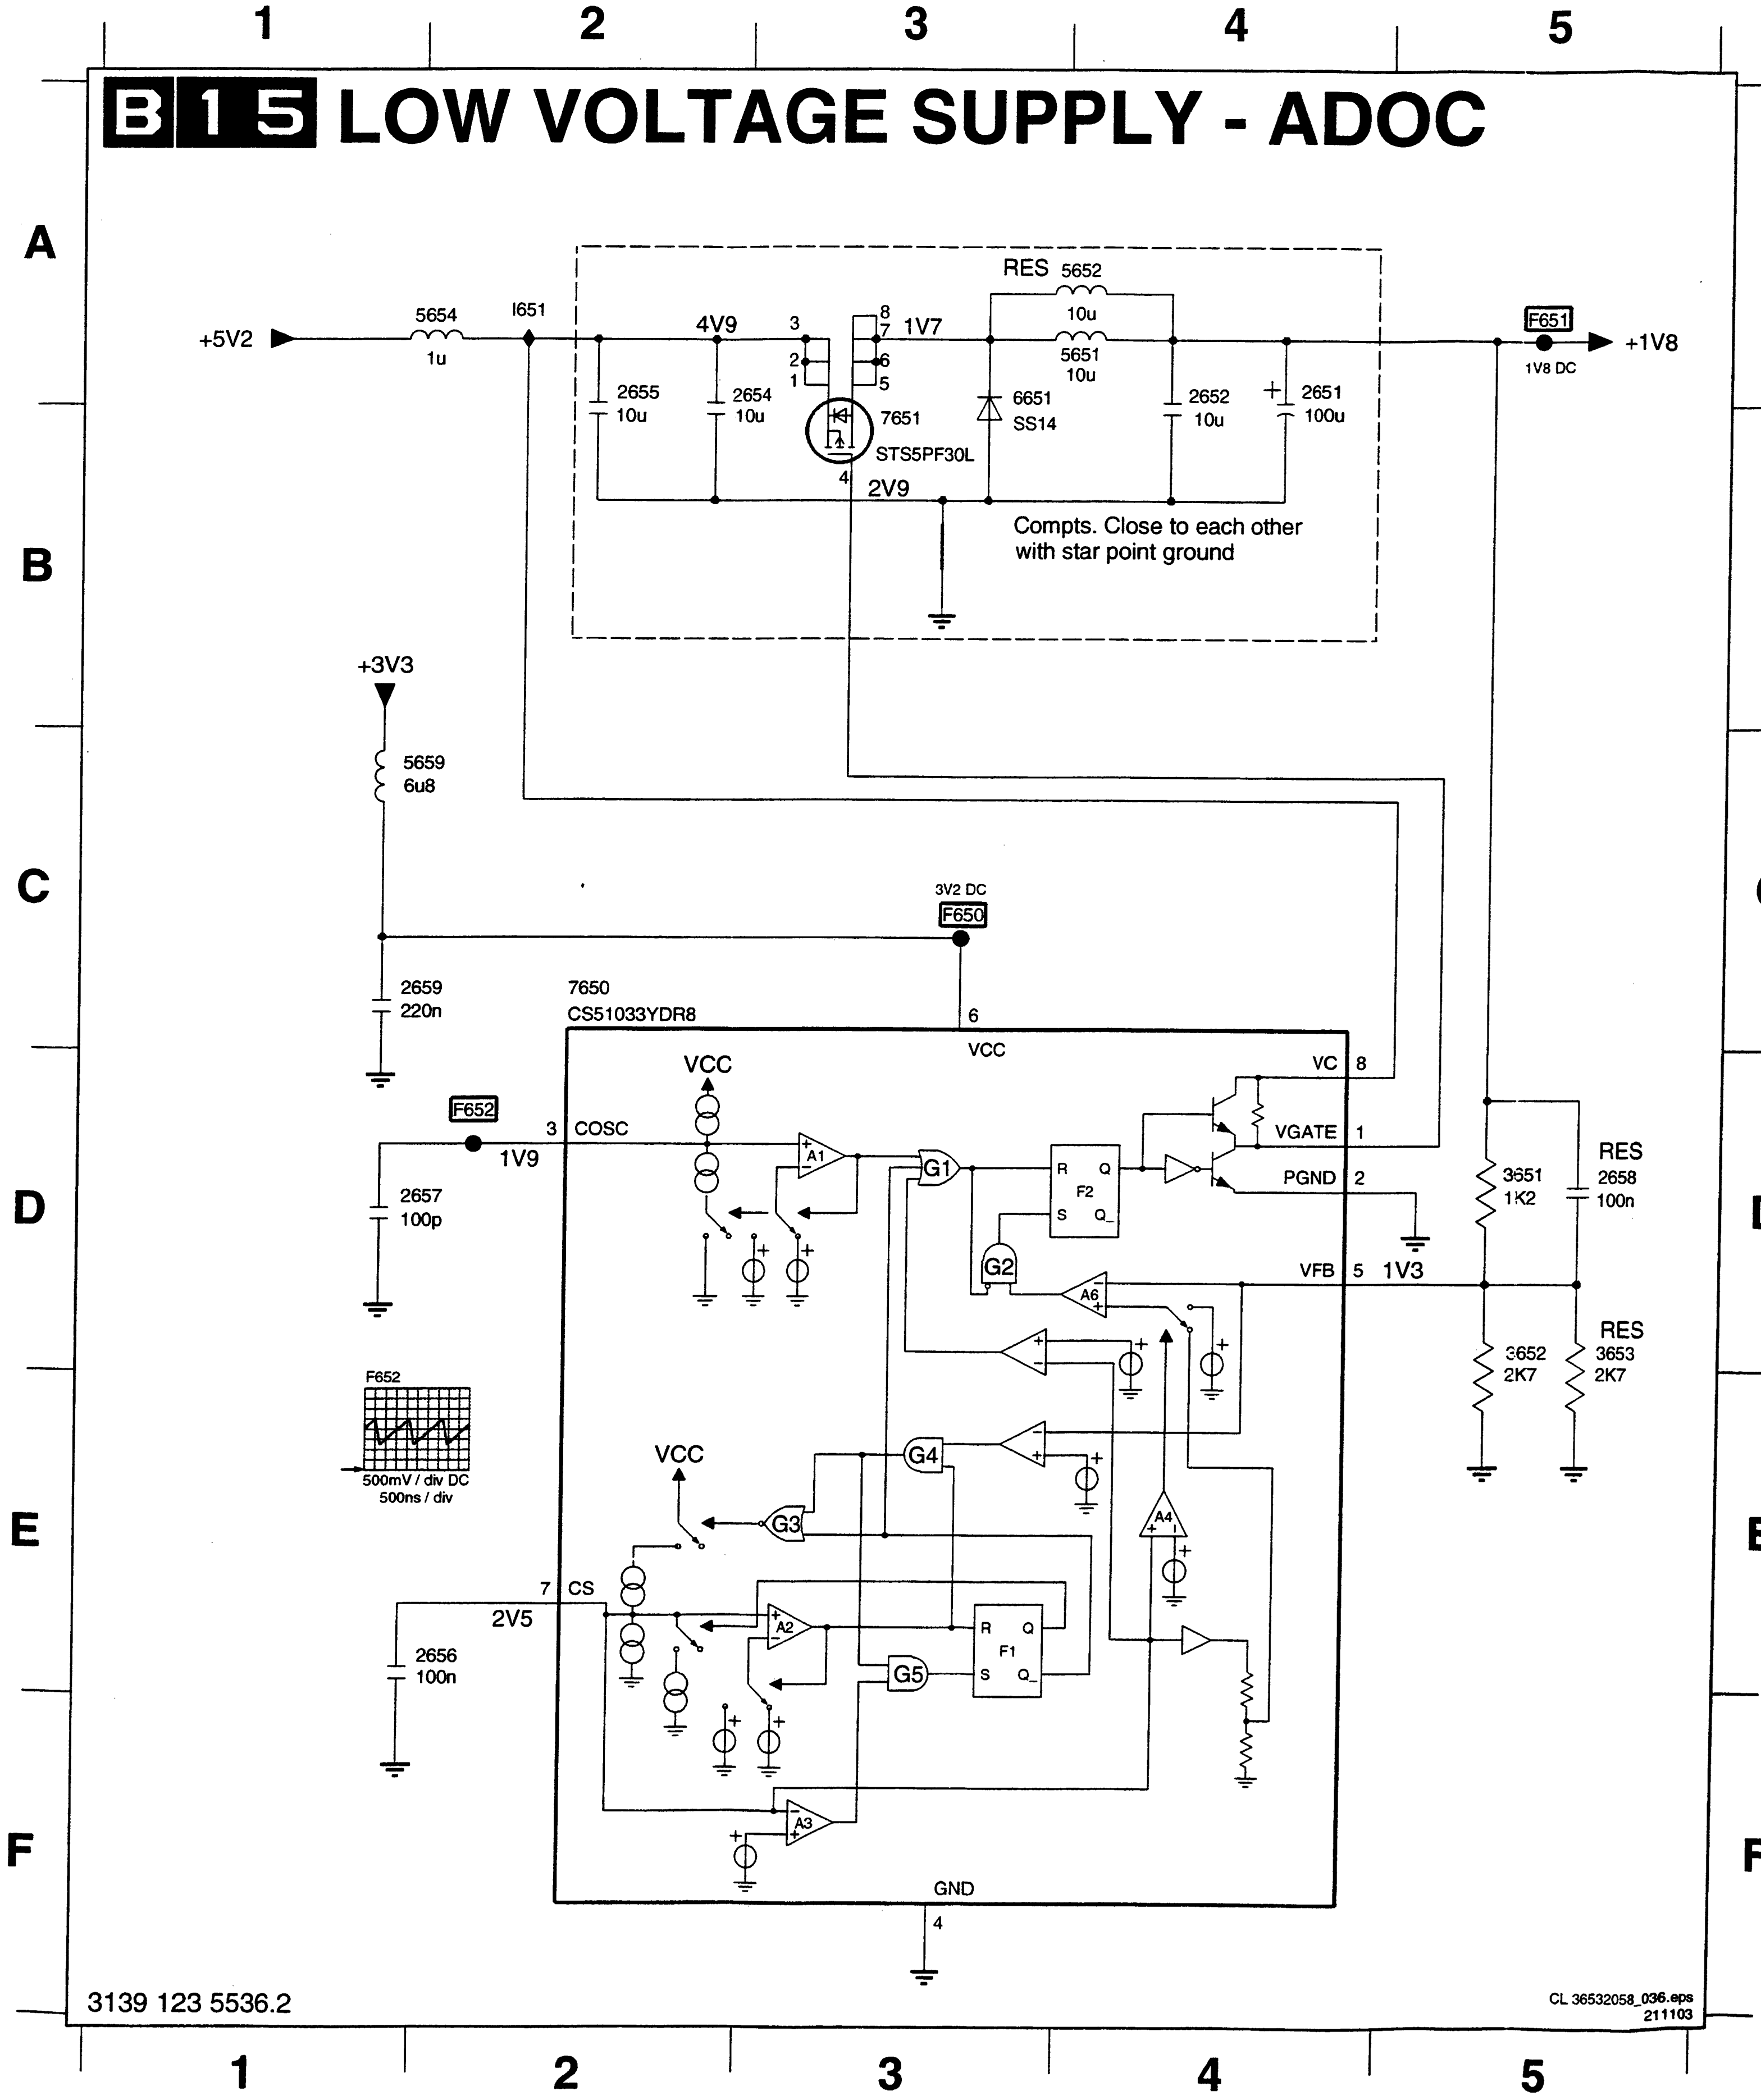
1 2 3 4 5
A B C D E F
B15 LOW VOLTAGE SUPPLY - ADOC
+5V2
5654
1u
I651
4V9
RES 5652
10u
5651
10u
1V7
3 2 1 8 7 6 5 4
2655
10u
2654
10u
7651
STS5PF30L
2V9
6651
SS14
2652
10u
2651
100u
F651
1V8 DC
+1V8
Compts. Close to each other
with star point ground
+3V3
5659
6u8
3V2 DC
F650
2659
220n
7650
CS51033YDR8
6
VCC
VC 8
VGATE 1
PGND 2
VFB 5 1V3
F652
3 COSC
1V9
2657
100p
VCC
A1
G1
R Q
F2
S Q_
G2
A6
3651
1K2
RES
2658
100n
3652
2K7
RES
3653
2K7
F652
500mV / div DC
500ns / div
VCC
G4
G3
A4
7 CS
2V5
2656
100n
A2
R Q
F1
S Q_
G5
A3
GND
4
3139 123 5536.2
CL 36532058_036.eps
211103

2651	A4
2652	A4
2654	A2
2655	A2
2656	E2
2657	D2
2658	D5
2659	C2
3651	D5
3652	D5
3653	D5
5651	A4
5652	A4
5654	A2
5659	C2
6651	A3
7650	C2
7651	B3
F650	C3
F651	A5
F652	D2
I651	A2

Small Signal Board: Connector Interface

0230	A8
1901	A5
1902	A5
1903	B5
1904	A2
1906	B5
1907	C5
1909	C5
1910	D5
1911	D5
1913	D5
1915	E5
1918	B2
1919	B2
1920	B2
1921	C2
1923	C2
1924	D2
1925	D2
1926	E2
1928	E2
1929	E2
1931	G6
1932	F2
1933	F2
1934	G2
1935	G2
1936	H2
1937	H2
1938	H2
1939	H6
1941	H13
1948	H13
1949	H13
1950	G13
1951	G13
1952	H10
1953	G10
1955	G10
1956	F10
1958	F10
1959	F10
1960	E10
1961	E10
1962	F13
1963	D10
1964	D10
1965	C10
1966	C10
1967	F13
1968	E13
1969	B10
1970	B10
1972	E13
1973	E13
1974	D13
1975	D13
1976	C13
1977	C13
1978	C13
1979	B13
1980	B13
2904	A2
2915	E5
2918	B2
2919	B2
2920	B2
2932	F2
2933	F2
2935	G2
2936	H2
2937	H2
2938	H2
2941	H13
2948	H13
2949	H13
2950	G13
2951	G13
2962	F13
2967	F13
2968	E13
2972	E13
2973	E13
2974	D13
2975	D13
2976	C13
2977	C13
2978	C13
2979	B13
3904	A2
3909	C4
3911	D4
3918	A2
3919	B2
3928	E2
3929	E2
3936	G2
3937	H2
3938	H2
3939	H5
3950	G13
3951	G13
3962	F13
3963	D11
3964	D11
3972	E13
3973	D13
3974	D13
3975	D13
3976	C13
3977	C13
3978	B13
3979	B13
3980	A13
F901	A7
F902	A7
F903	A7
F904	A7
F905	A7
F906	B7
F907	B7
F909	B7
F910	B7
F911	B7
F913	C7
F915	C7
F918	C7
F919	C7
F920	D7
F921	D7
F923	D7
F924	D7
F925	D7
F926	D7
F928	E7
F929	E7
F931	E7
F932	E7
F933	E7
F935	F7
F936	F7
F937	F7
F938	F7
F939	F7
F940	G8
F941	F8
F943	F8
F944	F8
F947	F8
F948	E8
F949	E8
F950	E8
F951	E8
F952	E8
F953	E8
F955	D8
F956	D8
F958	D8
F959	D8
F960	D8
F961	D8
F962	C8
F963	C8
F964	C8
F965	C8
F966	C8
F967	C8
F968	C8
F969	B8
F970	B8
F972	B8
F973	B8
F974	B8
F975	B8
F976	A8
F977	A8
F978	A8
F979	A8
F980	A8

B18 SSB-CONNECTOR INTERFACE

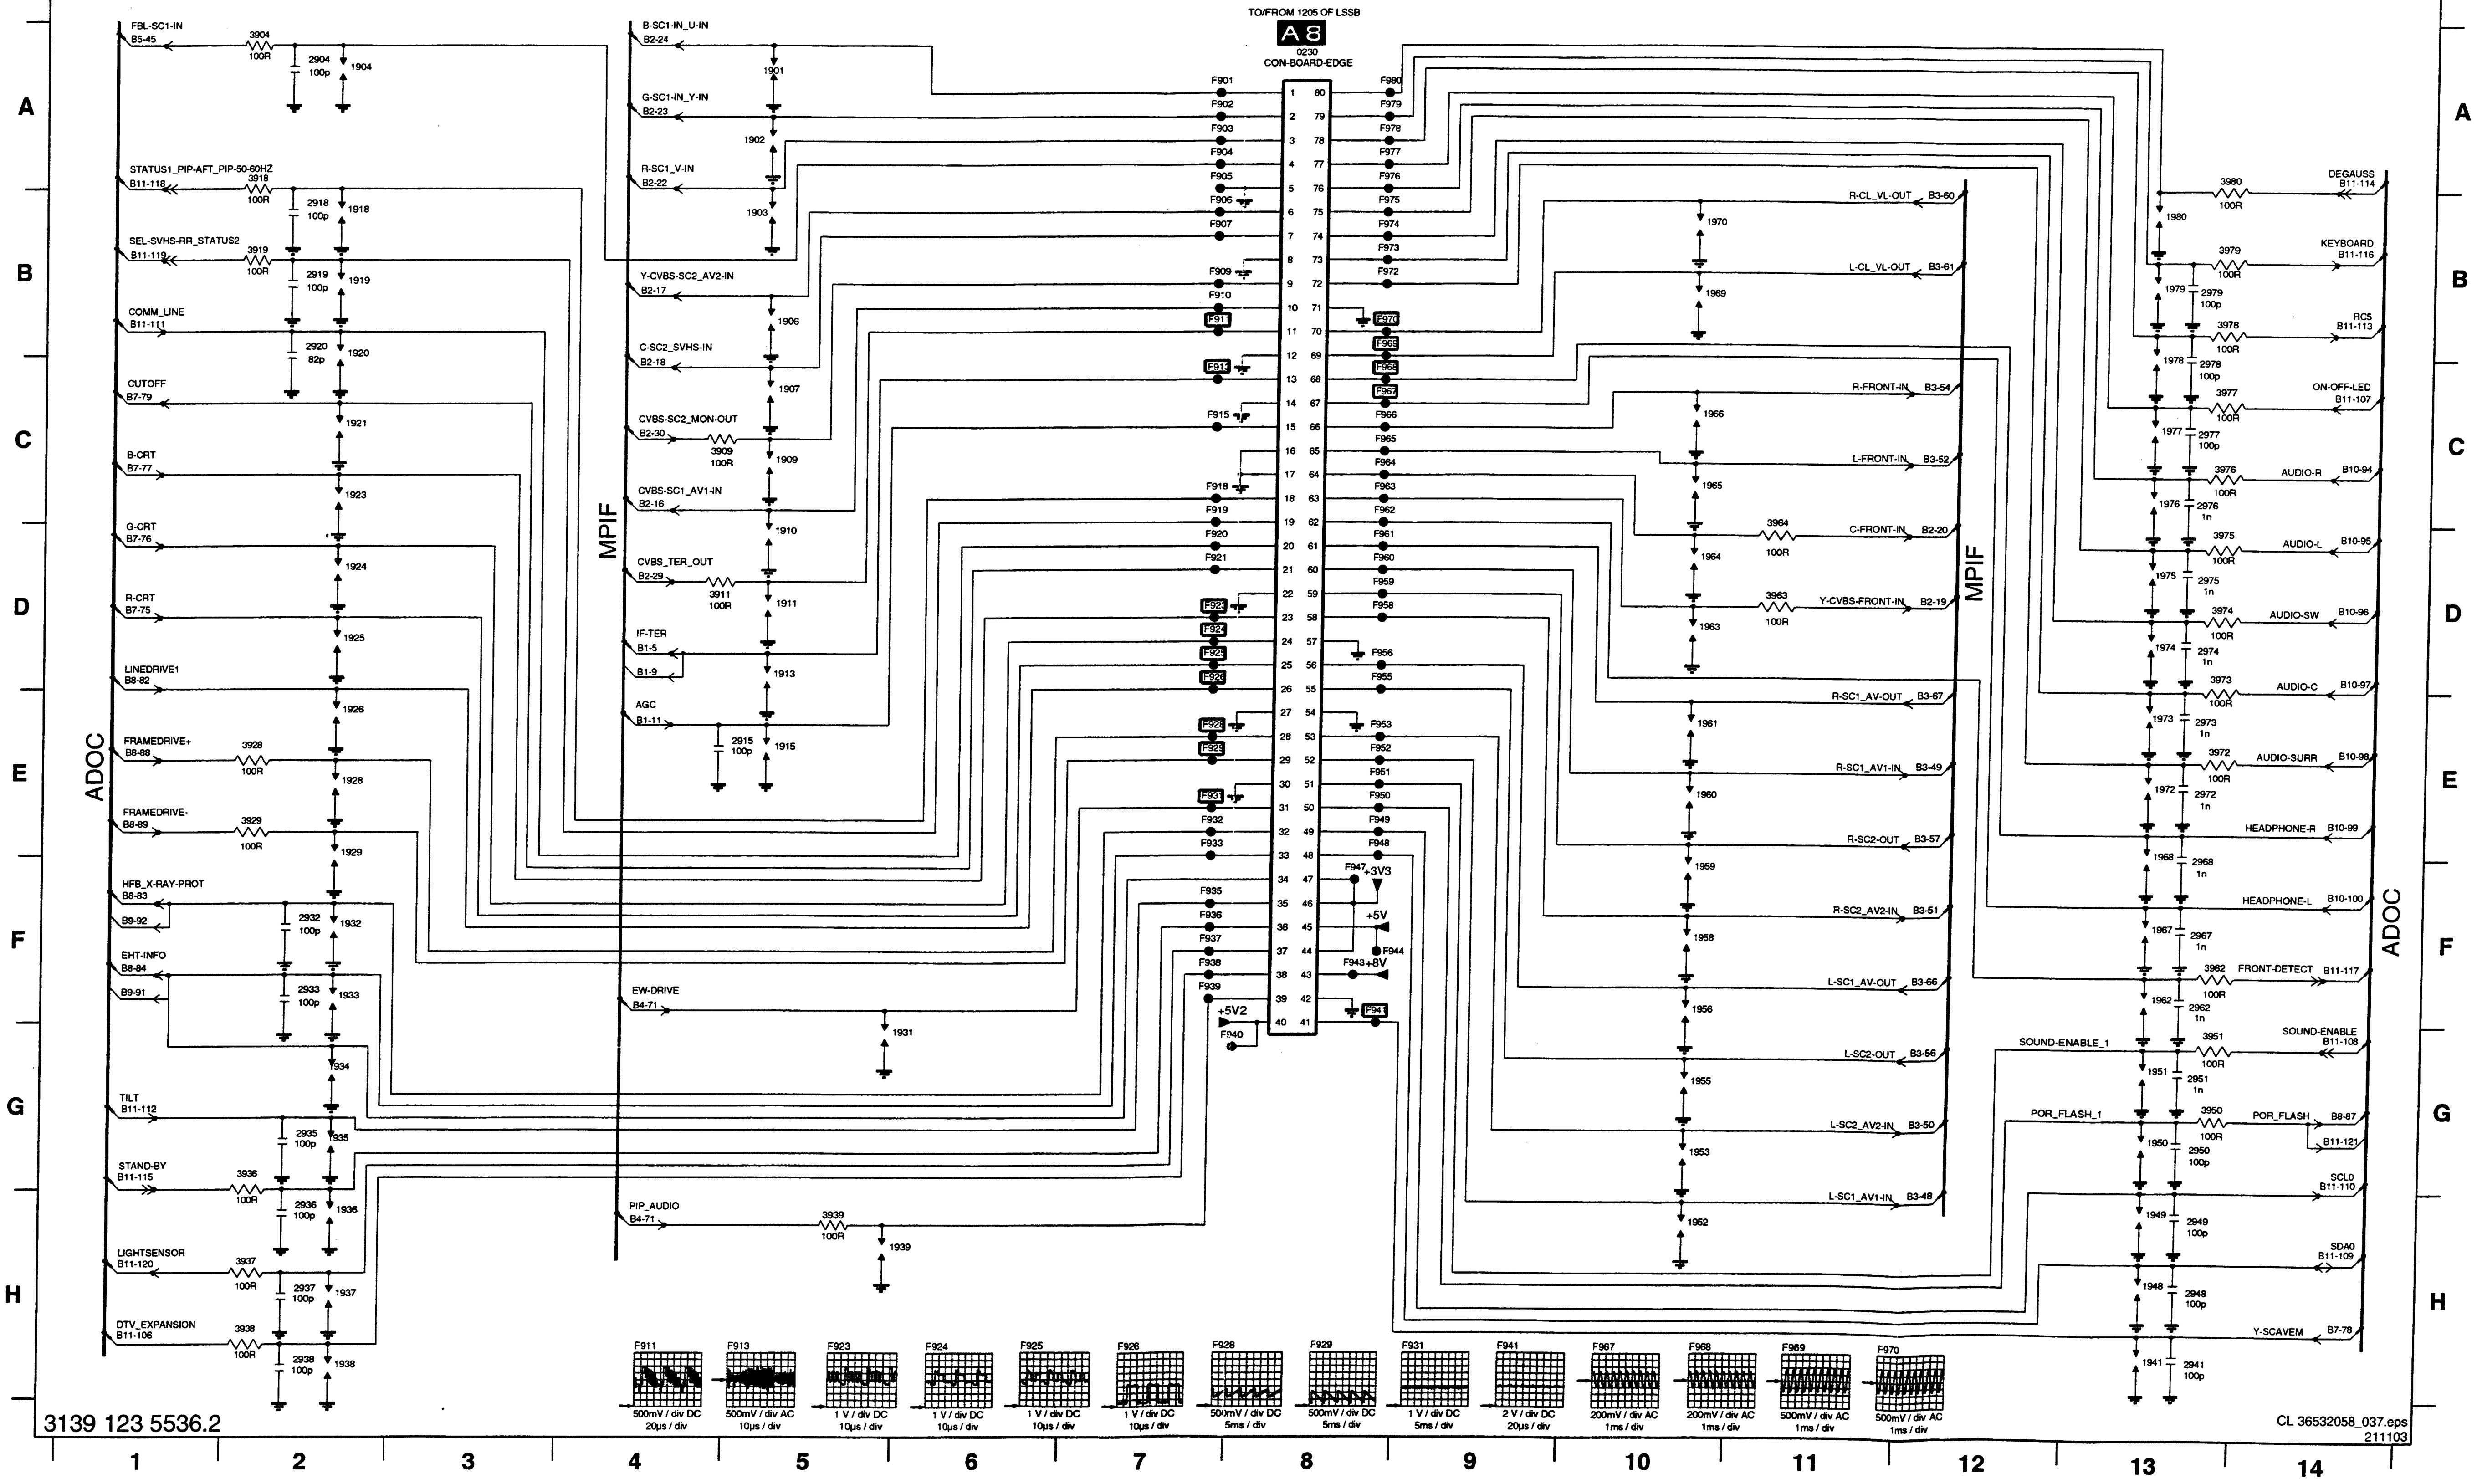
1
2
3
4
5
6
7
8
9
10
11
12
13
14
A
B
C
D
E
F
G
H
ADOC
MPIF
FBL-SC1-IN
B5-45
3904
100R
2904
100p
1904
STATUS1_PIP-AFT_PIP-50-60HZ
B11-118
3918
100R
2918
100p
1918
SEL-SVHS-RR_STATUS2
B11-119
3919
100R
2919
100p
1919
COMM_LINE
B11-111
2920
82p
1920
CUTOFF
B7-79
1921
B-CRT
B7-77
1923
G-CRT
B7-76
1924
R-CRT
B7-75
1925
LINEDRIVE1
B8-82
1926
FRAMEDRIVE+
B8-88
3928
100R
1928
FRAMEDRIVE-
B8-89
3929
100R
1929
HFB_X-RAY-PROT
B8-83
B9-92
2932
100p
1932
EHT-INFO
B8-84
B9-91
2933
100p
1933
1934
TILT
B11-112
2935
100p
1935
STAND-BY
B11-115
3936
100R
2936
100p
1936
LIGHTSENSOR
B11-120
3937
100R
2937
100p
1937
DTV_EXPANSION
B11-106
3938
100R
2938
100p
1938
B-SC1-IN_U-IN
B2-24
1901
G-SC1-IN_Y-IN
B2-23
1902
R-SC1_V-IN
B2-22
1903
Y-CVBS-SC2_AV2-IN
B2-17
1906
C-SC2_SVHS-IN
B2-18
1907
CVBS-SC2_MON-OUT
B2-30
3909
100R
1909
CVBS-SC1_AV1-IN
B2-16
1910
CVBS_TER_OUT
B2-29
3911
100R
1911
IF-TER
B1-5
B1-9
1913
AGC
B1-11
2915
100p
1915
EW-DRIVE
B4-71
1931
PIP_AUDIO
B4-71
3939
100R
1939
TO/FROM 1205 OF LSSB
A8
0230
CON-BOARD-EDGE
F901
F902
F903
F904
F905
F906
F907
F909
F910
F911
F913
F915
F918
F919
F920
F921
F923
F924
F925
F926
F928
F929
F931
F932
F933
F935
F936
F937
F938
F939
+5V2
F940
F980
F979
F978
F977
F976
F975
F974
F973
F972
F970
F969
F968
F967
F966
F965
F964
F963
F962
F961
F960
F959
F958
F956
F955
F953
F952
F951
F950
F949
F948
F947
+3V3
+5V
F944
F943
+8V
F941
R-CL_VL-OUT
B3-60
1970
L-CL_VL-OUT
B3-61
1969
R-FRONT-IN
B3-54
1966
L-FRONT-IN
B3-52
1965
3964
100R
C-FRONT-IN
B2-20
1964
3963
100R
Y-CVBS-FRONT-IN
B2-19
1963
R-SC1_AV-OUT
B3-67
1961
R-SC1_AV1-IN
B3-49
1960
R-SC2-OUT
B3-57
1959
R-SC2_AV2-IN
B3-51
1958
L-SC1_AV-OUT
B3-66
1956
L-SC2-OUT
B3-56
1955
L-SC2_AV2-IN
B3-50
1953
L-SC1_AV1-IN
B3-48
1952
DEGAUSS
B11-114
3980
100R
1980
KEYBOARD
B11-116
3979
100R
1979
2979
100p
RC5
B11-113
3978
100R
1978
2978
100p
ON-OFF-LED
B11-107
3977
100R
1977
2977
100p
AUDIO-R
B10-94
3976
100R
1976
2976
1n
AUDIO-L
B10-95
3975
100R
1975
2975
1n
AUDIO-SW
B10-96
3974
100R
1974
2974
1n
AUDIO-C
B10-97
3973
100R
1973
2973
1n
AUDIO-SURR
B10-98
3972
100R
1972
2972
1n
HEADPHONE-R
B10-99
1968
2968
1n
HEADPHONE-L
B10-100
1967
2967
1n
FRONT-DETECT
B11-117
3962
100R
1962
2962
1n
SOUND-ENABLE_1
SOUND-ENABLE
B11-108
3951
100R
1951
2951
1n
POR_FLASH_1
POR_FLASH
B8-87
B11-121
3950
100R
1950
2950
100p
SCL0
B11-110
1949
2949
100p
SDA0
B11-109
1948
2948
100p
Y-SCAVEM
B7-78
1941
2941
100p
F911
500mV / div DC
20µs / div
F913
500mV / div AC
10µs / div
F923
1 V / div DC
10µs / div
F924
1 V / div DC
10µs / div
F925
1 V / div DC
10µs / div
F926
1 V / div DC
10µs / div
F928
500mV / div DC
5ms / div
F929
500mV / div DC
5ms / div
F931
1 V / div DC
5ms / div
F941
2 V / div DC
20µs / div
F967
200mV / div AC
1ms / div
F968
200mV / div AC
1ms / div
F969
500mV / div AC
1ms / div
F970
500mV / div AC
1ms / div
3139 123 5536.2
CL 36532058_037.eps
211103

Layout SSB (Overview LOT Side)

1113 C2
1116 B1
1118 A1
1581 C3
1582 A6
2002 A3
2006 A2
2014 B2
2015 B2
2016 B3
2021 B2
2022 B3
2031 A2
2032 B2
2033 B2
2038 A3
2039 B3
2040 A3
2043 B2
2044 B2
2045 B2
2046 A2
2047 B2
2048 B2
2049 B2
2050 B2
2051 B2
2060 C1
2062 B1
2078 A2
2079 A2
2081 A2
2082 B1
2088 A1
2101 C2
2102 C2
2103 C2
2115 C2
2119 B2
2126 B2
2127 B2
2128 B3
2130 B2
2132 C2
2133 C2
2134 B2
2135 C2
2136 B2
2137 B2
2138 B2
2150 B1
2151 B1
2152 B1
2154 C1
2155 B2
2156 A2
2157 A2
2281 B5
2282 B4
2284 B5
2285 C4
2300 B4
2305 C5
2310 C4
2324 C5
2325 C4
2326 D4
2341 C4
2342 C5
2343 C5
2344 C4
2345 C4
2346 C4
2350 C5
2351 C5
2352 C5
2358 C5
2359 C5
2360 C5
2371 C4
2372 C4
2377 C4
2379 C4
2430 A4
2431 A4
2432 A4
2433 A4
2434 A4
2435 A4
2436 A3
2437 A5
2438 A4
2439 A4
2440 A4
2441 A4
2442 A4
2443 A4
2444 A4
2445 A4
2447 A3
2450 B4
2451 A4
2452 B4
2453 A3
2454 A4
2457 A4
2458 A4
2461 A5
2462 A4
2465 A3
2467 A4
2468 A3
2480 A5
2481 A5
2483 A6
2484 A5
2485 A6
2486 A6
2487 A6
2488 A6
2489 A7
2514 B4
2516 C4
2525 B3
2546 B4
2557 B4
2571 A5
2581 C3
2582 C3
2583 C4
2584 A7
2600 B5
2601 B4
2604 B4
2607 B4
2609 C4
2611 C5
2612 C5
2615 B5
2618 B5
2620 B5
2622 B5
2623 B5
2628 B5
2629 B5
2630 B4
2633 B4
2634 C5
2638 B4
2644 B4
2645 B5
2649 B5
2651 B6
2652 B6
2654 C6
2655 C6
2656 C7
2657 C7
2658 C6
2659 C6
2730 A6
2731 A6
2732 A7
2733 A6
2734 B6
2792 C6
2793 B6
2904 D2
2915 D2
2918 D2
2919 D2
2920 D3
2937 D3
2938 C4
2941 C4
2948 C3
2949 C3
2950 C4
2951 C4
2962 C6
2967 C7
2968 C7
2972 D7
2973 D7
2974 D7
2975 D7
2976 D7
2977 C4
2978 C3
2979 D6
3002 B3
3004 B3
3006 A3
3010 B2
3011 B2
3012 B2
3013 B1
3016 B2
3018 A2
3019 B3
3024 A3
3026 A3
3027 B3
3060 C1
3061 A1
3062 C1
3063 C1
3066 B1
3067 B1
3068 A2
3070 A1
3101 C2
3102 C2
3103 C2
3104 C2
3105 C2
3106 C2
3112 C2
3116 B2
3131 B2
3132 B2
3133 B2
3134 C2
3135 B2
3137 C2
3138 B2
3150 B1
3151 B1
3152 B1
3281 A5
3282 A5
3283 A5
3284 A5
3302 C4
3303 D5
3304 D4
3305 C5
3306 C4
3318 C4
3324 C4
3326 C4
3328 C4
3334 C4
3335 C4
3336 C4
3337 C4
3340 C4
3341 C4
3343 C4
3346 C4
3347 C4
3348 C4
3349 D4
3350 C5
3351 C5
3352 C5
3355 C5
3357 C5
3358 C5
3371 C4
3374 C4
3375 C4
3388 C4
3390 C4
3433 A5
3434 A5
3435 A4
3436 A4
3437 A4
3439 A3
3440 A3
3441 A3
3442 A3
3443 A3
3444 A3
3445 A4
3446 A4
3447 A4
3448 A4
3449 A4
3450 A4
3452 A4
3453 A4
3454 A4
3455 A4
3456 A4
3457 A4
3458 A3
3459 A4
3460 A3
3461 A4
3462 A4
3463 A4
3465 A5
3468 A4
3480 A6
3481 A5
3482 A5
3483 A6
3484 A5
3485 A5
3501 C4
3502 C4
3503 C4
3504 C4
3507 C4
3508 C4
3511 B4
3512 C4
3513 B3
3515 B3
3518 C4
3523 B3
3530 B4
3541 A7
3542 B3
3543 B4
3544 B3
3546 B4
3547 B4
3548 B4
3549 B4
3550 A3
3557 B4
3561 B4
3563 B4
3564 B4
3565 B4
3570 A5
3571 A5
3572 A5
3573 A5
3580 A5
3581 A5
3582 B7
3583 B7
3586 A7
3590 B7
3651 C6
3652 C6
3653 C6
3737 B5
3904 C2
3909 D2
3911 D2
3918 C2
3919 C2
3928 C5
3929 C5
3937 D3
3938 C4
3950 C4
3951 C4
3962 C6
3963 D2
3964 D2
3972 D7
3973 D7
3974 D7
3975 D7
3976 D7
3977 C4
3978 C3
3979 D6
3980 C3
4062 B1
4108 B3
4153 B1
4430 A4
4431 A4
4432 A4
4433 A3
4434 A4
4435 B4
4436 B4
4437 B4
4450 A7
4451 A7
4452 A7
4453 A7
4480 A5
4481 A5
4560 B4
4570 A5
4571 A5
4573 A5
4790 B6
4791 B6
5060 A2
5061 A2
5062 A2
5063 B1
5101 C2
5102 C2
5112 B2
5128 C2
5134 B2
5135 B2
5150 B2
5151 A2
5152 A2
5281 B5
5282 B4
5283 B5
5285 B4
5300 C4
5328 C4
5342 C5
5343 B5
5344 B4
5345 B4
5450 B4
5452 B4
5480 A6
5570 A5
5583 B4
5600 B6
5601 C5
5651 B7
5652 B7
5654 C6
5659 C6
5730 A6
5731 A6
5792 C6
6101 C2
6102 C2
6301 C5
6326 C4
6327 C4
6341 C4
6480 A6
6481 A5
6589 A7
6651 B6
7060 C1
7062 A1
7063 B1
7101 C2
7104 C2
7131 C2
7150 B1
7304 D5
7346 C4
7430 A4
7431 A3
7432 A4
7433 A4
7434 A4
7480 A6
7525 B3
7581 B7
7650 C7
7651 C7

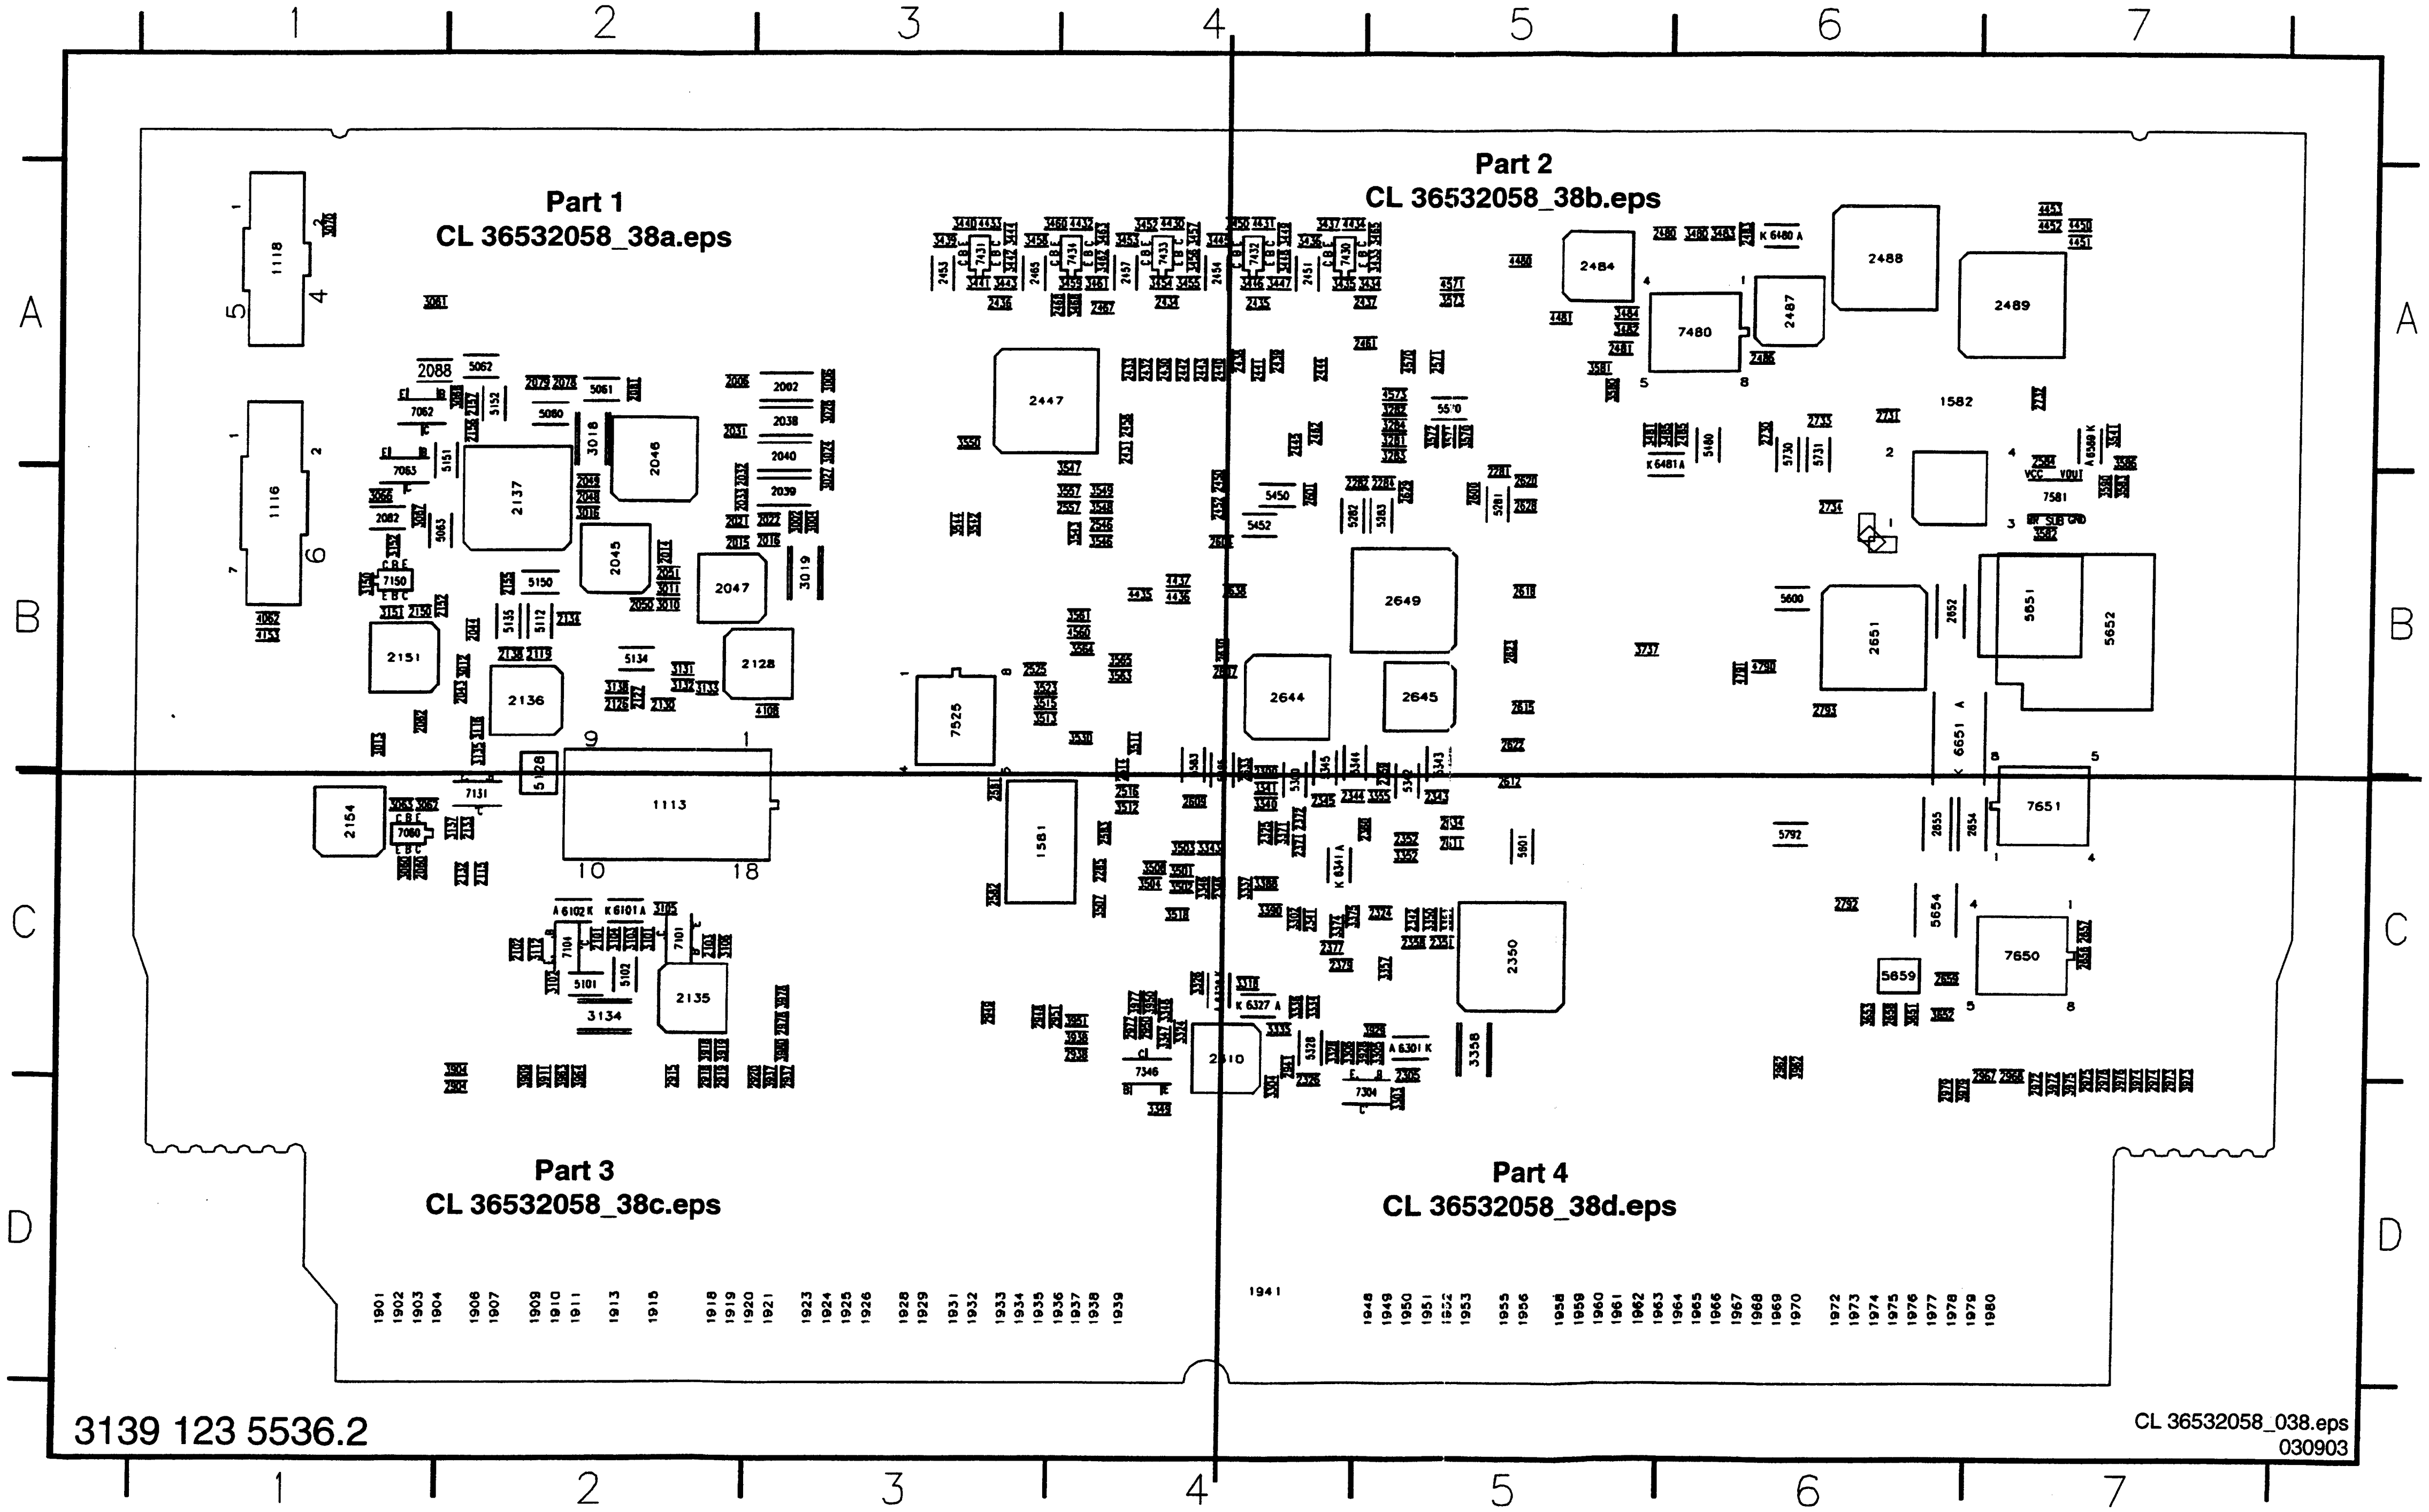

Layout SSB (Part 1 LOT Side)

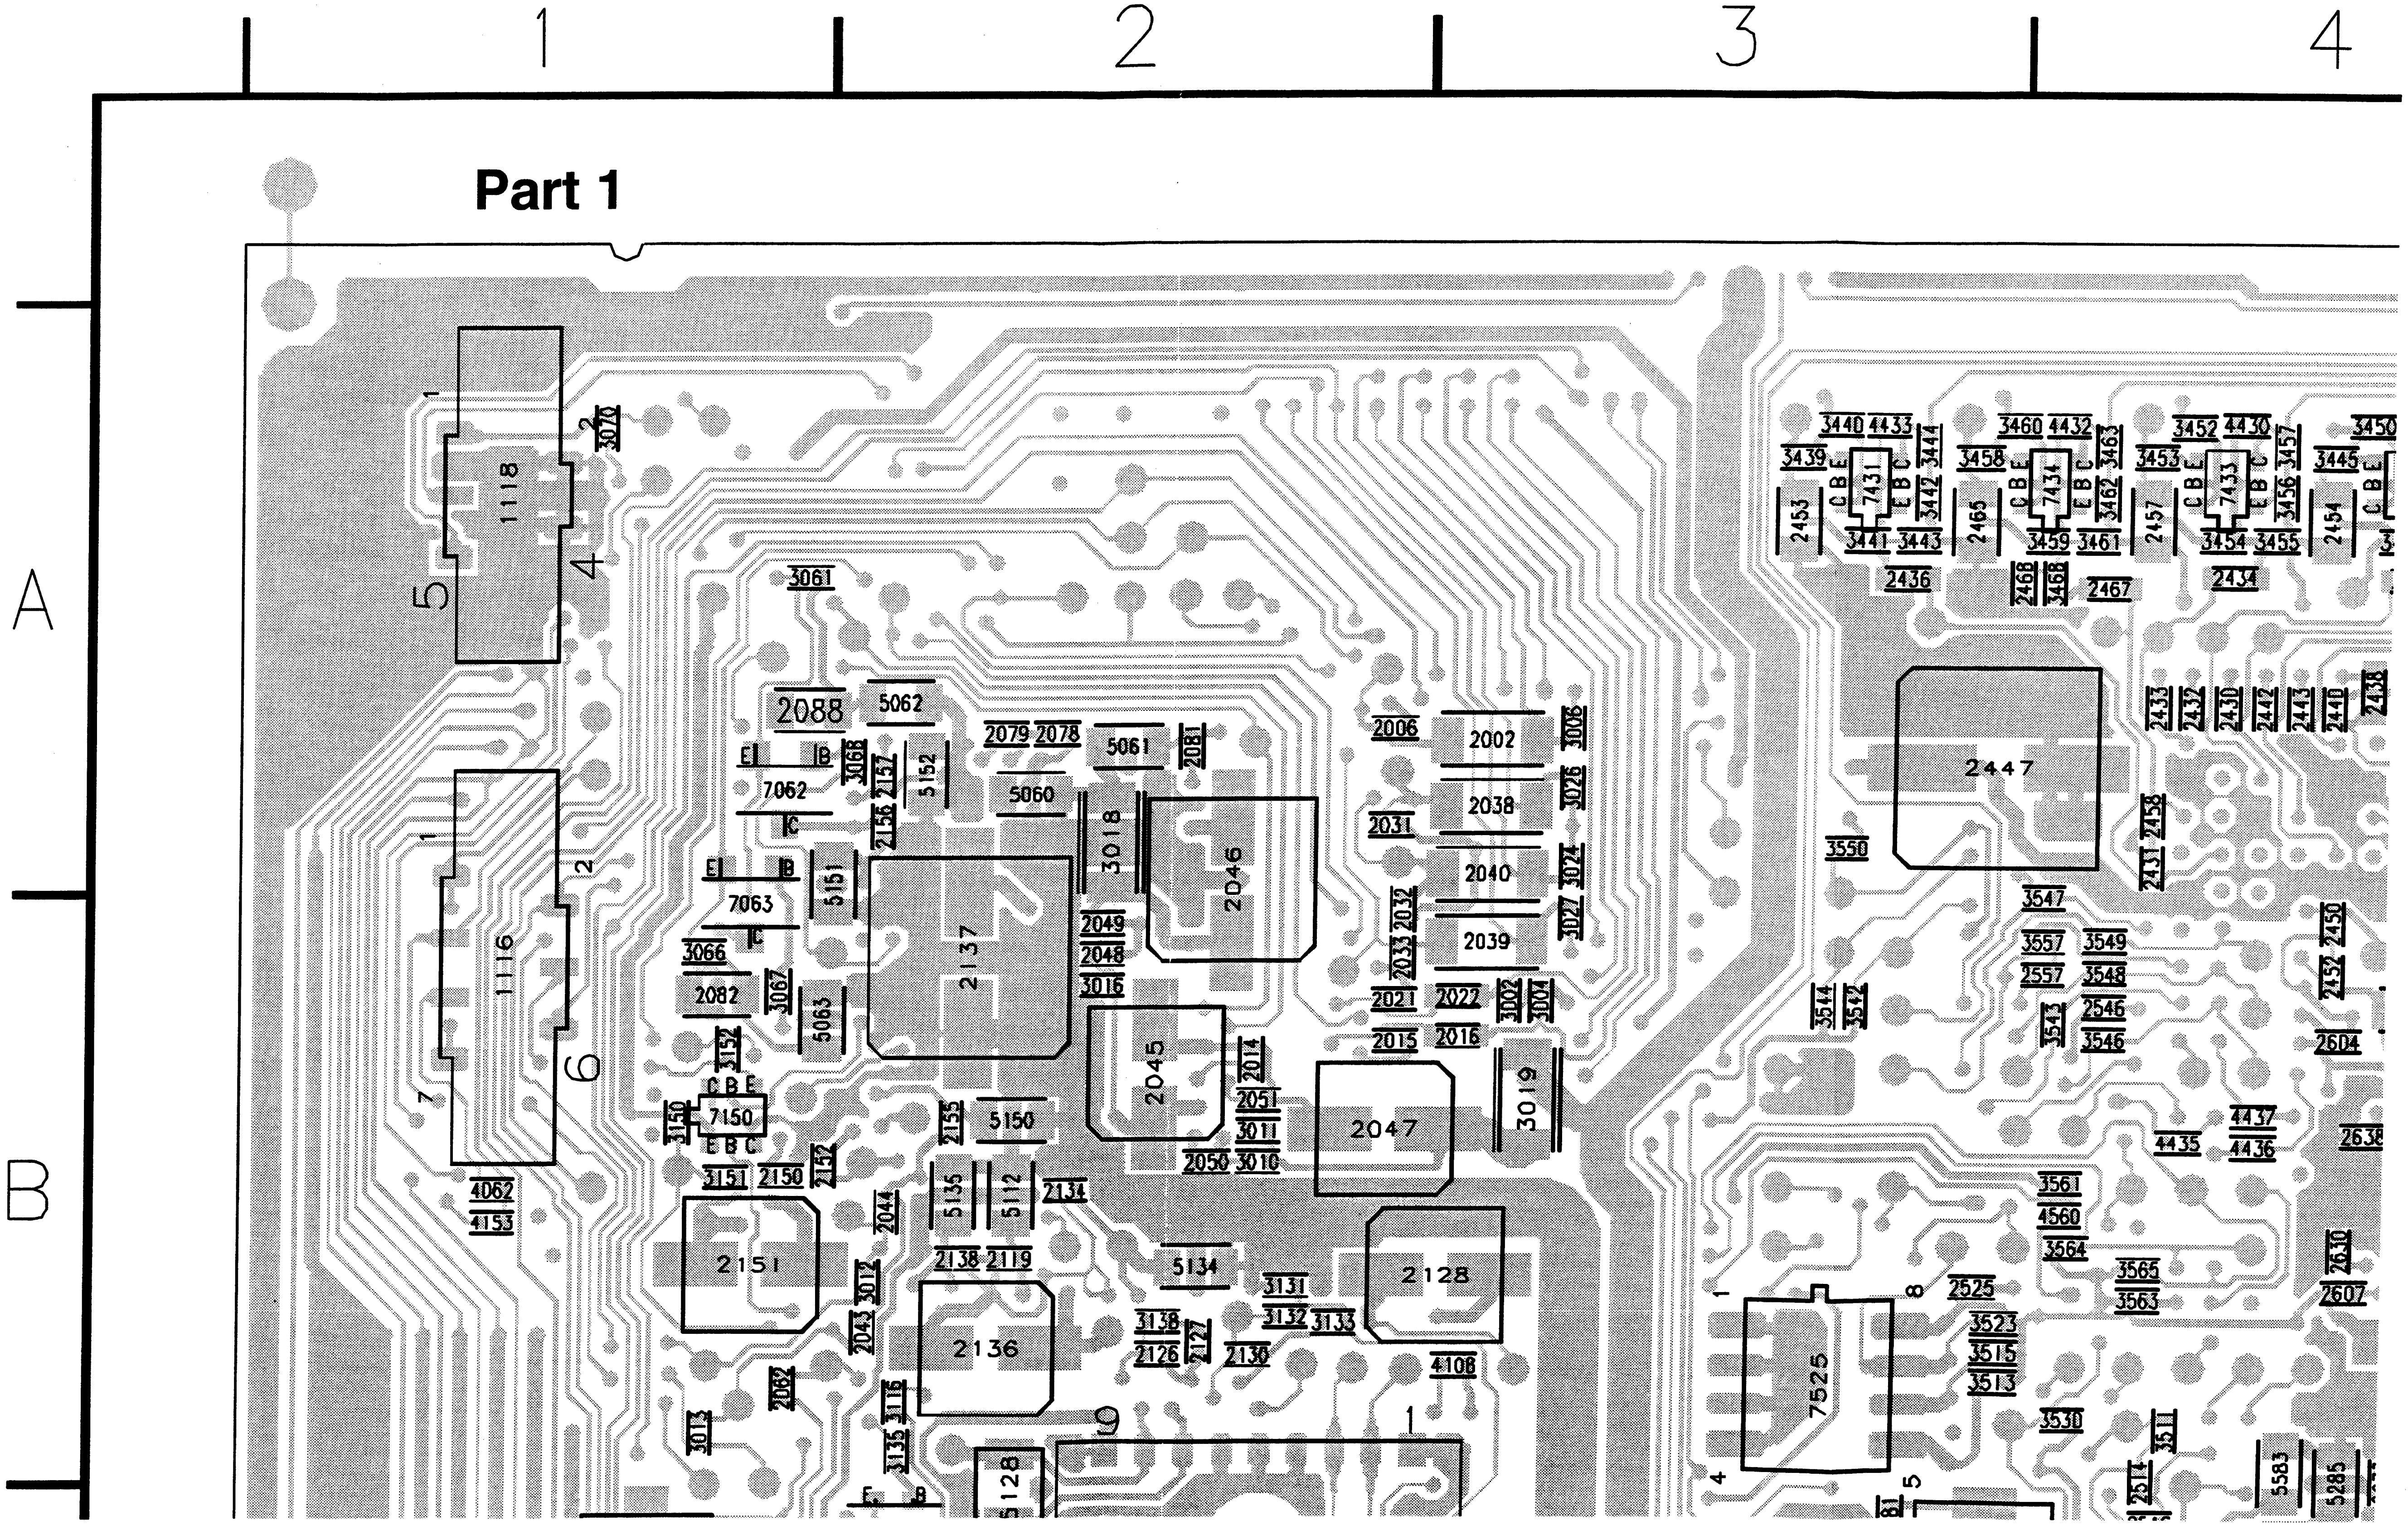
1
2
3
4
A
B
Part 1
1118
1116
3061
2088
5062
7062
7063
3066
2082
5063
7150
3151
2150
2151
2044
2043
2136
5128
2137
5151
5152
2079
2078
5061
2081
5060
3018
2046
2049
2048
3016
2045
2014
2051
3011
2050
3010
5150
5135
5112
2134
2138
2119
5134
3131
3132
3133
3138
2126
2127
2130
2047
2128
4108
2006
2002
2038
2040
2039
2031
2021
2022
2015
2016
3019
2447
3550
3547
3557
3549
2557
3548
2546
3546
3561
4560
3564
3565
3563
2525
3523
3515
3513
3530
7525
4437
4436
4435
2604
2638
2607
5583
5285
3440
4433
3439
7431
3441
3443
2453
2436
3460
4432
3458
7434
3459
3461
2465
2467
3452
4430
3453
7433
3454
3455
2457
2434
3450
3445
2454
4062
4153

CL 36532058_38a.eps
030903

Layout SSB (Part 2 LOT Side)

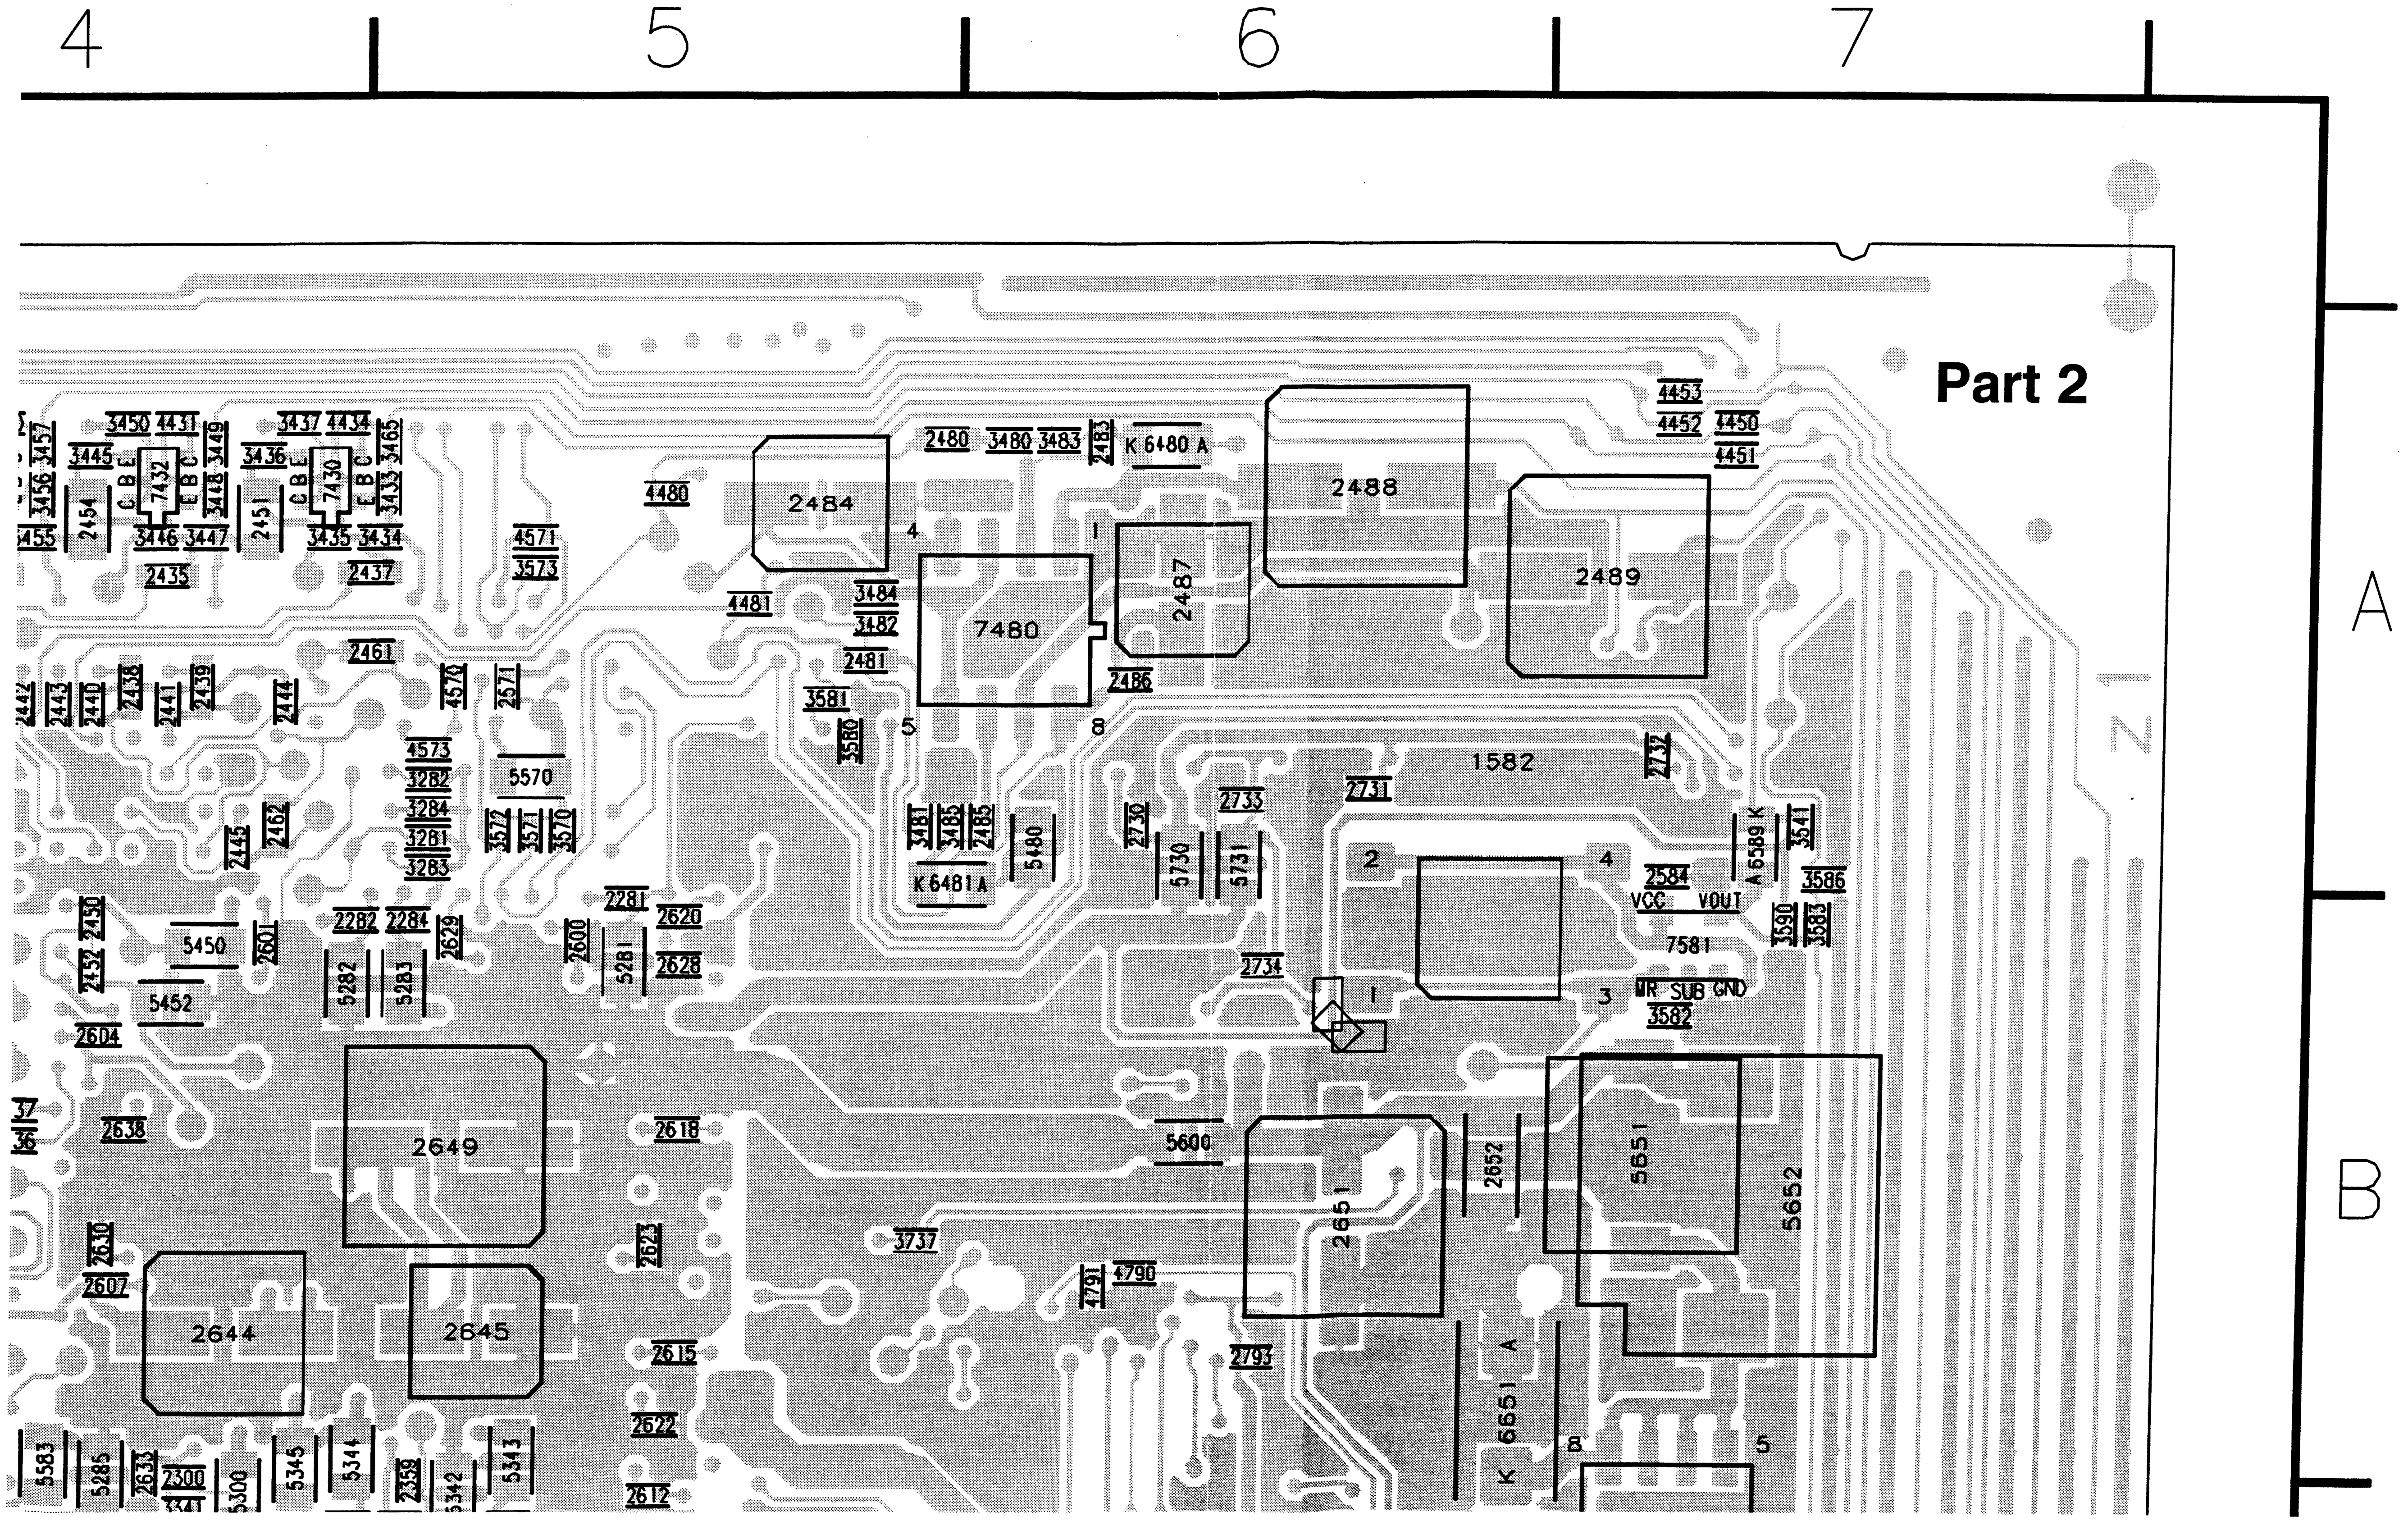
4
5
6
7
A
B
Part 2
3450 4431
3445
3457
3456
3455
7432
2454
3446 3447
2435
3449
3448
3437 4434
3436
7430
2451
3435 3434
2437
3465
3433
4480
2484
4481
3484
3482
2481
3581
3580
2480 3480 3483
2483
K 6480 A
7480
2487
2486
2488
2489
4453
4452 4450
4451
4571
3573
2461
4570
2571
2442
2443
2440
2438
2441
2439
2444
4573
3282
3284
3281
3283
5570
3572
3571
3570
2445
2462
3481
3485
2485
K 6481 A
5480
2730
5730
5731
2733
2731
1582
2732
2584
VCC VOUT
7581
WR SUB GND
3582
A 6589 K
3541
3586
3590
3583
2734
2281
2620
2282 2284
2629
2600
5281
2628
5282
5283
2450
2452
5450
2601
5452
2604
2649
2618
5600
2651
2652
5651
5652
2638
2630
2607
2644
2645
2623
3737
4791
4790
2793
2615
2622
2612
K 6651 A
5583
5285
2633
2300
5300
5345
5344
2358
5342
5343

CL 36532058_38b.eps
030903

Layout SSB (Part 3 LOT Side)

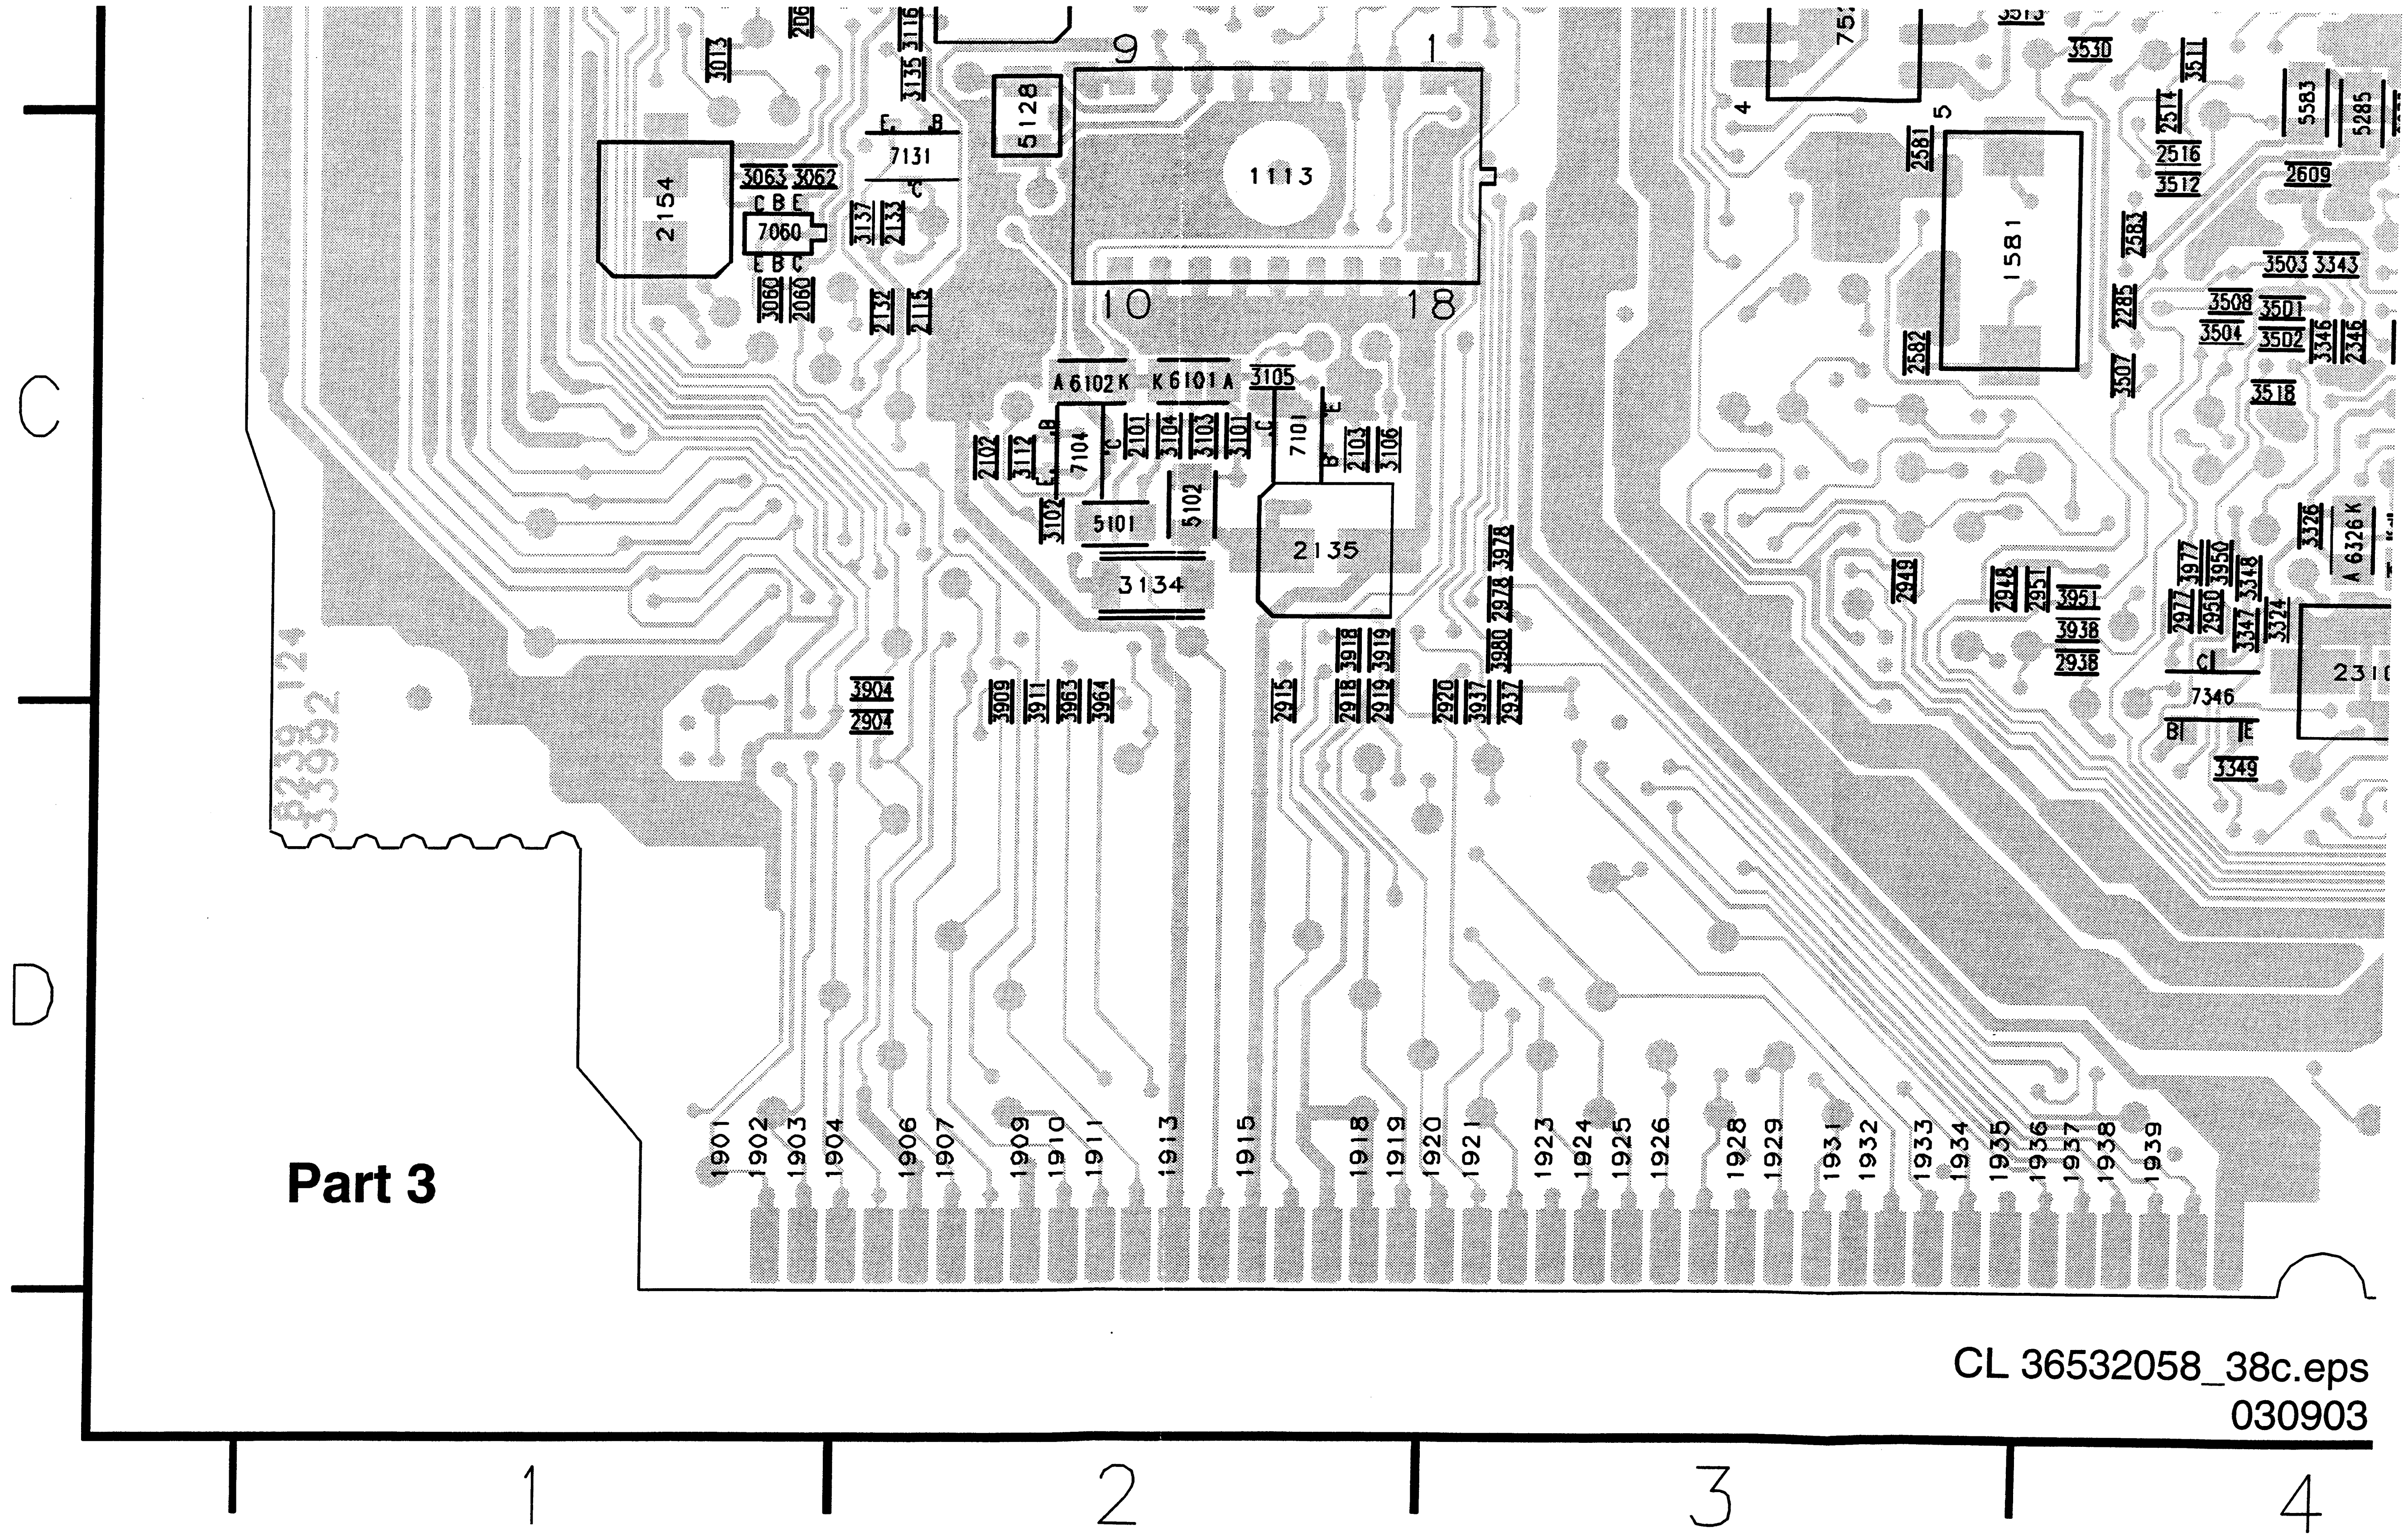
C
D
1
2
3
4
Part 3
2154
3063
3062
7060
3060
2060
3013
7131
3137
2133
2132
2113
3135
3116
5128
1113
9
1
10
18
A 6102 K
K 6101 A
3105
7104
7101
2102
3112
3102
2101
3104
3103
3101
2103
3106
5101
5102
3134
2135
3904
2904
3909
3911
3963
3964
2915
3918
3919
2918
2919
2920
3937
2937
3980
2978
3978
2581
2582
1581
2583
2285
3507
3530
3511
2514
2516
3512
5583
5285
2609
3503
3343
3508
3501
3504
3502
3346
2346
3518
2949
2918
2951
3951
3938
2938
2977
3977
2950
3950
3347
3348
3324
3326
A 6326 K
7346
3349
2310
1901
1902
1903
1904
1906
1907
1909
1910
1911
1913
1915
1918
1919
1920
1921
1923
1924
1925
1926
1928
1929
1931
1932
1933
1934
1935
1936
1937
1938
1939

CL 36532058_38c.eps
030903

Layout SSB (Part 4 LOT Side)

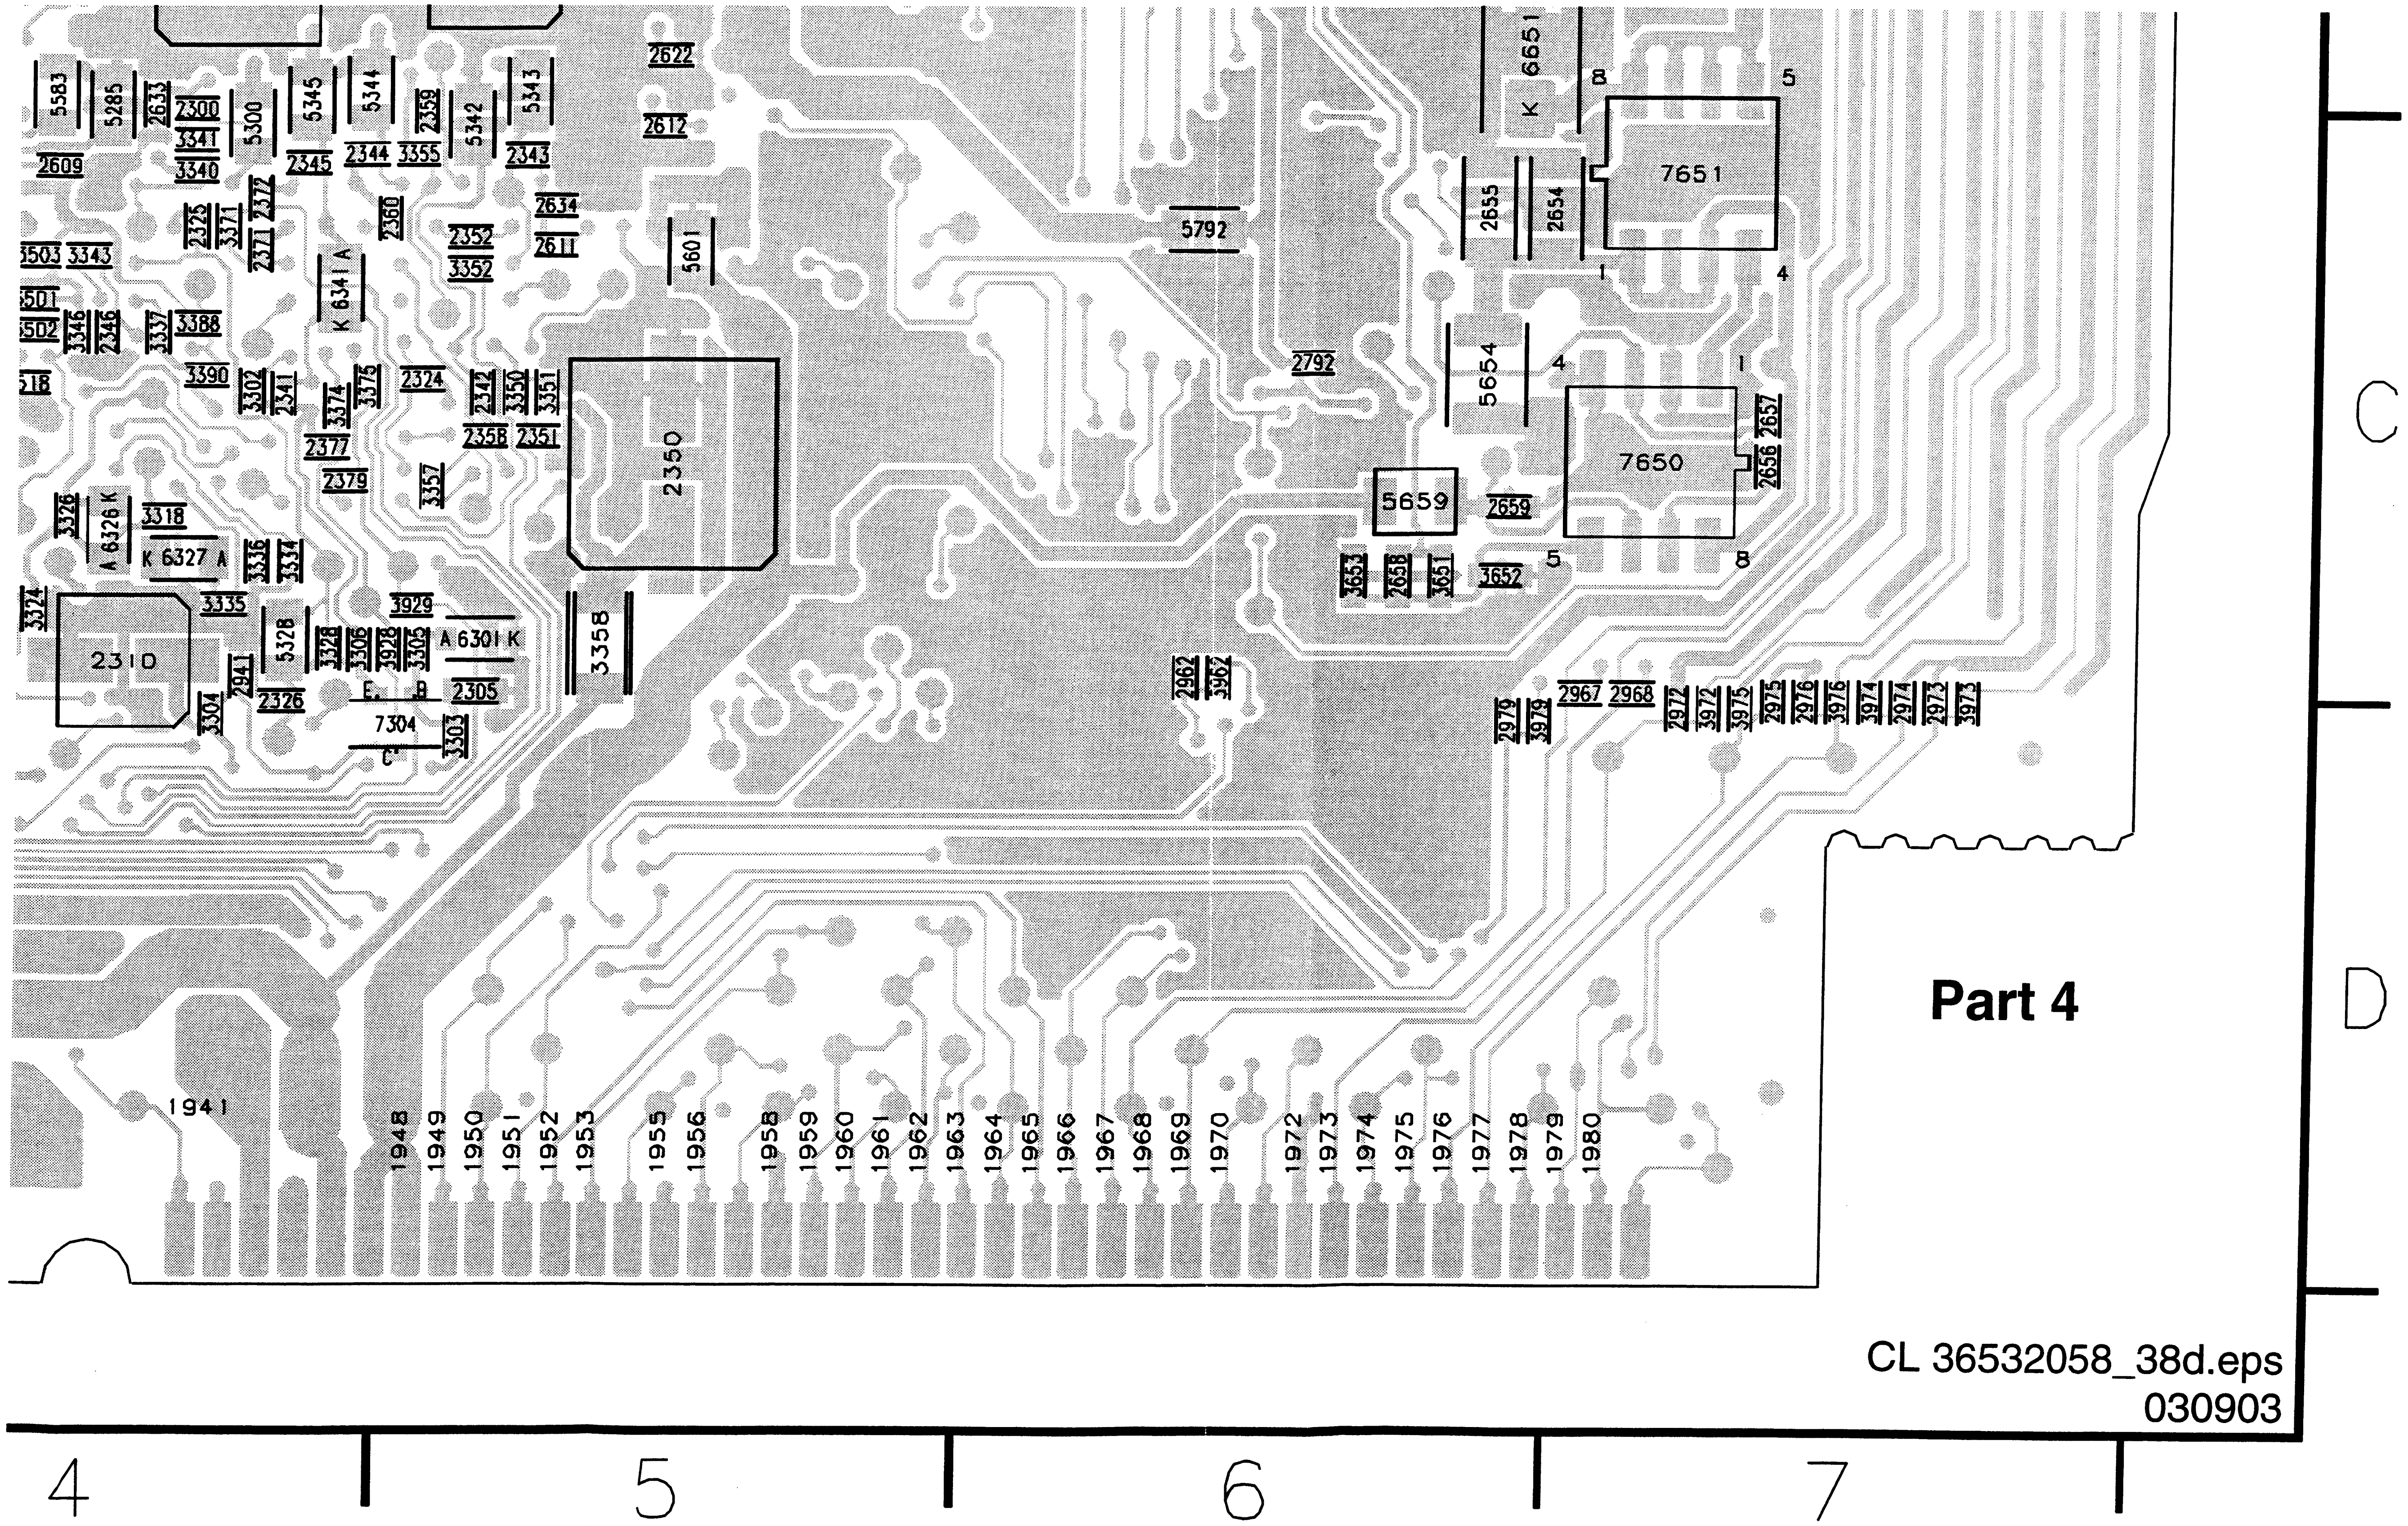
5583
5285
2633
2300
3341
3340
5300
5345
5344
2358
5342
5343
2609
2345
2344
3355
2343
2622
2612
6651
K
8
5
7651
2655
2654
1
4
2325
3371
2372
2371
2360
2352
3352
2634
2611
5601
5792
3503
3343
3501
3502
3346
2346
3337
3388
K 6341 A
2792
5654
7650
2657
2656
3518
3390
3302
2341
3374
3376
2324
2342
3350
3351
2377
2358
2351
2350
2379
3357
5659
2659
3326
A 6326 K
3318
K 6327 A
3336
3334
3653
2658
3651
3652
3324
3335
3929
2310
5328
3328
3306
3928
3305
A 6301 K
3358
2962
3962
2979
3979
2967
2968
2977
3977
3975
2975
2976
3976
3974
2974
2973
3973
2341
2326
E
B
2305
7304
3304
3303
C
1941
1948
1949
1950
1951
1952
1953
1955
1956
1958
1959
1960
1961
1962
1963
1964
1965
1966
1967
1968
1969
1970
1972
1973
1974
1975
1976
1977
1978
1979
1980
Part 4
C
D
4
5
6
7

CL 36532058_38d.eps
030903

Layout SSB (Overview Tuner Side)

0201	B5
0202	B5
0290	C2
0291	B2
1112	B5
1114	C6
1115	A7
1117	B7
1901	D7
1902	D7
1903	D7
1904	D6
1906	D6
1907	D6
1909	D6
1910	D6
1911	D6
1913	D6
1915	D6
1918	D6
1919	D6
1920	D5
1921	D5
1923	D5
1924	D5
1925	D5
1926	D5
1928	D5
1929	D5
1931	D5
1932	D5
1933	D5
1934	D5
1935	D5
1936	D4
1937	D4
1938	D4
1939	D4
1941	D4
1948	D3
1949	D3
1950	D3
1951	D3
1952	D3
1953	D3
1955	D3
1956	D3
1958	D3
1959	D3
1960	D3
1961	D3
1962	D3
1963	D2
1964	D2
1965	D2
1966	D2
1967	D2
1968	D2
1969	D2
1970	D2
1972	D2
1973	D2
1974	D2
1975	D2
1976	D2
1977	D2
1978	D2
1979	D1
1980	D1
2003	A5
2005	A6
2007	C7
2008	B7
2012	B5
2013	B6
2018	B6
2019	B5
2024	B6
2025	B5
2027	B6
2028	B5
2030	A6
2037	A5
2041	A7
2042	A7
2063	C7
2064	C7
2065	B7
2066	B7
2067	B7
2068	B7
2069	C7
2070	B7
2071	B7
2072	A7
2073	A7
2074	A7
2075	A7
2076	A7
2083	B7
2084	B7
2085	B7
2086	B7
2087	B7
2307	C3
2308	C4
2311	C4
2317	C4
2318	C4
2319	C4
2321	D4
2327	C4
2328	C4
2329	C4
2331	D4
2339	C4
2361	C3
2362	C3
2363	C3
2364	C3
2365	C3
2366	D3
2380	C5
2384	C5
2386	C4
2395	C5
2397	C5
2932	C5
2933	C5
2935	D5
2936	D5
3003	B5
3005	B5
3007	A5
3008	A7
3009	A7
3022	A5
3064	C7
3065	B7
3071	C7
3072	A7
3073	A7
3074	A7
3153	B7
3154	B7
3155	A7
3307	C3
3308	C4
3309	D3
3310	D4
3311	C3
3312	C3
3313	C3
3316	C4
3317	C4
3319	D4
3320	D4
3321	C4
3322	C4
3323	C4
3329	D4
3330	D4
3331	C4
3332	C4
3333	C4
3338	C4
3339	C4
3345	C6
3353	C5
3354	C5
3356	D5
3360	C3
3361	C3
3362	D3
3363	C3
3364	C3
3365	D3
3366	D3
3367	C3
3368	D3
3372	D3
3373	C3
3376	C3
3377	D3
3378	D3
3380	C5
3382	C4
3384	C5
3385	C5
3386	C4
3391	C5
3392	C5
3393	C5
3394	C5
3395	C5
3396	C5
3397	C5
3398	C5
3509	C5
3510	C5
3936	D6
3939	D6
4101	C6
4102	C6
4103	C6
4104	C6
4107	C6
4152	C7
4361	D3
4363	C2
4501	A2
5129	B5
5307	C4
5317	C4
5327	C4
6353	C5
6361	C2
6365	C3
6367	C3
6368	C3
6381	C5
6382	D5
6384	C5
6385	C4
6397	C5
6398	C5
7100	B6
7300	B3
7301	C3
7302	C4
7303	C4
7310	D3
7320	D4
7330	D4
7356	C5
7361	C2
7365	D3
7382	C4
7383	C5
7393	C5
7730	A2
7790	C2

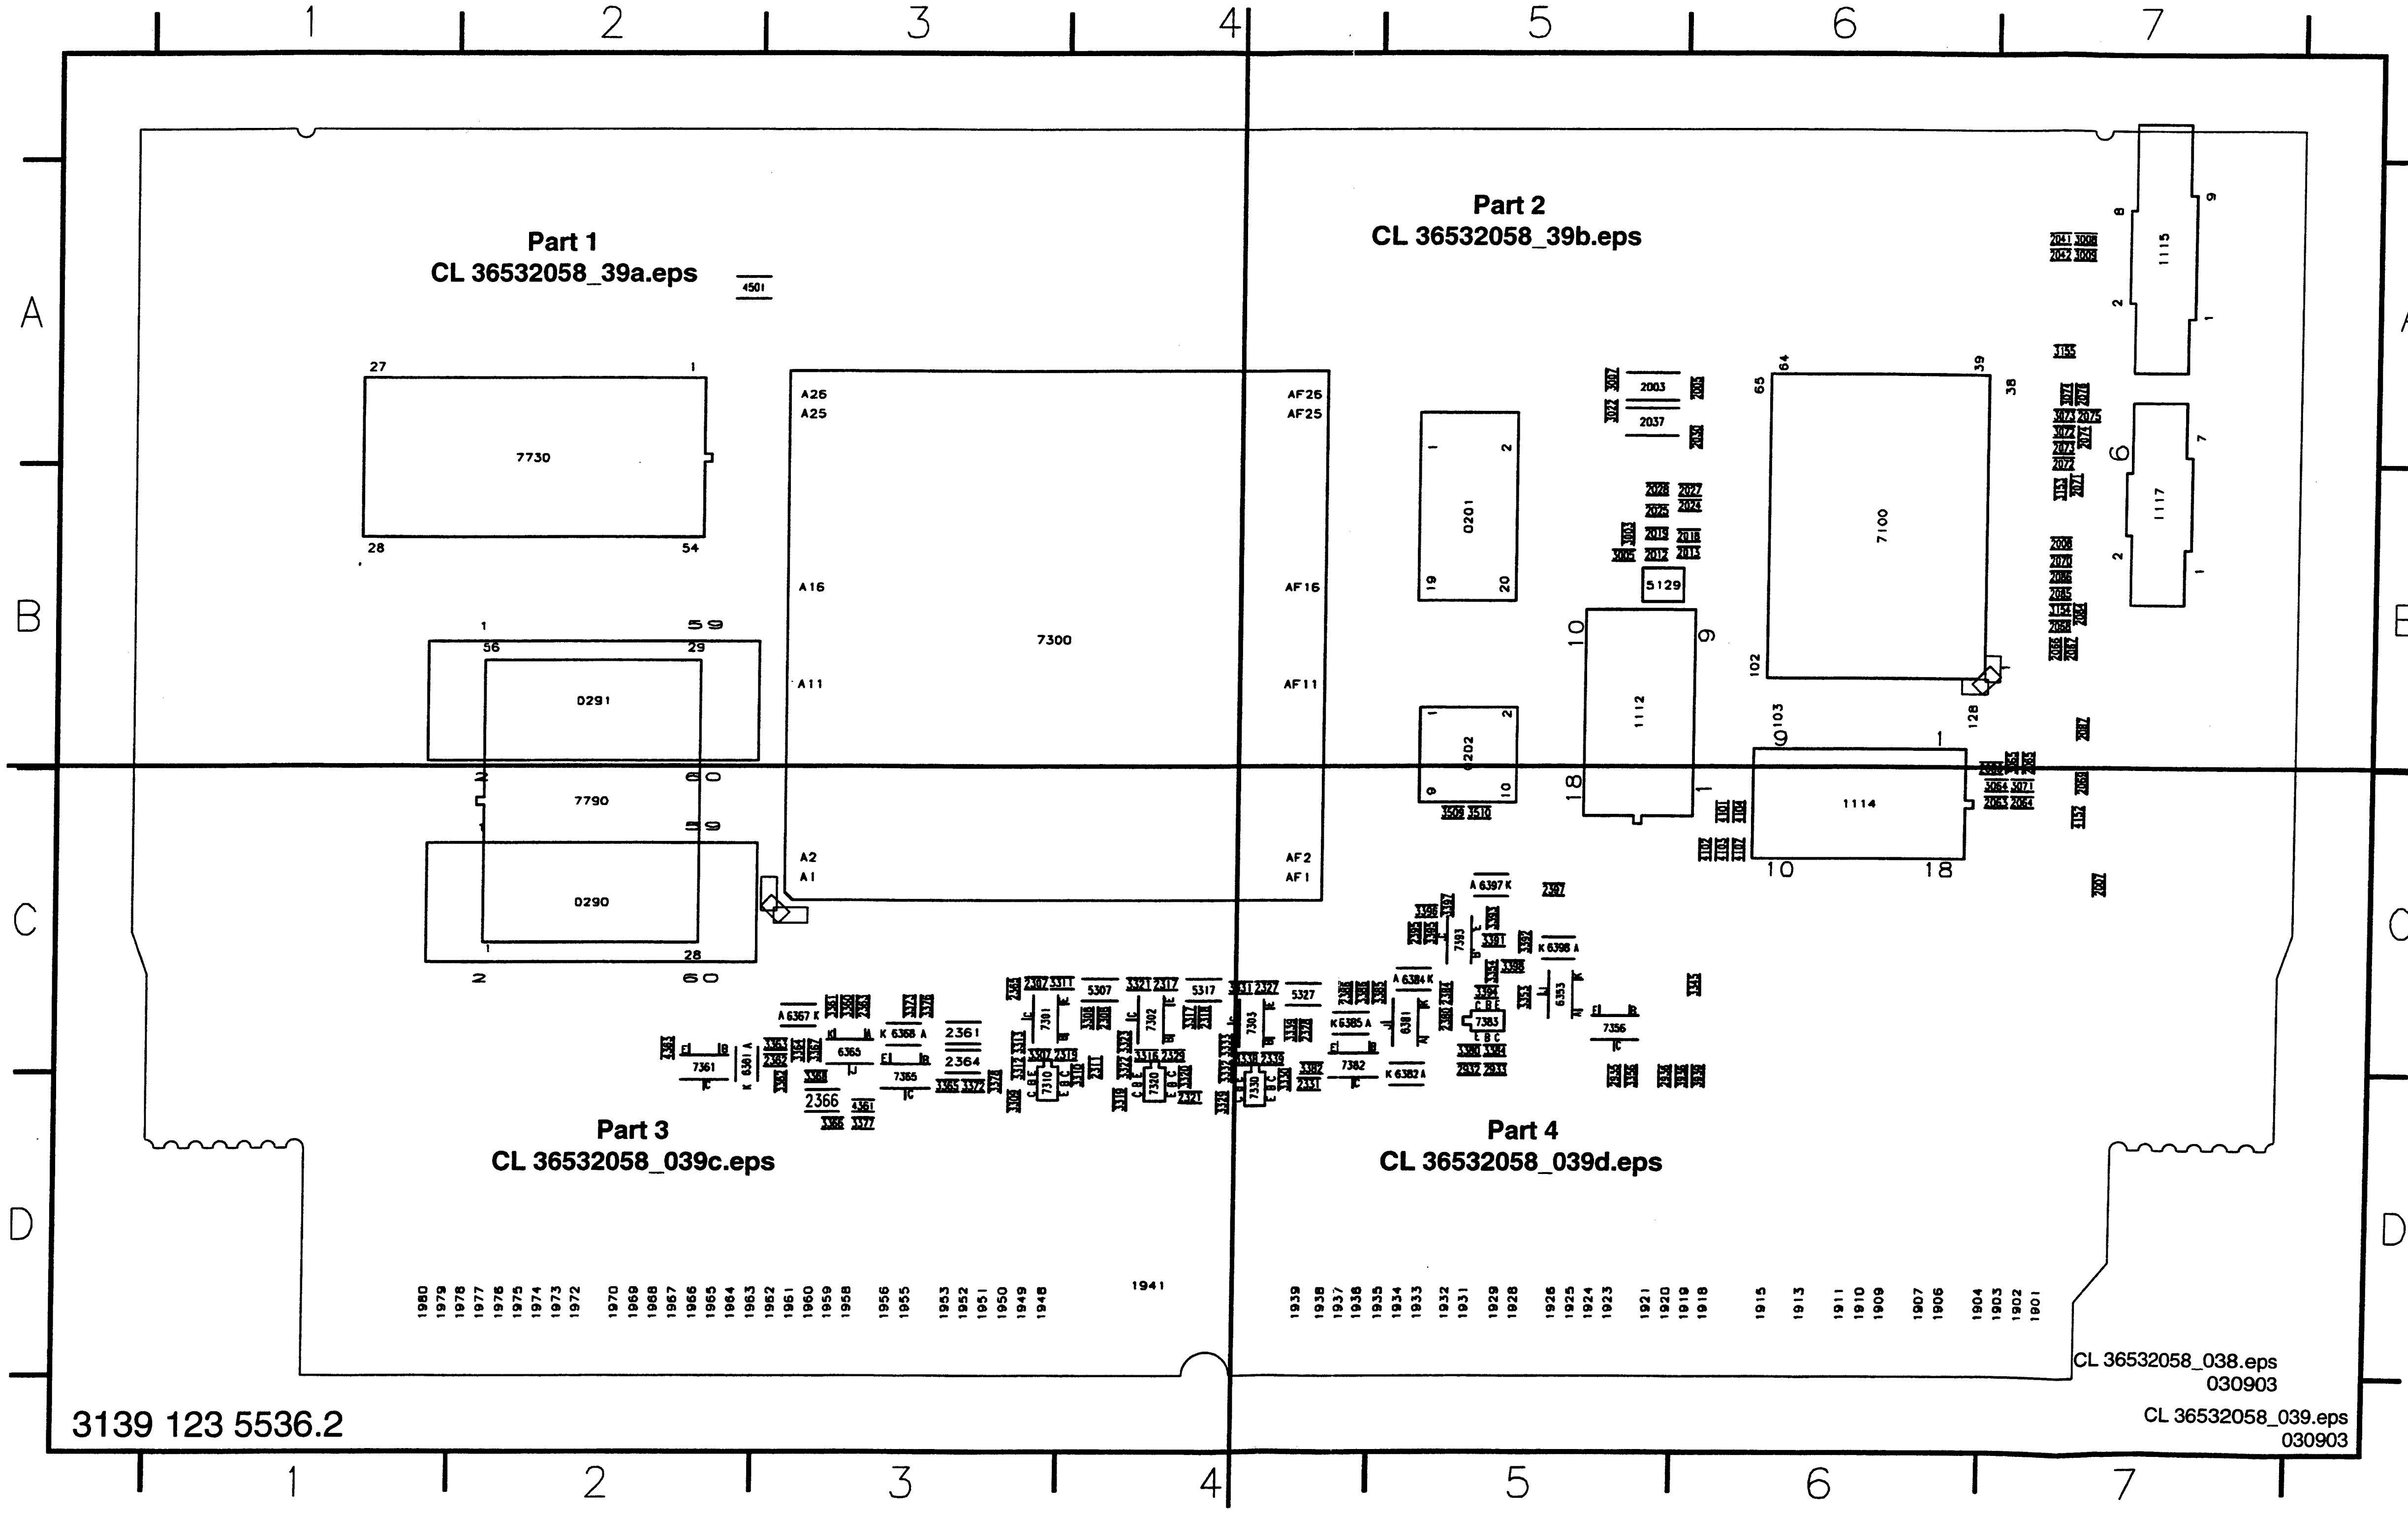
1
2
3
4
5
6
7
A
B
C
D
Part 1
CL 36532058_39a.eps
Part 2
CL 36532058_39b.eps
Part 3
CL 36532058_039c.eps
Part 4
CL 36532058_039d.eps
7730
7300
0291
7790
0290
0201
0202
7100
1112
1114
1115
1117
1941
CL 36532058_038.eps
030903
CL 36532058_039.eps
030903
3139 123 5536.2

Layout SSB (Part 1 Tuner Side)

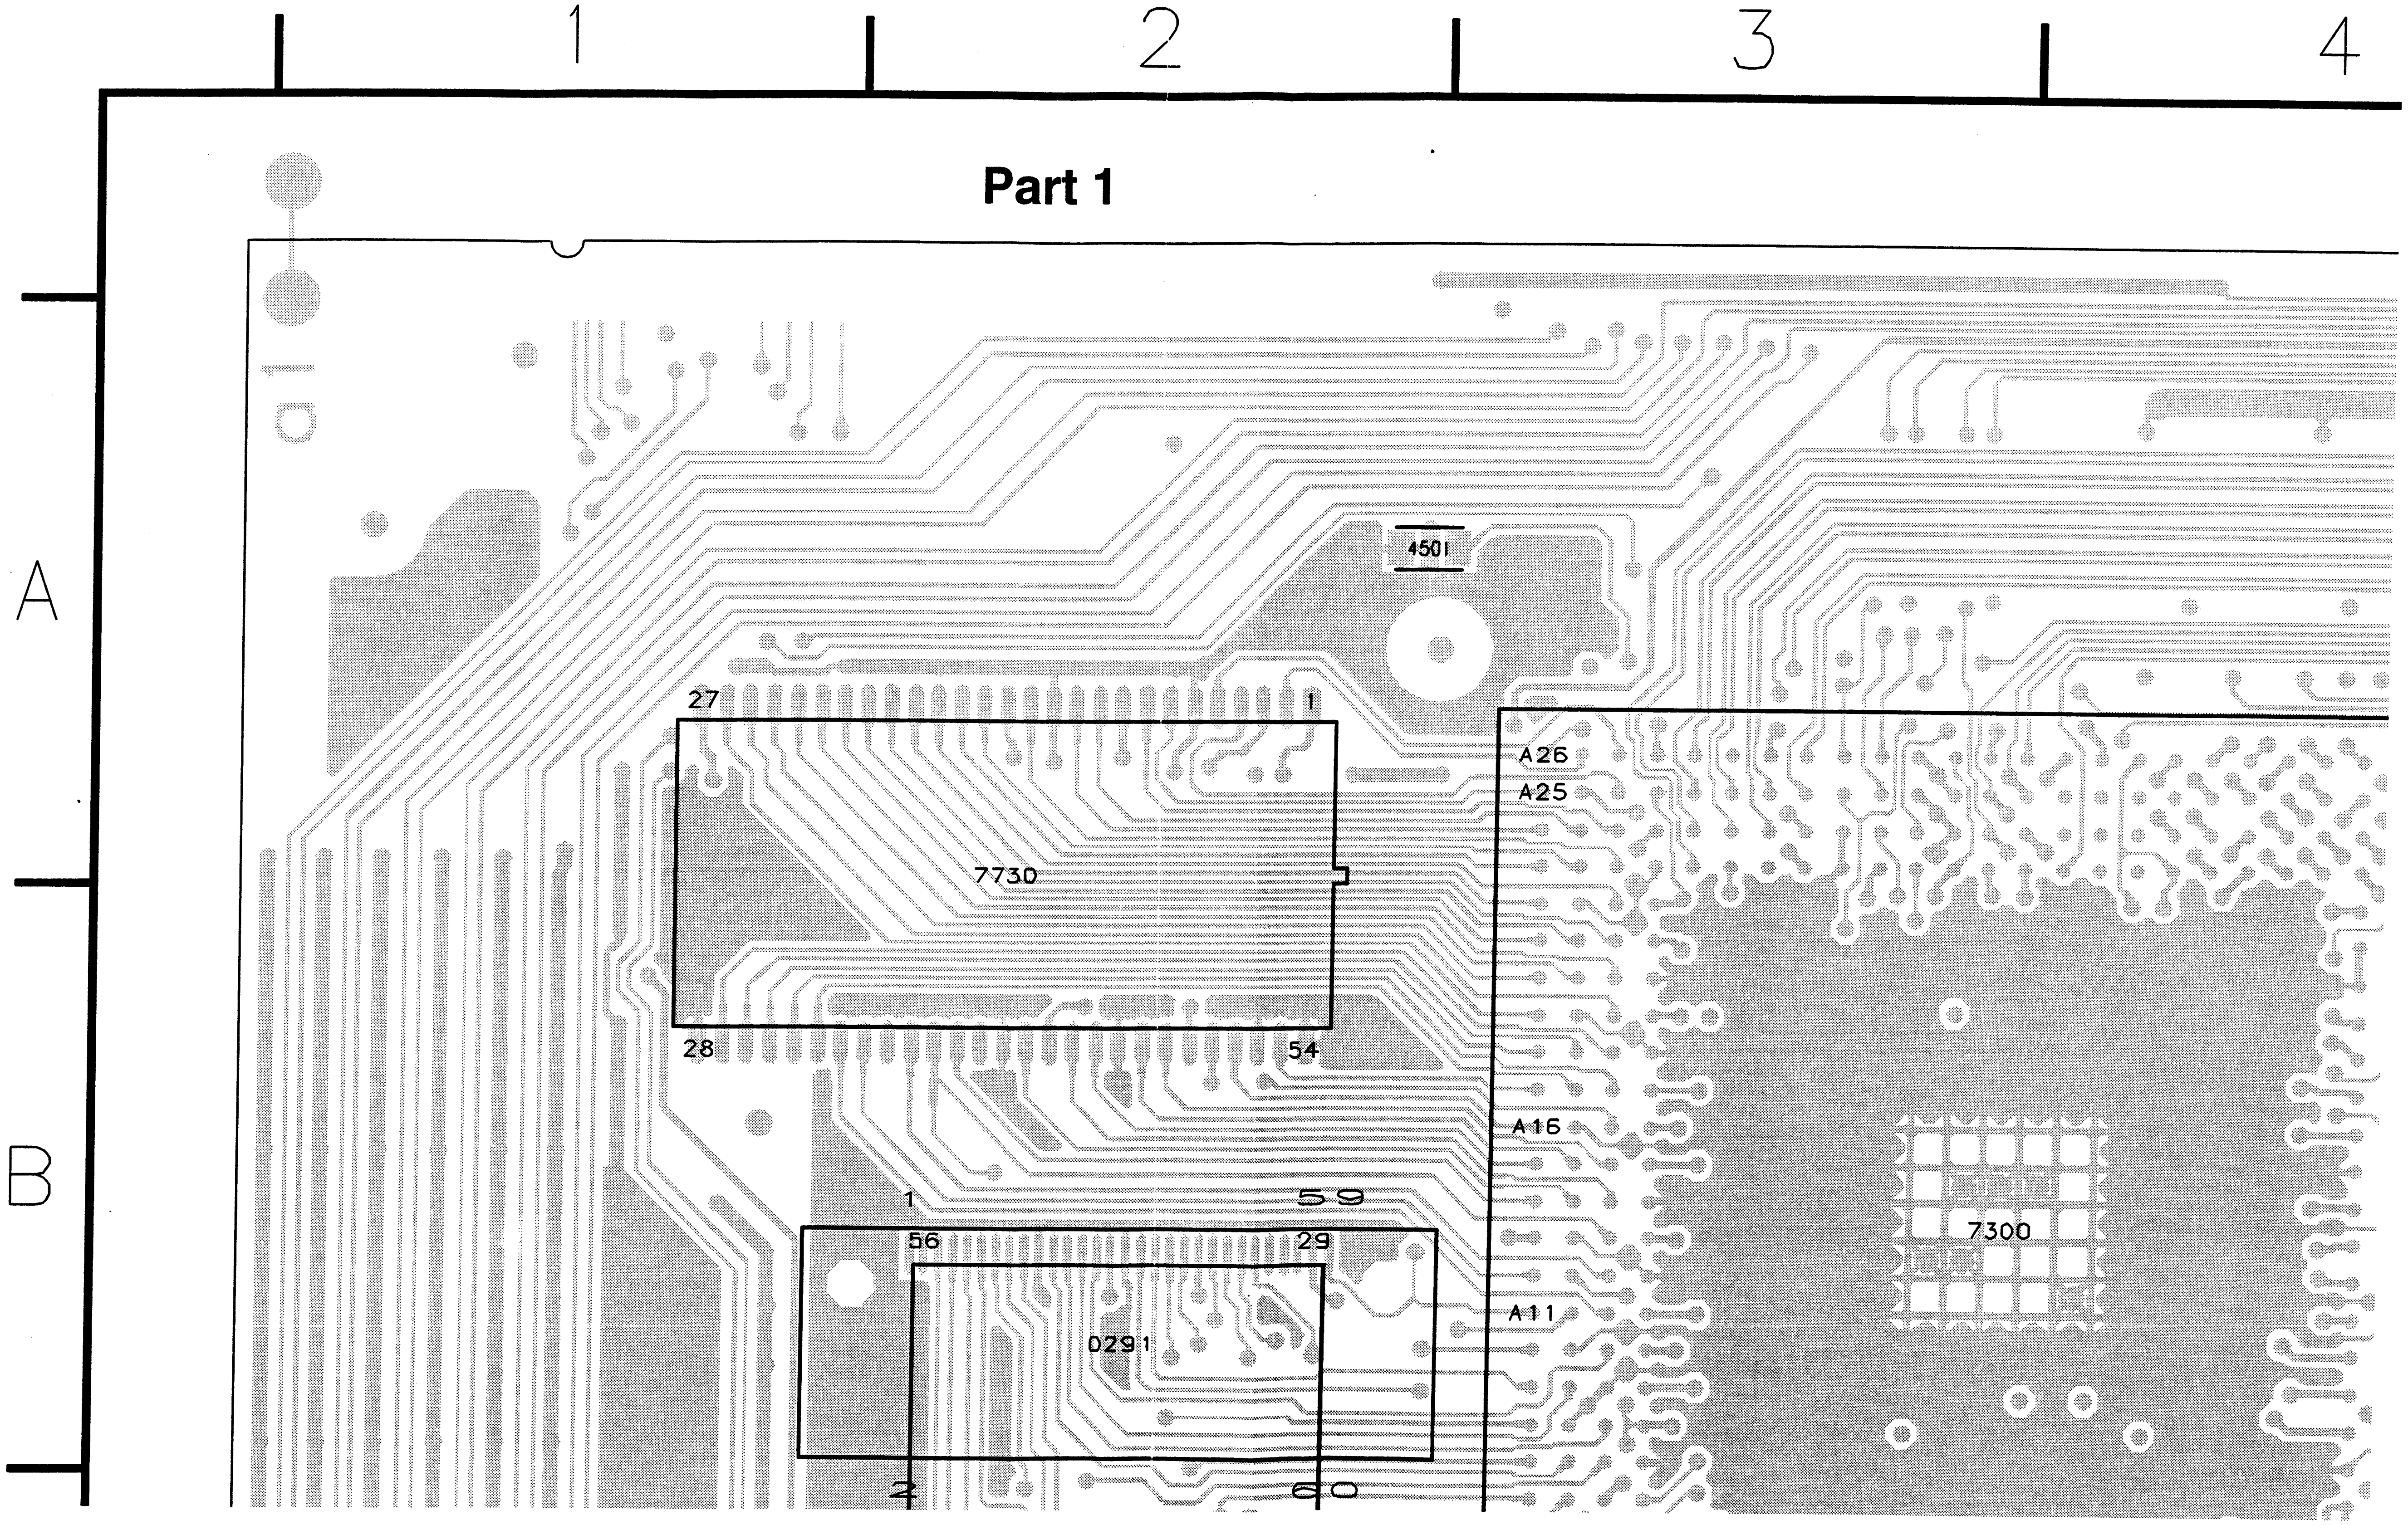
1
2
3
4
A
B
Part 1
a1
4501
27
1
7730
28
54
A26
A25
A16
A11
59
1
56
29
0291
2
60
7300

CL 36532058_39a.eps
030903

Layout SSB (Part 2 Tuner Side)

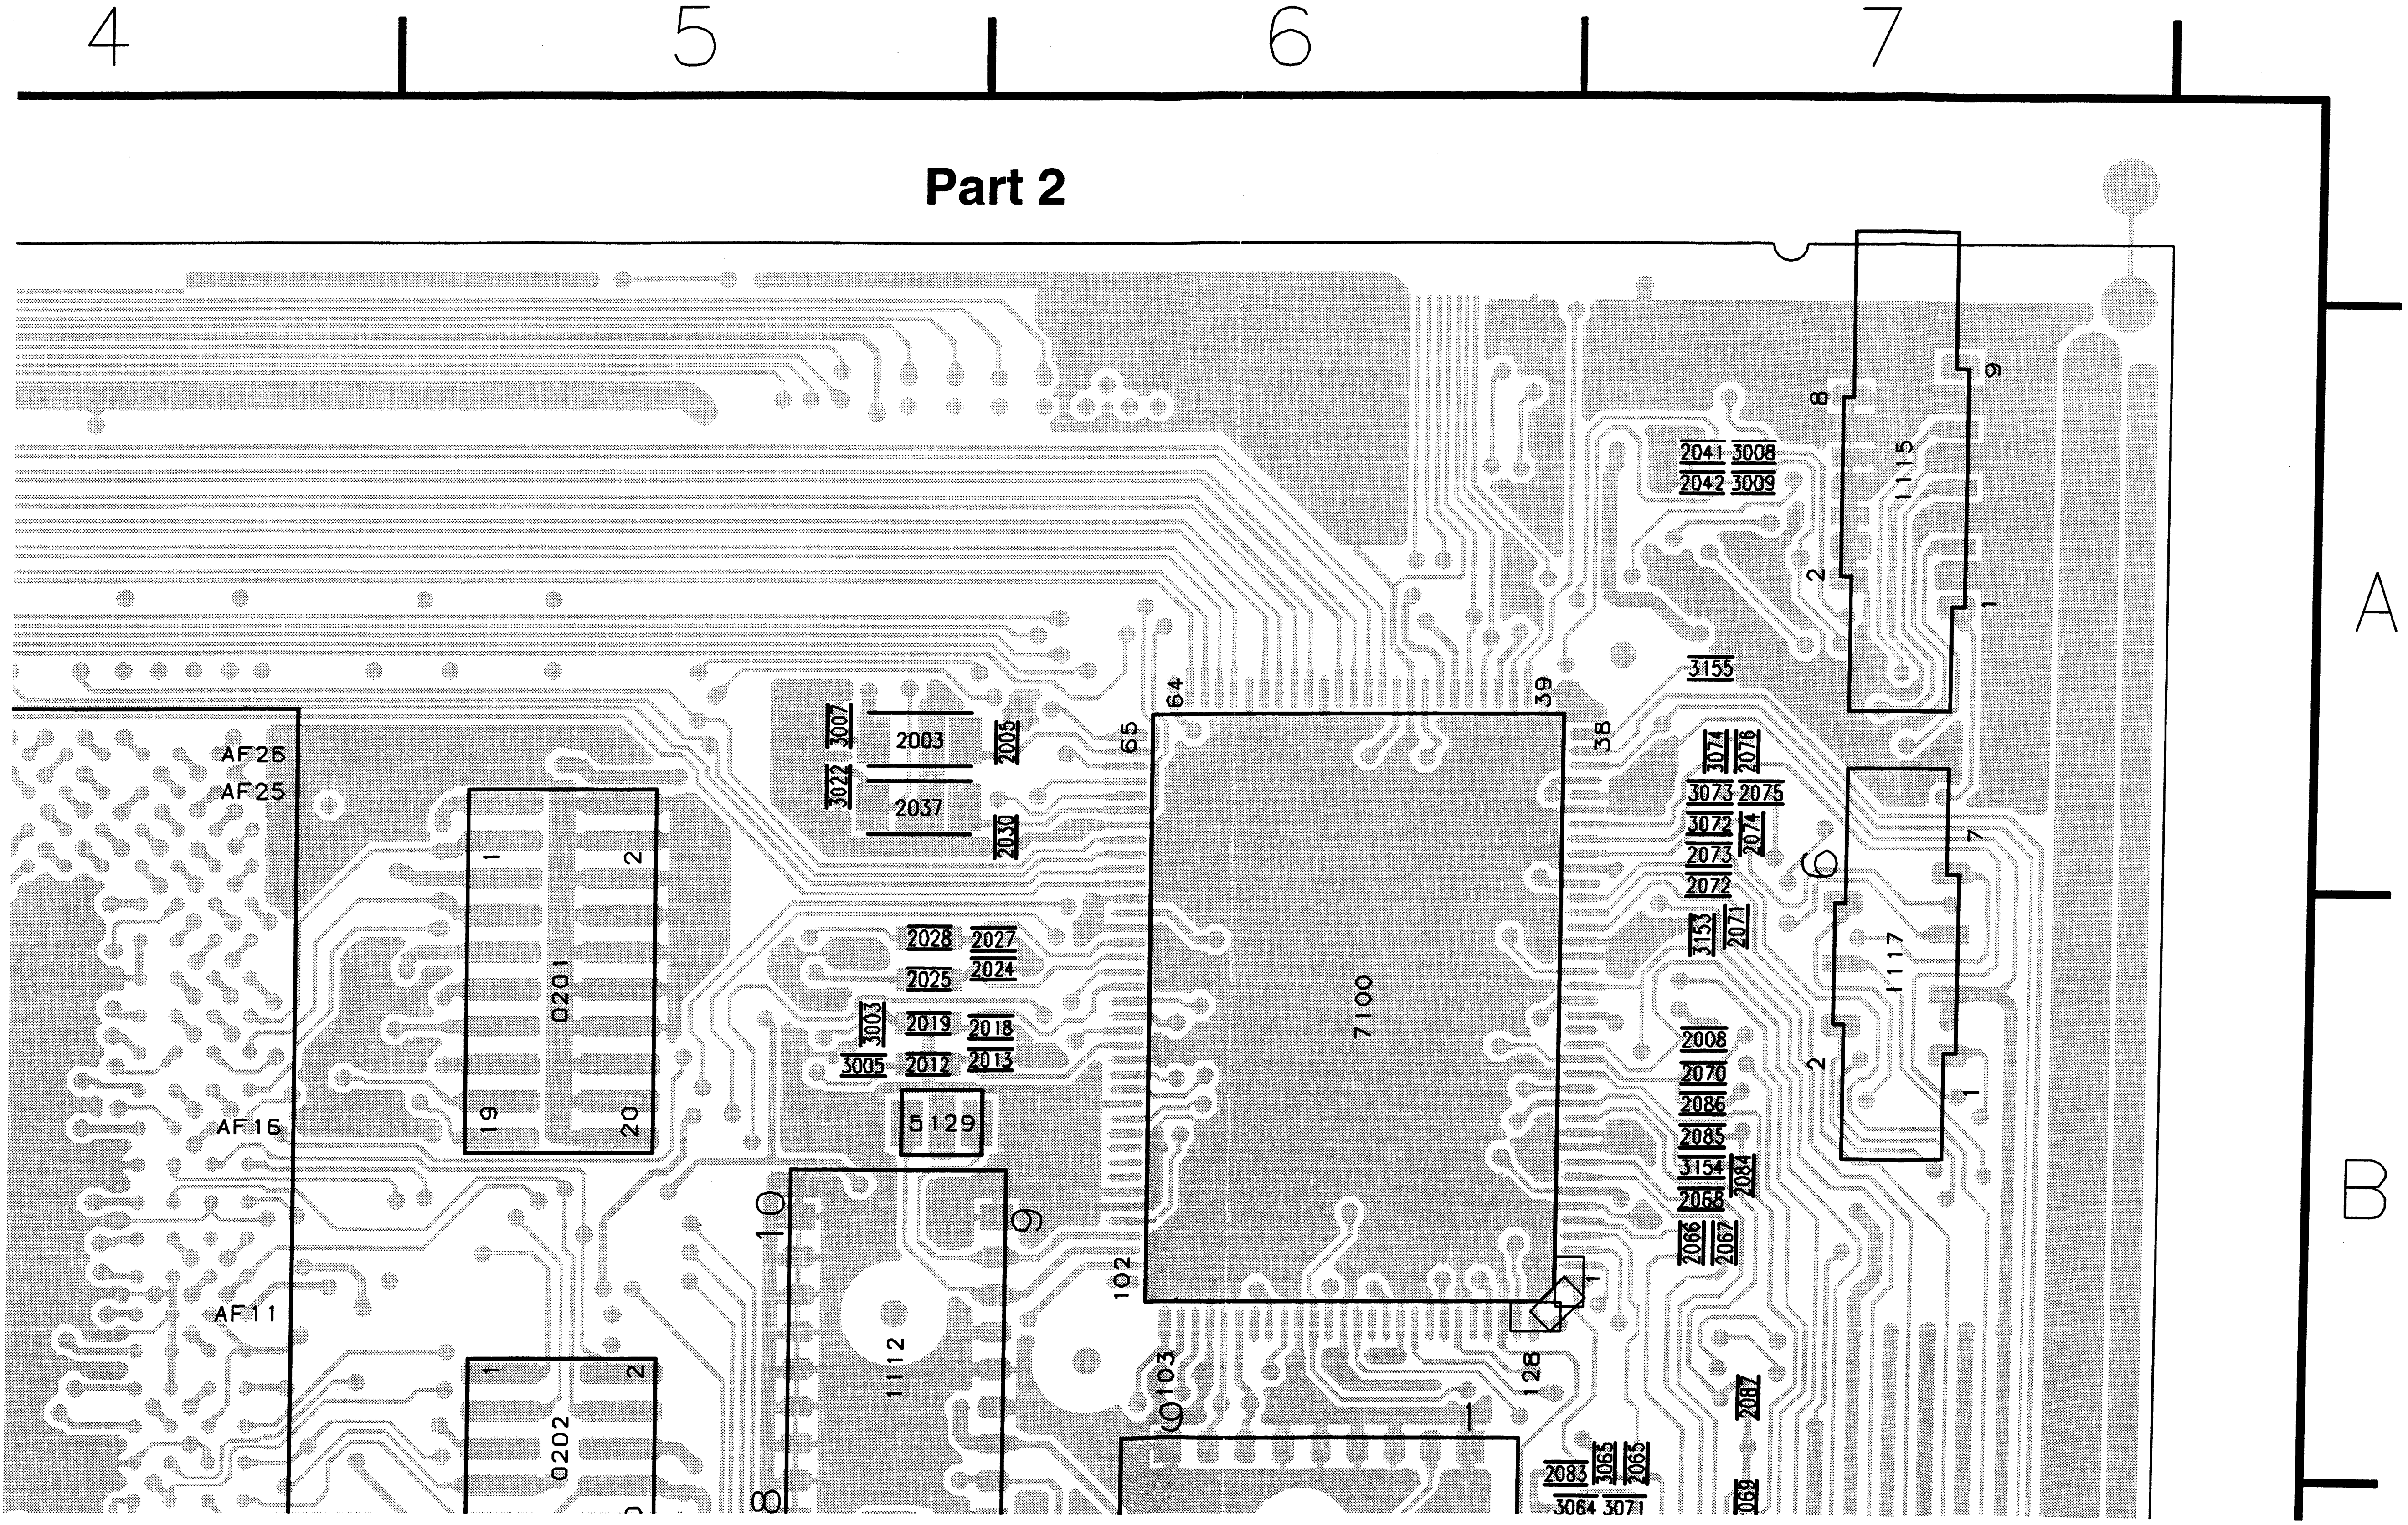
4
5
6
7
A
B
Part 2
AF26
AF25
AF16
AF11
0201
0202
1112
7100
1115
1117
5129
2003
2037
3007
3022
2005
2030
2028
2027
2025
2024
3003
2019
2018
3005
2012
2013
2041
3008
2042
3009
3155
3073
2075
3072
2074
2073
2072
3153
2071
2076
2008
2070
2086
2085
3154
2084
2068
2066
2067
2087
2083
3063
2065
3064
3071
64
65
39
38
102
103
128
1
2
19
20
10
9
8
6

CL 36532058_39b.eps
030903

Layout SSB (Part 3 Tuner Side)

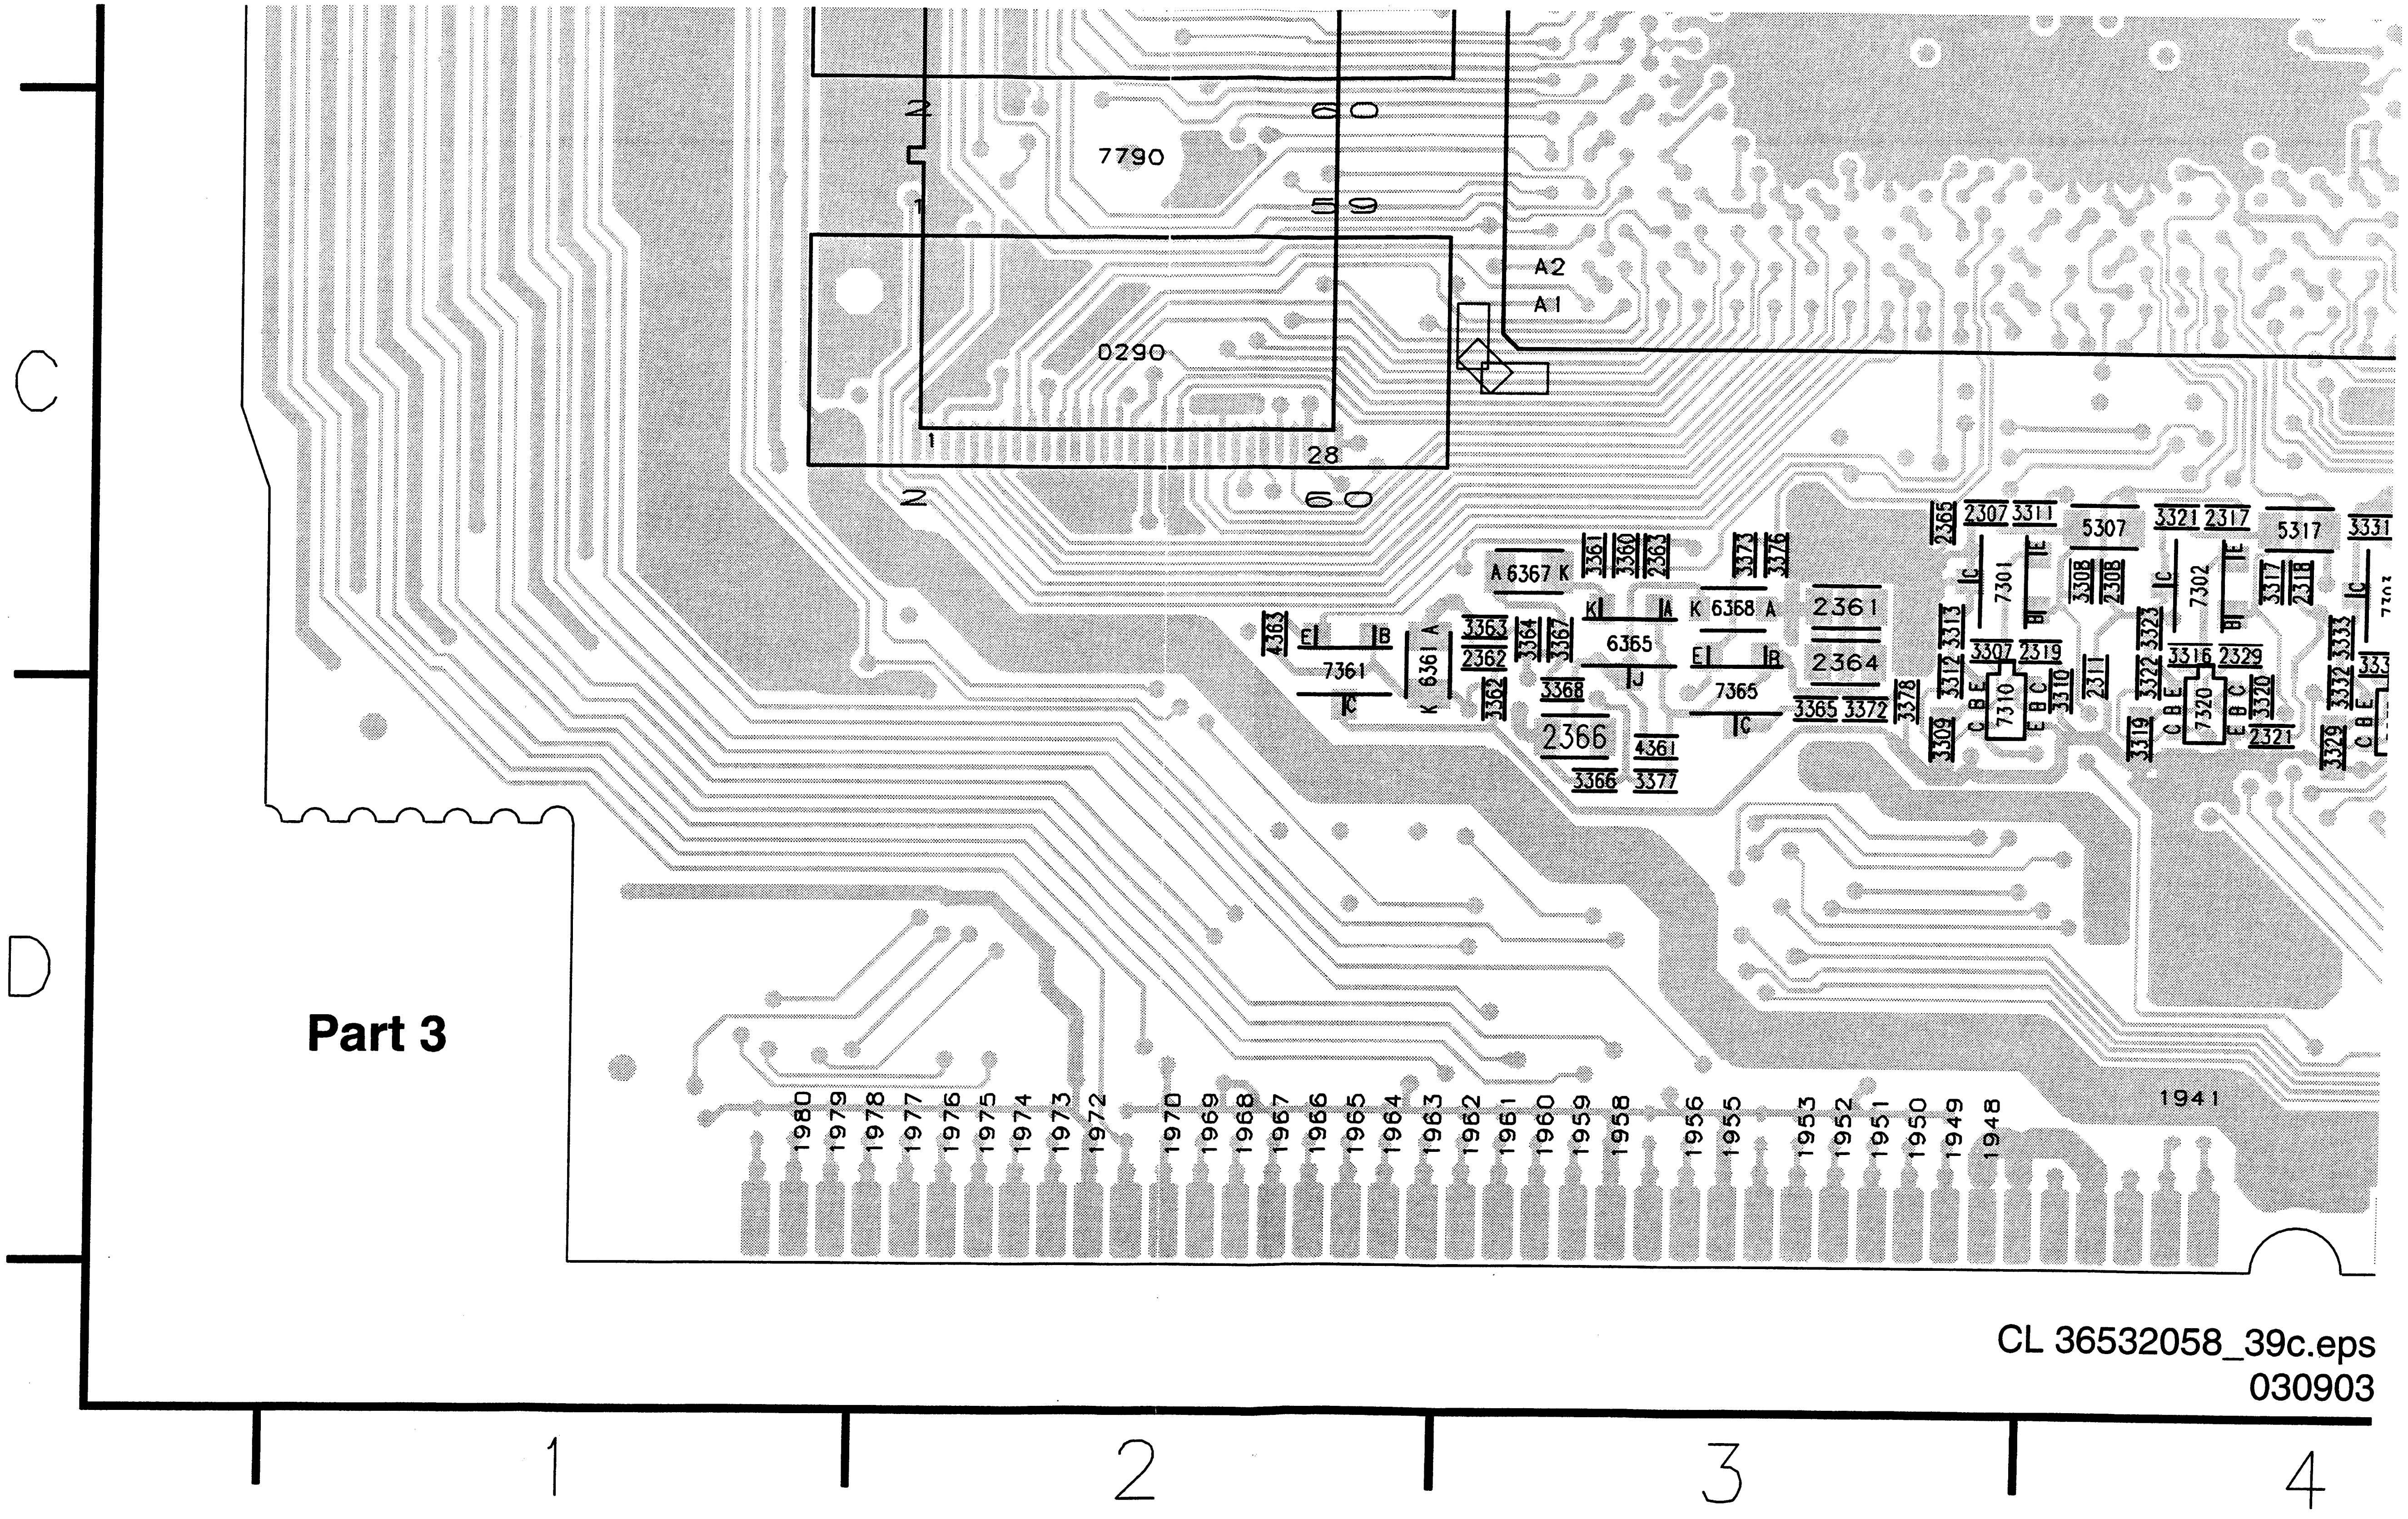
C
D
1
2
3
4
Part 3
7790
0290
A2
A1
2
1
60
59
28
A 6367 K
3361
3360
2363
3373
3376
2361
2364
K 6368 A
6365
7361
K 6361 A
7365
2365
3363
2362
3364
3367
3368
3362
2366
4361
3366
3377
3365
3372
3378
2365
2307
3311
5307
3321
2317
5317
3331
7301
7302
3308
2308
3317
2318
3313
3312
3307
2319
7310
3310
2311
3323
3322
3316
2329
7320
3320
3333
3332
3309
3319
2321
3329
1941
1980
1979
1978
1977
1976
1975
1974
1973
1972
1970
1969
1968
1967
1966
1965
1964
1963
1962
1961
1960
1959
1958
1956
1955
1953
1952
1951
1950
1949
1948

CL 36532058_39c.eps
030903

Layout SSB (Part 4 Tuner Side)

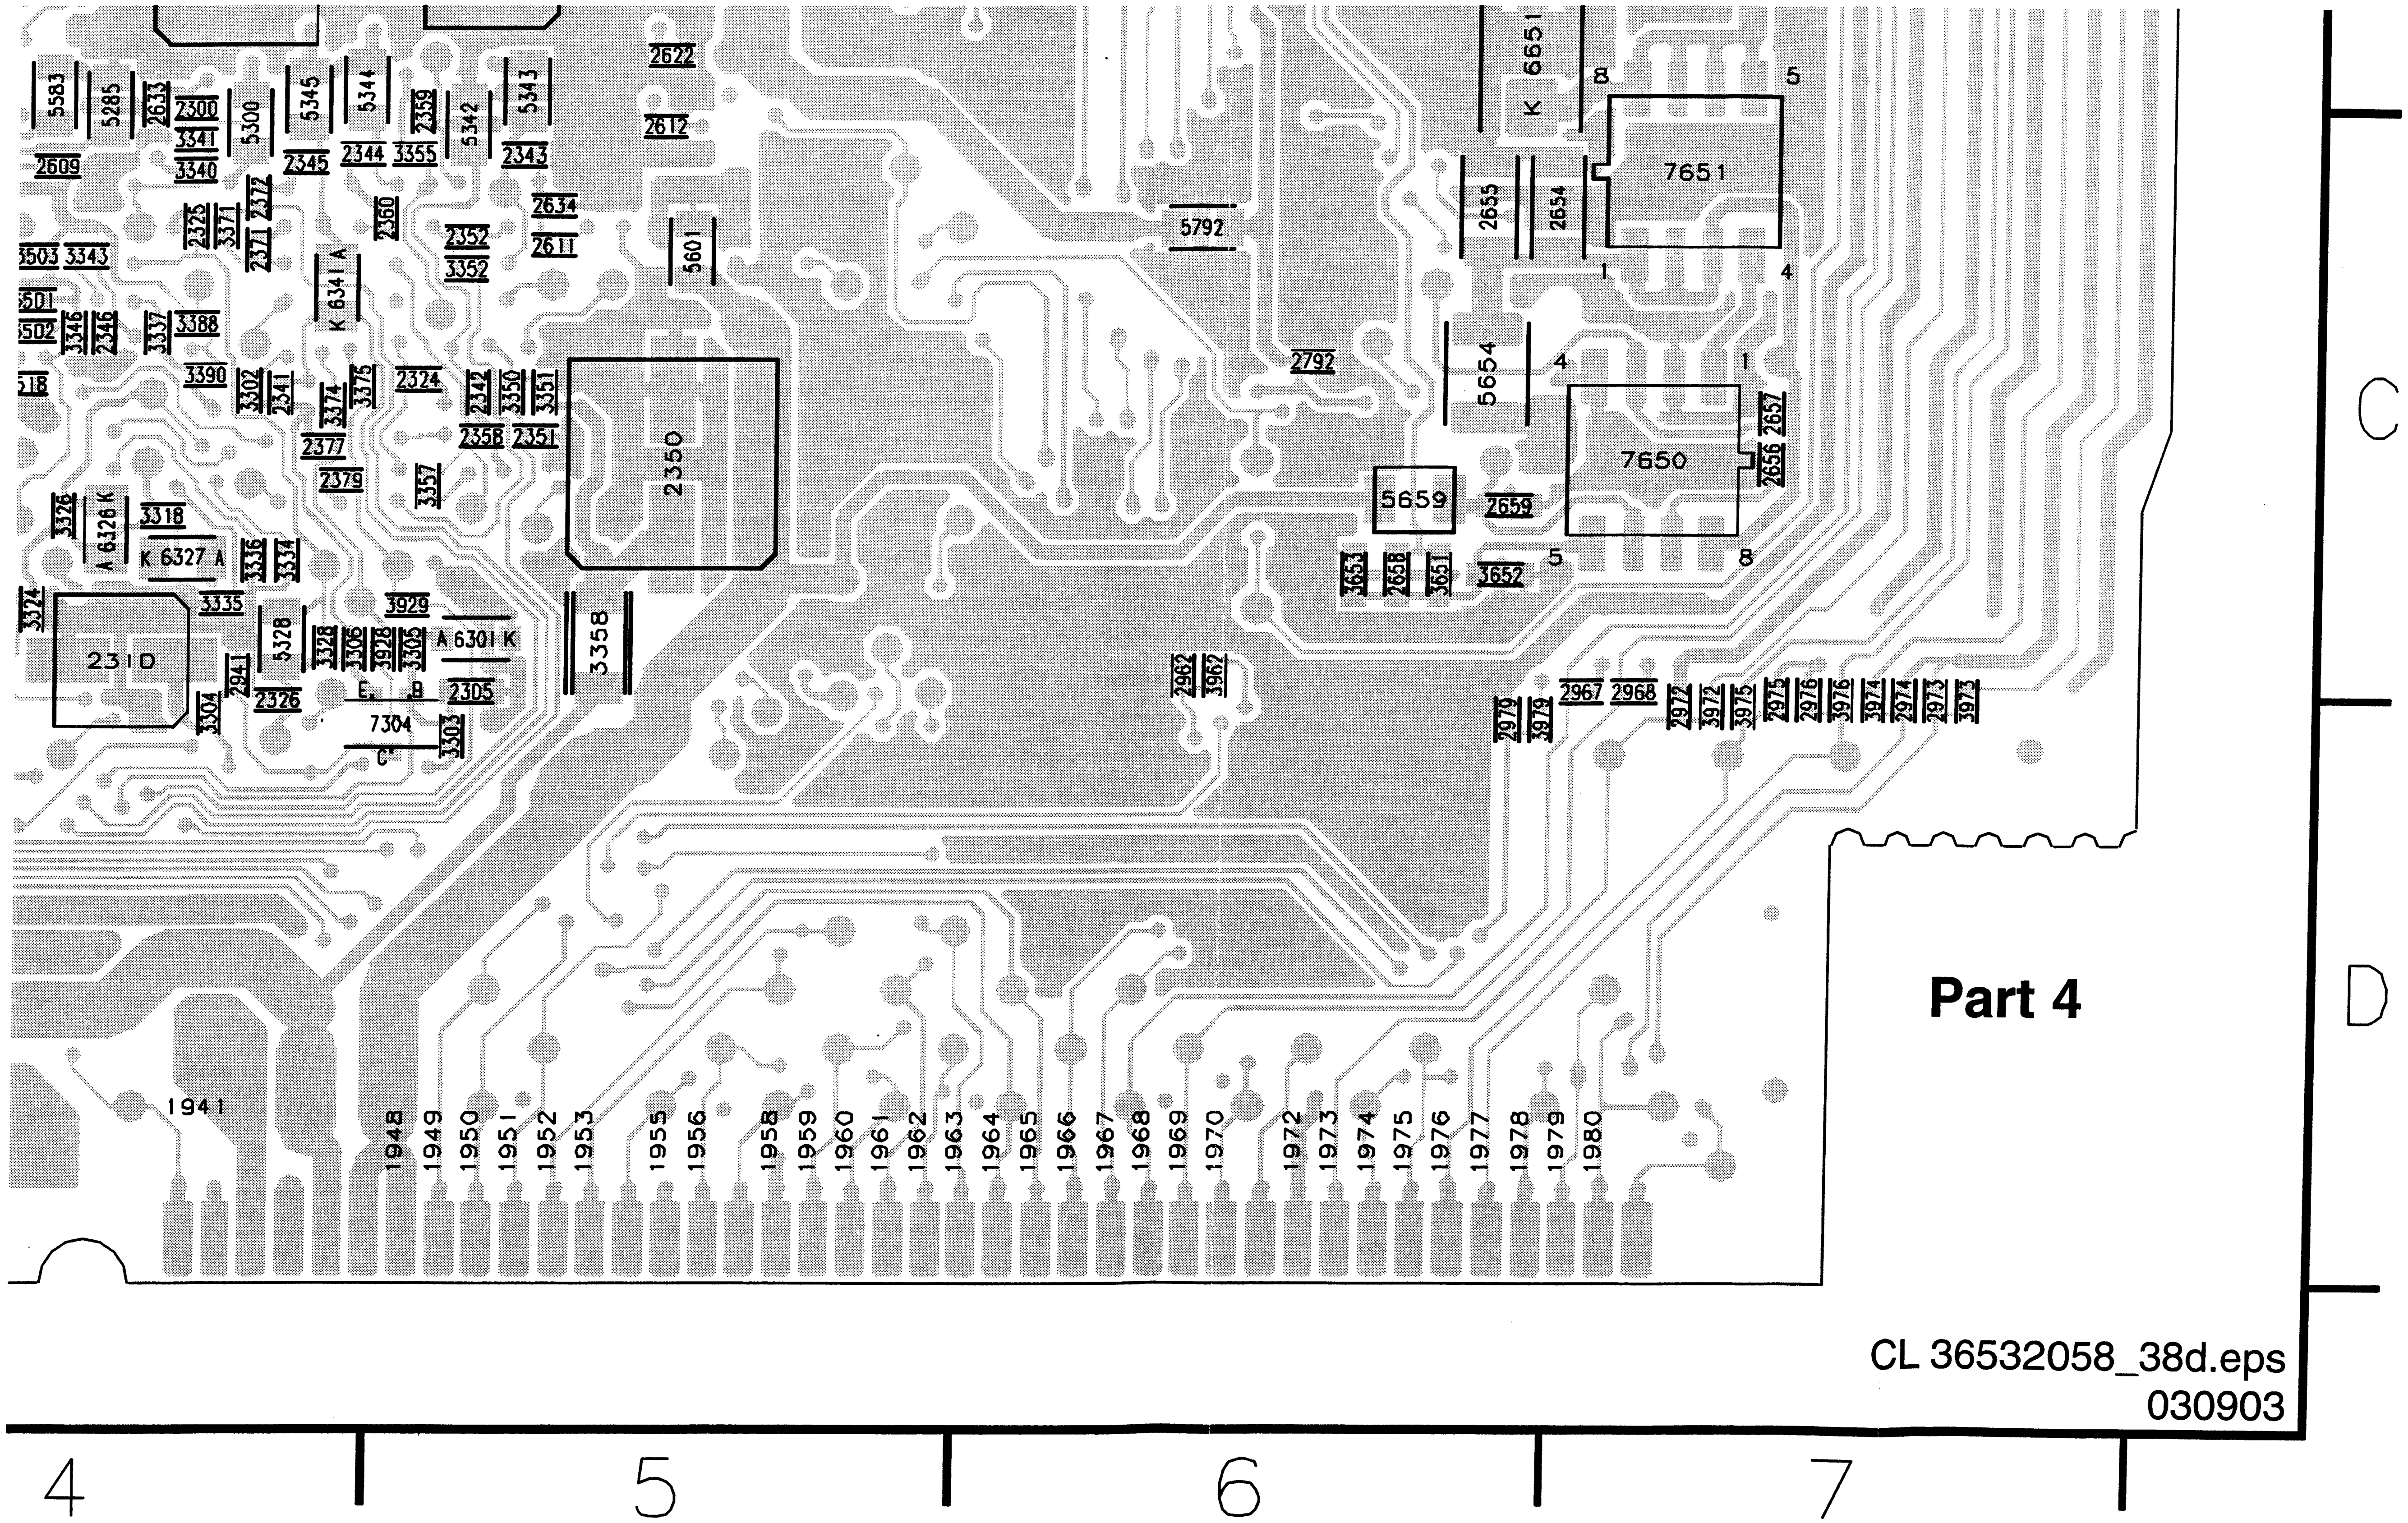
2622
2612
5583
5285
2633
2300
3341
3340
5300
5345
5344
2359
5342
5343
2609
2345
2344
3355
2343
2634
2611
2326
3371
2372
2371
2360
2352
3352
5601
5792
3503
3343
K 6341 A
3346
2346
3337
3388
3390
3302
2341
3374
3375
2324
2342
3350
3351
2377
2358
2351
2379
2350
3357
3326
A 6326 K
3318
K 6327 A
3336
3334
3324
3335
3929
2310
5328
3328
3306
3928
3305
A 6301 K
3358
2941
3304
2326
E
B
2305
7304
C
3303
2792
K 6651
K
8
5
7651
2655
2654
1
4
5654
4
1
7650
2657
2656
5659
2659
5
8
3653
2658
3651
3652
2962
1962
2979
3979
2967
2968
2977
3977
3975
2975
2976
3976
3974
2974
2973
3973
1941
1948
1949
1950
1951
1952
1953
1955
1956
1958
1959
1960
1961
1962
1963
1964
1965
1966
1967
1968
1969
1970
1972
1973
1974
1975
1976
1977
1978
1979
1980
Part 4
C
D
4
5
6
7

CL 36532058_38d.eps
030903

Side I/O Panel

0240	A4
0241	C4
0242	C4
1254	D1
1255-A	D1
1255-B	C1
1255-C	B1
1256-A	A1
1256-B	A1
2286	A3
2288	B3
2292	C3
2294	C3
2296	E3
2297	E3
3285	A3
3286	A3
3287	B3
3288	A3
3289	B2
3291	B2
3292	C3
3293	C2
3294	C3
3295	D3
3296	E2
3297	E3
4201	A2
4202	A2
6291	E2
6292	E2
6293	E2
6294	E2
6295	A3
6296	A2
6297	A2

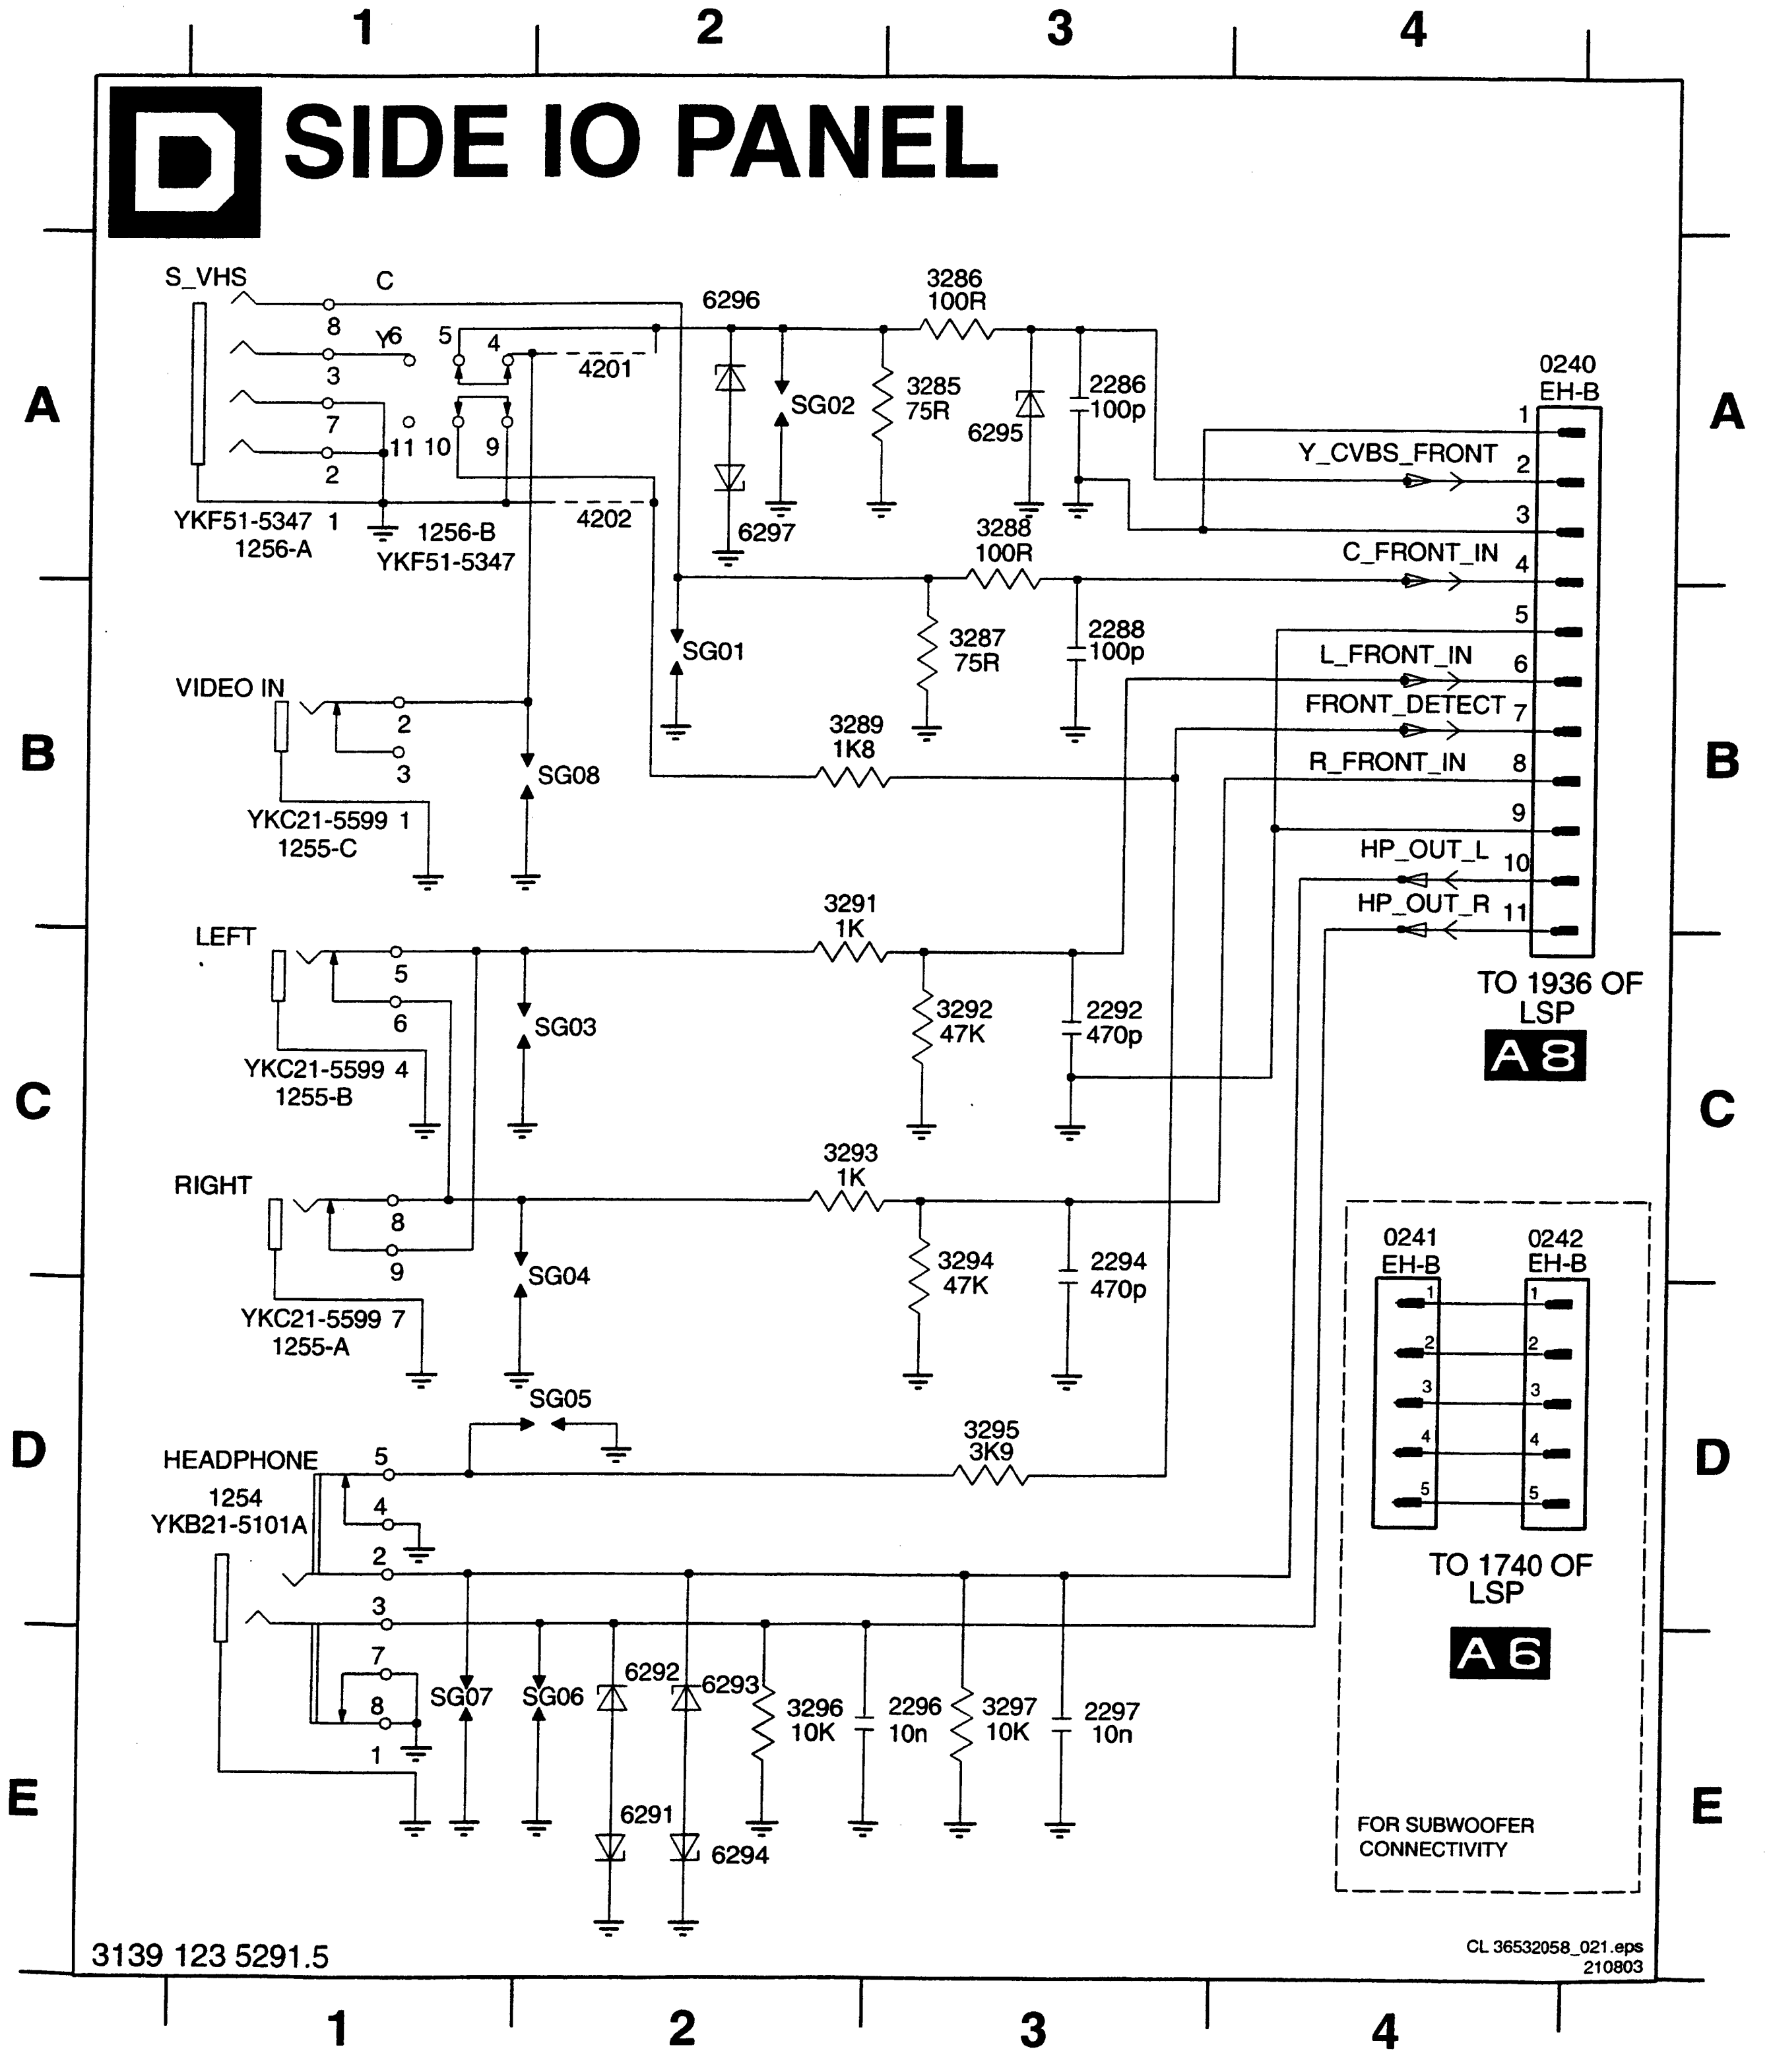
1
2
3
4
A
B
C
D
E
D
SIDE IO PANEL
S_VHS
C
Y
YKF51-5347 1
1256-A
1256-B
YKF51-5347
4201
4202
6296
6297
SG02
SG01
3286
100R
3285
75R
6295
2286
100p
3288
100R
3287
75R
2288
100p
3289
1K8
VIDEO IN
YKC21-5599 1
1255-C
SG08
LEFT
YKC21-5599 4
1255-B
SG03
3291
1K
3292
47K
2292
470p
RIGHT
YKC21-5599 7
1255-A
SG04
3293
1K
3294
47K
2294
470p
SG05
HEADPHONE
1254
YKB21-5101A
3295
3K9
SG07
SG06
6292
6293
6291
6294
3296
10K
2296
10n
3297
10K
2297
10n
0240
EH-B
Y_CVBS_FRONT
C_FRONT_IN
L_FRONT_IN
FRONT_DETECT
R_FRONT_IN
HP_OUT_L
HP_OUT_R
TO 1936 OF LSP
A8
0241
EH-B
0242
EH-B
TO 1740 OF LSP
A6
FOR SUBWOOFER CONNECTIVITY
3139 123 5291.5
CL 36532058_021.eps
210803

Personal Notes:

Layout Side I/O Panel (Top Side)

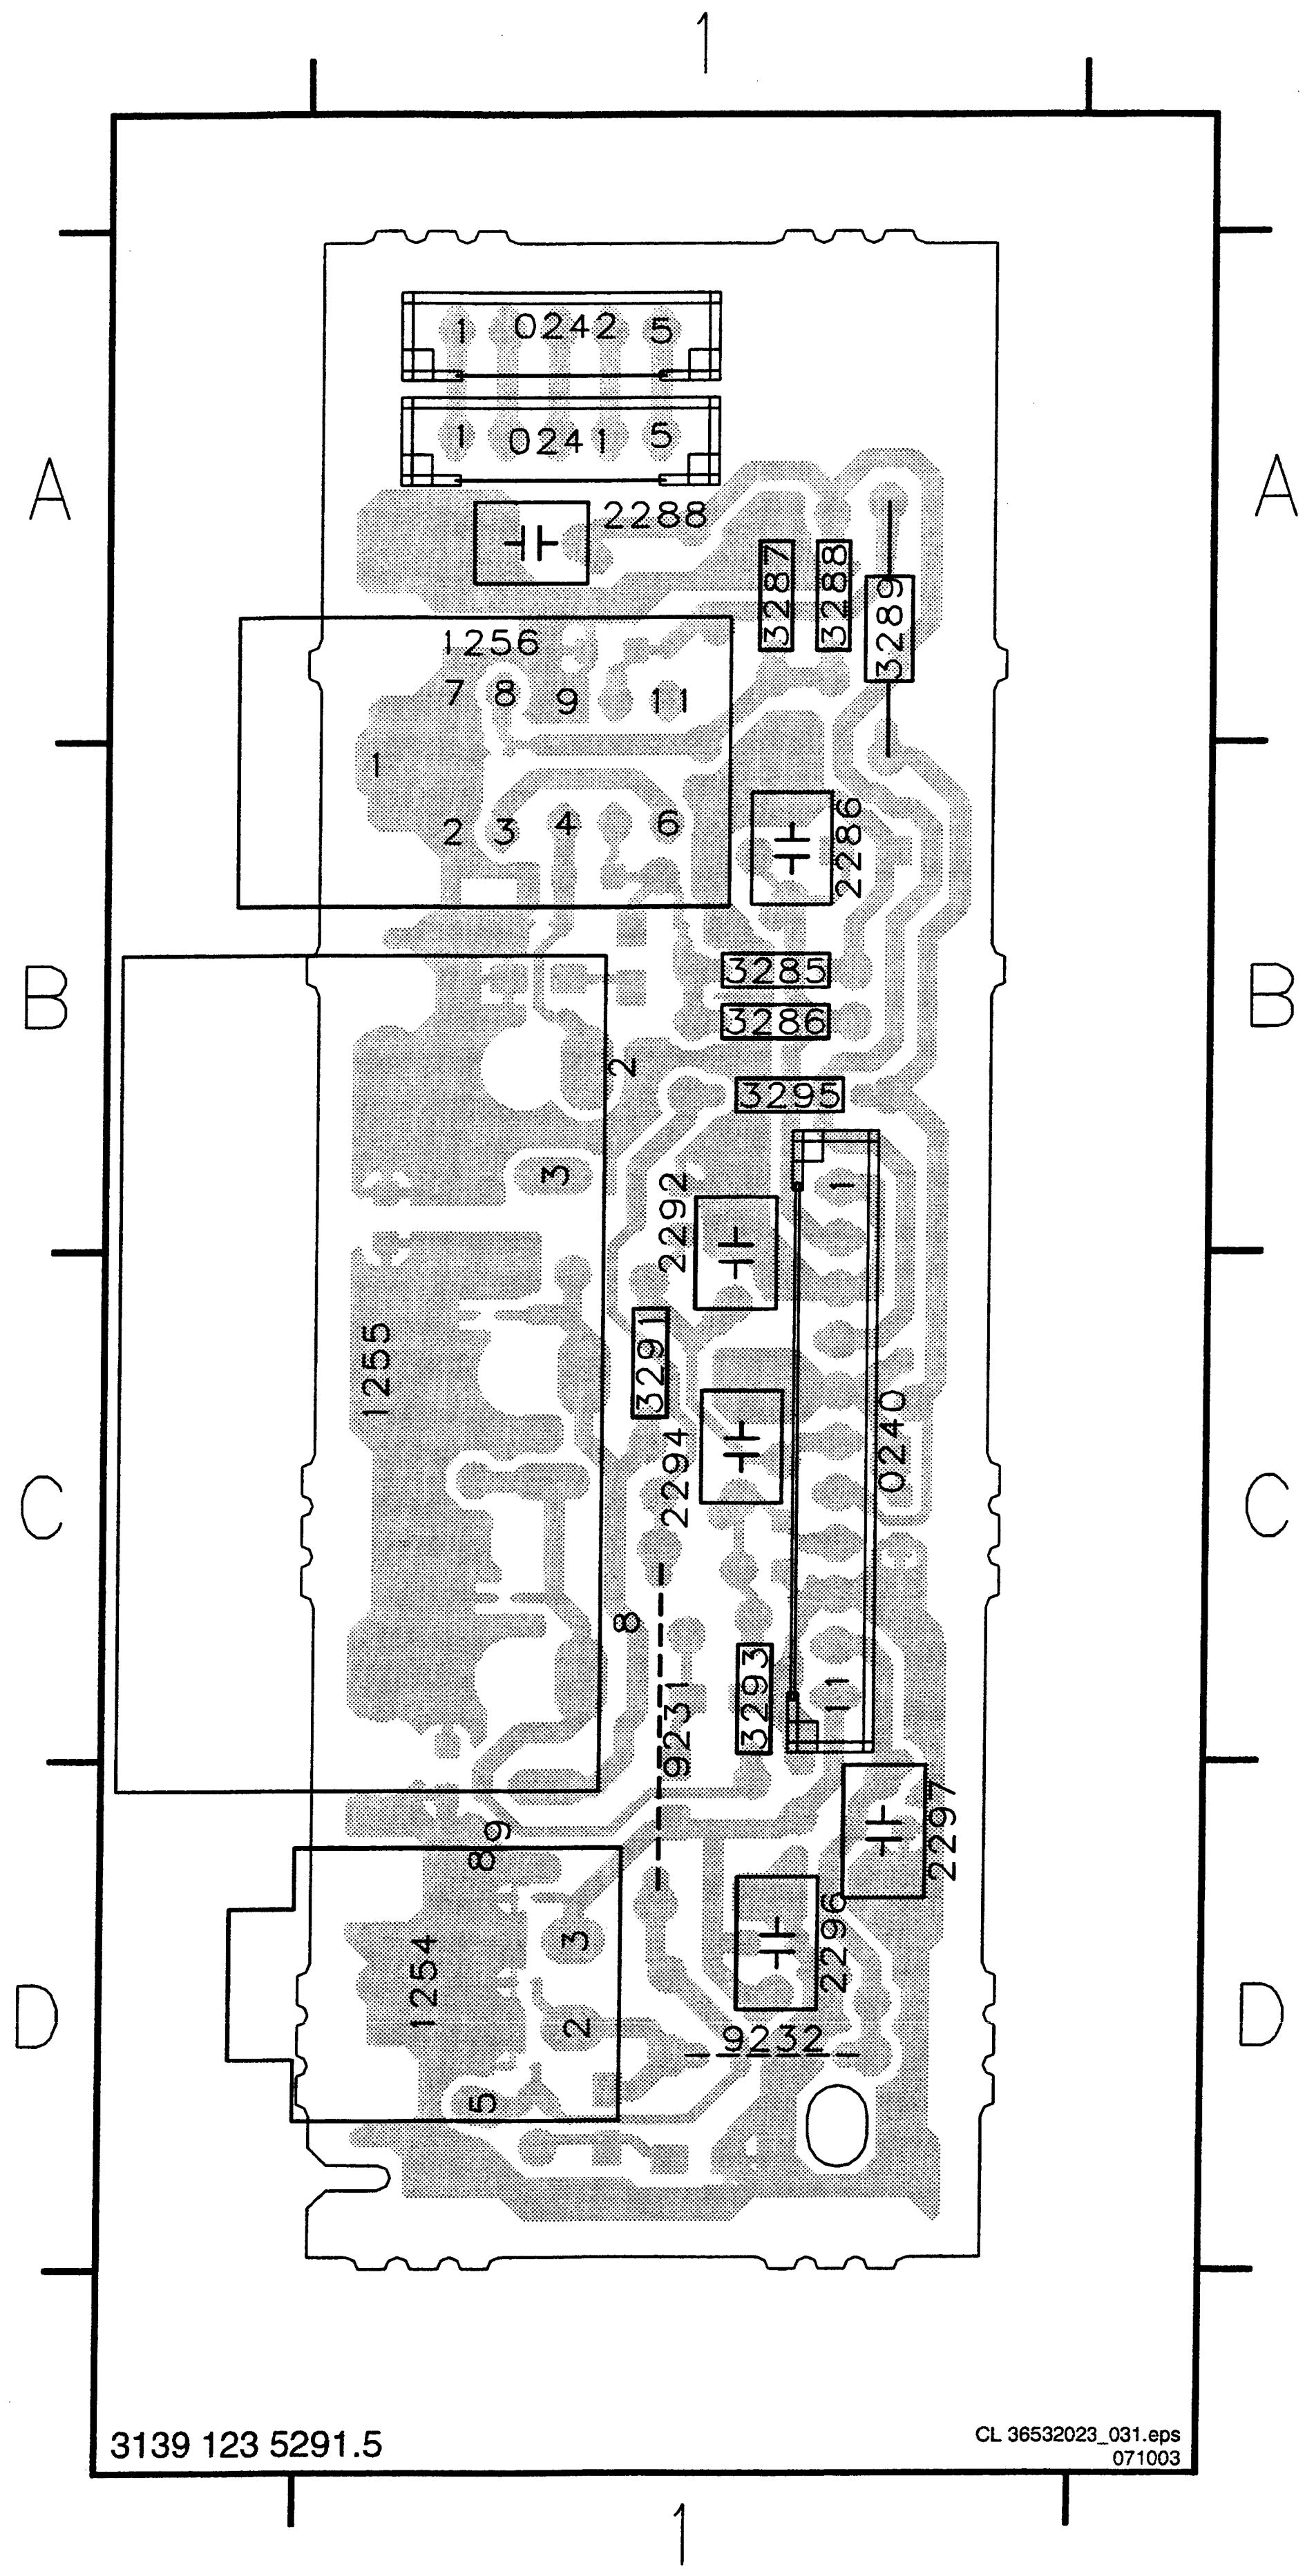
1
A
B
C
D
0242
0241
2288
1256
3287
3288
3289
2286
3285
3286
3295
1255
2292
3291
2294
0240
9231
3293
2297
1254
2296
9232
3139 123 5291.5
CL 36532023_031.eps
071003

0240	C1
0241	A1
0242	A1
1254	D1
1255	C1
1256	A1
2286	B1
2288	A1
2292	B1
2294	C1
2296	D1
2297	D1
3285	B1
3286	B1
3287	A1
3288	A1
3289	A1
3291	C1
3293	C1
3295	B1
9231	C1
9232	D1

Layout Side I/O Panel (Bottom Side)

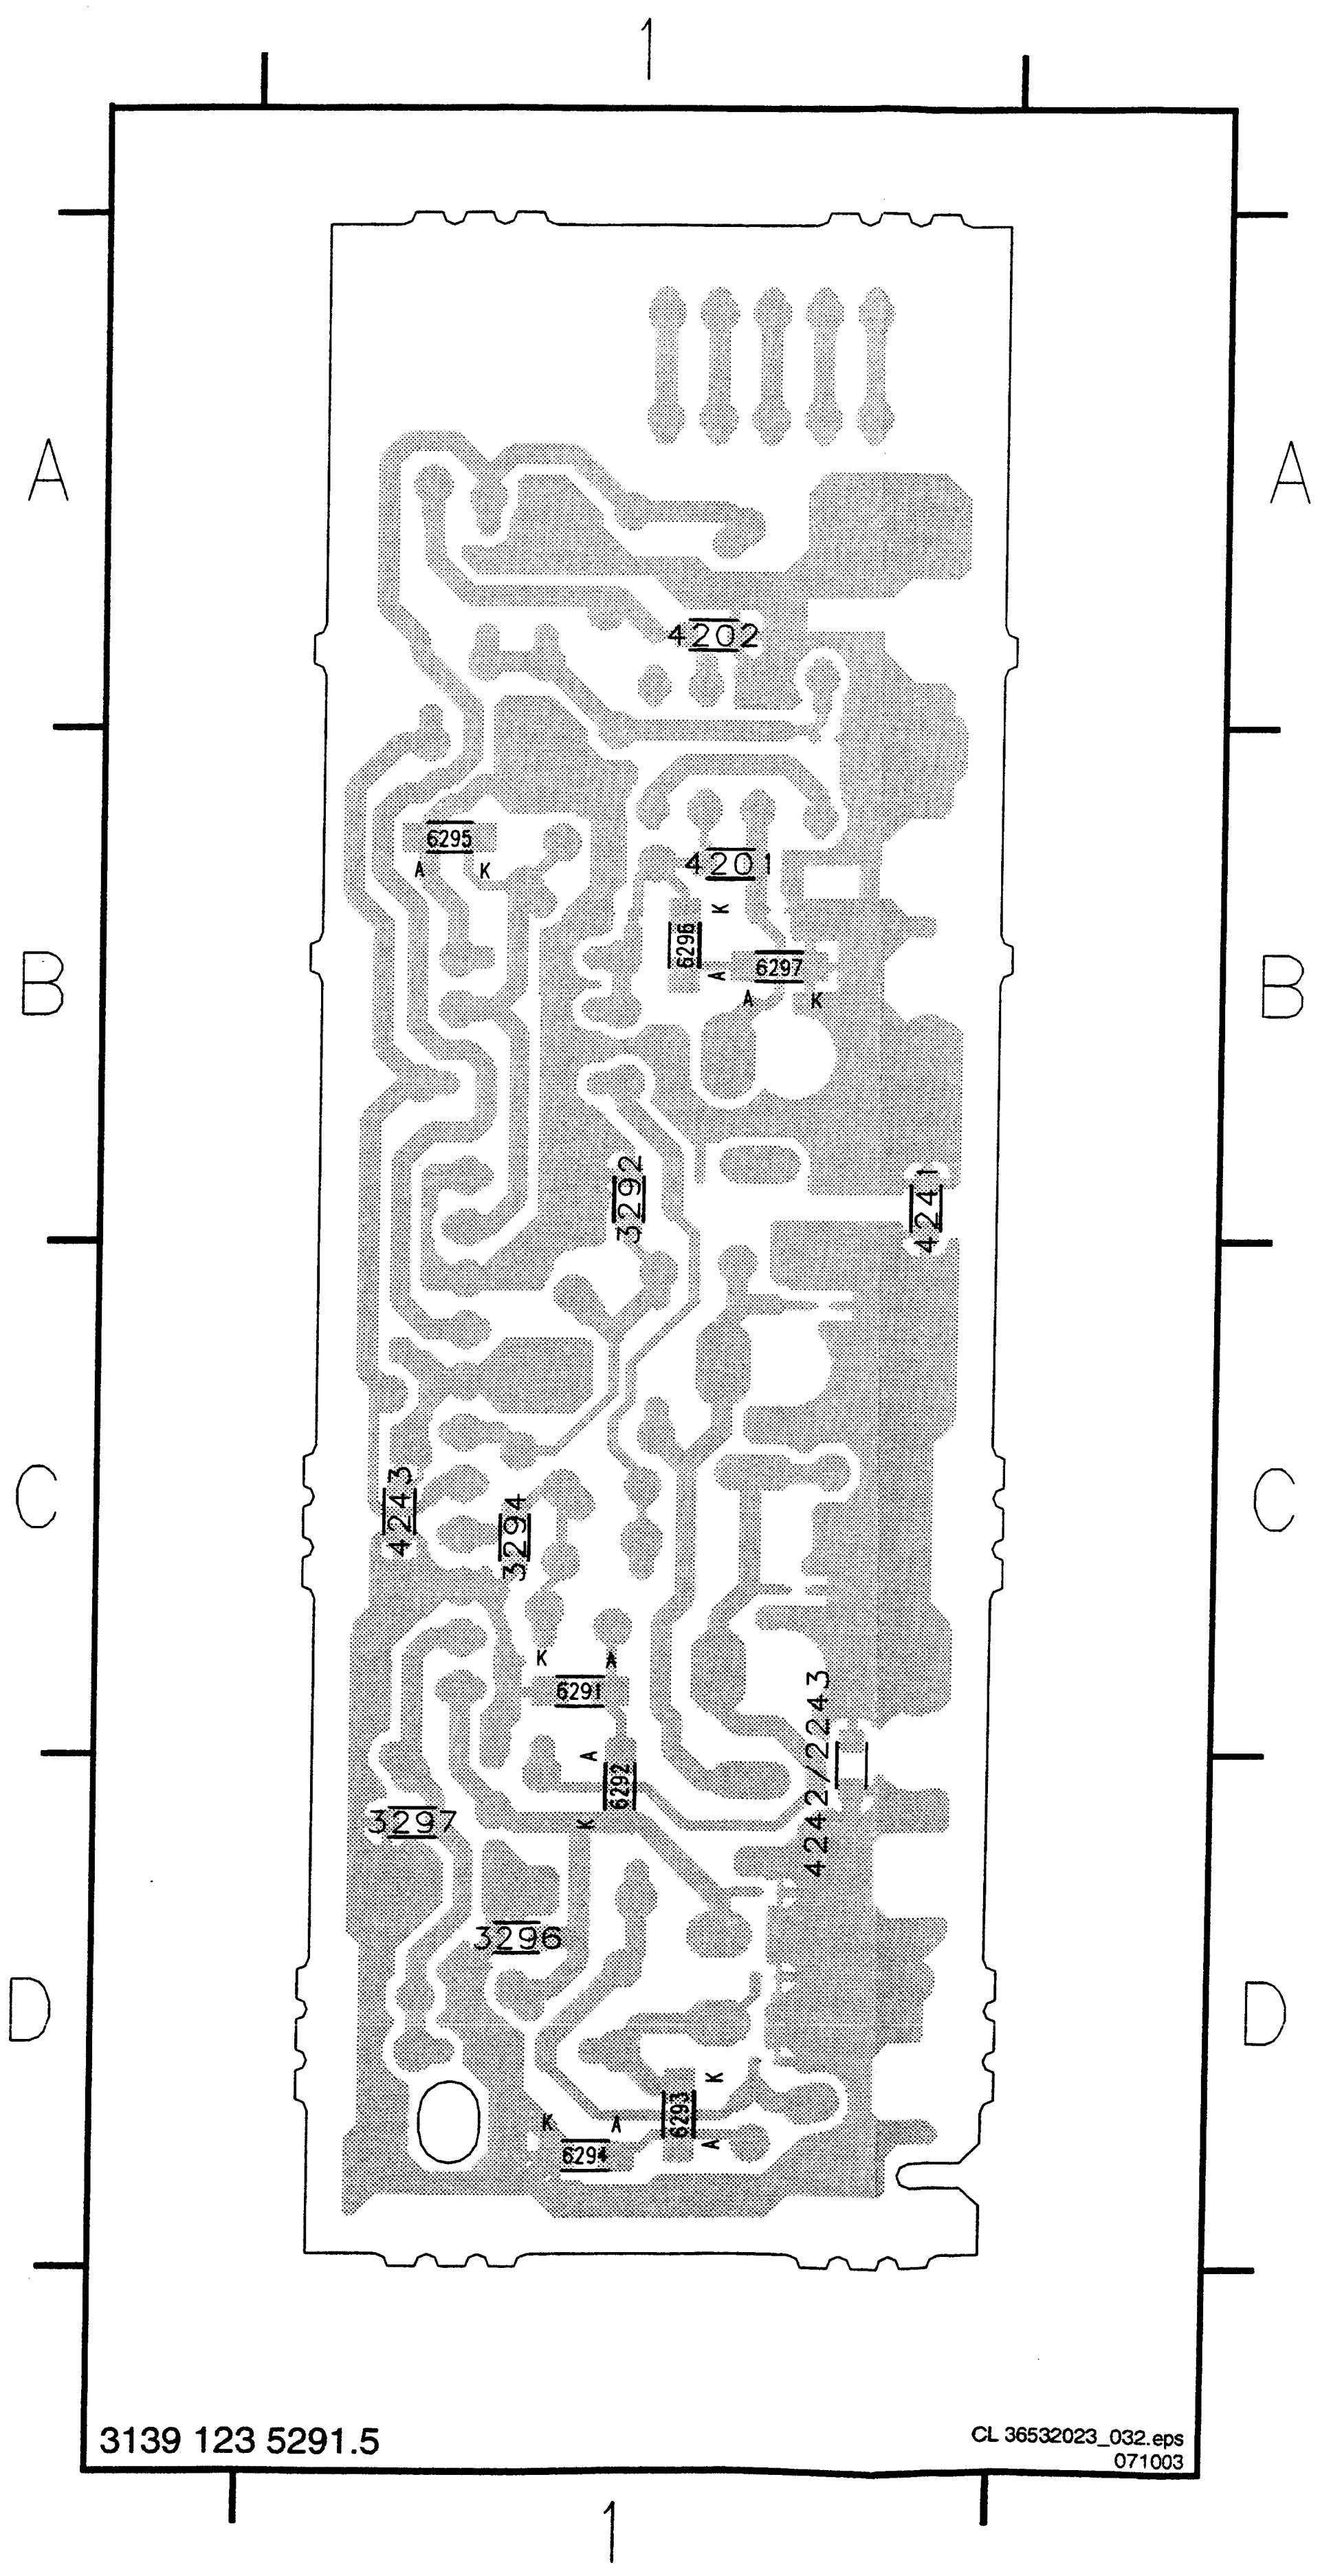
1
A
B
C
D
4202
6295
4201
6296
6297
3292
4241
4243
3294
6291
6292
4242/2243
3297
3296
6293
6294
3139 123 5291.5
CL 36532023_032.eps
071003

3292	B1
3294	C1
3296	D1
3297	D1
4201	B1
4202	A1
4241	B1
4242/2243	D1
4243	C1
6291	C1
6292	D1
6293	D1
6294	D1
6295	B1
6296	B1
6297	B1

Top Control Panel

0215	A1
1091	A3
1092	A3
1093	A4
1094	C4
2010	A1
3088	B3
3089	B2
3091	A2
3092	A2
3093	A3
3094	A3
3095	A4
3096	C4
3097	A2
3098	B4
3099	B4
4091	A2
4092	B4
6091	B4
6092	B4

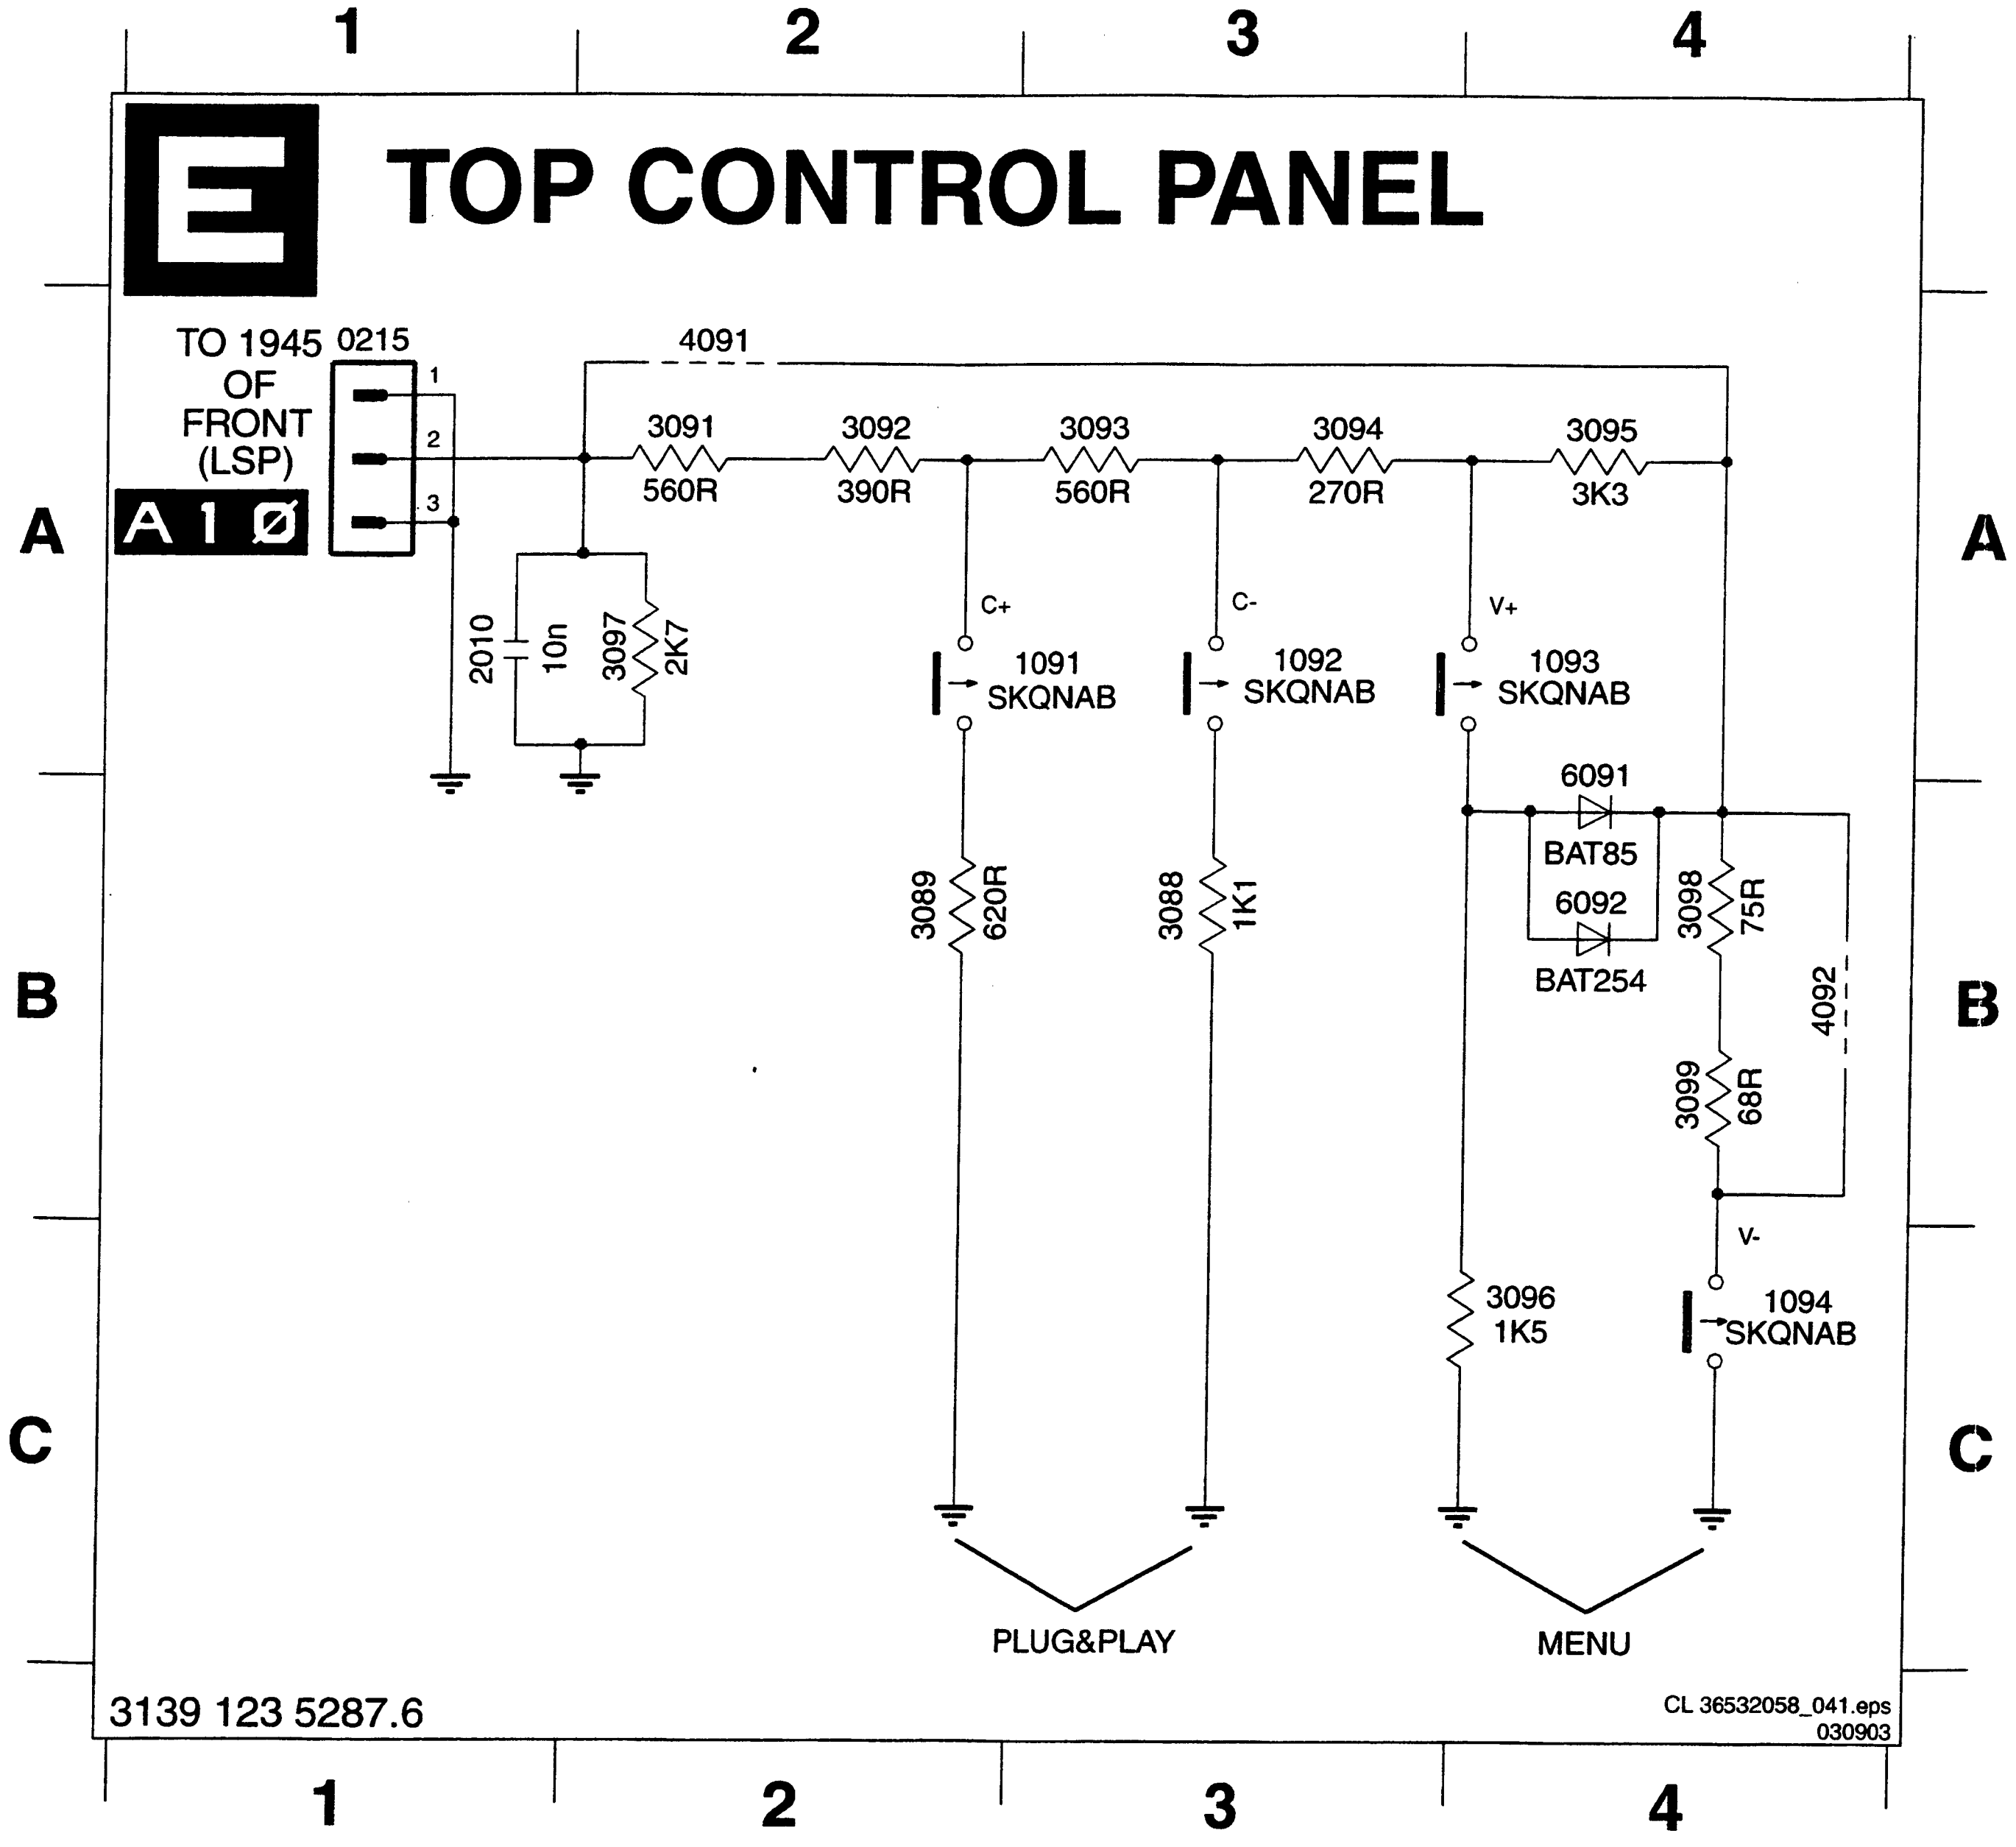
1
2
3
4
A
B
C
E
TOP CONTROL PANEL
TO 1945 OF FRONT (LSP)
A10
0215
1
2
3
4091
3091 560R
3092 390R
3093 560R
3094 270R
3095 3K3
2010 10n
3097 2K7
C+
C-
V+
1091 SKQNAB
1092 SKQNAB
1093 SKQNAB
6091 BAT85
6092 BAT254
3089 620R
3088 1K1
3098 75R
4092
3099 68R
V-
3096 1K5
1094 SKQNAB
PLUG&PLAY
MENU
3139 123 5287.6
CL 36532058_041.eps 030903

Personal Notes:

Layout Top Control Panel (Top Side)

0215	A2
1091	A1
1092	B1
1093	A2
1094	A1
6091	A1

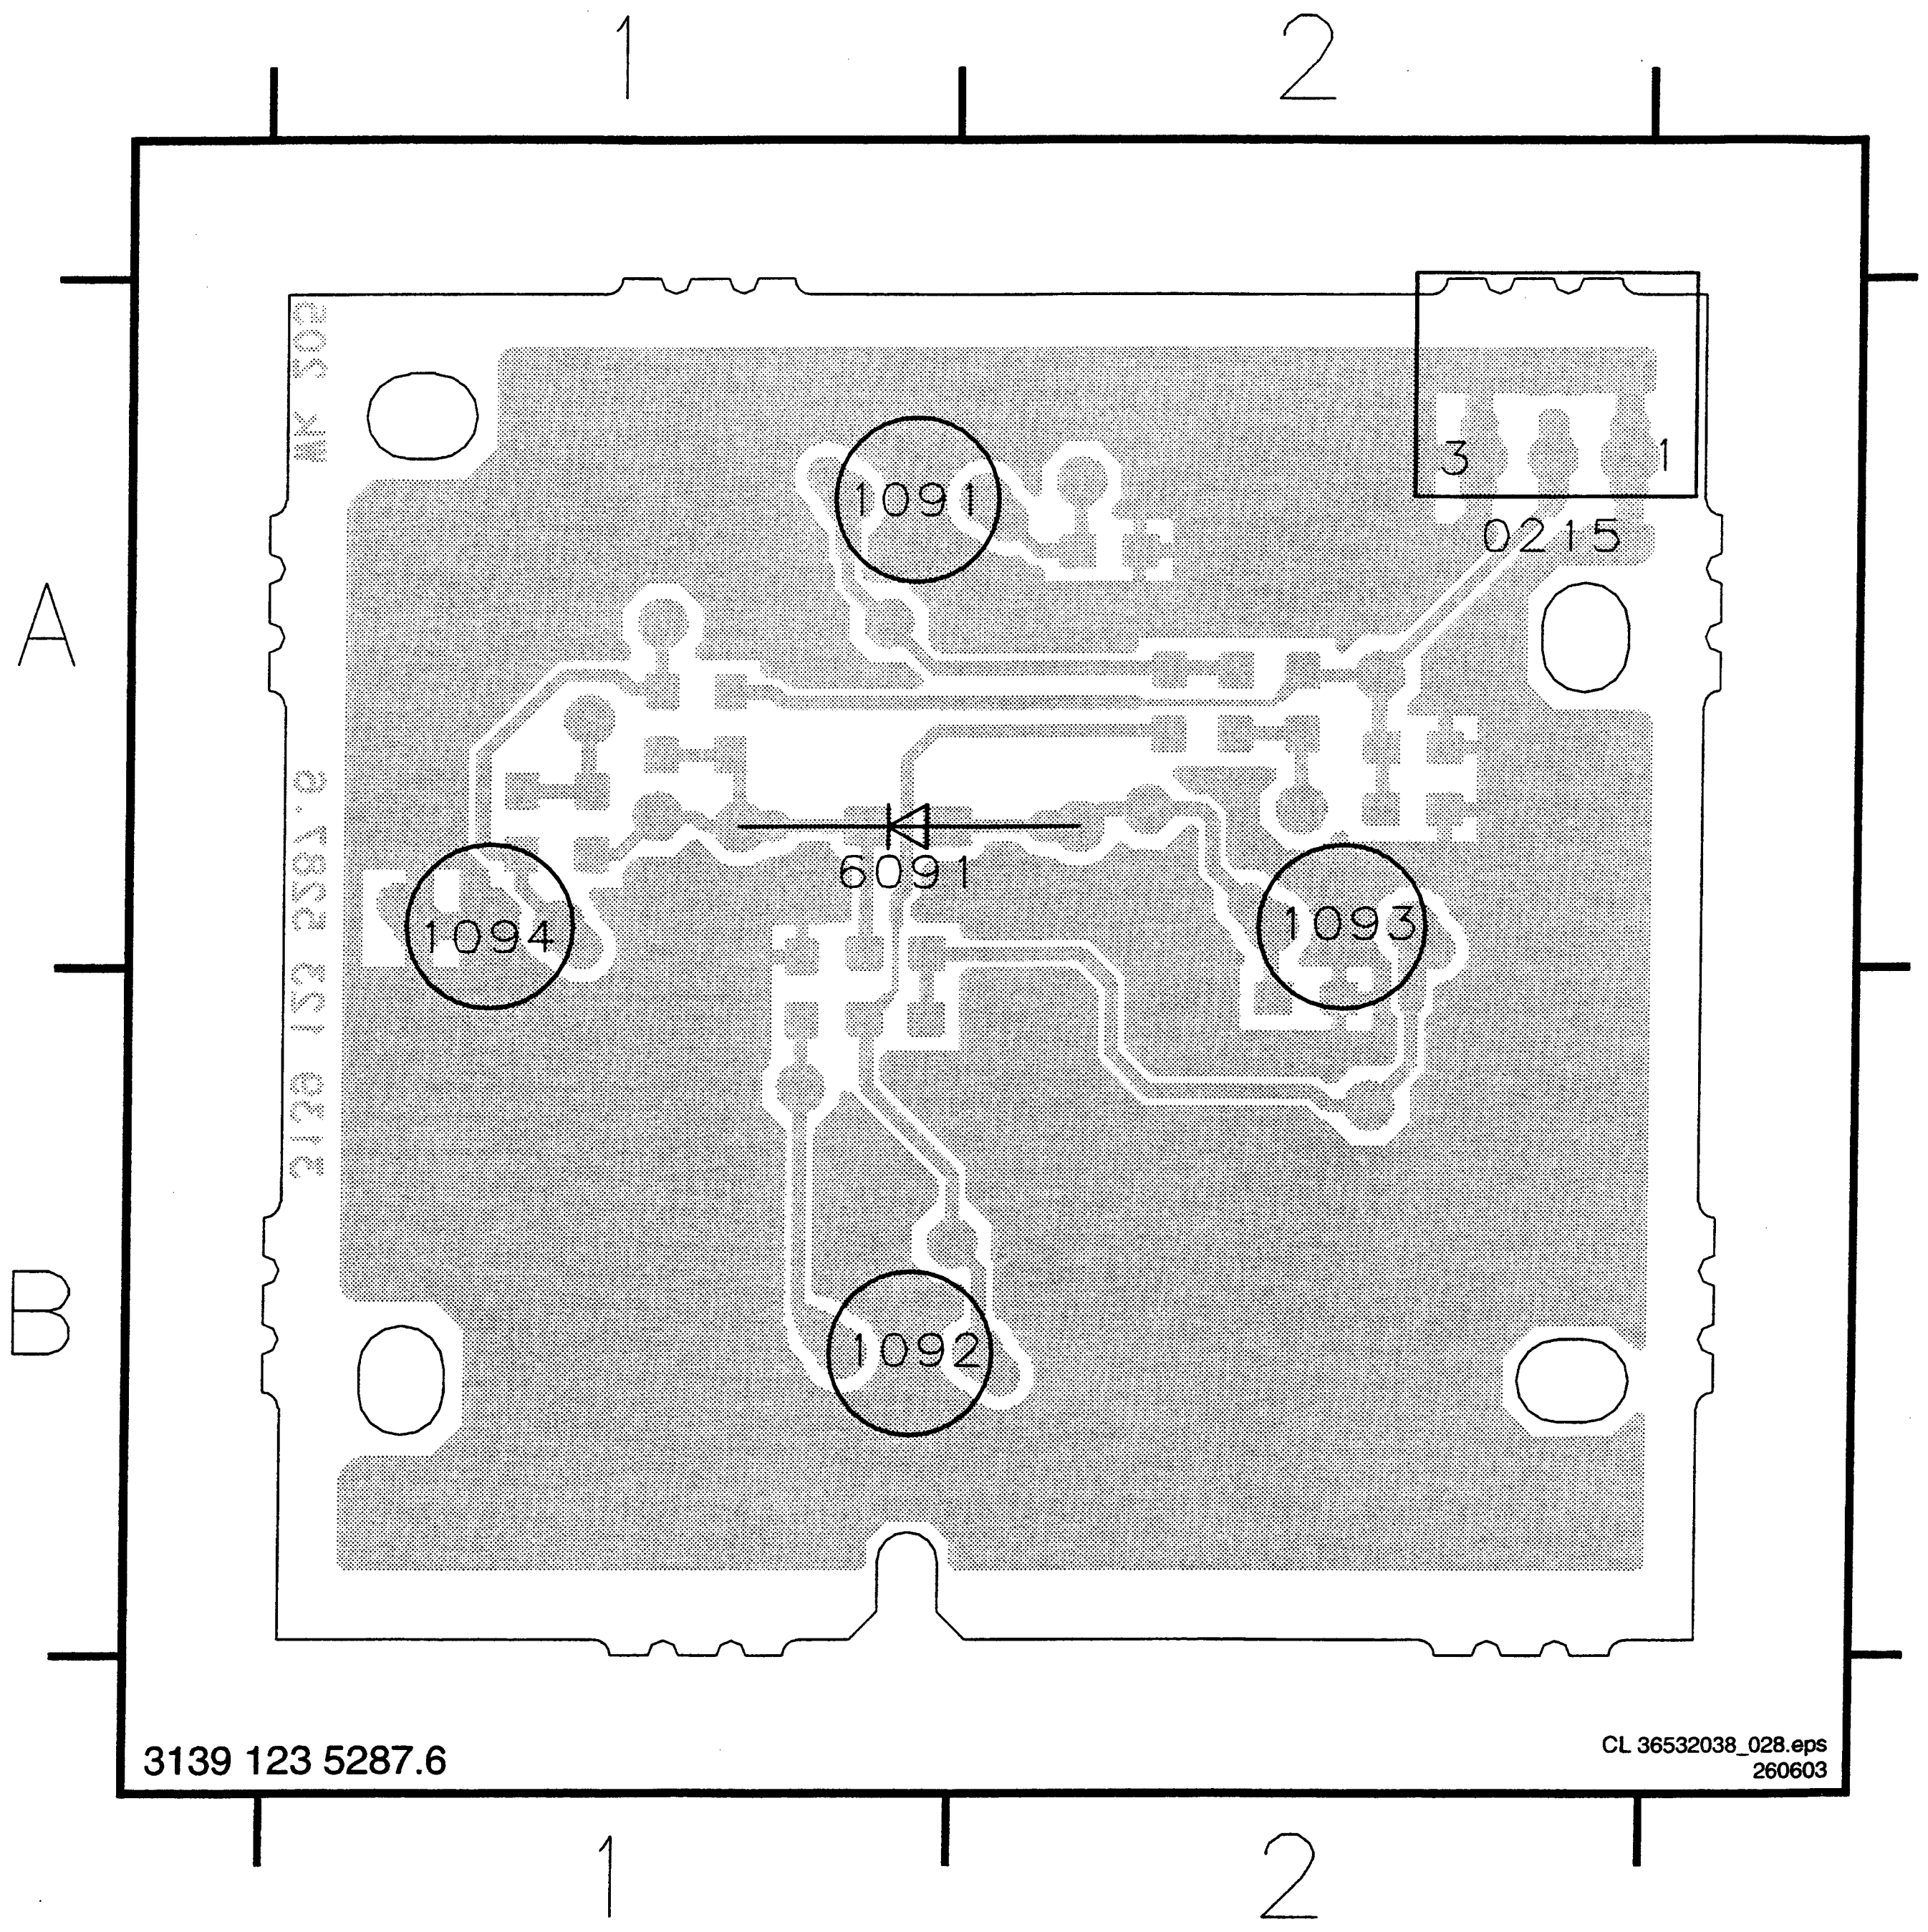
1
2
A
B
3
1
0215
1091
1094
6091
1093
1092
MK 302
3139 123 5287.6
3139 123 5287.6
CL 36532038_028.eps
260603

Layout Top Control Panel (Bottom Side)

2010	A1
3088	B2
3089	A1
3091	A1
3092	A1
3093	A1
3094	B2
3095	A2
3096	B1
3097	A1
3098	A2
3099	A2
4091	A2
4092	A2
6092	A2

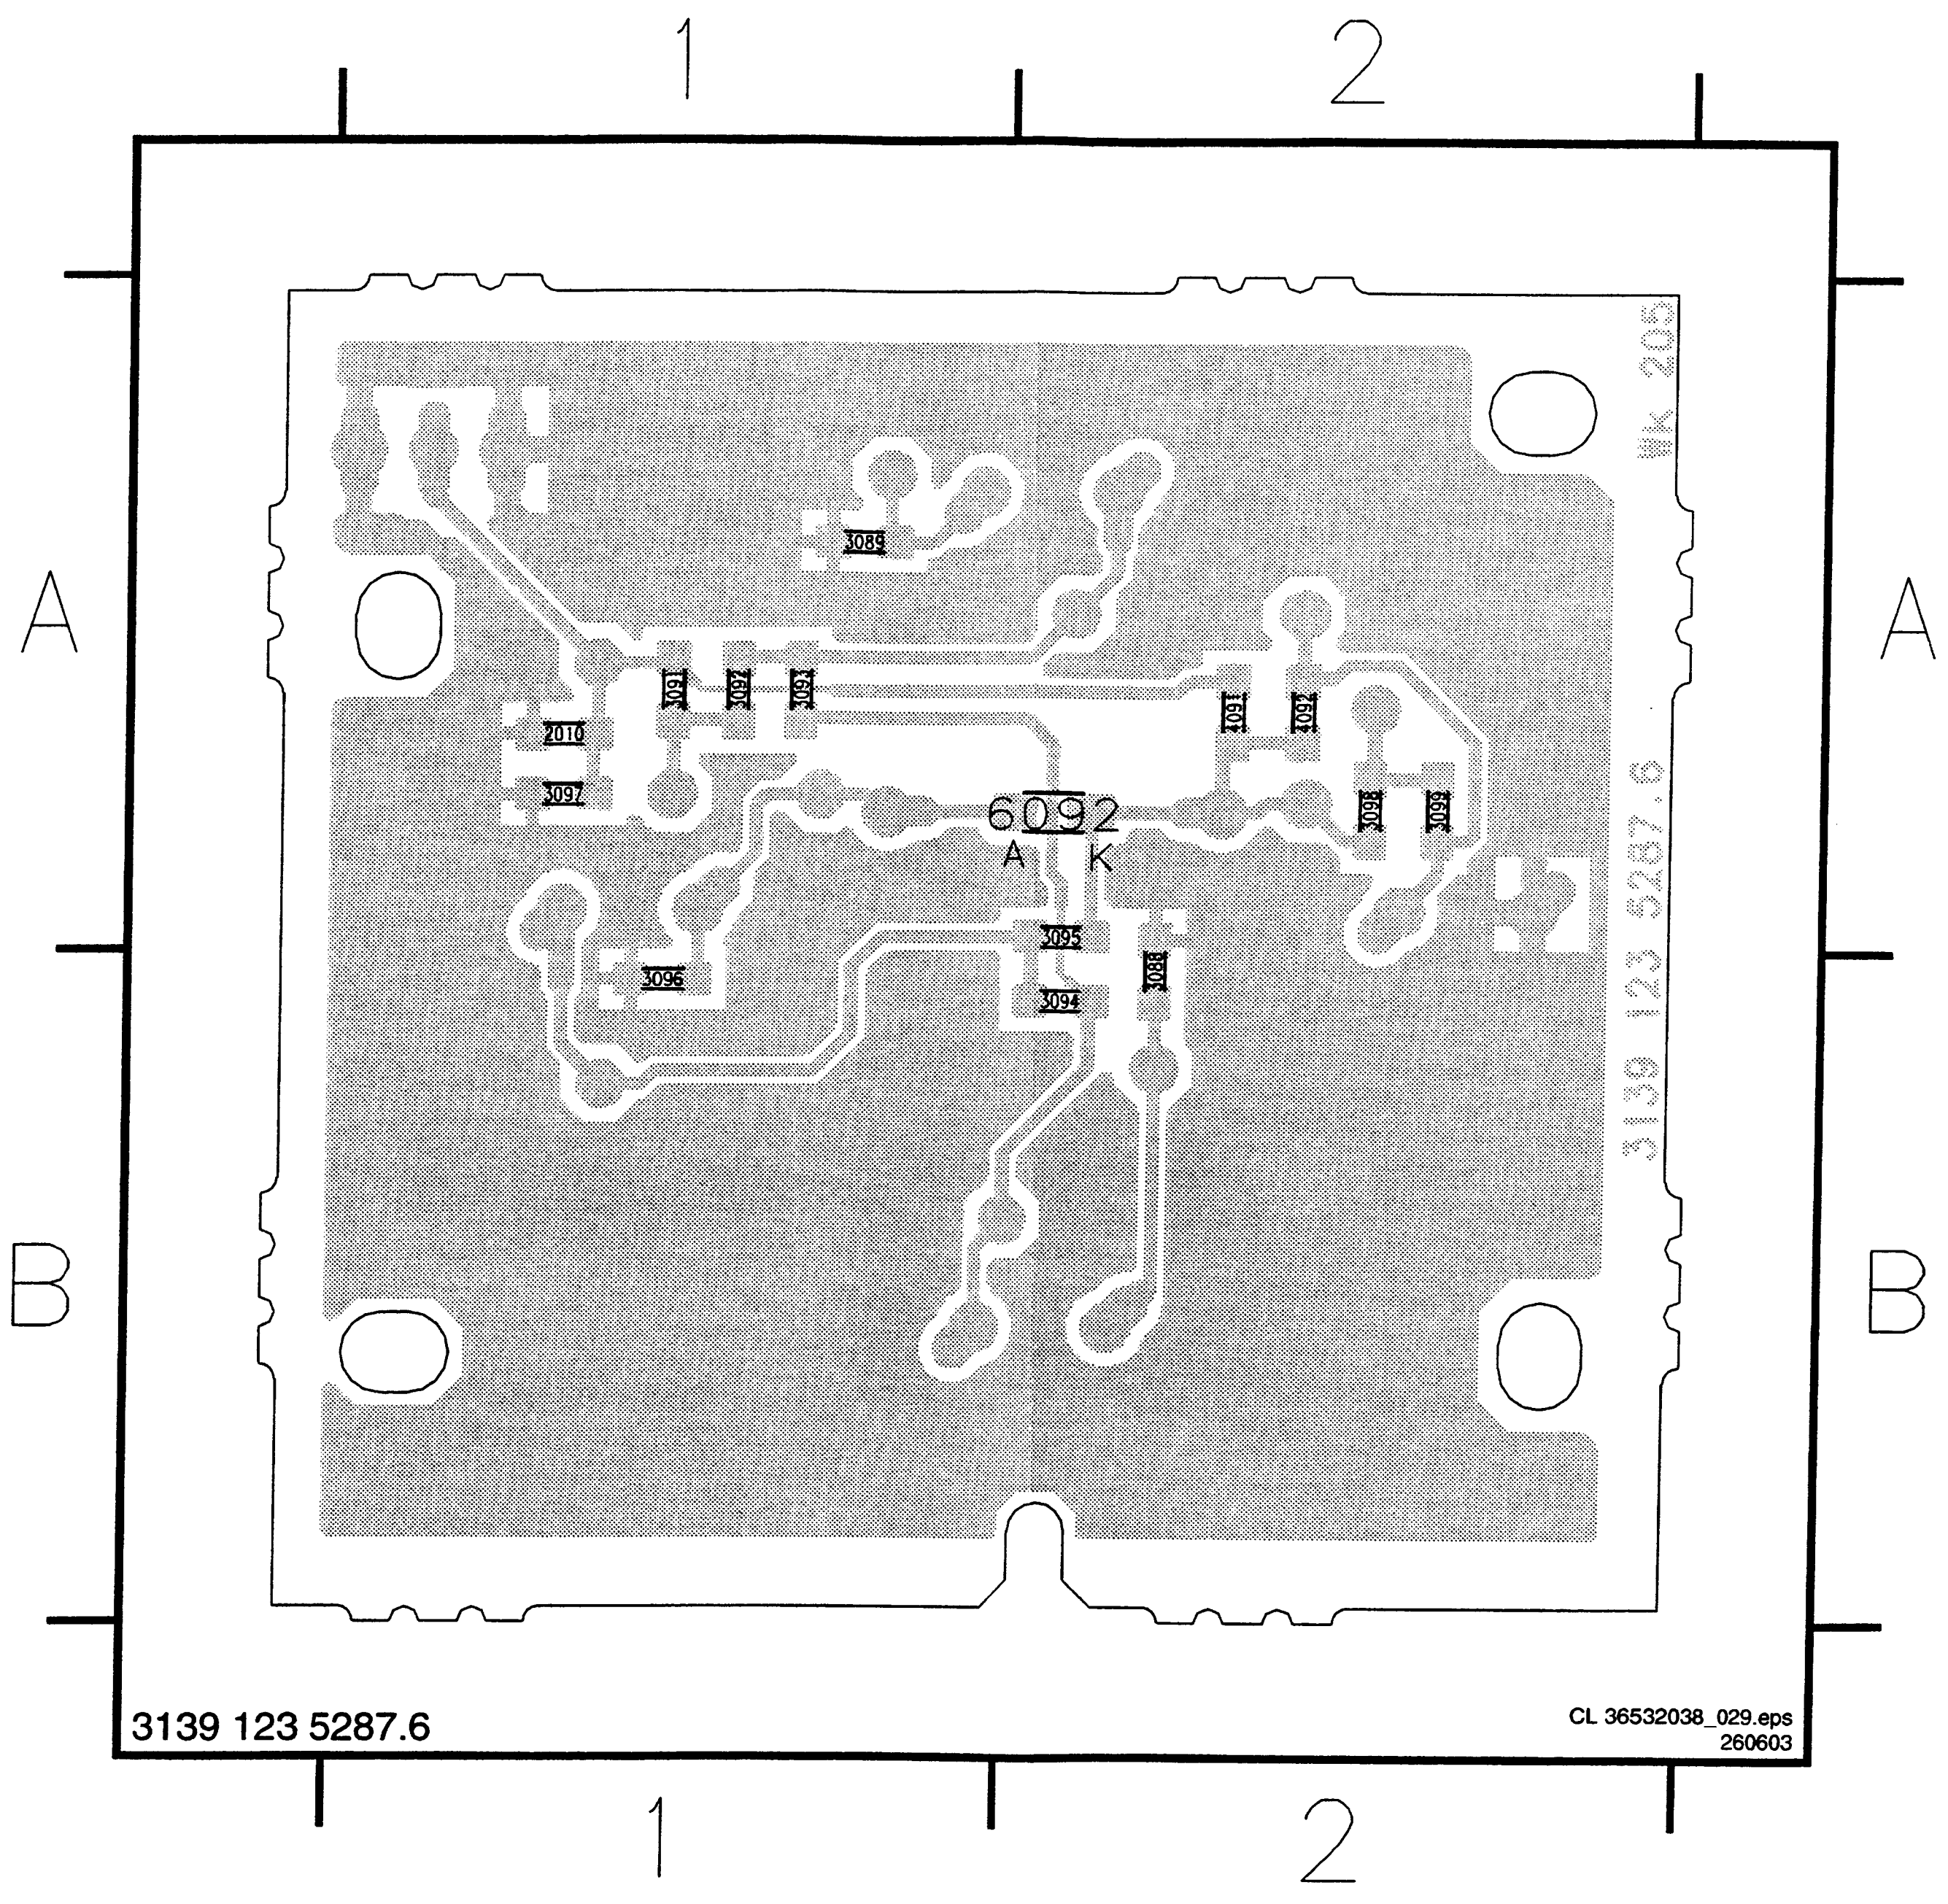
1
2
A
B
Wk 205
3089
2010
3097
3091
3092
3093
4091
4092
3098
3099
6092
A
K
3096
3095
3094
3088
3139 123 5287.6
3139 123 5287.6
CL 36532038_029.eps
260603

CRT Panel

0031	F7
1237-A	G13
1237-B	G9
1237-C	G11
1237-D	E9
1237-E	G12
1237-F	F9
1237-G	F9
1237-H	H9
1237-I	E9
1298-A	G12
1298-B	G12
1298-C	G11
1298-D	E9
1298-E	G12
1298-F	F9
1298-G	G9
1298-H	G9
1298-I	E9
1298-J	G9
1298-K	H9
1424	H2
1434	H13
1435	D9
1483	B13
1940	D2
2300	A8
2301	A5
2302	A5
2304	A8
2306	C6
2307	B8
2309	C8
2313	F5
2315	B5
2316	F5
2317	H13
2318	H11
2319	G7
2320	F6
2321	E5
2322	E5
2323	F5
2324	H13
2325	A8
2330	B8
2332	C2
2333	C2
2334	D2
2336	H7
2337	B13
2338	A6
2403	H6
2404	H6
2405	H5
2406	H6
2407	G6
2408	H7
2409	C7
2410	B3
2411	B5
2412	C4
2420	A7
2421	D11
2422	C9
2423	B9
2424	A10
2425	G2
3300	A5
3301	A8
3302	A7
3303	A7
3304	A8
3306	B7
3307	B6
3308	B8
3310	B13
3311	C6
3312	C6
3316	C8
3318	C8
3319	C8
3323	B7
3324	B8
3325	B5
3329	B7
3334	H10
3335	E5
3336	F5
3337	E5
3338	F8
3339	E8
3340	E8
3341	F4
3342	D5
3345	G7
3347	H12
3349	H11
3350	E7
3351	E7
3352	F7
3354	F6
3355	A9
3356	B12
3357	C9
3358	C2
3359	C2
3360	D2
3361	B13
3370	H11
3371	A6
3401	G4
3402	G7
3403	H3
3404	G3
3405	C7
3410	B3
3411	B3
3412	A4
3413	C4
3414	B4
3416	A7
3417	G2
3418	B5
3419	A8
3420	A10
3421	A10
3422	A10
3423	B10
3424	B10
3425	B10
3426	C10
3427	D10
3999	F2
4301	B5
4302	B7
4401	F2
5300	B11
5302	A11
5303	B11
5400	H4
5401	F2
6300	B7
6301	B7
6305	E7
6306	E7
6307	F7
6310	F6
6311	A6
6312	A6
6313	A6
6314	A6
6401	H5
7300	A6
7301	A7
7302	A10
7303	C10
7304	C7
7307	E6
7308	B4
7309	A10
7310	B10
9310	A12
9311	B12
9317	B11
9318	B11
9320	F2
9400	G7
9401	H5
9402	A11
9403	C11
9404	A8
9405	E2
9406	G6
9407	G4
9408	G4
9409	C4
9410	B4
9411	G3
9412	G9
9413	G9
9414	G1

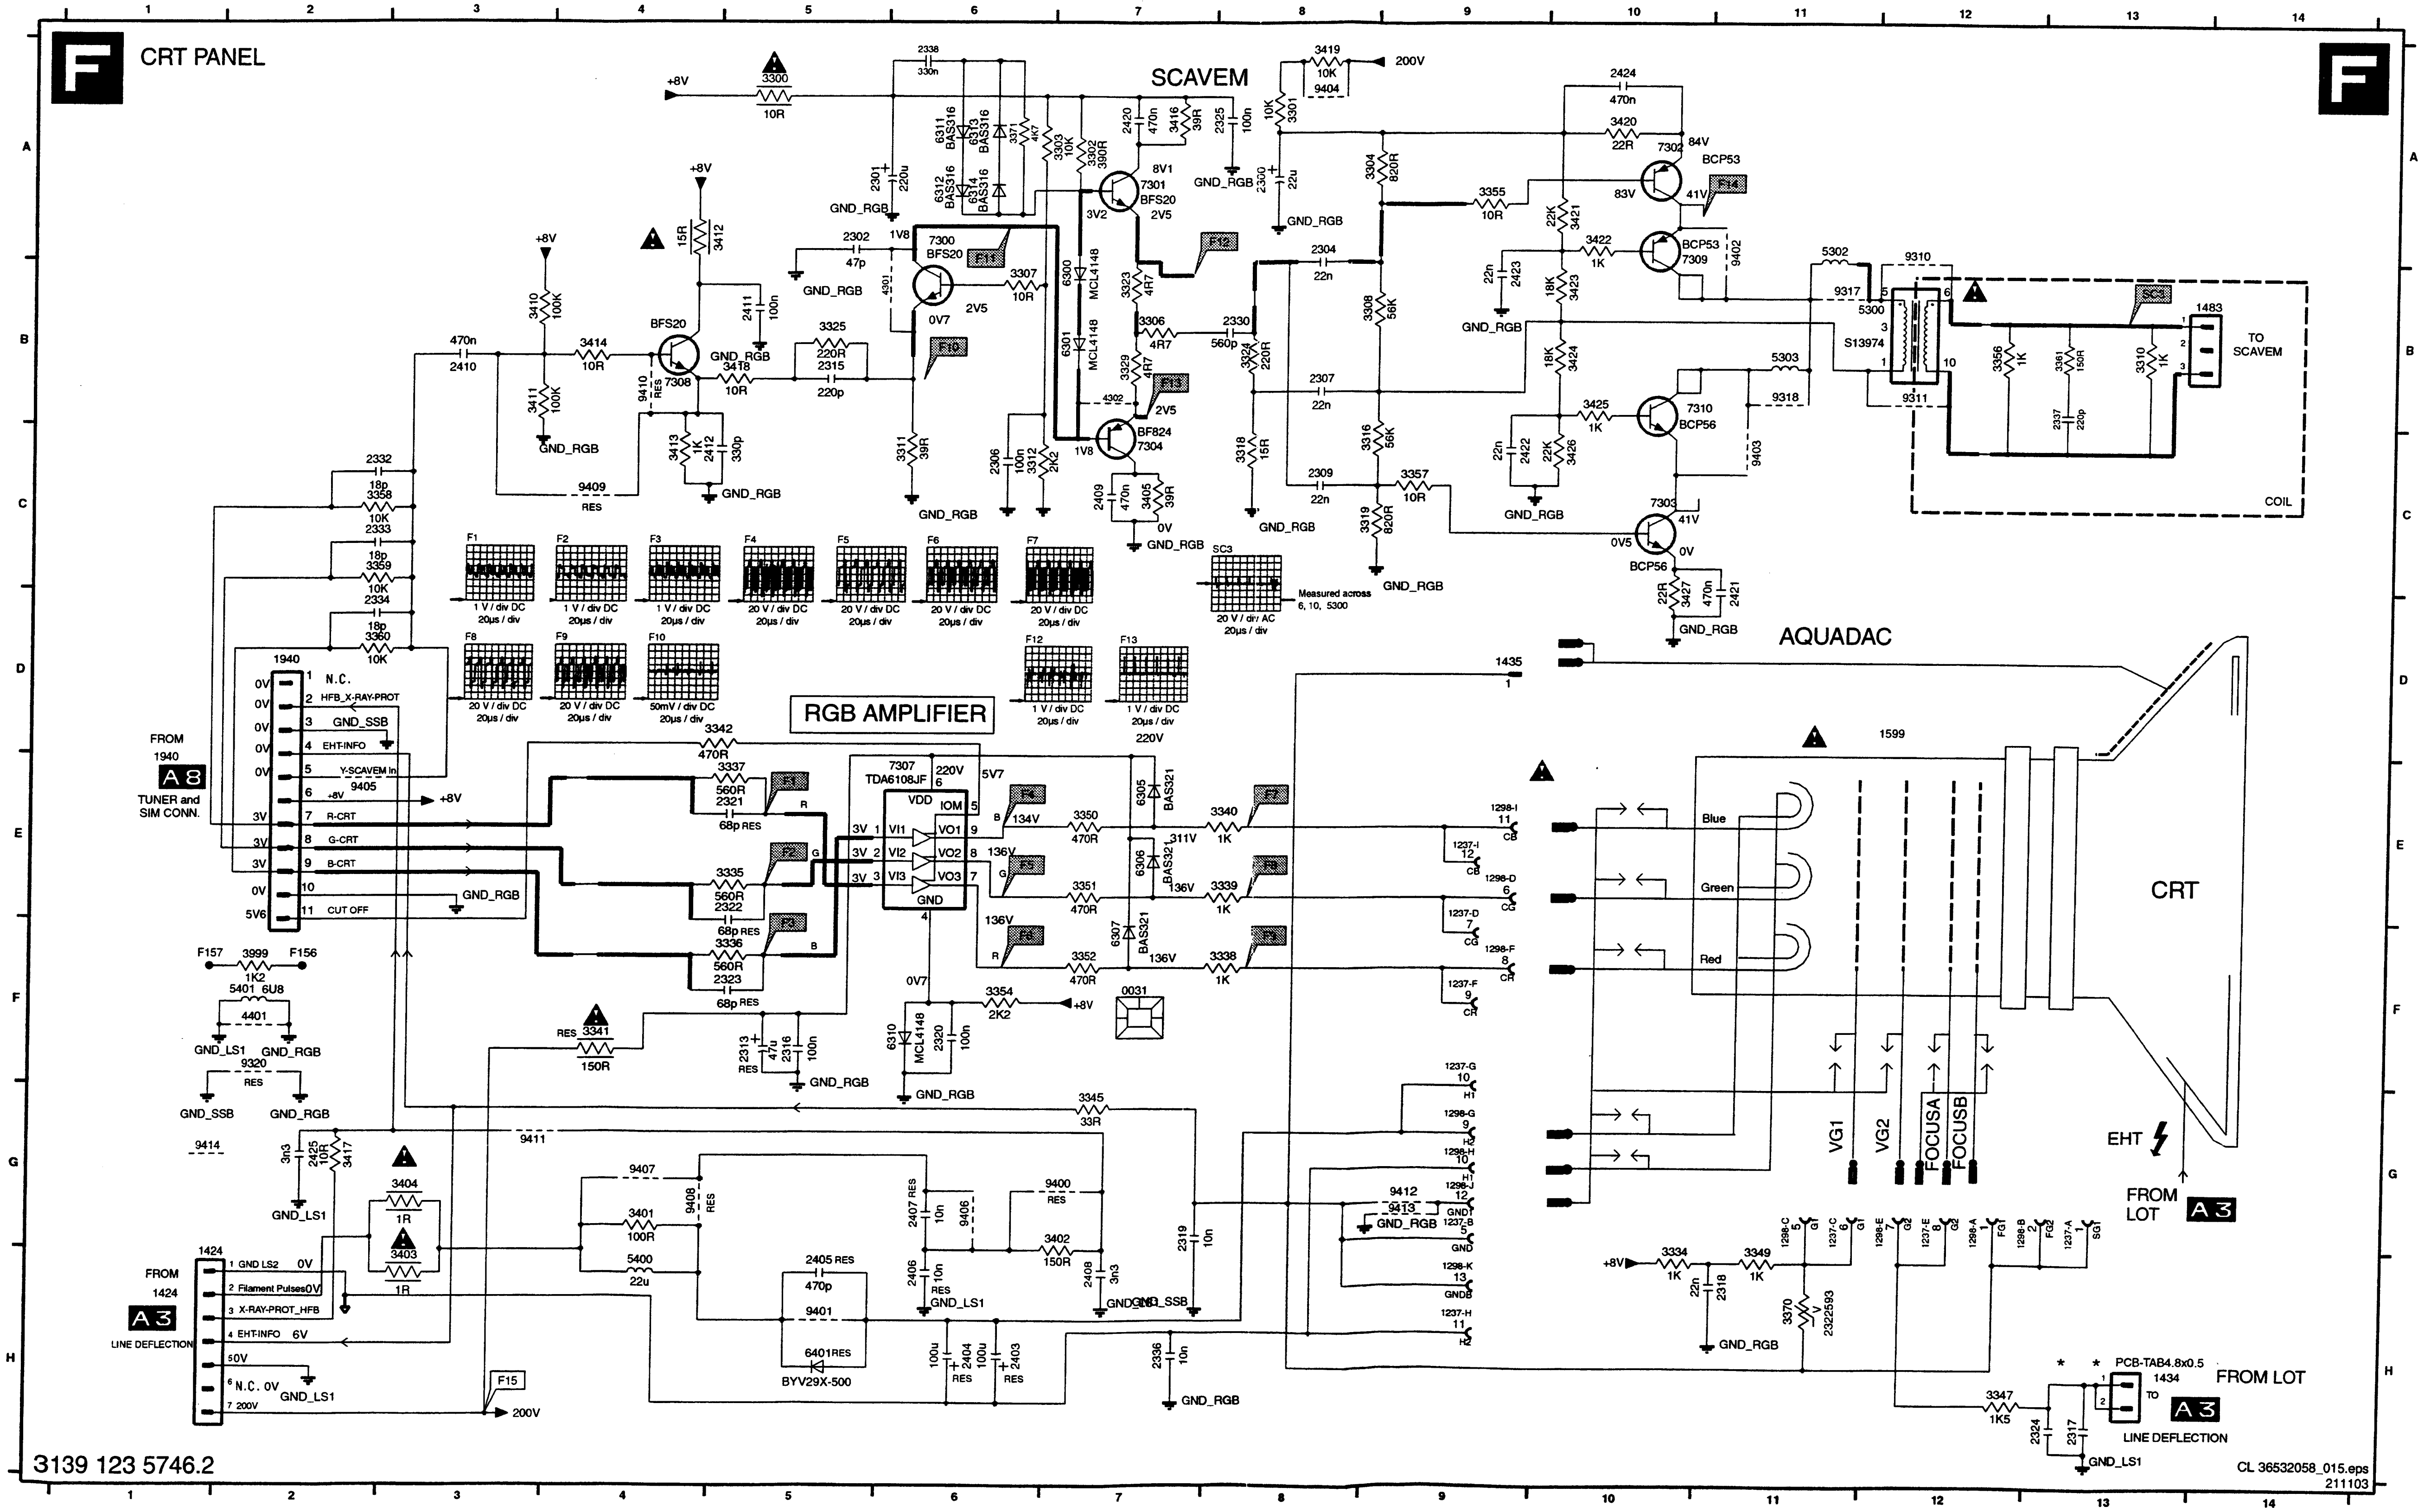

F
CRT PANEL
SCAVEM
RGB AMPLIFIER
AQUADAC
CRT
COIL
TO SCAVEM
FROM 1940
A8
TUNER and SIM CONN.
FROM 1424
A3
LINE DEFLECTION
FROM LOT
A3
FROM LOT
A3
LINE DEFLECTION
TDA6108JF
EHT
VG1
VG2
FOCUSA
FOCUSB
Blue
Green
Red
+8V
200V
GND_RGB
GND_LS1
GND_SSB
F1
F2
F3
F4
F5
F6
F7
F8
F9
F10
F11
F12
F13
F14
F15
SC3
Measured across 6, 10, 5300
3139 123 5746.2
CL 36532058_015.eps 211103

Layout CRT Panel (Top Side)

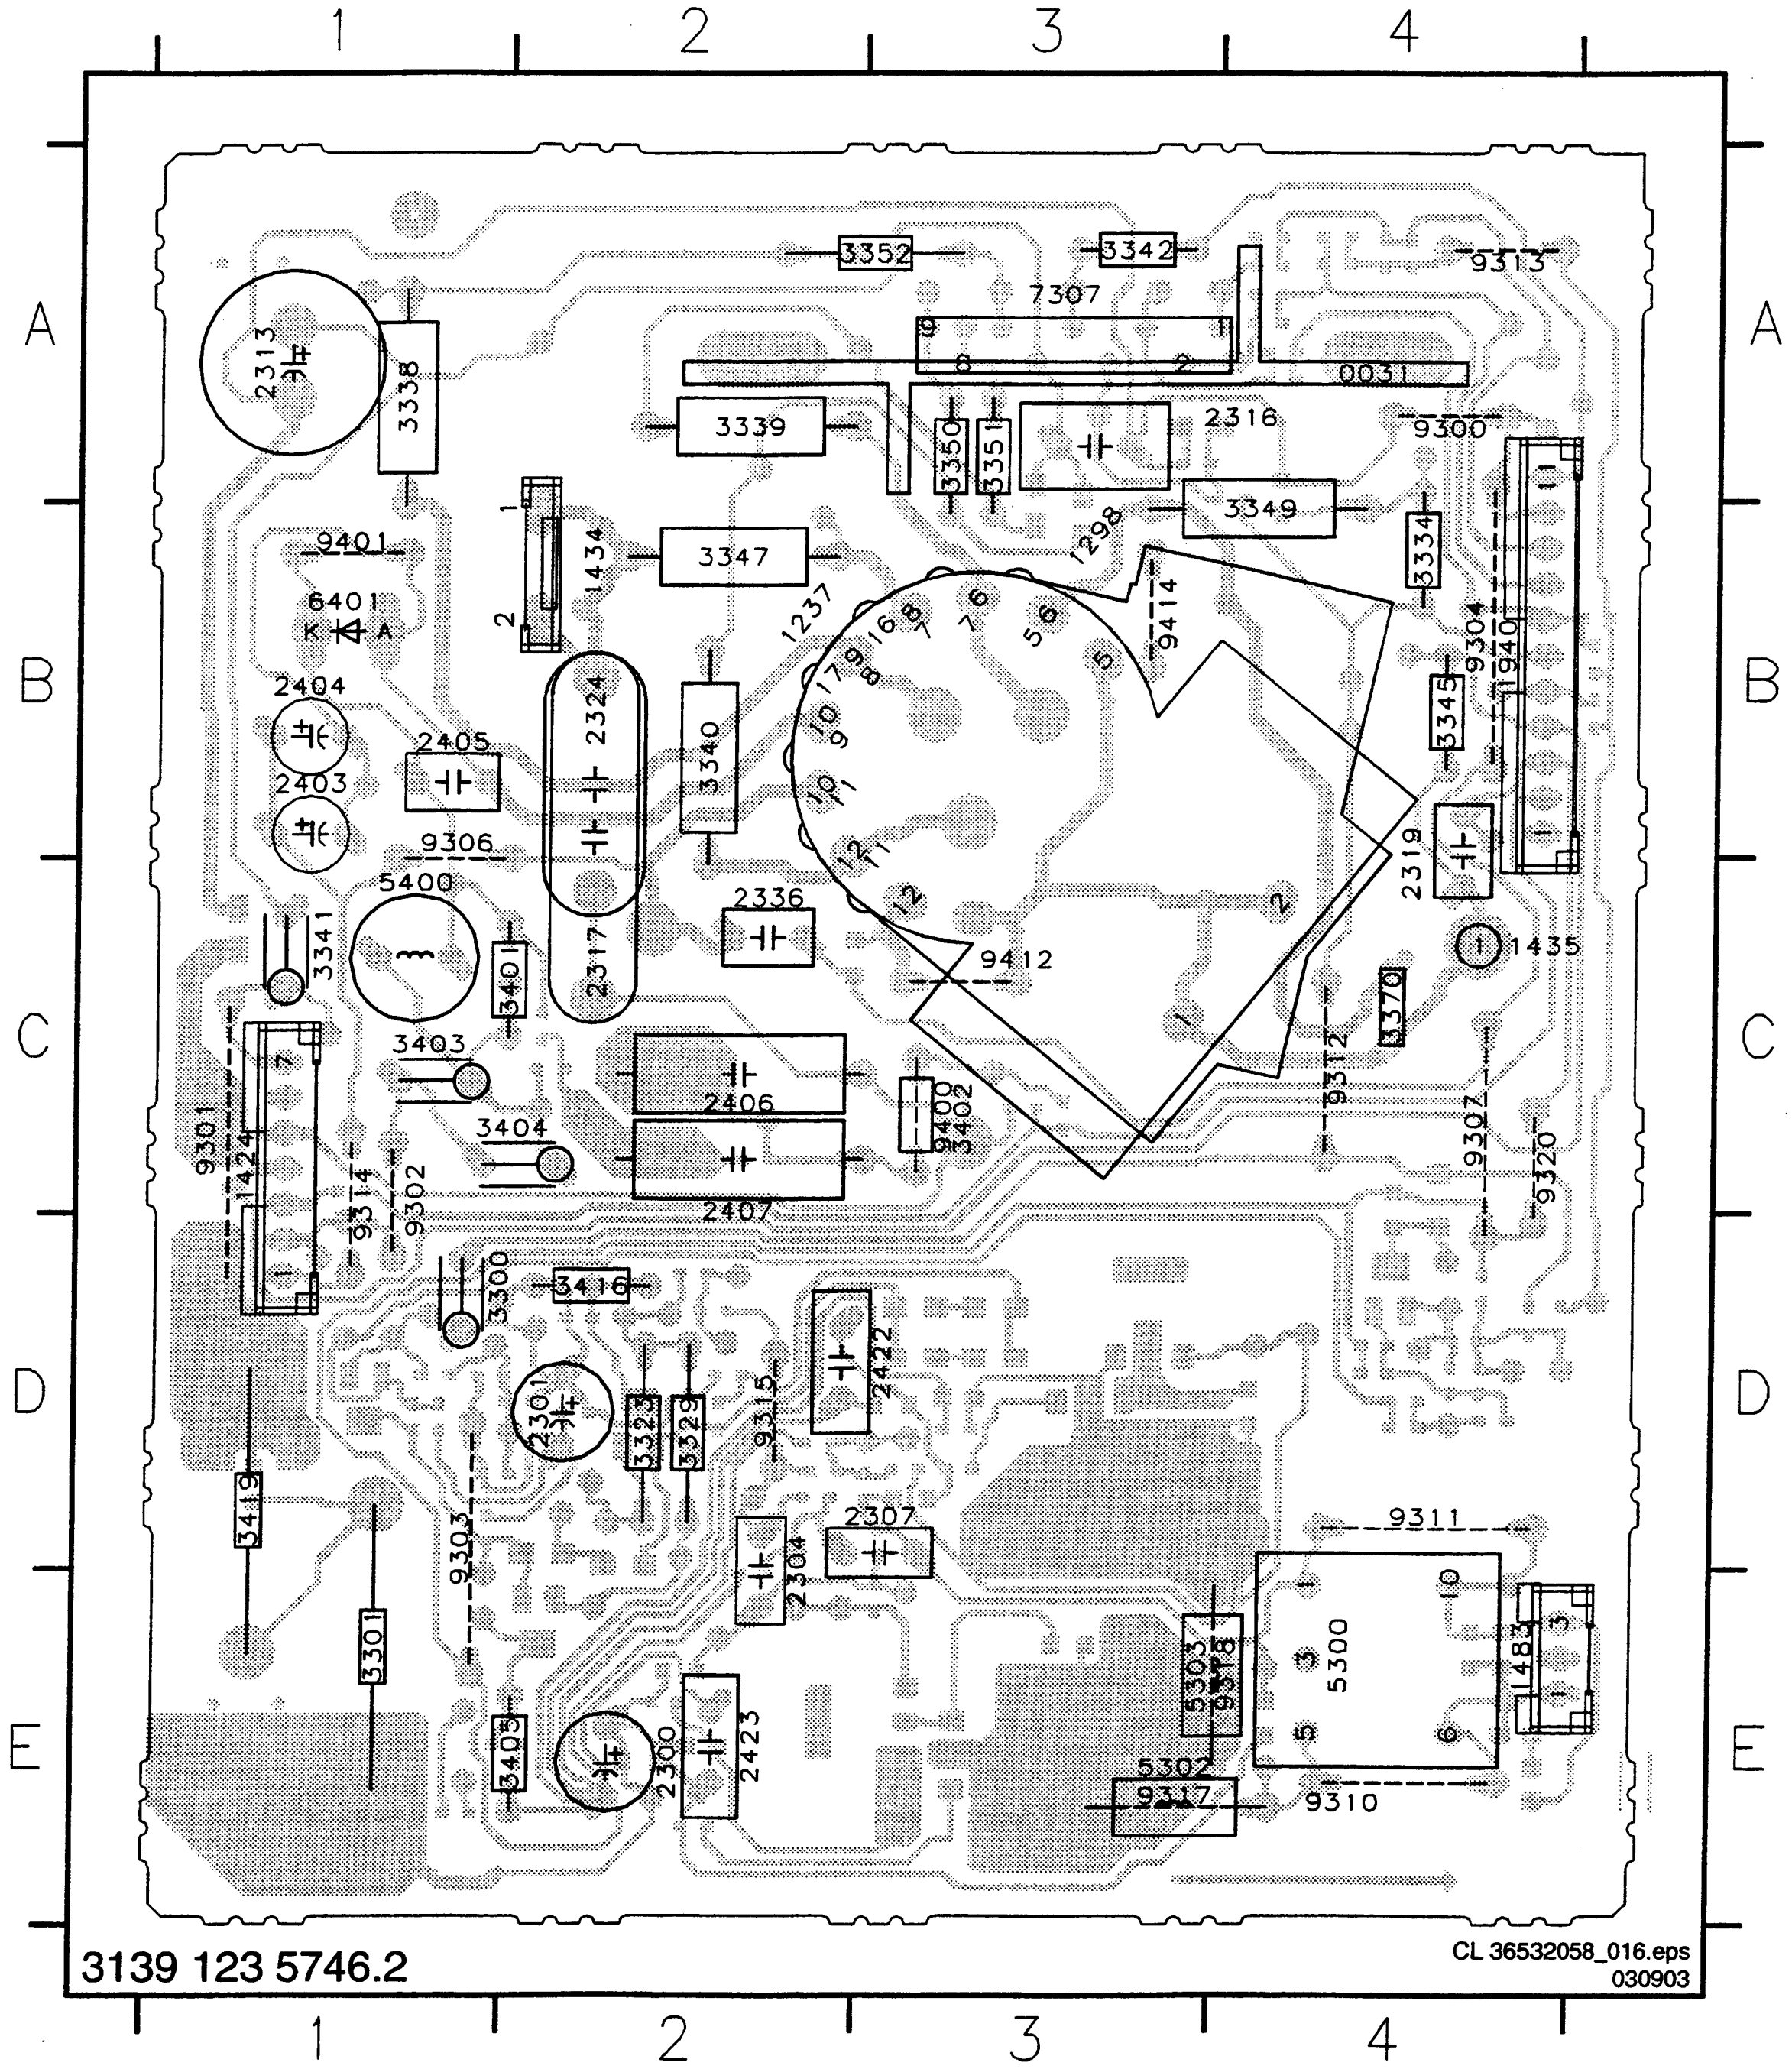

0031	A4	9400	
1237	B2	9401	
1298	B3	9412	
1424	C1	9414	
1434	B2		
1435	C4		
1483	E4		
1940	B4		
2300	E2		
2301	D2		
2304	E2		
2307	D3		
2313	A1		
2316	A4		
2317	C2		
2319	C4		
2324	B2		
2336	C2		
2403	B1		
2404	B1		
2405	B1		
2406	C2		
2407	C2		
2422	D3		
2423	E2		
3300	D1		
3301	E1		
3323	D2		
3329	D2		
3334	B4		
3338	A1		
3339	A2		
3340	B2		
3341	C1		
3342	A3		
3345	B4		
3347	B2		
3349	B4		
3350	A3		
3351	A3		
3352	A3		
3370	C4		
3401	C2		
3402	C3		
3403	C1		
3404	C2		
3405	E2		
3416	D2		
3419	D1		
5300	E4		
5302	E3		
5303	E3		
5400	C1		
6401	B1		
7307	A3		
9300	A4		
9301	C1		
9302	C1		
9303	D1		
9304	B4		
9306	B1		
9307	C4		
9310	E4		
9311	D4		
9312	C4		
9313	A4		
9314	C1		
9315	D2		
9317	E3		
9318	E4		
9320	C4		

Layout CRT Panel (Bottom Side)

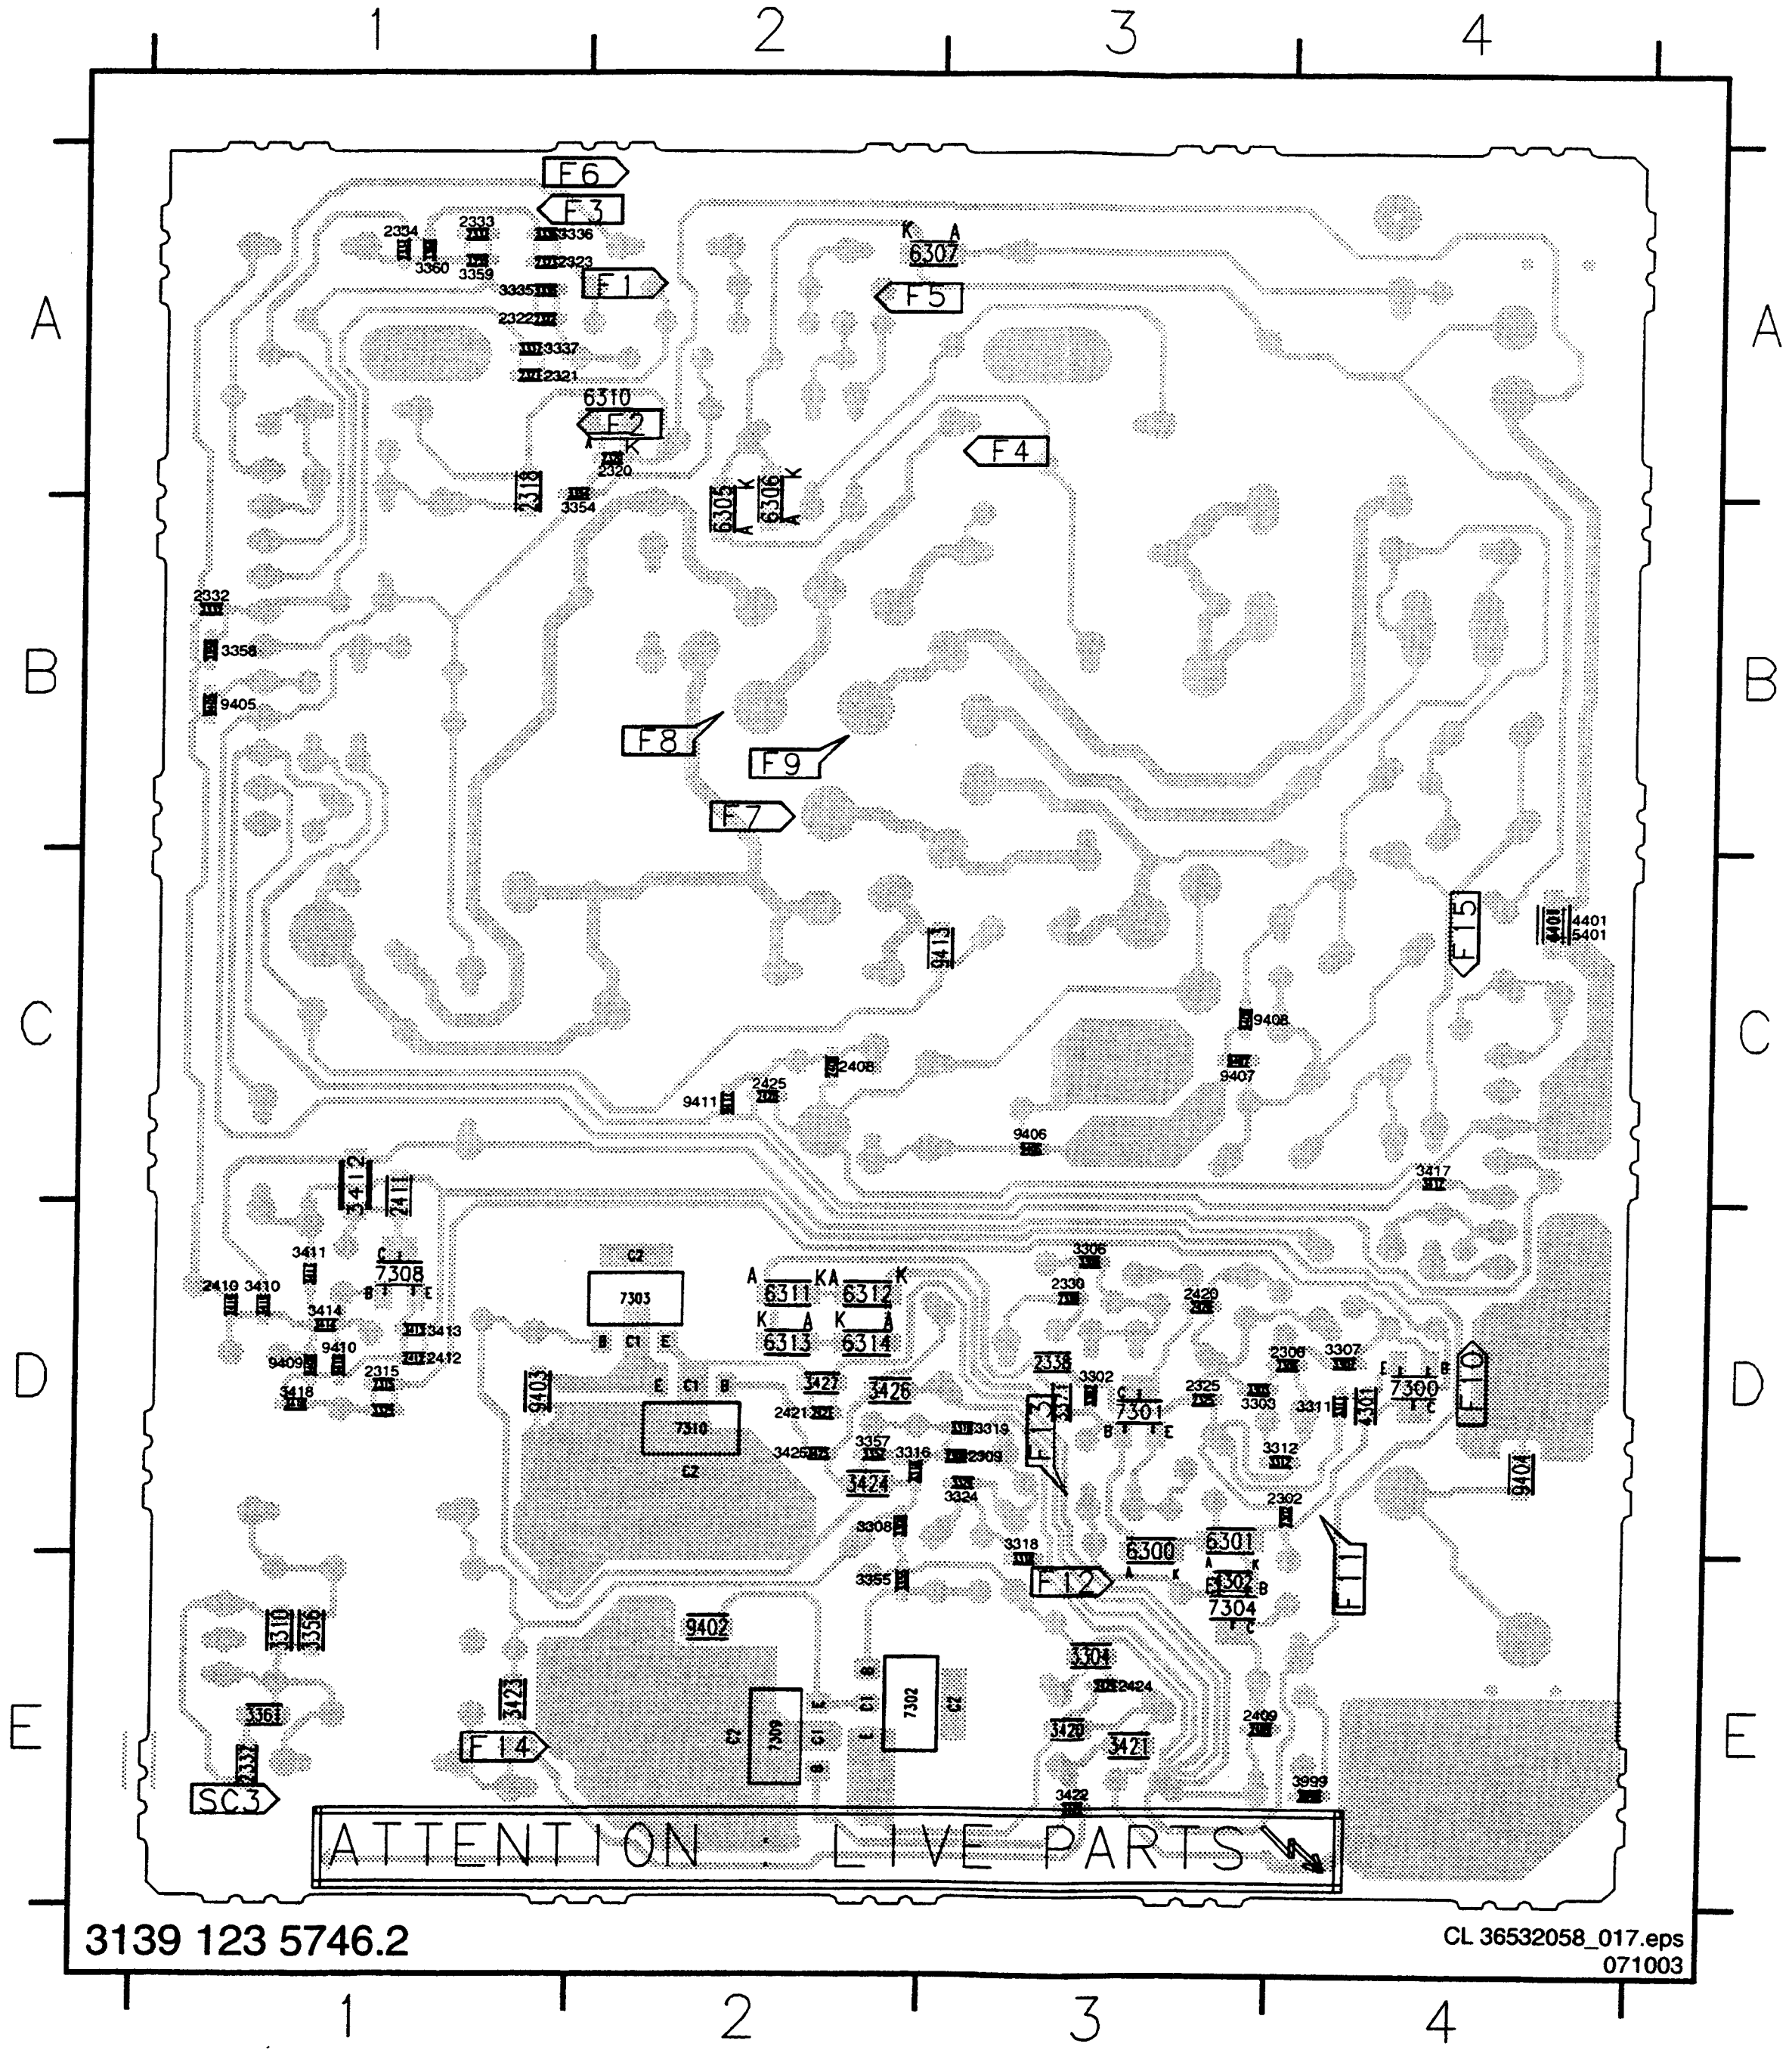

2302	D4	5401
2306	D4	6300
2309	D3	6301
2315	D1	6305
2318	A1	6306
2320	A2	6307
2321	A1	6310
2322	A1	6311
2323	A1	6312
2325	D3	6313
2330	D3	6314
2332	B1	7300
2333	A1	7301
2334	A1	7302
2337	E1	7303
2338	D3	7304
2408	C2	7308
2409	E3	7309
2410	D1	7310
2411	C1	9402
2412	D1	9403
2420	D3	9404
2421	D2	9405
2424	E3	9406
2425	C2	9407
3302	D3	9408
3303	D3	9409
3304	E3	9410
3306	D3	9411
3307	D4	9413
3308	D2	
3310	E1	
3311	D4	
3312	D4	
3316	D2	
3318	E3	
3319	D3	
3324	D3	
3325	D1	
3335	A1	
3336	A1	
3337	A1	
3354	A1	
3355	E2	
3356	E1	
3357	D2	
3358	B1	
3359	A1	
3360	A1	
3361	E1	
3371	D3	
3410	D1	
3411	D1	
3412	C1	
3413	D1	
3414	D1	
3417	C4	
3418	D1	
3420	E3	
3421	E3	
3422	E3	
3423	E1	
3424	D2	
3425	D2	
3426	D2	
3427	D2	
3999	E4	
4301	D4	
4302	E3	
4401	C4	

DC Shift Panel

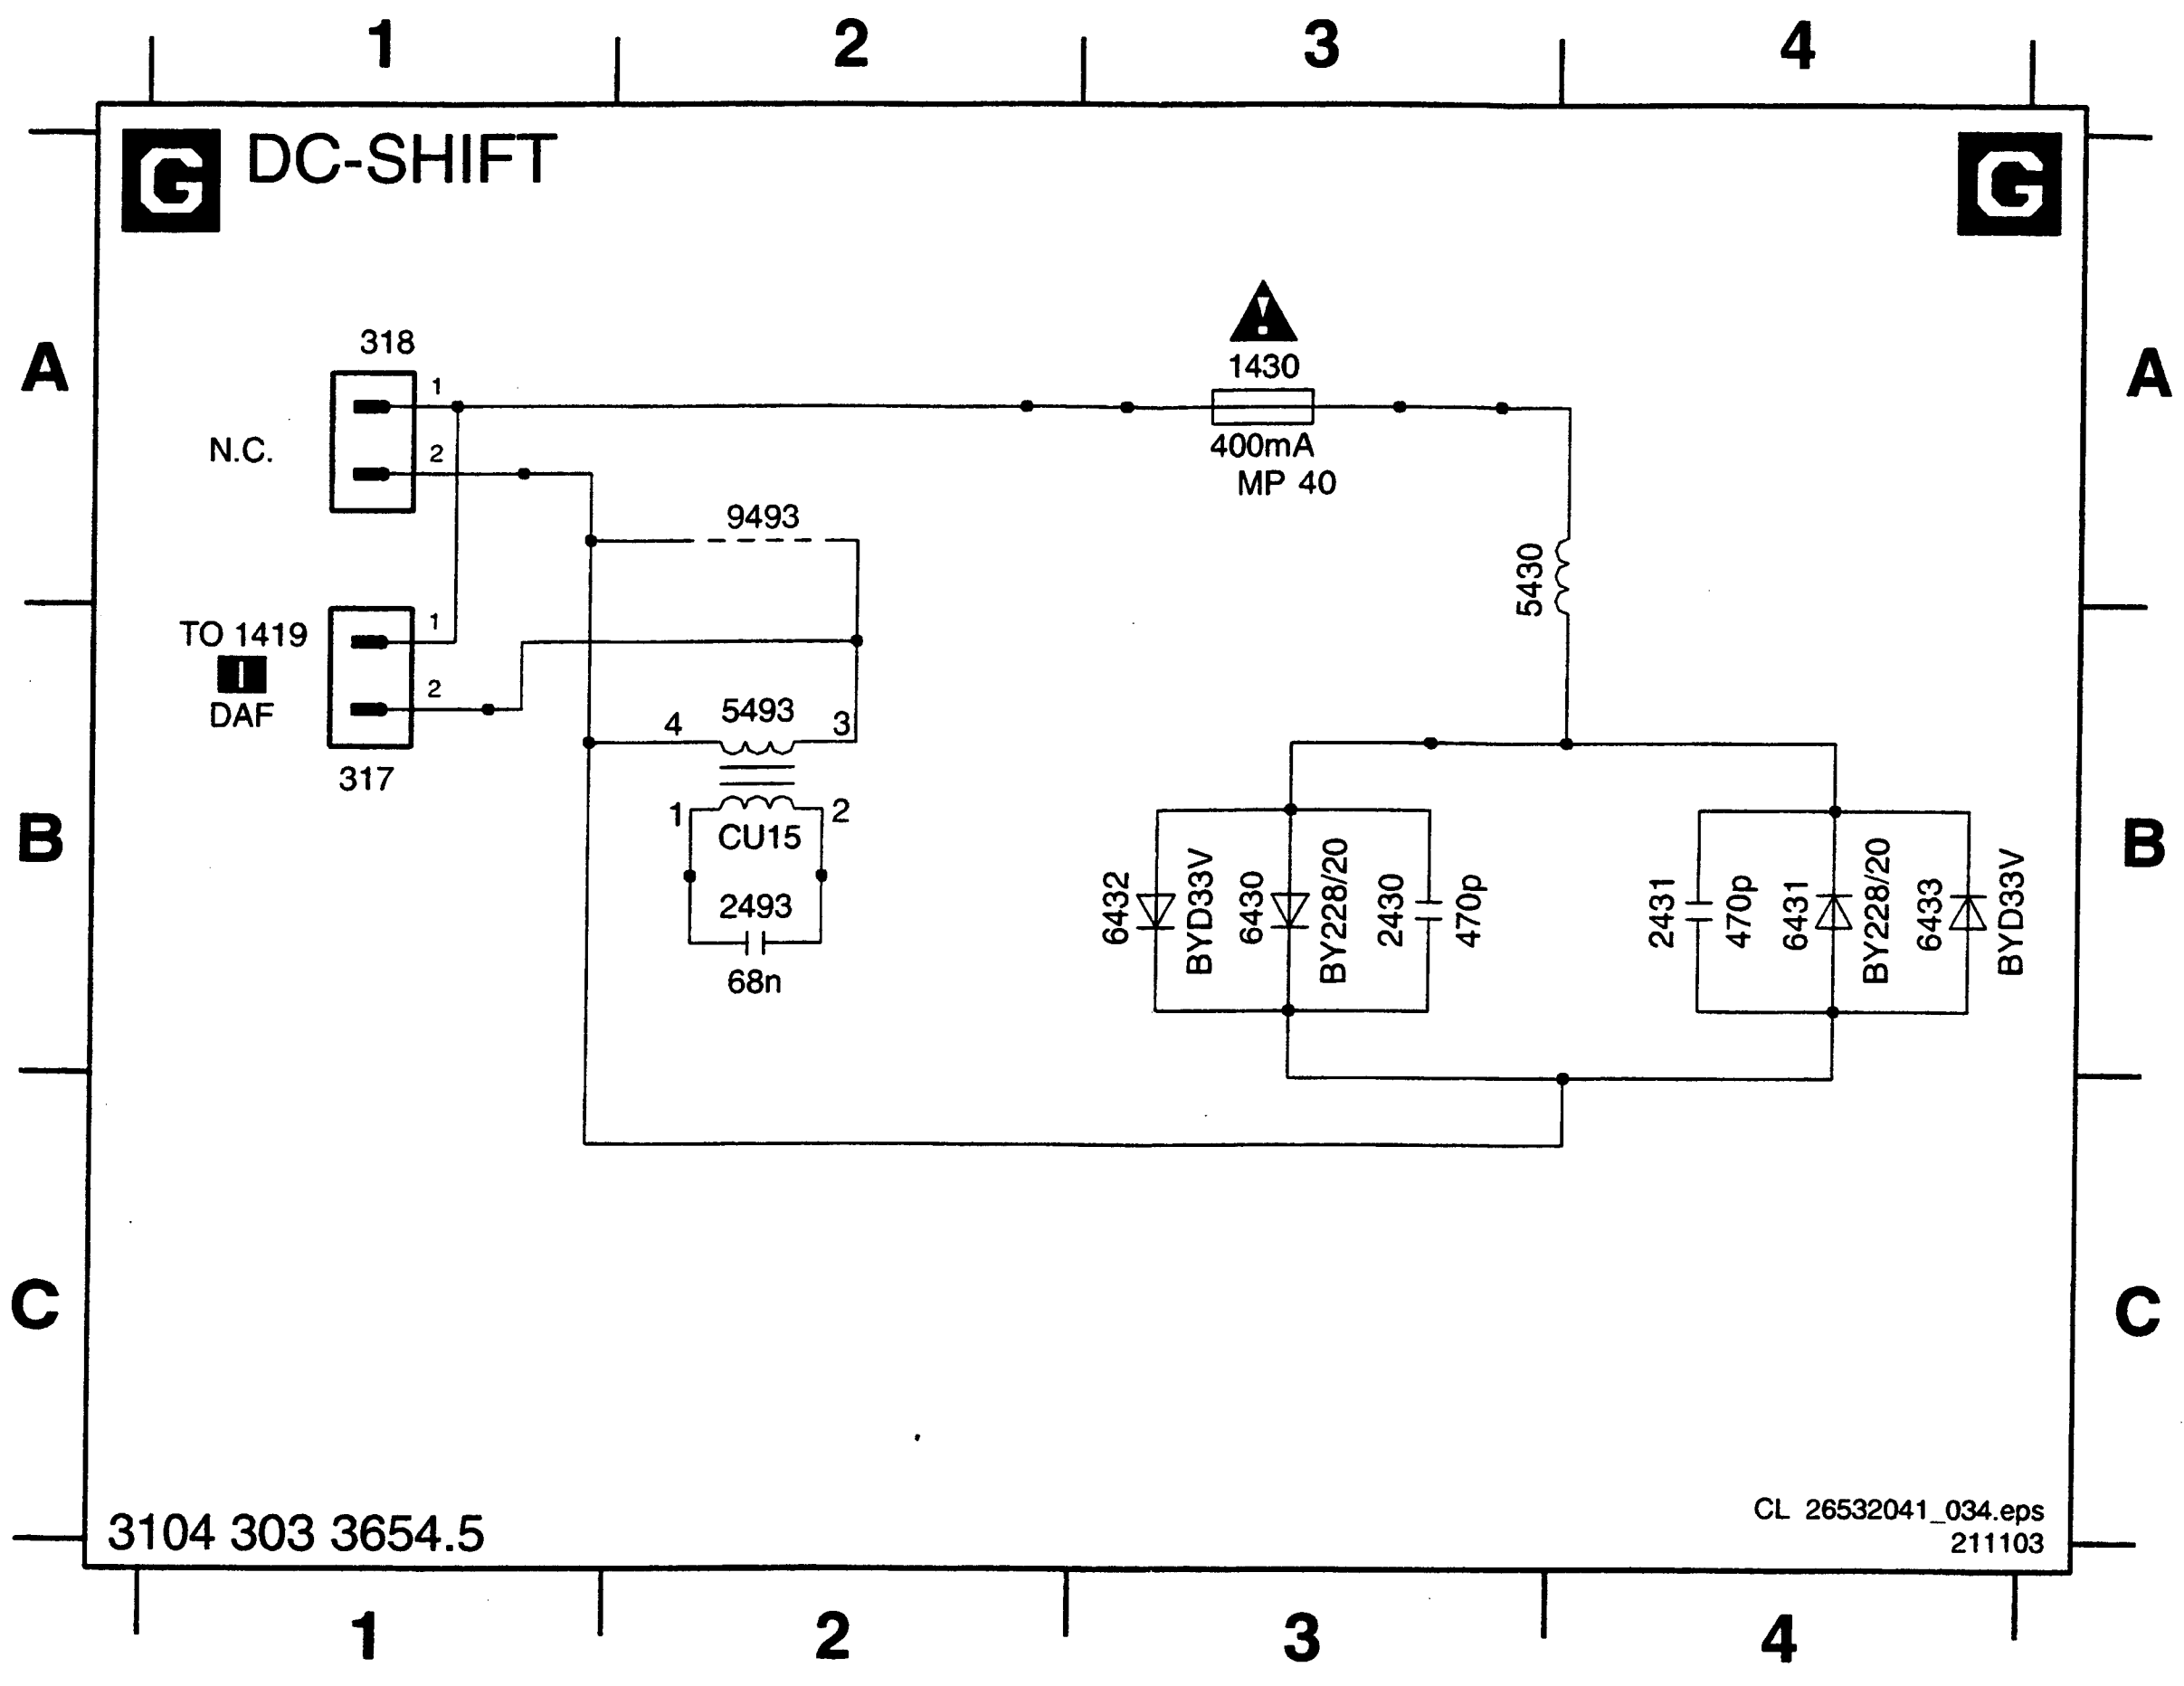
1
2
3
4
A
B
C
G
DC-SHIFT
G
318
1
2
N.C.
TO 1419
I
DAF
1
2
317
9493
4
5493
3
1
CU15
2
2493
68n
1430
400mA
MP 40
5430
6432
BYD33V
6430
BY228/20
2430
470p
2431
470p
6431
BY228/20
6433
BYD33V
3104 303 3654.5
CL 26532041_034.eps
211103

317	B1
318	A1
1430	A3
2430	B3
2431	B4
2493	B2
5430	A3
5493	B2
6430	B3
6431	B4
6432	B3
6433	B4

Layout DC Shift Panel

317	A3	2430	A2	5430	A1	6431	A2	9493	A3
318	A2	2431	A1	5493	A3	6432	A2		
1430	A2	2493	A3	6430	A2	6433	A2		

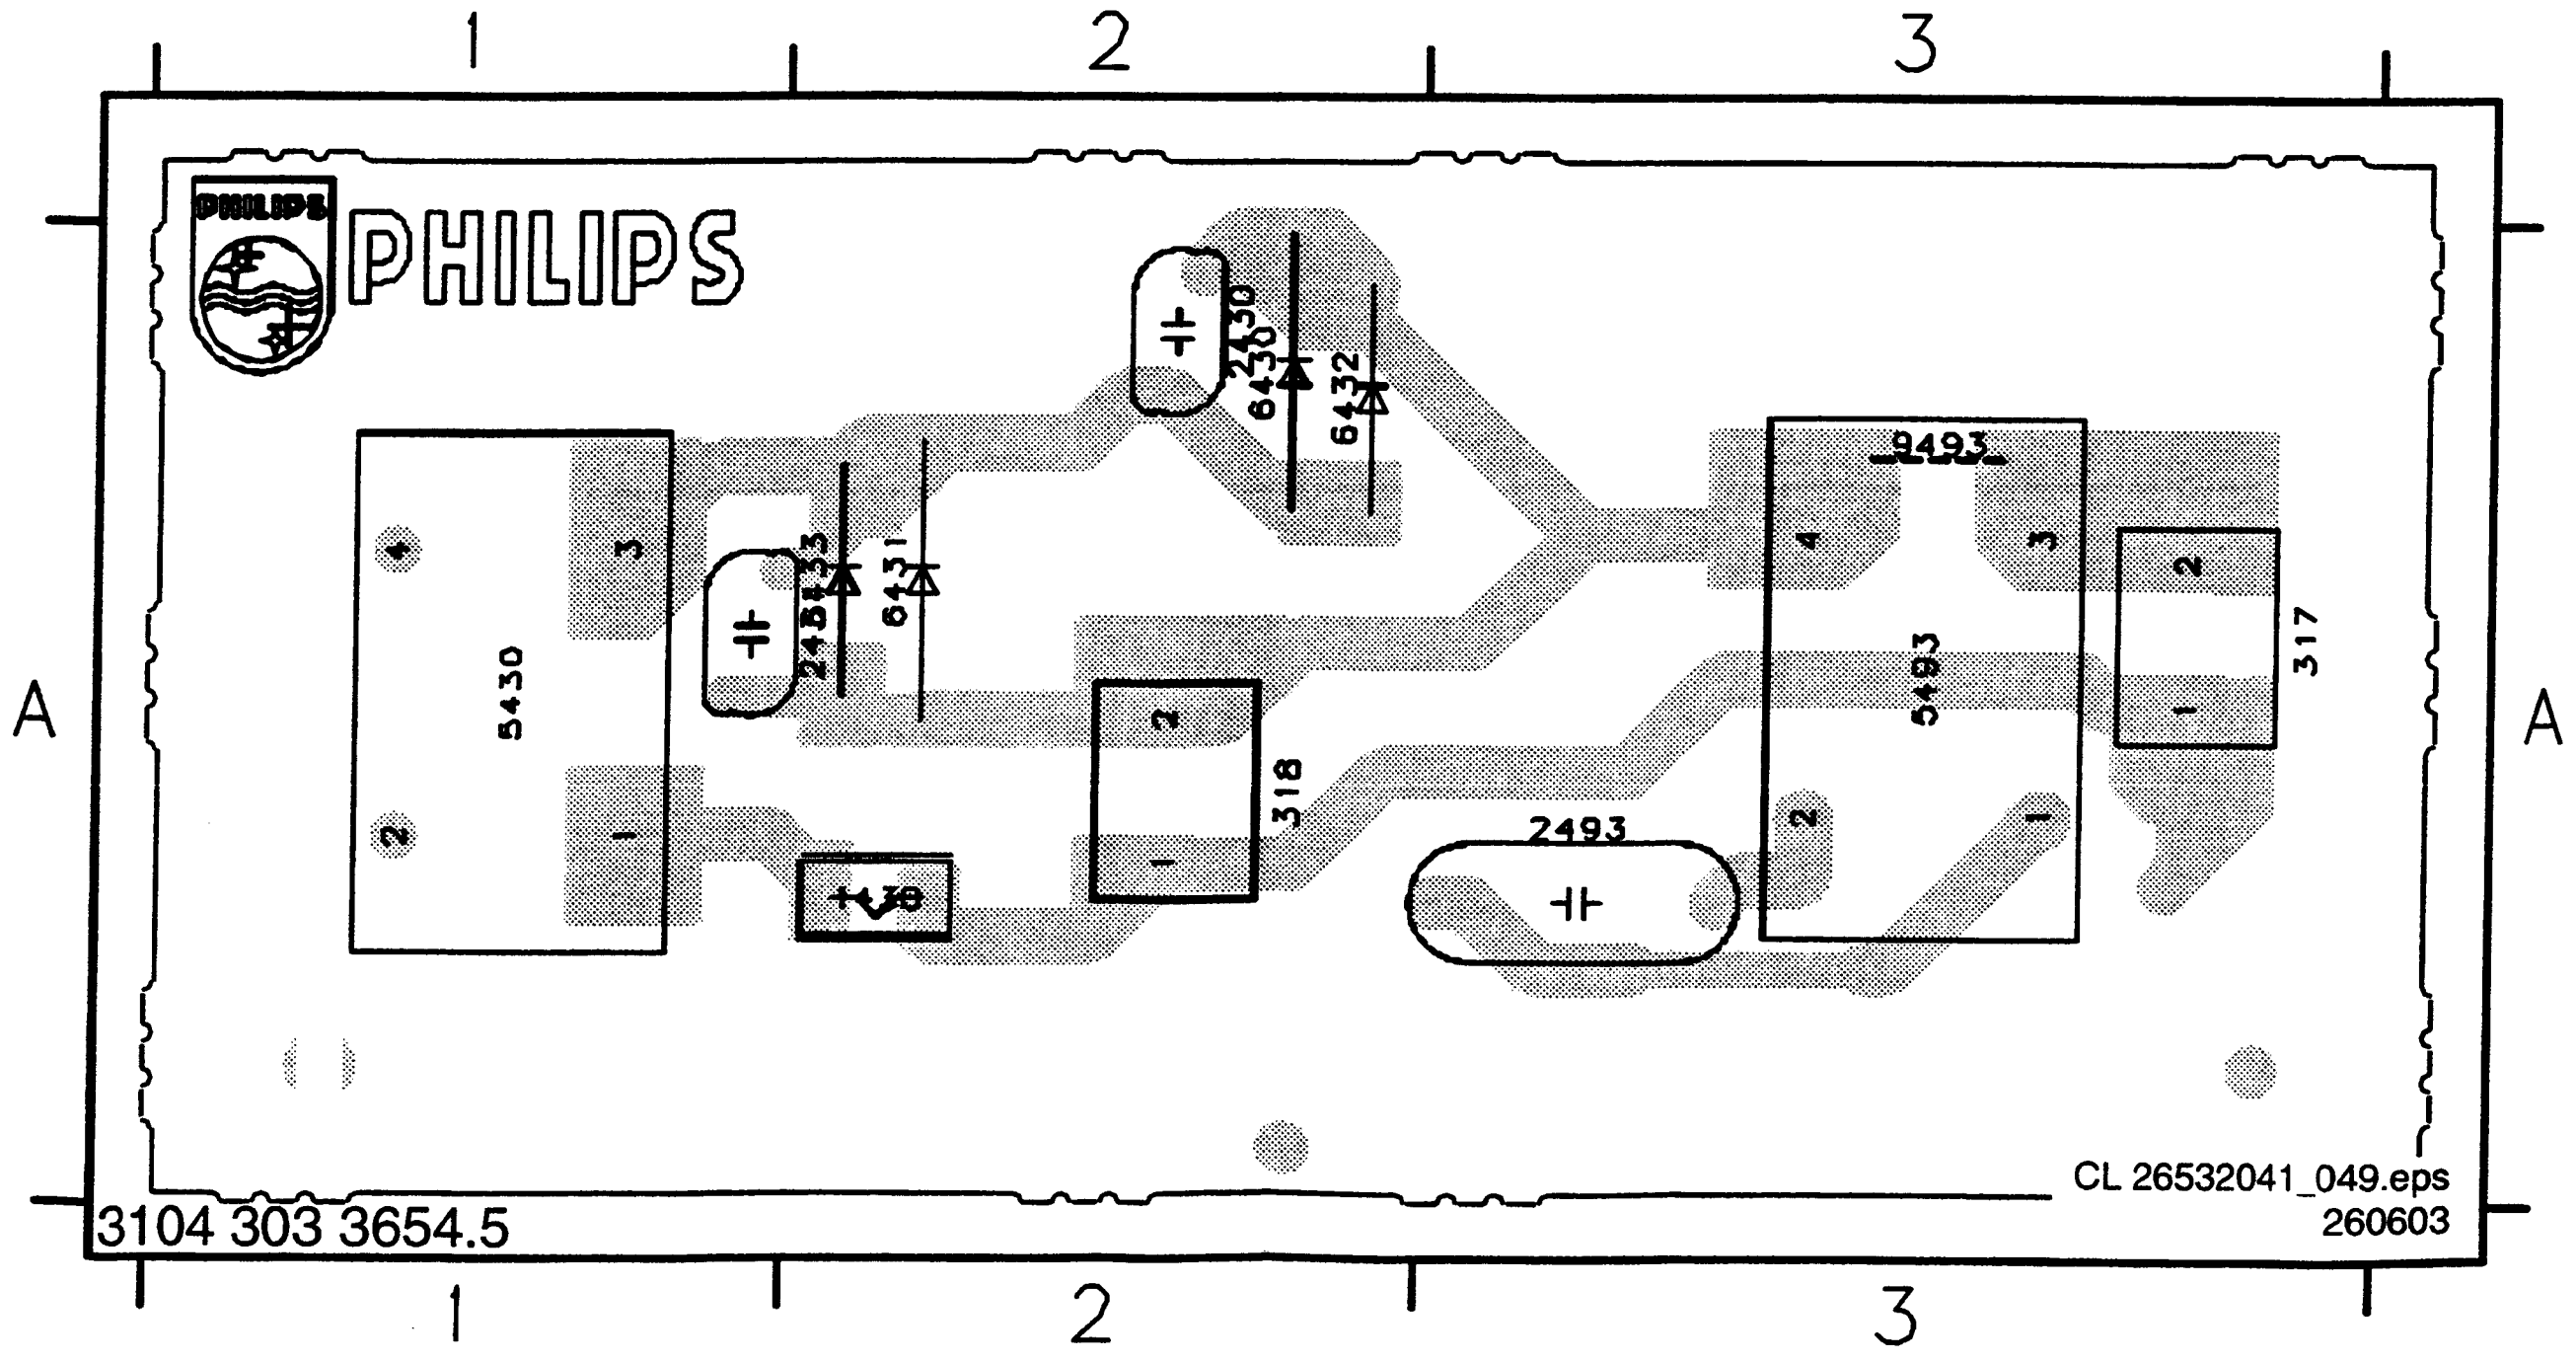
1
2
3
A
PHILIPS
5430
4
3
2
1
2431
6433
6431
1430
2
1
318
2430
6430
6432
9493
5493
2493
4
3
2
1
317
3104 303 3654.5
CL 26532041_049.eps
260603

Personal Notes:

VDAF Panel + 2nd Orders

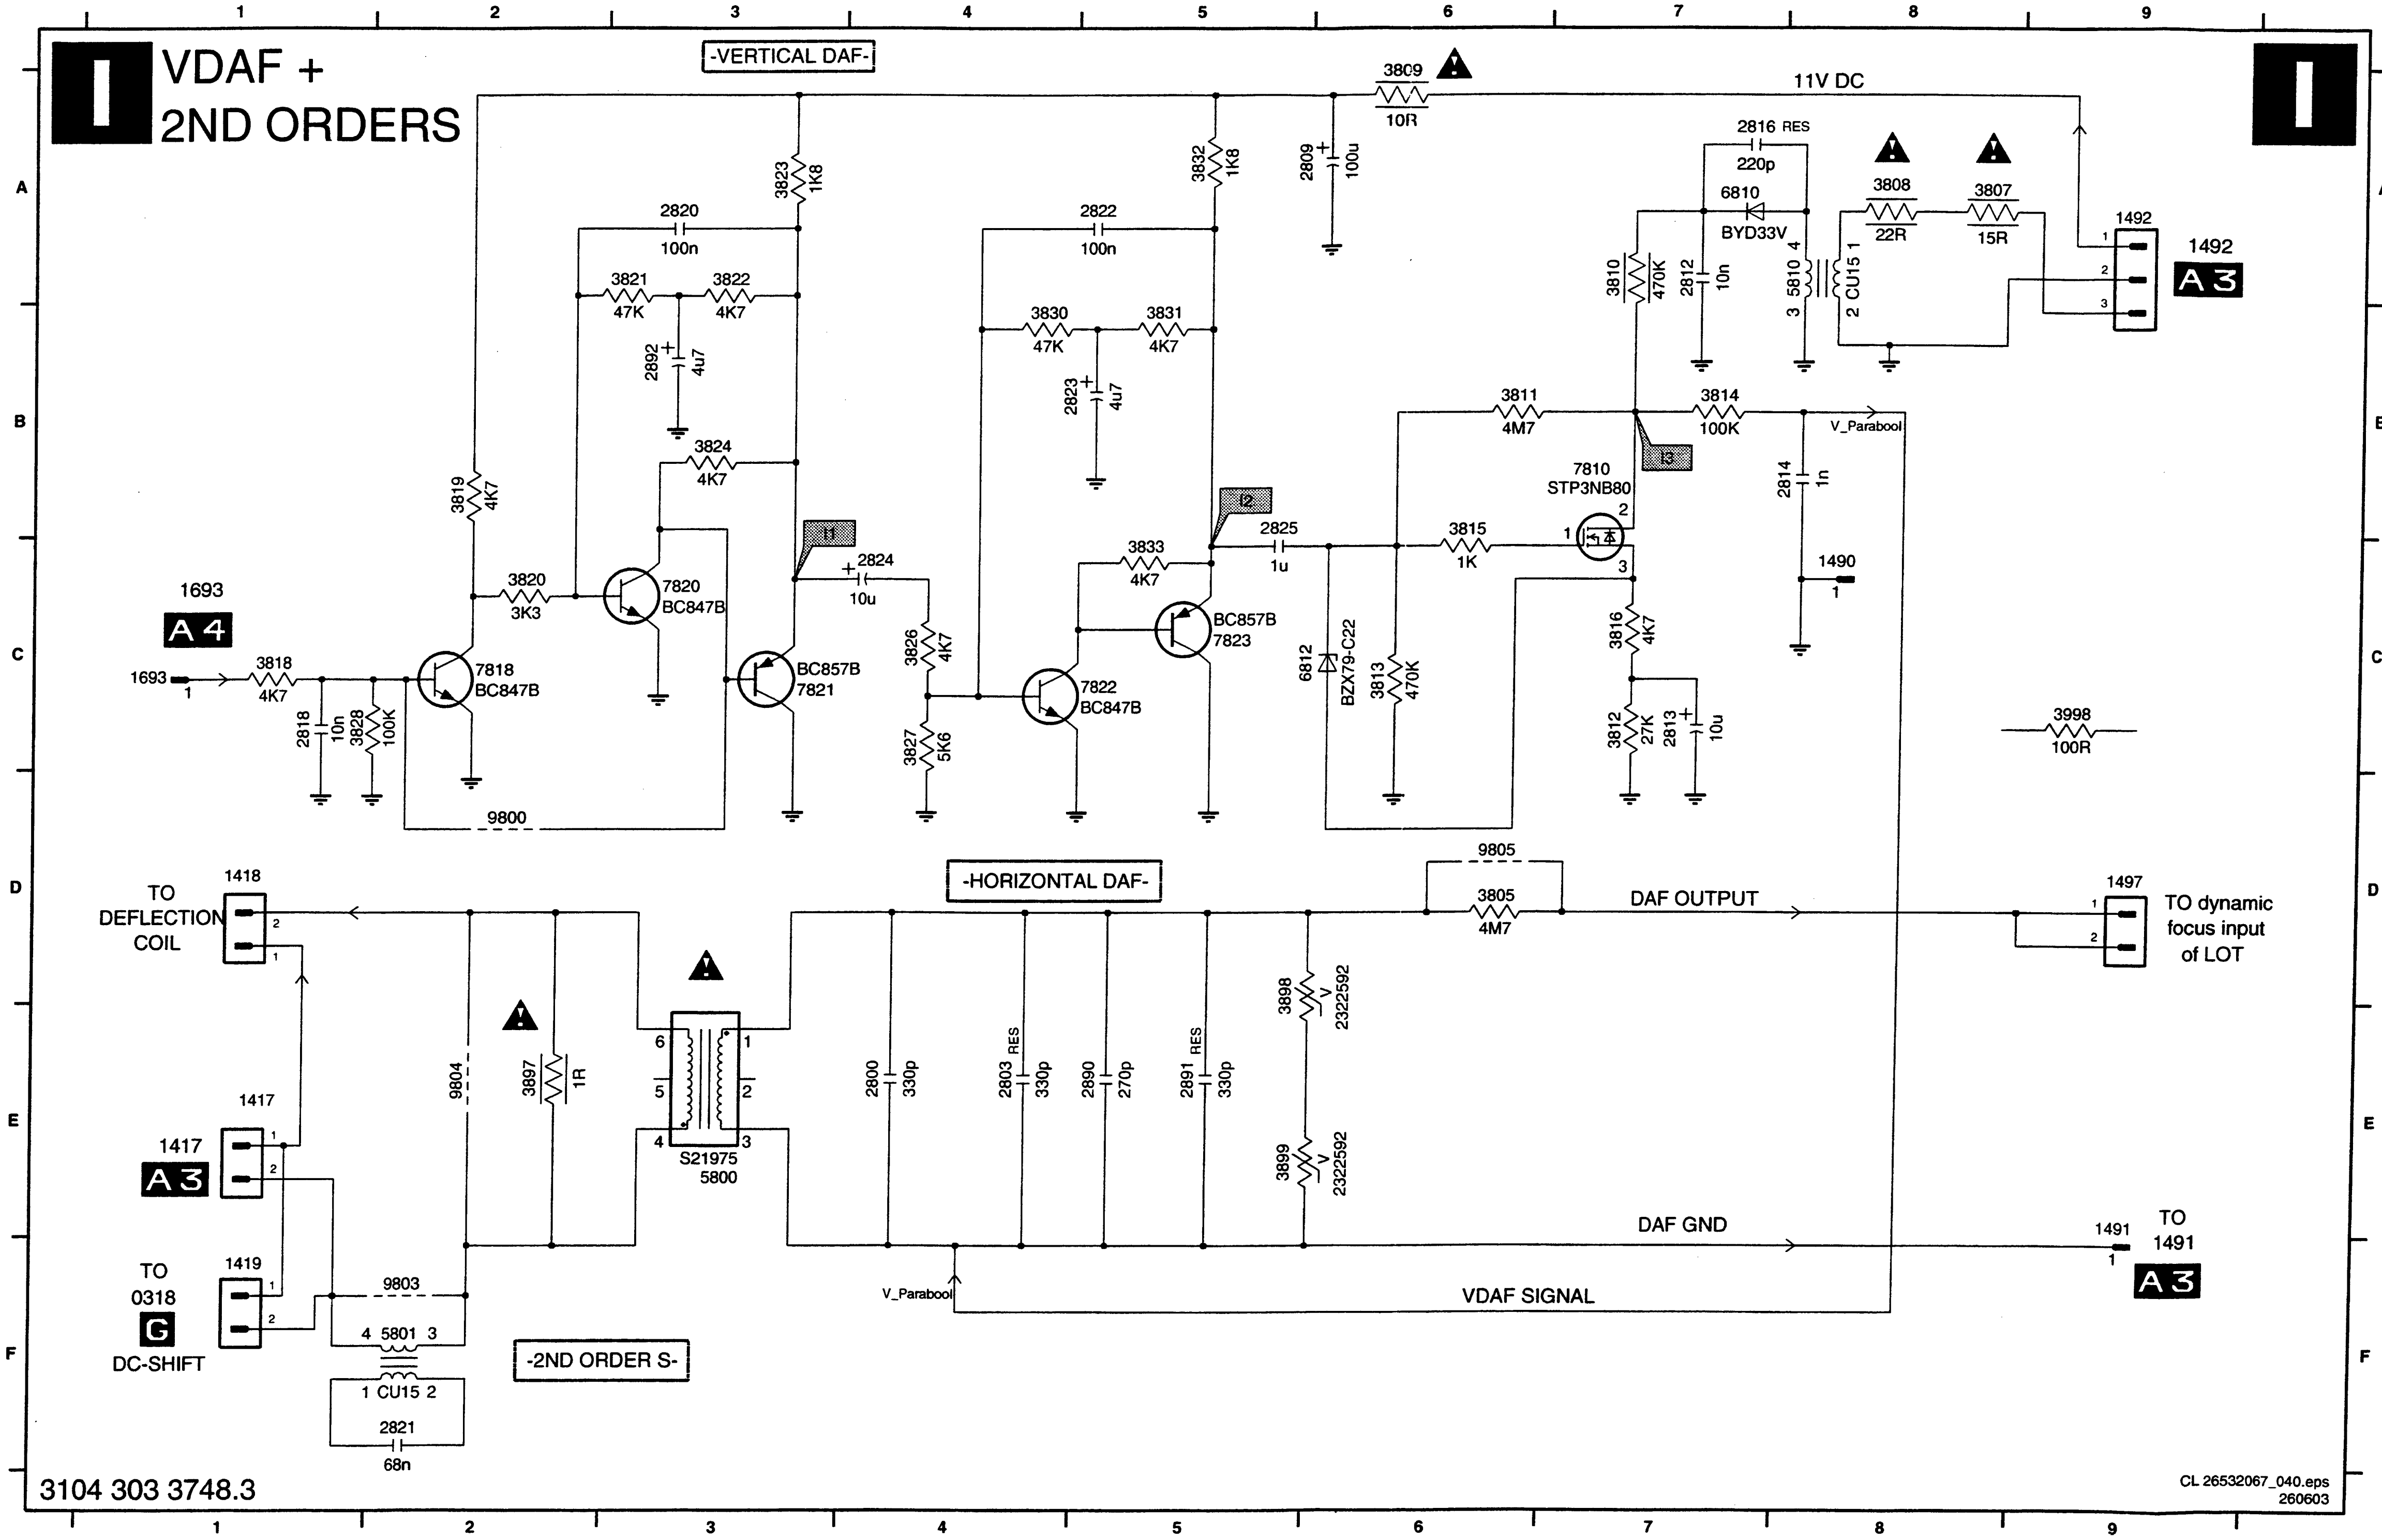
I
VDAF +
2ND ORDERS
-VERTICAL DAF-
-HORIZONTAL DAF-
-2ND ORDER S-
11V DC
3809 10R
2809 100u
2816 RES 220p
6810 BYD33V
3808 22R
3807 15R
1492
A3
5810 CU15
3810 470K
2812 10n
3811 4M7
3814 100K
V_Parabool
7810 STP3NB80
I3
2814 1n
1490
3815 1K
2825 1u
6812 BZX79-C22
3813 470K
3816 4K7
3812 27K
2813 10u
3998 100R
3823 1K8
3832 1K8
2820 100n
2822 100n
3821 47K
3822 4K7
3830 47K
3831 4K7
2892 4u7
2823 4u7
3824 4K7
3819 4K7
3820 3K3
7820 BC847B
7818 BC847B
7821 BC857B
I1
I2
2824 10u
3826 4K7
3827 5K6
3833 4K7
7823 BC857B
7822 BC847B
1693
A4
3818 4K7
2818 10n
3828 100K
9800
TO DEFLECTION COIL
1418
1417
A3
TO 0318
1419
G
DC-SHIFT
9804
3897 1R
S21975 5800
2800 330p
2803 RES 330p
2890 270p
2891 RES 330p
9805
3805 4M7
DAF OUTPUT
3898 2322592
3899 2322592
DAF GND
VDAF SIGNAL
1497
TO dynamic focus input of LOT
1491
TO 1491
A3
9803
5801
CU15
2821 68n
3104 303 3748.3
CL 26532067_040.eps 260603

Item	Location
1417	E1
1418	D1
1419	F1
1490	C8
1491	E9
1492	A9
1497	D9
1693	C1
2800	E4
2803	E4
2809	A5
2812	A7
2813	C7
2814	B8
2816	A7
2818	C1
2820	A3
2821	F2
2822	A5
2823	B4
2824	C4
2825	B5
2890	E5
2891	E5
2892	B3
3805	D6
3807	A8
3808	A8
3809	A6
3810	A7
3811	B6
3812	C7
3813	C6
3814	B7
3815	B6
3816	C7
3818	C1
3819	B2
3820	C2
3821	A3
3822	A3
3823	A3
3824	B3
3826	C4
3827	C4
3828	C1
3830	B4
3831	B5
3832	A5
3833	C5
3897	E2
3898	D5
3899	E5
3998	C9
5800	E3
5801	F2
5810	A8
6810	A7
6812	C6
7810	B7
7818	C2
7820	C3
7821	C3
7822	C5
7823	C5
9800	D2
9803	F2
9804	E2
9805	D6

[I] VDAF+2ND ORDER S

Item	29RF	28RF/32RF	34RF/38RF	36RF	Description
1492	X		X	X	3p
1693	X		X	X	1p
2800	X				330pF
2800		X	X		470pF
2800				X	390pF
2809	X		X	X	100□F
2812	X		X	X	10nF
2813	X		X	X	10□F
2814	X		X	X	1nF
2821	X	X			68nF
2822	X		X	X	4nF
2824	X		X	X	10□F
2825	X		X	X	1□F
2890	X				270pF
2890		X			220pF
2890			X		470pF
2890				X	390pF
3807	X		X	X	15R
3808	X		X	X	15R
3809	X		X	X	10R
3810	X		X	X	470kR
3811	X		X	X	4.7MR
3812	X		X	X	27kR
3813	X		X	X	470kR
3814	X		X	X	100kR
3815	X		X	X	1kR
3816	X		X		4.7kR
3816				X	2.2kR
3818	X		X	X	33kR
3820	X		X	X	Jumper
3821	X		X	X	Jumper
3822	X		X	X	Jumper
3823	X		X	X	1.5kR
3824	X		X	X	33kR
3826	X		X	X	3.3kR
3827	X		X	X	5.6kR
3828	X		X	X	100kR
3830	X		X	X	47kR
3831	X		X	X	4.7kR
3832	X		X	X	1.8kR
3833	X		X	X	4.7kR
5801	X	X			Transformer
5810	X		X	X	Bridge coil
6810	X		X	X	BYD33V
6812	X		X	X	BZX79-C22
7810	X		X	X	STP3NB80FP
7818	X		X	X	BC847B
7822	X		X	X	BC847B
7823	X		X	X	BC857B
9800	X		X	X	Wire
9803			X	X	Wire

Layout VDAF + 2ND Order Panel (Top Side)

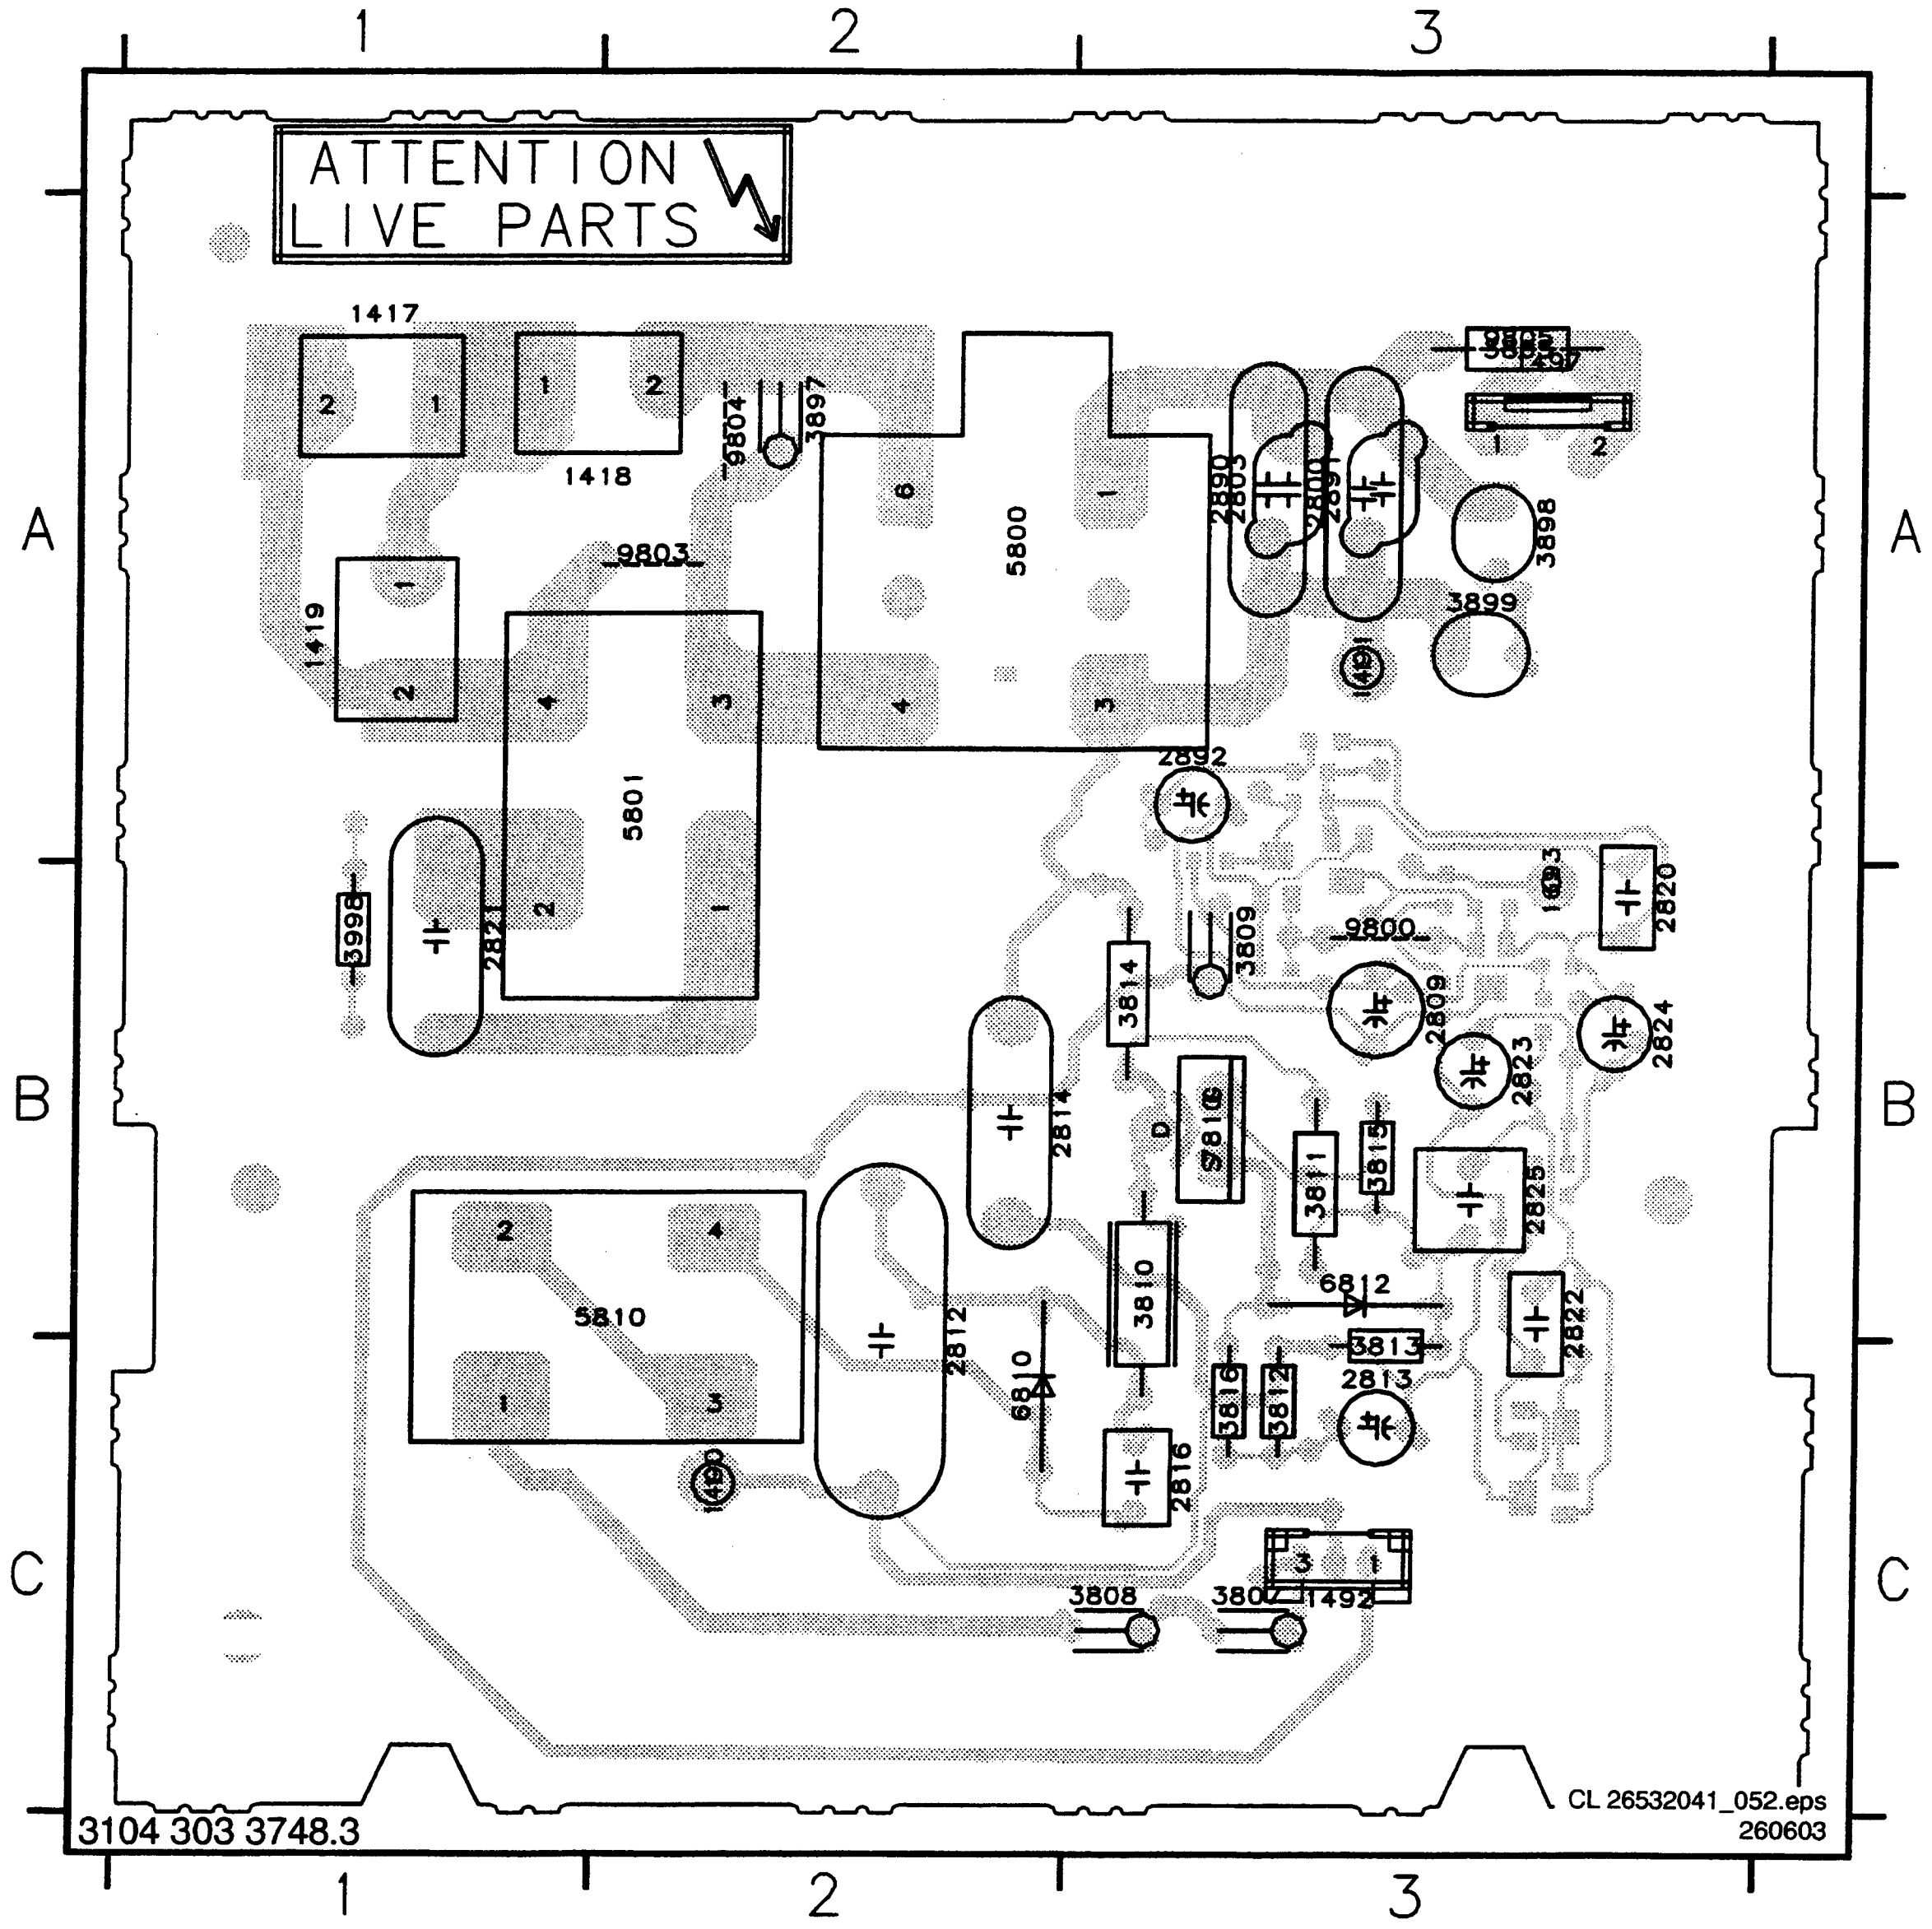
1
2
3
A
B
C
ATTENTION
LIVE PARTS
1417
1418
1419
5800
5801
5810
9803
9804
3897
9805
1497
2890
2803
2891
2800
3898
3899
1491
2892
3998
2821
1693
2820
3809
3814
9800
2809
2823
2824
2814
7810
3811
3815
2825
6812
3810
2812
6810
3813
2813
2816
3816
3812
2822
1490
3808
3807
1492
3104 303 3748.3

CL 26532041_052.eps
260603

1417	A1
1418	A1
1419	A1
1490	C2
1491	A3
1492	C3
1497	A3
1693	B3
2800	A3
2803	A3
2809	B3
2812	C2
2813	C3
2814	B2
2816	C3
2820	B3
2821	B1
2822	B3
2823	B3
2824	B3
2825	B3
2890	A3
2891	A3
2892	A3
3805	A3
3807	C3
3808	C3
3809	B3
3810	B3
3811	B3
3812	C3
3813	C3
3814	B3
3815	B3
3816	C3
3897	A2
3898	A3
3899	A3
3998	B1
5800	A2
5801	A1
5810	B2
6810	C2
6812	B3
7810	B3
9800	B3
9803	A2
9804	A2
9805	A3

Layout VDAF + 2ND Order Panel (Bottom Side)

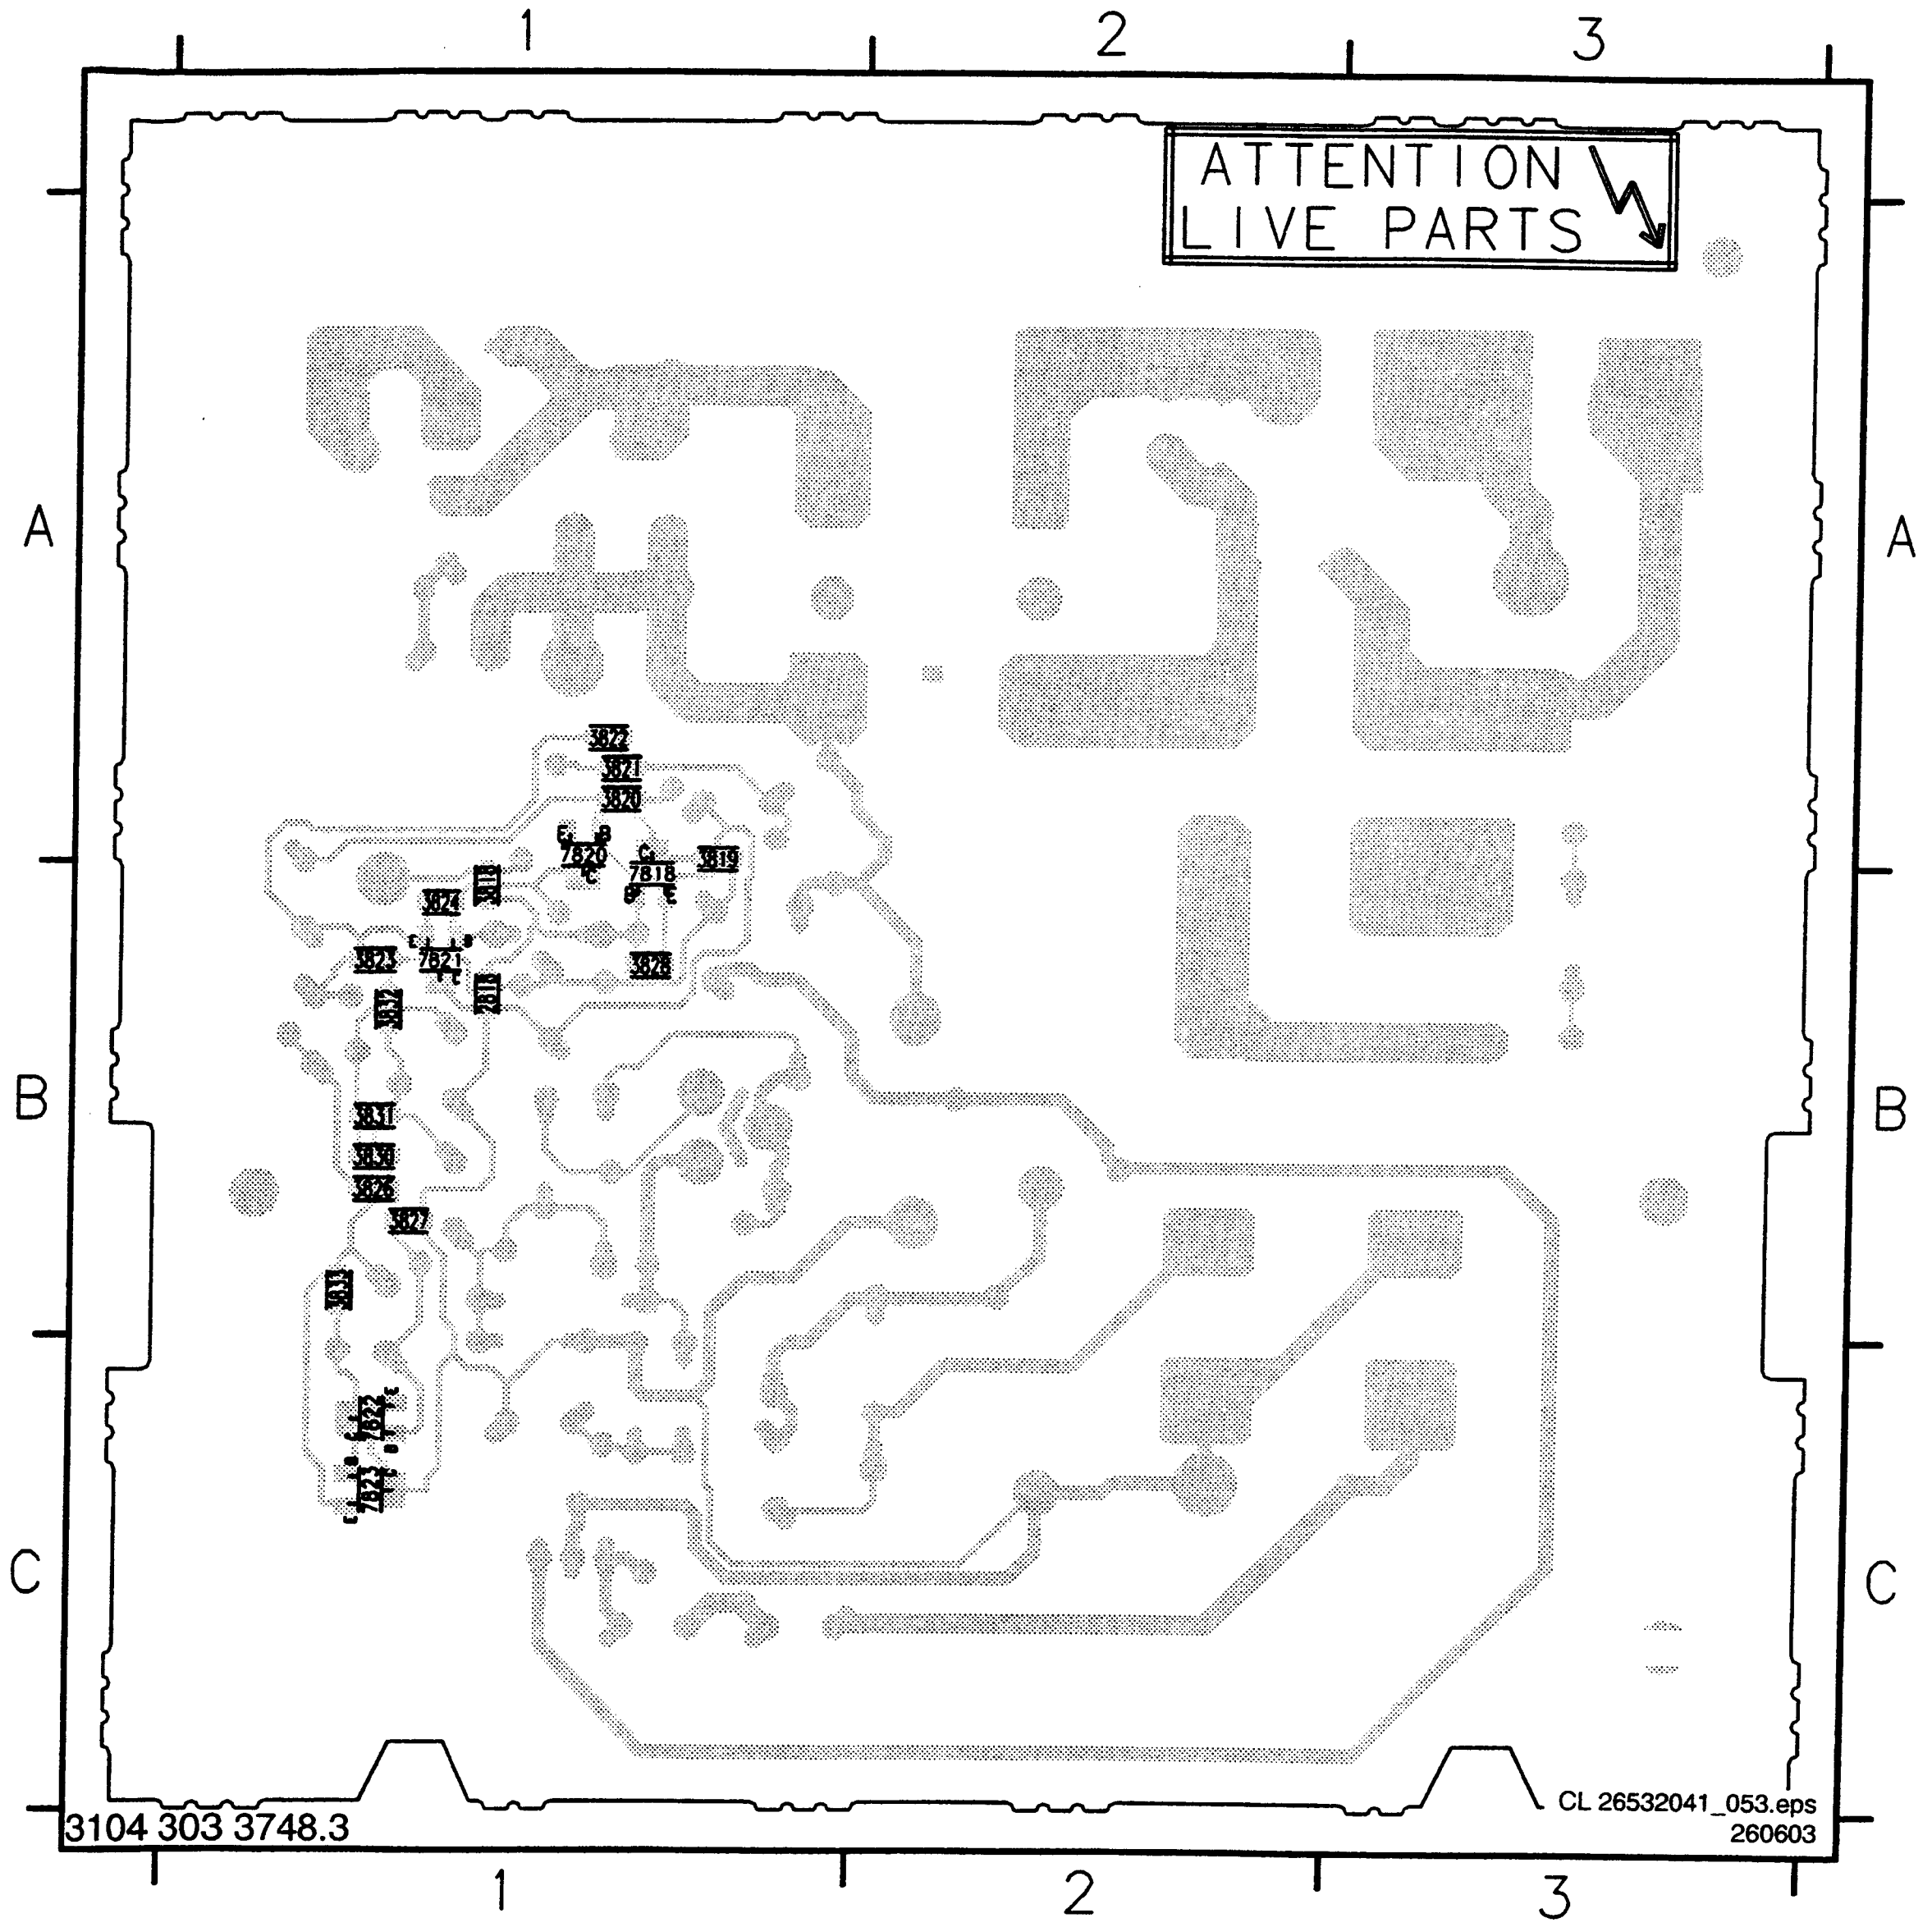
1
2
3
A
B
C
ATTENTION
LIVE PARTS
3822
3821
3820
7820
7818
3819
3824
3818
3823
7821
2818
3828
3832
3831
3830
3826
3827
3833
7822
7823
3104 303 3748.3

CL 26532041_053.eps
260603

2818	B1
3818	B1
3819	A1
3820	A1
3821	A1
3822	A1
3823	B1
3824	B1
3826	B1
3827	B1
3828	B1
3830	B1
3831	B1
3832	B1
3833	B1
7818	B1
7820	A1
7821	B1
7822	C1
7823	C1

Front Interface Panel

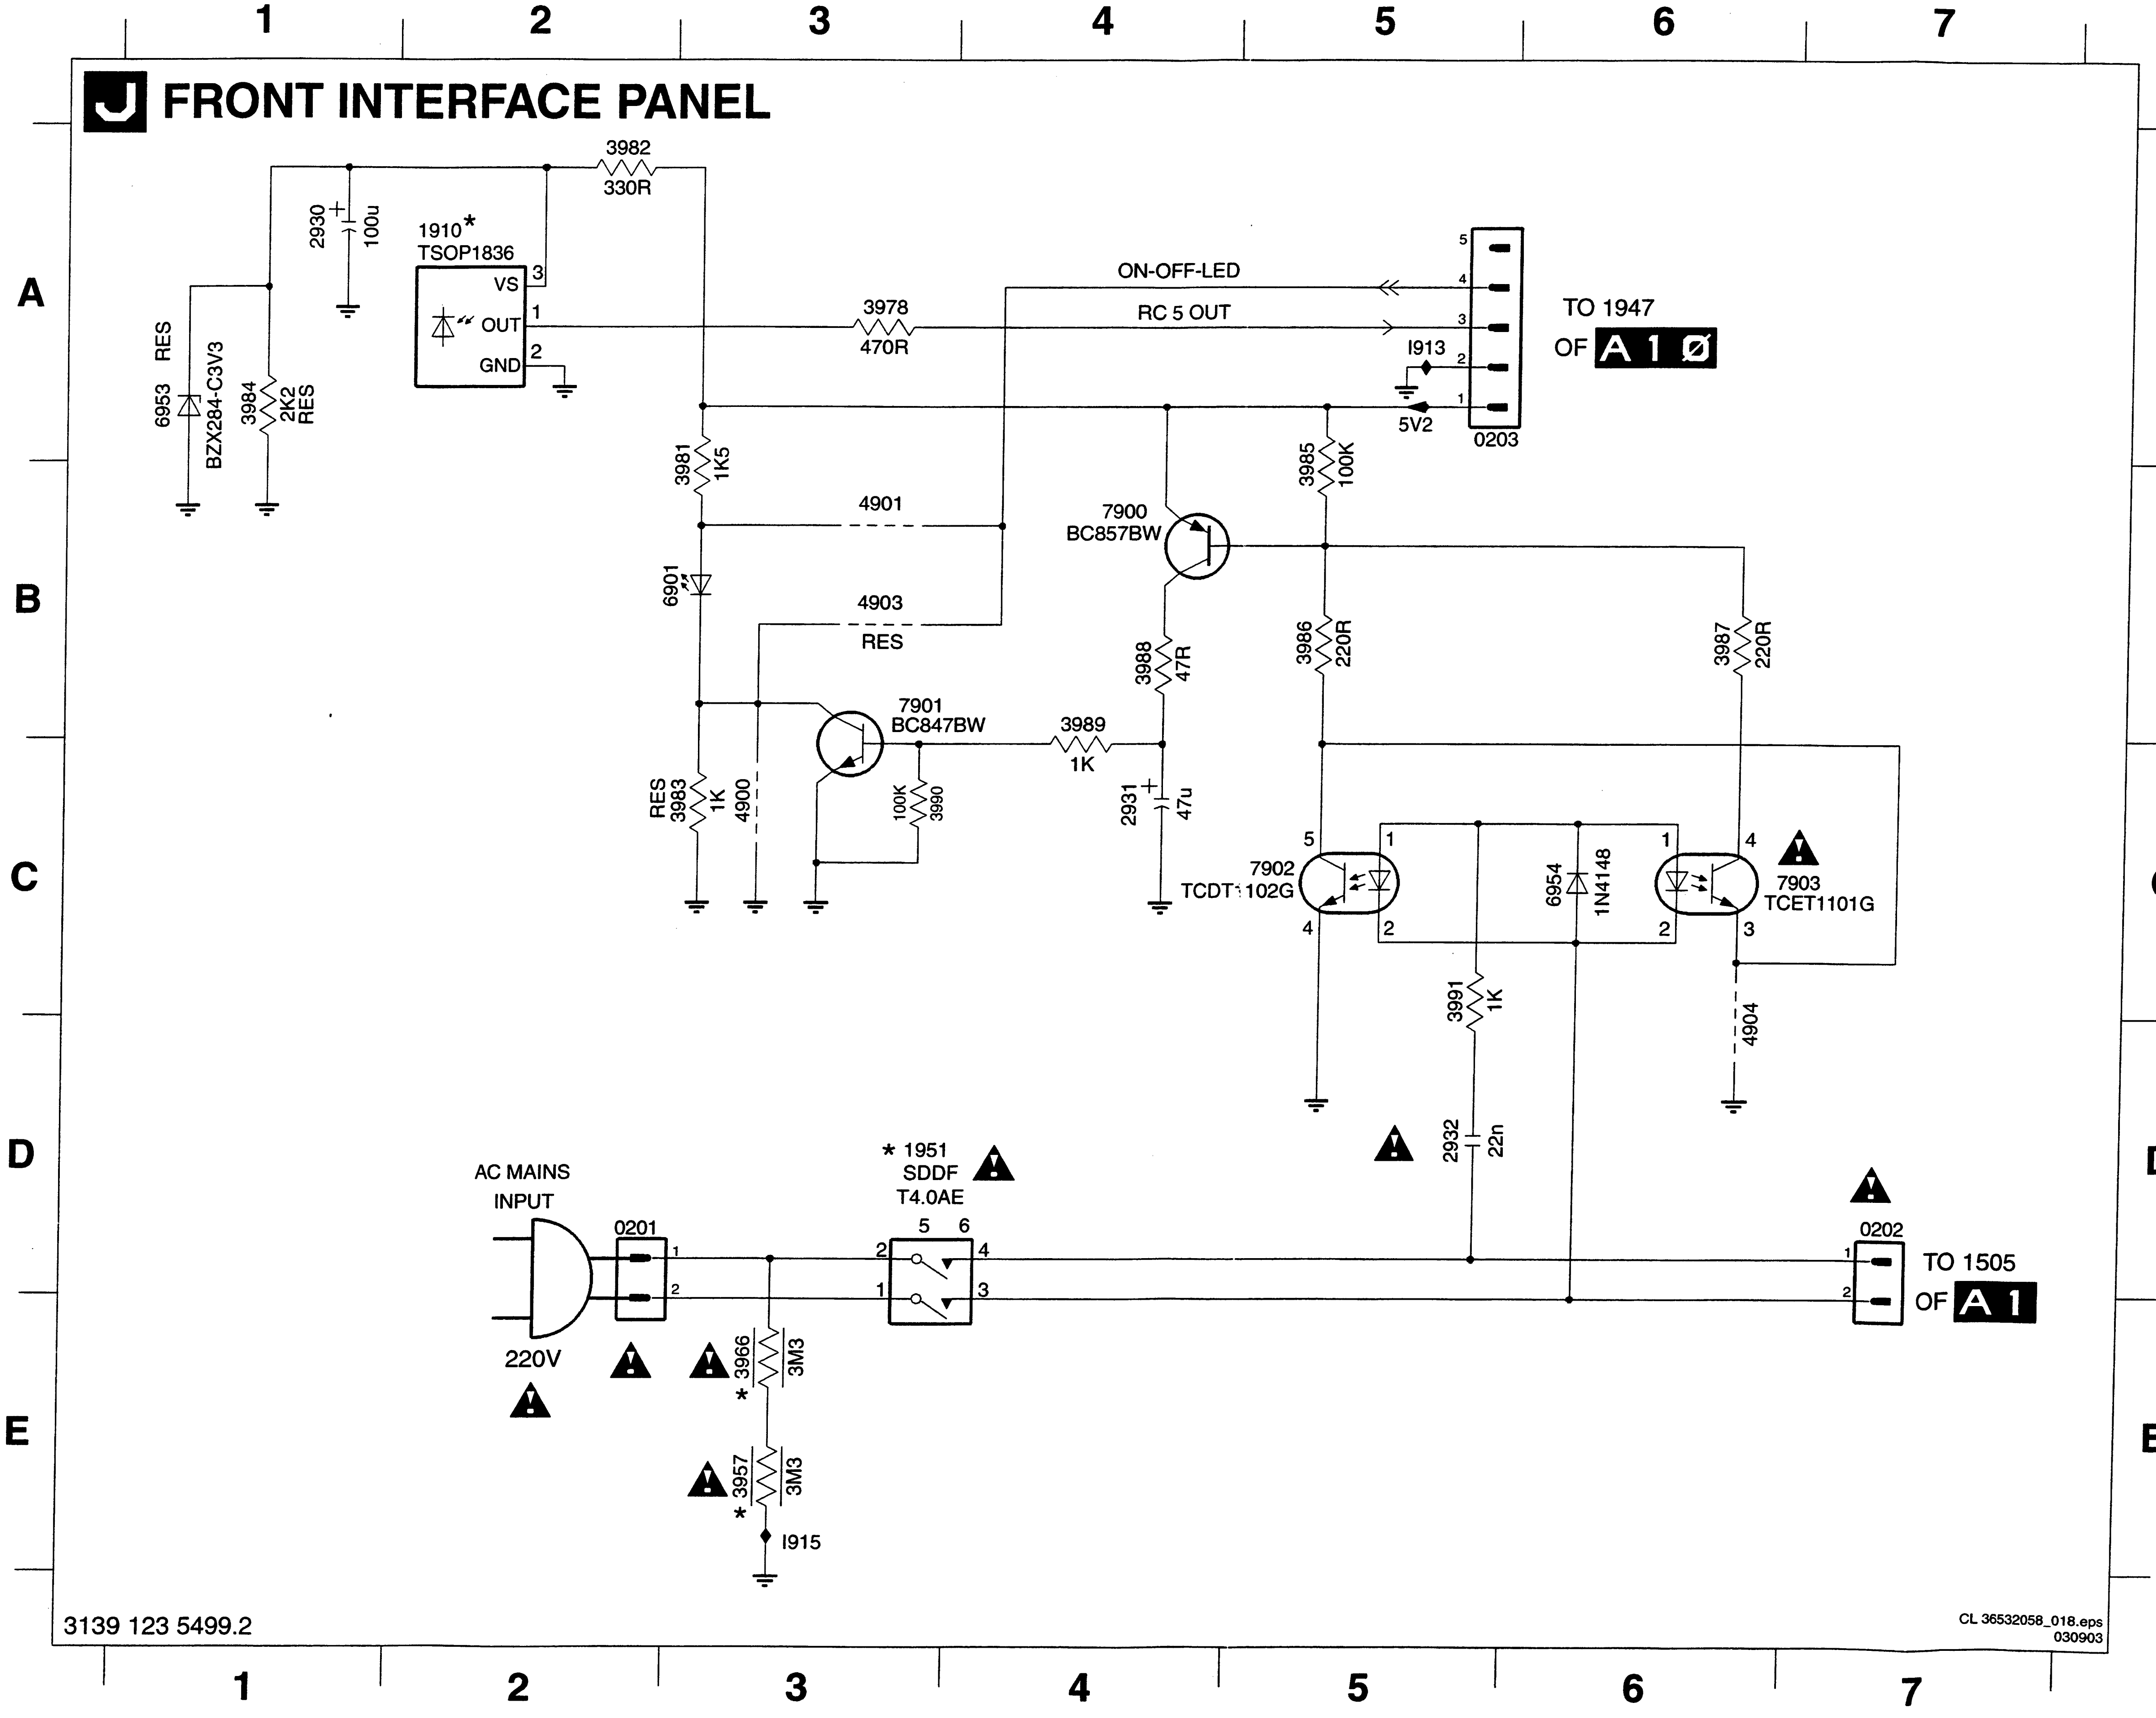
1
2
3
4
5
6
7
A
B
C
D
E
J FRONT INTERFACE PANEL
2930
100u
3982
330R
1910*
TSOP1836
VS
OUT
GND
3
1
2
RES
6953
BZX284-C3V3
3984
2K2
RES
3978
470R
ON-OFF-LED
RC 5 OUT
I913
5V2
0203
5
4
3
2
1
TO 1947
OF A 1 0
3981
1K5
4901
4903
RES
6901
7900
BC857BW
3985
100K
3988
47R
3986
220R
3987
220R
7901
BC847BW
3989
1K
RES
3983
1K
4900
100K
3990
2931
47u
7902
TCDT1102G
5
4
1
2
6954
1N4148
1
2
4
3
7903
TCET1101G
3991
1K
4904
2932
22n
AC MAINS
INPUT
0201
1
2
220V
* 1951
SDDF
T4.0AE
5 6
2
1
4
3
3966
3M3
*
3957
3M3
*
I915
0202
1
2
TO 1505
OF A 1
3139 123 5499.2
CL 36532058_018.eps
030903

0201	D2
0202	D7
0203	A5
1910	A2
1951	D3
2930	A1
2931	C4
2932	D5
3957	E3
3966	E3
3978	A3
3981	B3
3982	A2
3983	C3
3984	A1
3985	B5
3986	B5
3987	B6
3988	B4
3989	B3
3990	C3
3991	C5
4900	C3
4901	B3
4903	B3
4904	D6
6901	B3
6953	A1
6954	C6
7900	B4
7901	B3
7902	C5
7903	C6

Layout Front Interface Panel (Top Side)

0201	B1
0202	A1
0203	A2
1910	A3
1951	C2
2930	A3
2931	A3
2932	A1
3957	B2
3966	B2
3982	A3
3991	A2
6901	B3
6954	A2
7902	B3
7903	A3

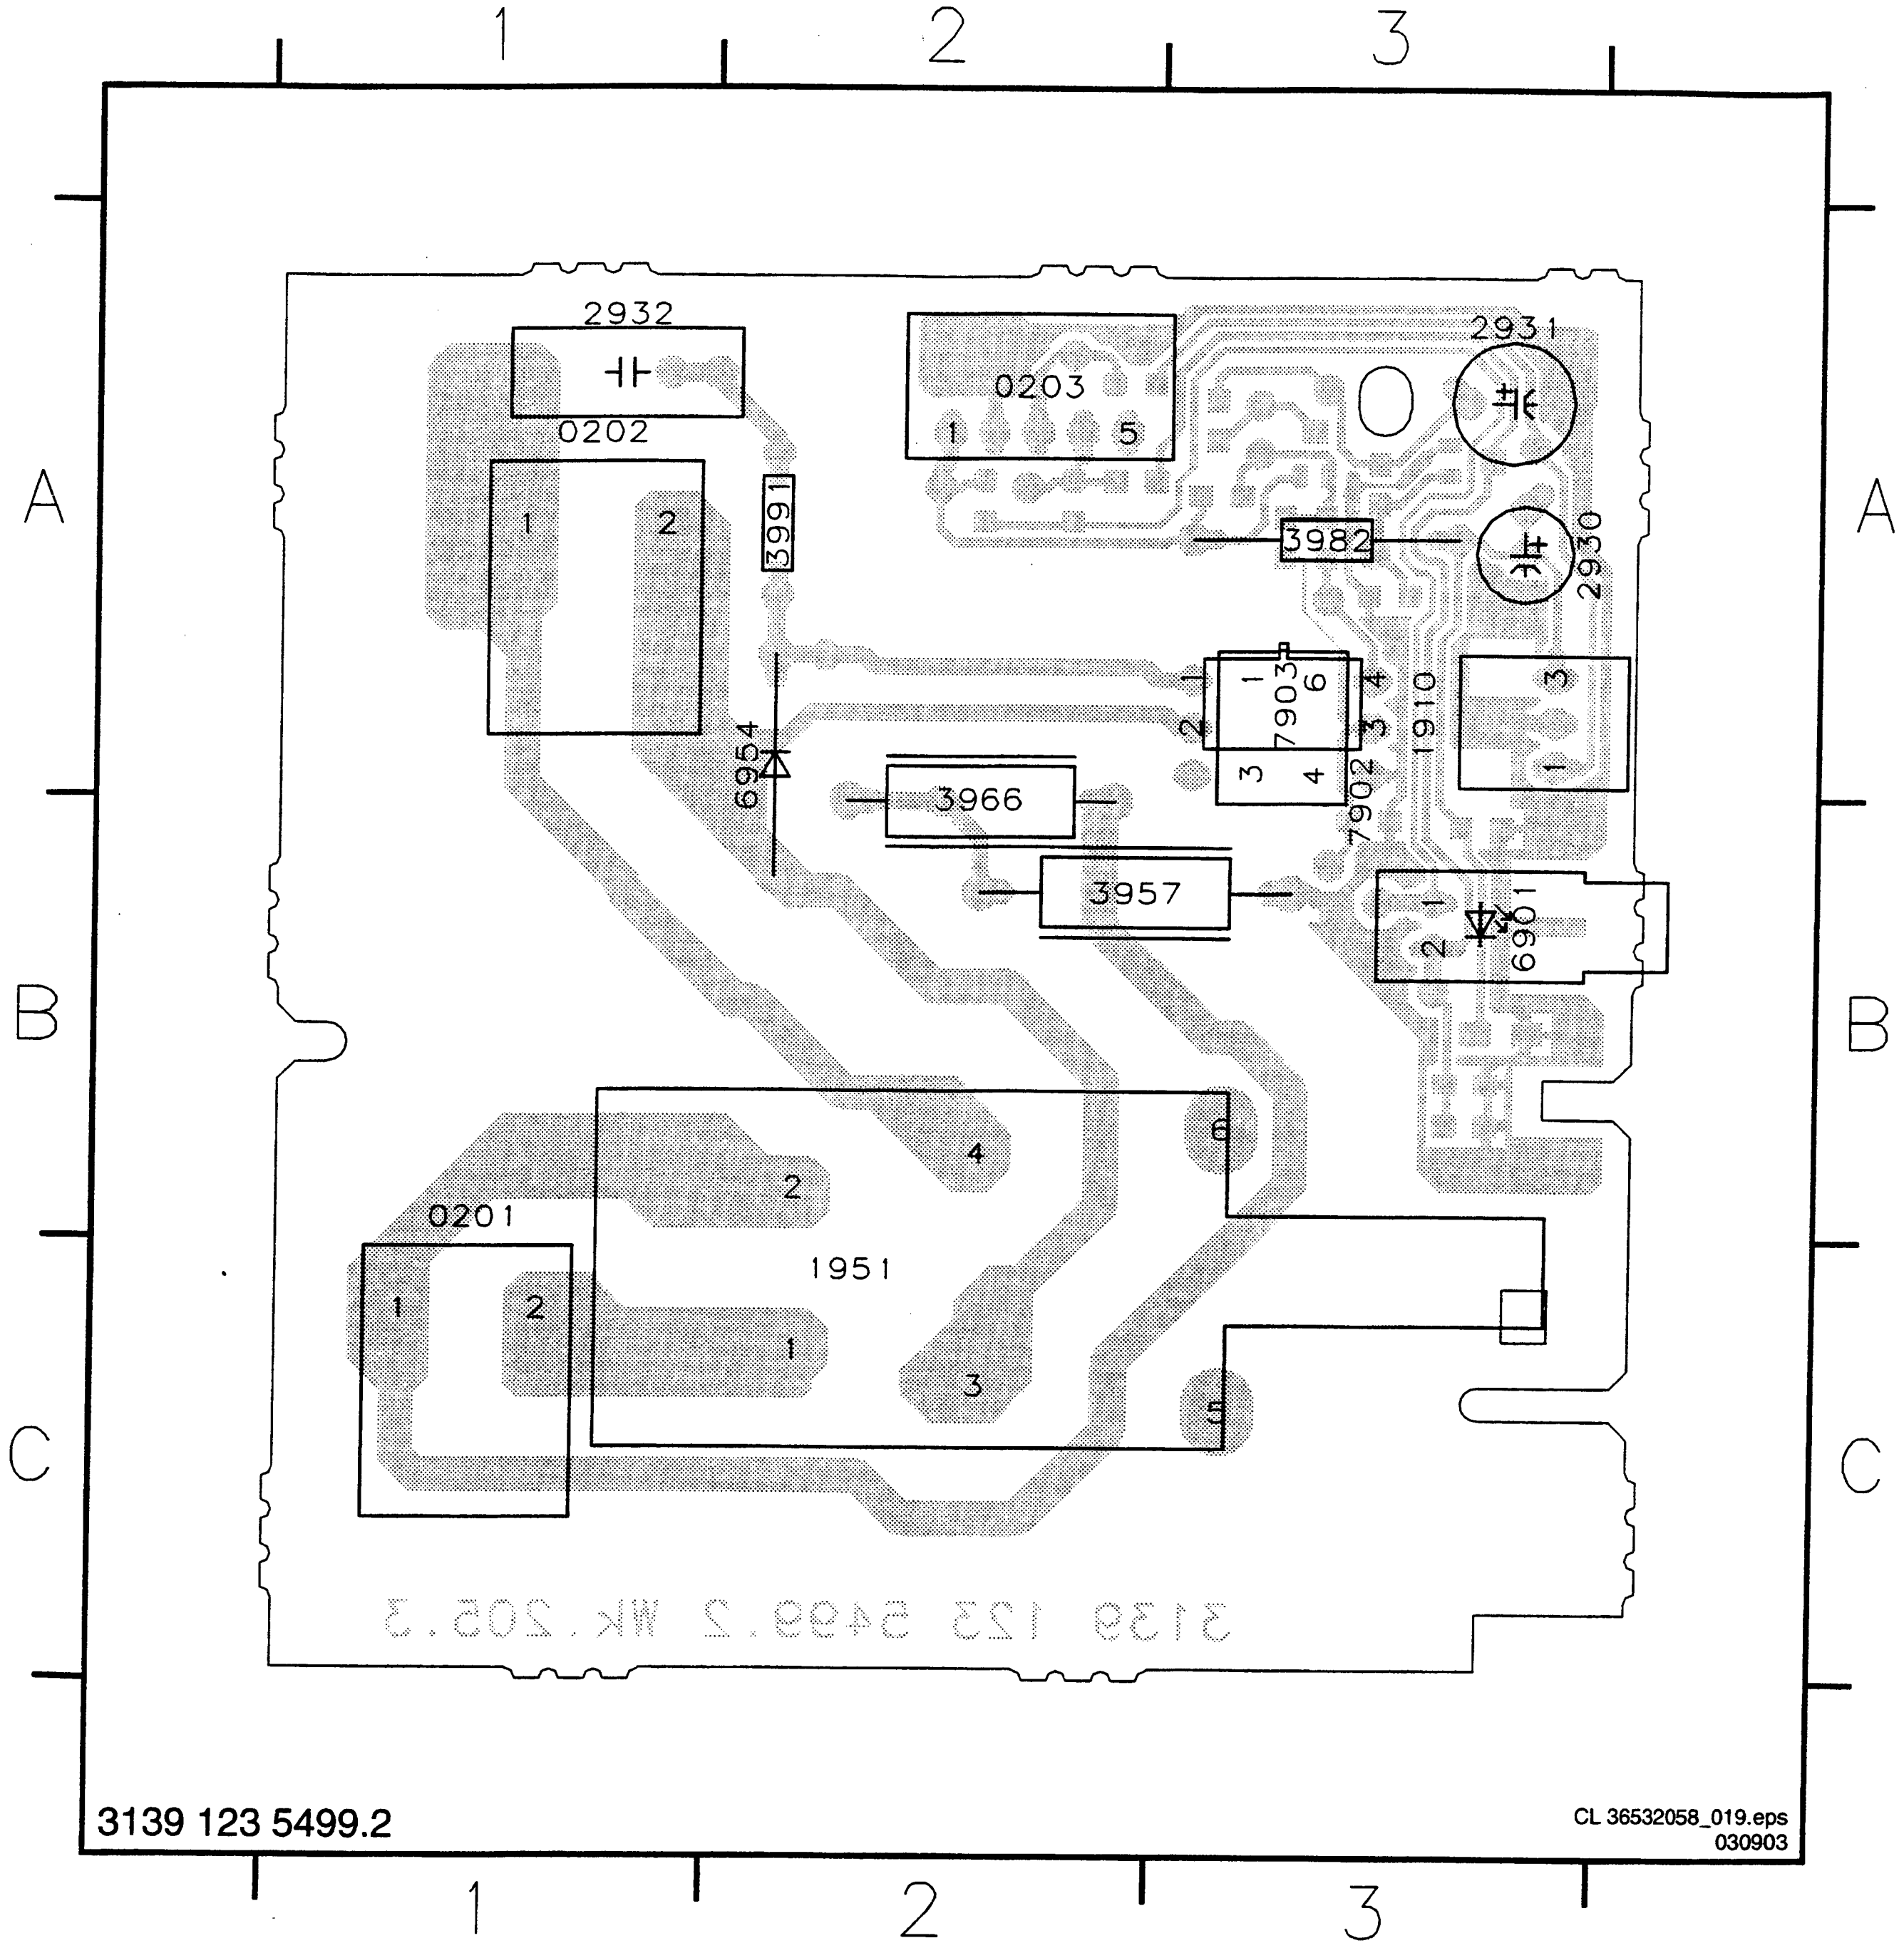
1
2
3
A
B
C
2932
0203
1
5
2931
0202
1
2
3991
3982
2930
7903
1
2
3
4
6
7902
1910
3
1
6954
3966
3957
6901
2
1
0201
1951
2
4
6
1
2
1
3
5
3139 123 5499.2 Wk.205.3
3139 123 5499.2
CL 36532058_019.eps
030903

Layout Front Interface Panel (Bottom Side)

3978	A2
3981	A2
3983	B1
3984	B1
3985	A1
3986	A1
3987	A1
3988	A1
3989	A1
3990	A1
4900	B1
4901	A2
4903	A2
4904	B1
6953	B1
7900	A1
7901	A1

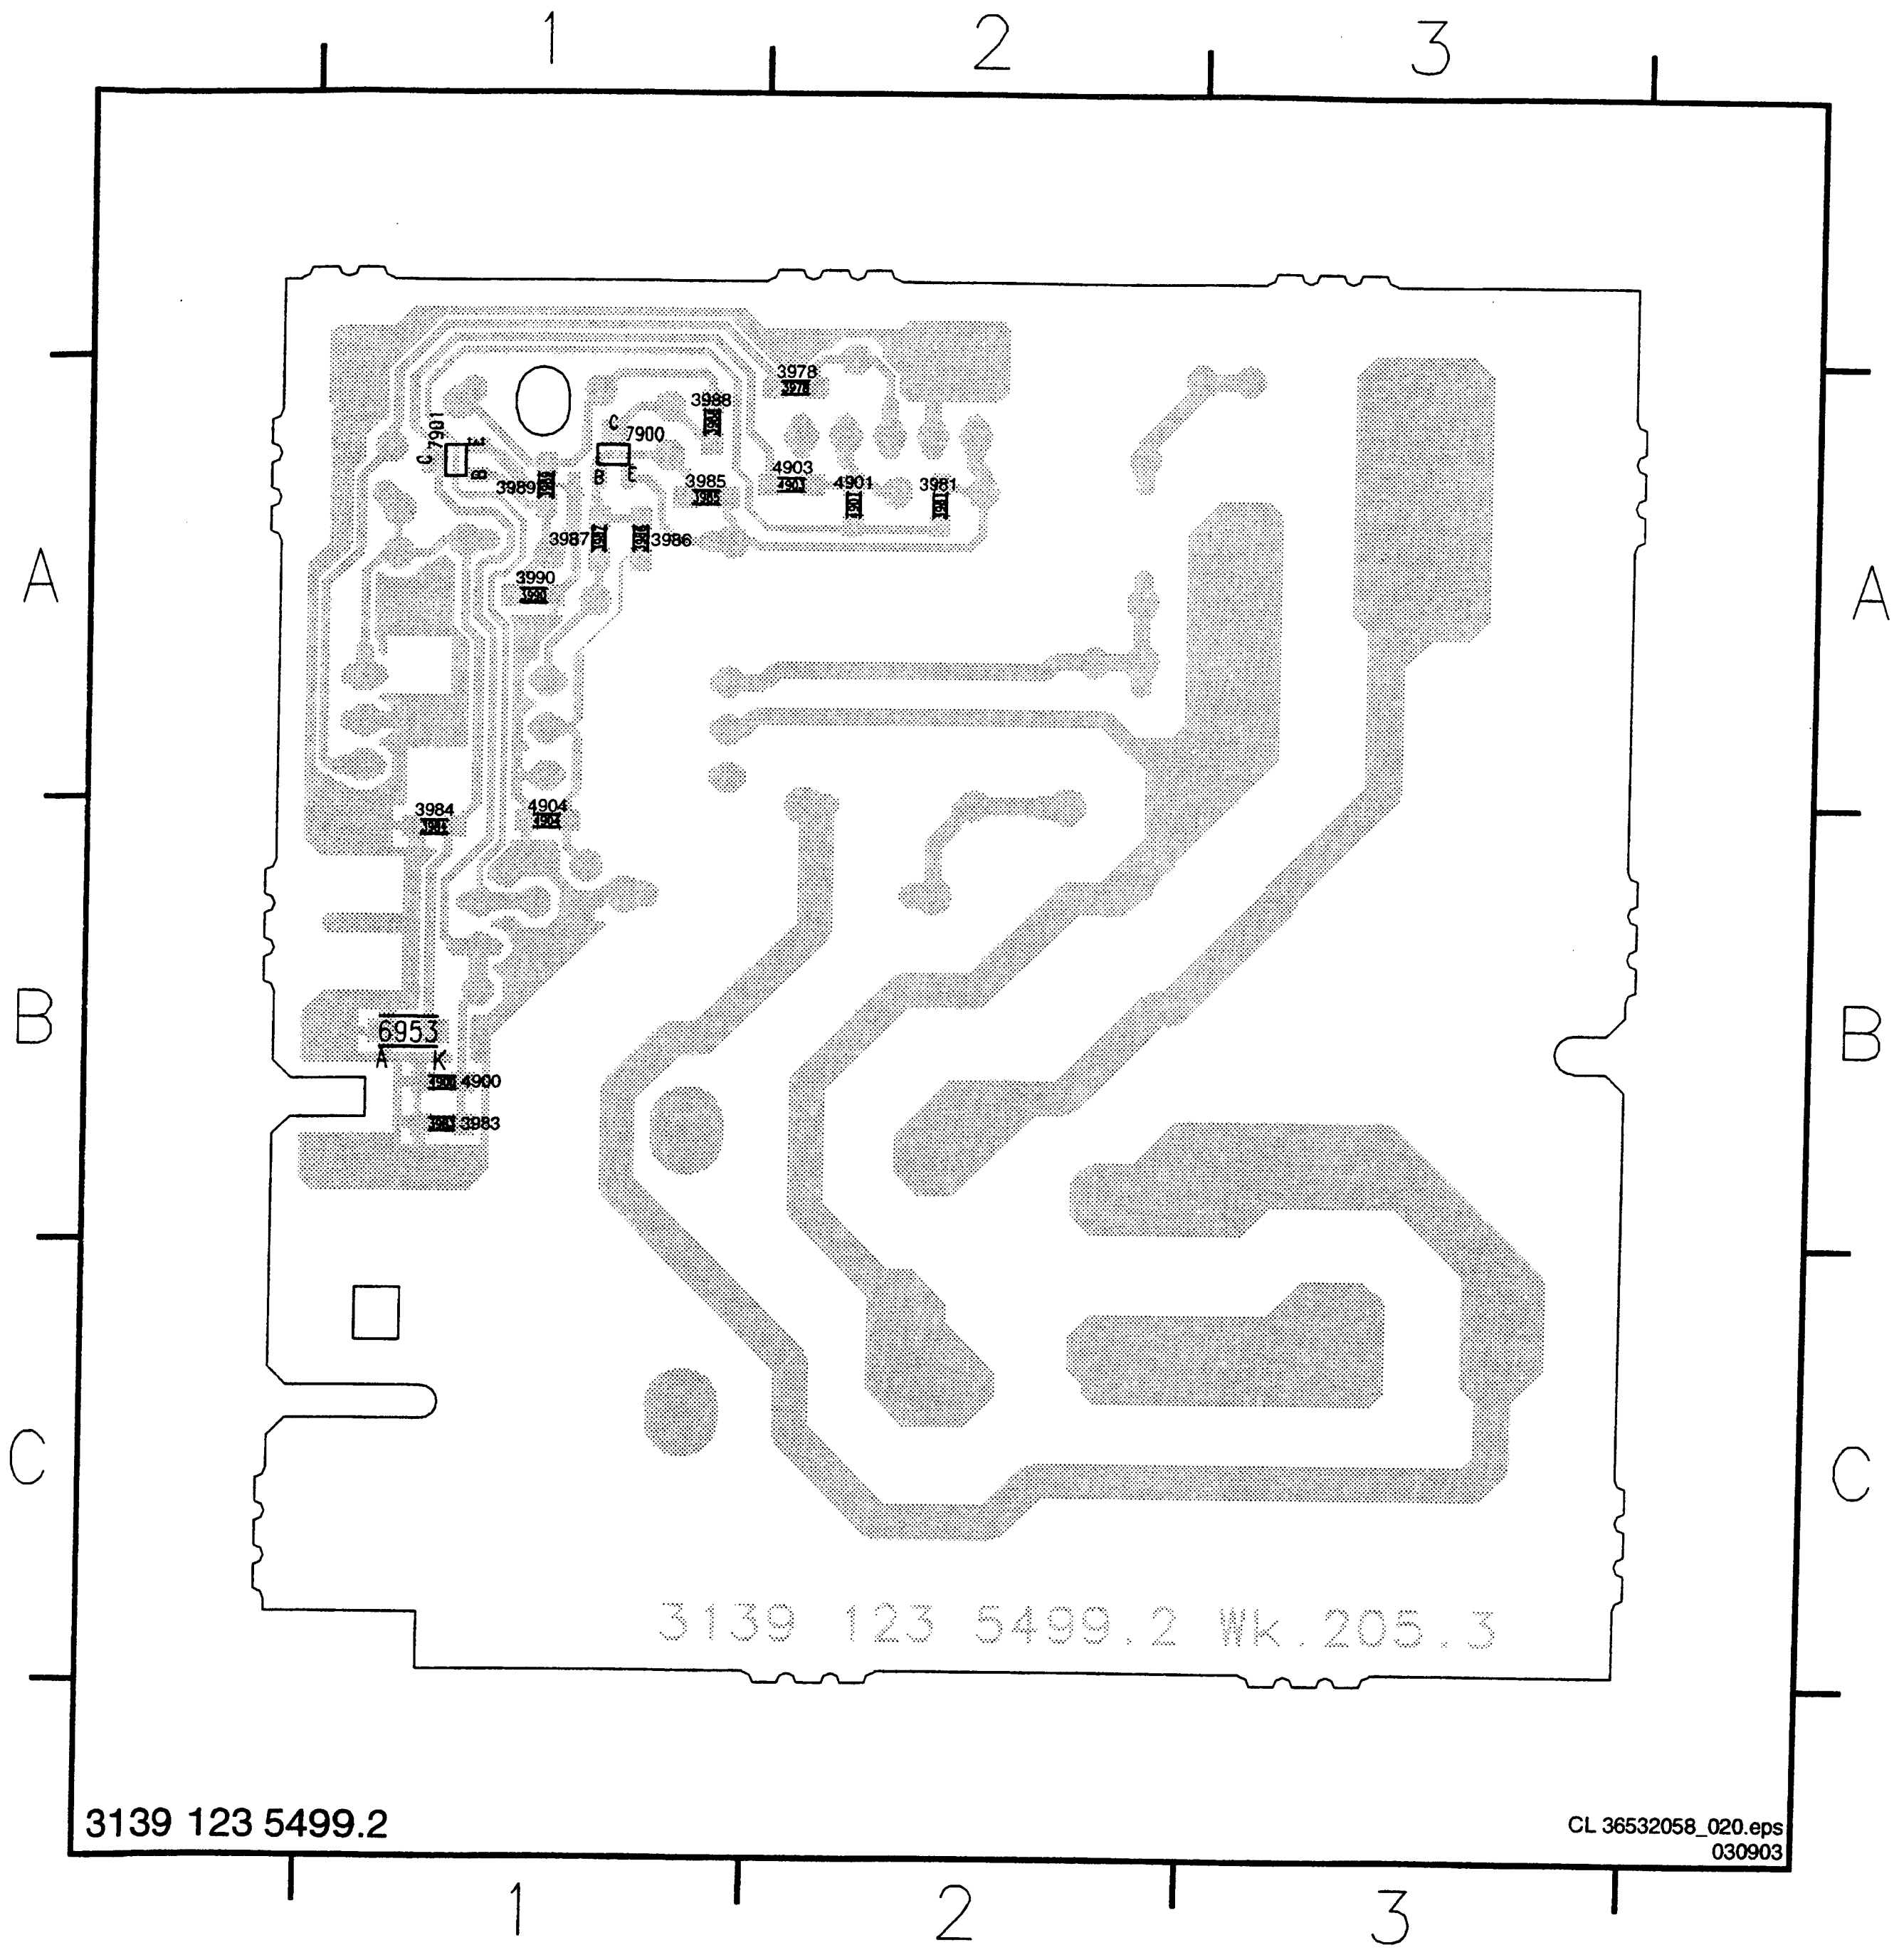
1
2
3
A
B
C
7901
C
B
E
7900
C
B
E
3988
3978
3989
3985
4903
4901
3981
3987
3986
3990
3984
4904
6953
A
K
4900
3983
3139 123 5499.2 Wk.205.3
3139 123 5499.2
CL 36532058_020.eps
030903

8. Electrical Alignments

Index of this chapter:
1. General alignment conditions
2. Hardware alignments
3. Software alignments
4. Option settings

8.1 General Alignment Conditions

8.1.1 Default Alignment Settings

Perform all electrical adjustments under the following conditions:
- Power supply voltage: 230 V_ac / 50 Hz (± 10 %).
- Connect the set to the mains via an isolation transformer with low internal resistance.
- Allow the set to warm up for approximately 20 to 30 minutes.
- Measure voltages and waveforms in relation to chassis ground (with the exception of the voltages on the primary side of the power supply).
  Caution: never use heatsinks as ground.
- Test probe: Ri > 10 Mohm, Ci < 20 pF.
- Use an isolated trimmer/screwdriver to perform alignments.

Perform all electrical adjustments with the following default settings (for all CRTs):
- Choose "Natural" picture mode with the "Smart Picture" button on the remote control.
- Set "Dynamic Contrast" and "Active Control" to "off" (if either one of them is present).
- Set "Brightness" to aligned value unless otherwise specified.

8.1.2 Adjustment Sequence

Use the following adjustment sequence:
1. Set the correct TV-set OPTIONS as described in paragraph "Options". After storing, re-start the set.
2. Rough adjustment of VG2 and FOCUS.
3. RF-AGC alignment.
4. IF-PLL OFFSET adjustment.
5. Rough adjustment of GEOMETRY.
6. Allow the set to warm up.
7. Precise adjustment of VG2 and FOCUS.
8. Precise adjustment of GEOMETRY.
9. PIP alignments (if present).
10. COLOUR alignments.
11. Other software alignments.

8.2 Hardware Alignments

Notes:
- The Service Alignment Mode (SAM) is described in chapter 5 "Service Modes, Error Codes, and Fault Finding".
- Use the cursor-, menu-, and OK-buttons of the remote control (RC) transmitter for navigation.

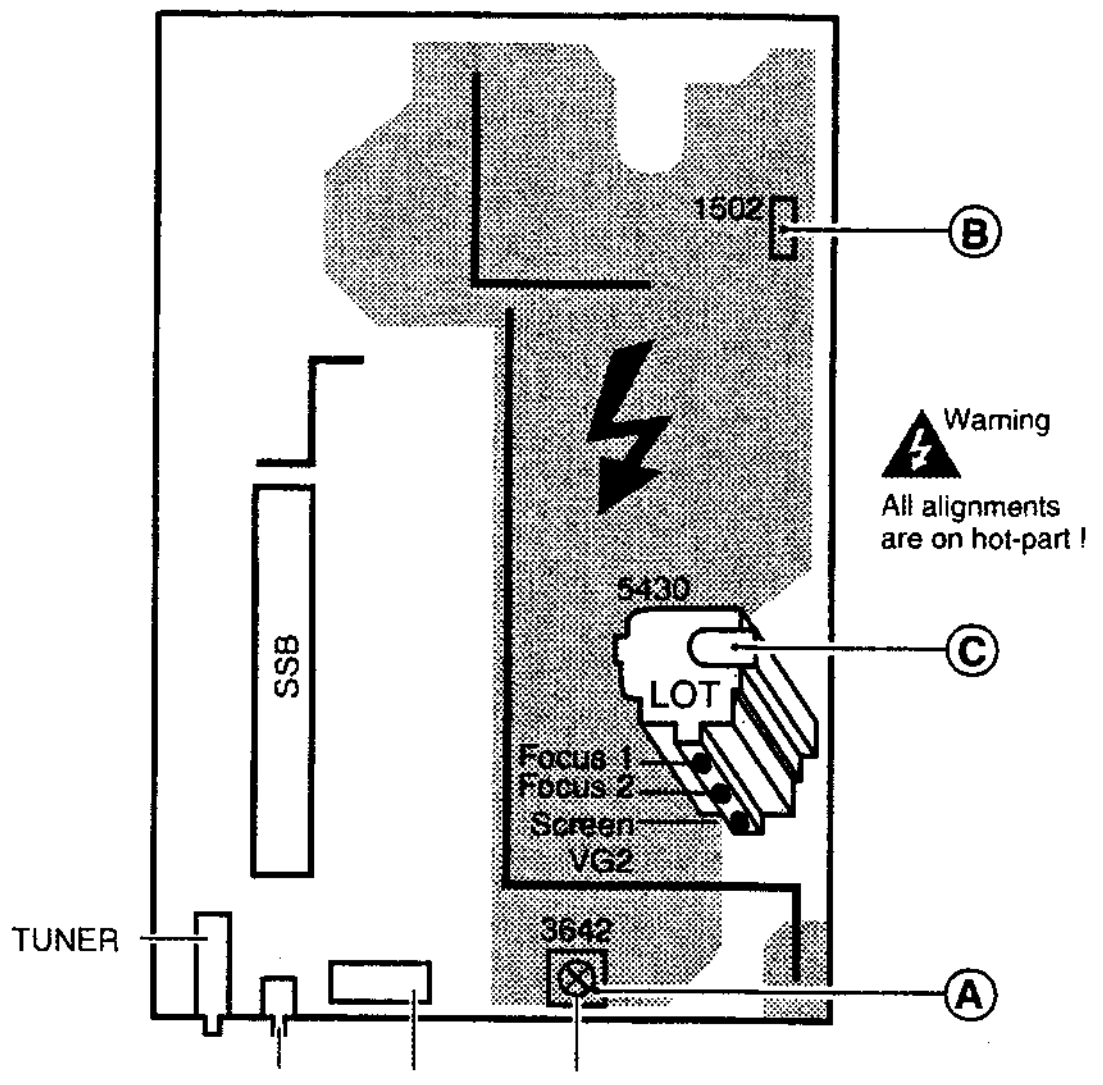

CL 26532041_060.eps
110402

Figure 8-1 Top view LSP

8.2.1 Vg2 Adjustment

Notes:
- For adjusting the VG2 in A10 sets, the vertical scan could be disabled by the VSD bit (Vertical Scan Disable). However, do **not** use this option in this chassis, as it will lead to a "beam current" protection!
- Also, the option "VG2" in the SAM does not function yet. Please, do **not** use!

In the frame-blanking period of the R, G, and B signals applied to the CRT, the video processor inserts a measuring pulse with different DC levels. Measure the black level pulse during the vertical flyback at the RGB cathodes of the CRT.
1. Connect the RF output of a pattern generator to the antenna input. Input a "black" picture (blank screen on CRT without any OSD info) test pattern.
2. Use the MENU key to enter the "user" menu, select "Picture", and set "Brightness" and "Contrast" to minimum.
3. Set the oscilloscope to 20 V/div and the time base to 20 us/div. Use external triggering on the vertical pulse.
   Caution: use a trigger point on the "**cold**" side!
4. Ground the scope on the CRT panel ("**cold**" side) and connect a 10:1 probe to one of the cathodes of the picture tube socket (see circuit diagram F).
5. Measure at test points F017, F018 and F019 on the picture tube socket the DC-level of the measuring pulse (1st full line after the frame blanking) with respect to earth.
6. Select the pin with the highest level found and adjust V_cutoff by means of the Vg2-potmeter (lowest-one) on the Line Output Transformer (LOT) to 165 +/- 5 V_dc (for all screen sizes).
7. Reset "Contrast" and "Brightness" to their original values.

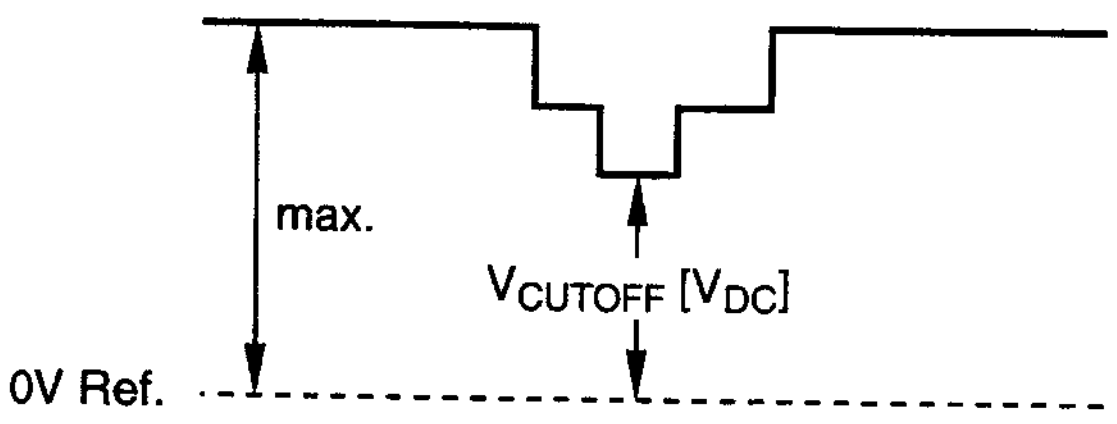

CL 06532130_014.eps
131000

Figure 8-2 Waveform Vg2 alignment

8.2.2 Focus alignment

The LOT has the following outline:
- Focus 1 (F1) = Static alignment (black wire).
- Focus 2 (F2) = Dynamic alignment (red wire).

1. Use an external video pattern generator to input a "circle" or "crosshatch" test pattern to the set.
2. Choose "Natural" picture mode with the "Smart Picture" button on the remote control transmitter.
3. Adjust the "dynamic focus 2" potentiometer (in the middle on the LOT) until the horizontal lines at the centre of the screen are of minimum width without introducing a visible haze.
4. Adjust the "static focus 1" potentiometer (highest of the LOT) until the horizontal lines at the sides of the screen are of minimum width without introducing a visible haze.
5. Repeat these two steps to achieve the best result.

8.3 Software Alignments

Put the set in the SAM (see the "Service Modes, Error Codes and Fault Finding" section). The SAM menu will now appear on the screen. The different alignment parameters are described further on.

Notes:
- All changes to menu items and alignments must be stored manually.
- If an empty EAROM (permanent memory) is detected, all settings are set to pre-programmed default values, so the set must be re-aligned.

8.3.1 TUNER

AGC
1. Set an external pattern generator to a colour bar video signal and connect the RF output to the aerial input of the TV. Set the amplitude to 10 mV and the frequency to 475.25 MHz. Use system PAL B/G if possible, otherwise match the system of your generator with the received signal in the set.
2. Put the set in the SAM mode.
3. Select via the TUNER menu, the AGC sub-menu.
4. Connect a DC multi-meter to pin 1 of the tuner (item 1200 on the LSP).
5. Adjust the AGC until the voltage at pin 1 of the tuner is 3.3 V (+/- 0.1 V). The value can be incremented or decremented by pressing the right/left CURSOR button on the RC.
6. After alignment, save the value(s) with the STORE command in the SAM main menu.

IF PLL OFFSET
No adjustments needed: default value is "35".

If the mentioned default value does not give the required result, use the following alignment method:

1. Set an external pattern generator to a crosshatch video signal and connect the RF output to the aerial input of the TV. Set the amplitude to 10 mV and the frequency to 475.25 MHz. Use system PAL B/G if possible, otherwise match the system of your generator with the received signal in the set.
   - For "Negative modulation", the **sound** signal must be a non-modulated FM signal.
   - For "Positive modulation", the **video** signal must have high modulation (100% or above).
2. Put the set in the SAM mode.
3. Select via the TUNER menu, the IF-PLL OFFSET sub-menu.
4. Measure and align:
   - For "Negative modulation", on SCART pin 1 or 3 (**audio** out): Adjust IF-PLL OFFSET until the largest Signal Noise Ratio (SNR) is reached.
   - For "Positive modulation", on SCART pin 19 (**video** out): Adjust IF-PLL OFFSET until you get minimal V-sync disturbance.

8.3.2 GEOMETRY

Notes:
- Set an **external** pattern generator to a crosshatch video signal and connect the RF output to the aerial input of the TV. Set the amplitude at least 1 mV_rms (60 dBuV) and the frequency to 475.25 MHz. Use system PAL B/G if possible, otherwise match the system of your generator with the received signal in the set.
  Note: Do **not** use the internal test pattern from the GEOMETRY menu!
- Use the default alignment settings, but set "Brightness" to "32".
- For wide screen models, set to "wide screen" mode, for "classic" models, set to "4:3".
- After alignment, save the value(s) with the STORE command in the SAM main menu.

Service tip: When the set is equipped with a rotation coil, use this menu item to check its correct alignment. If alignment is not correct, go to the user MENU, choose FEATURES, and select ROTATION. With the use of a crosshatch test pattern, align it to a correct horizontal picture.

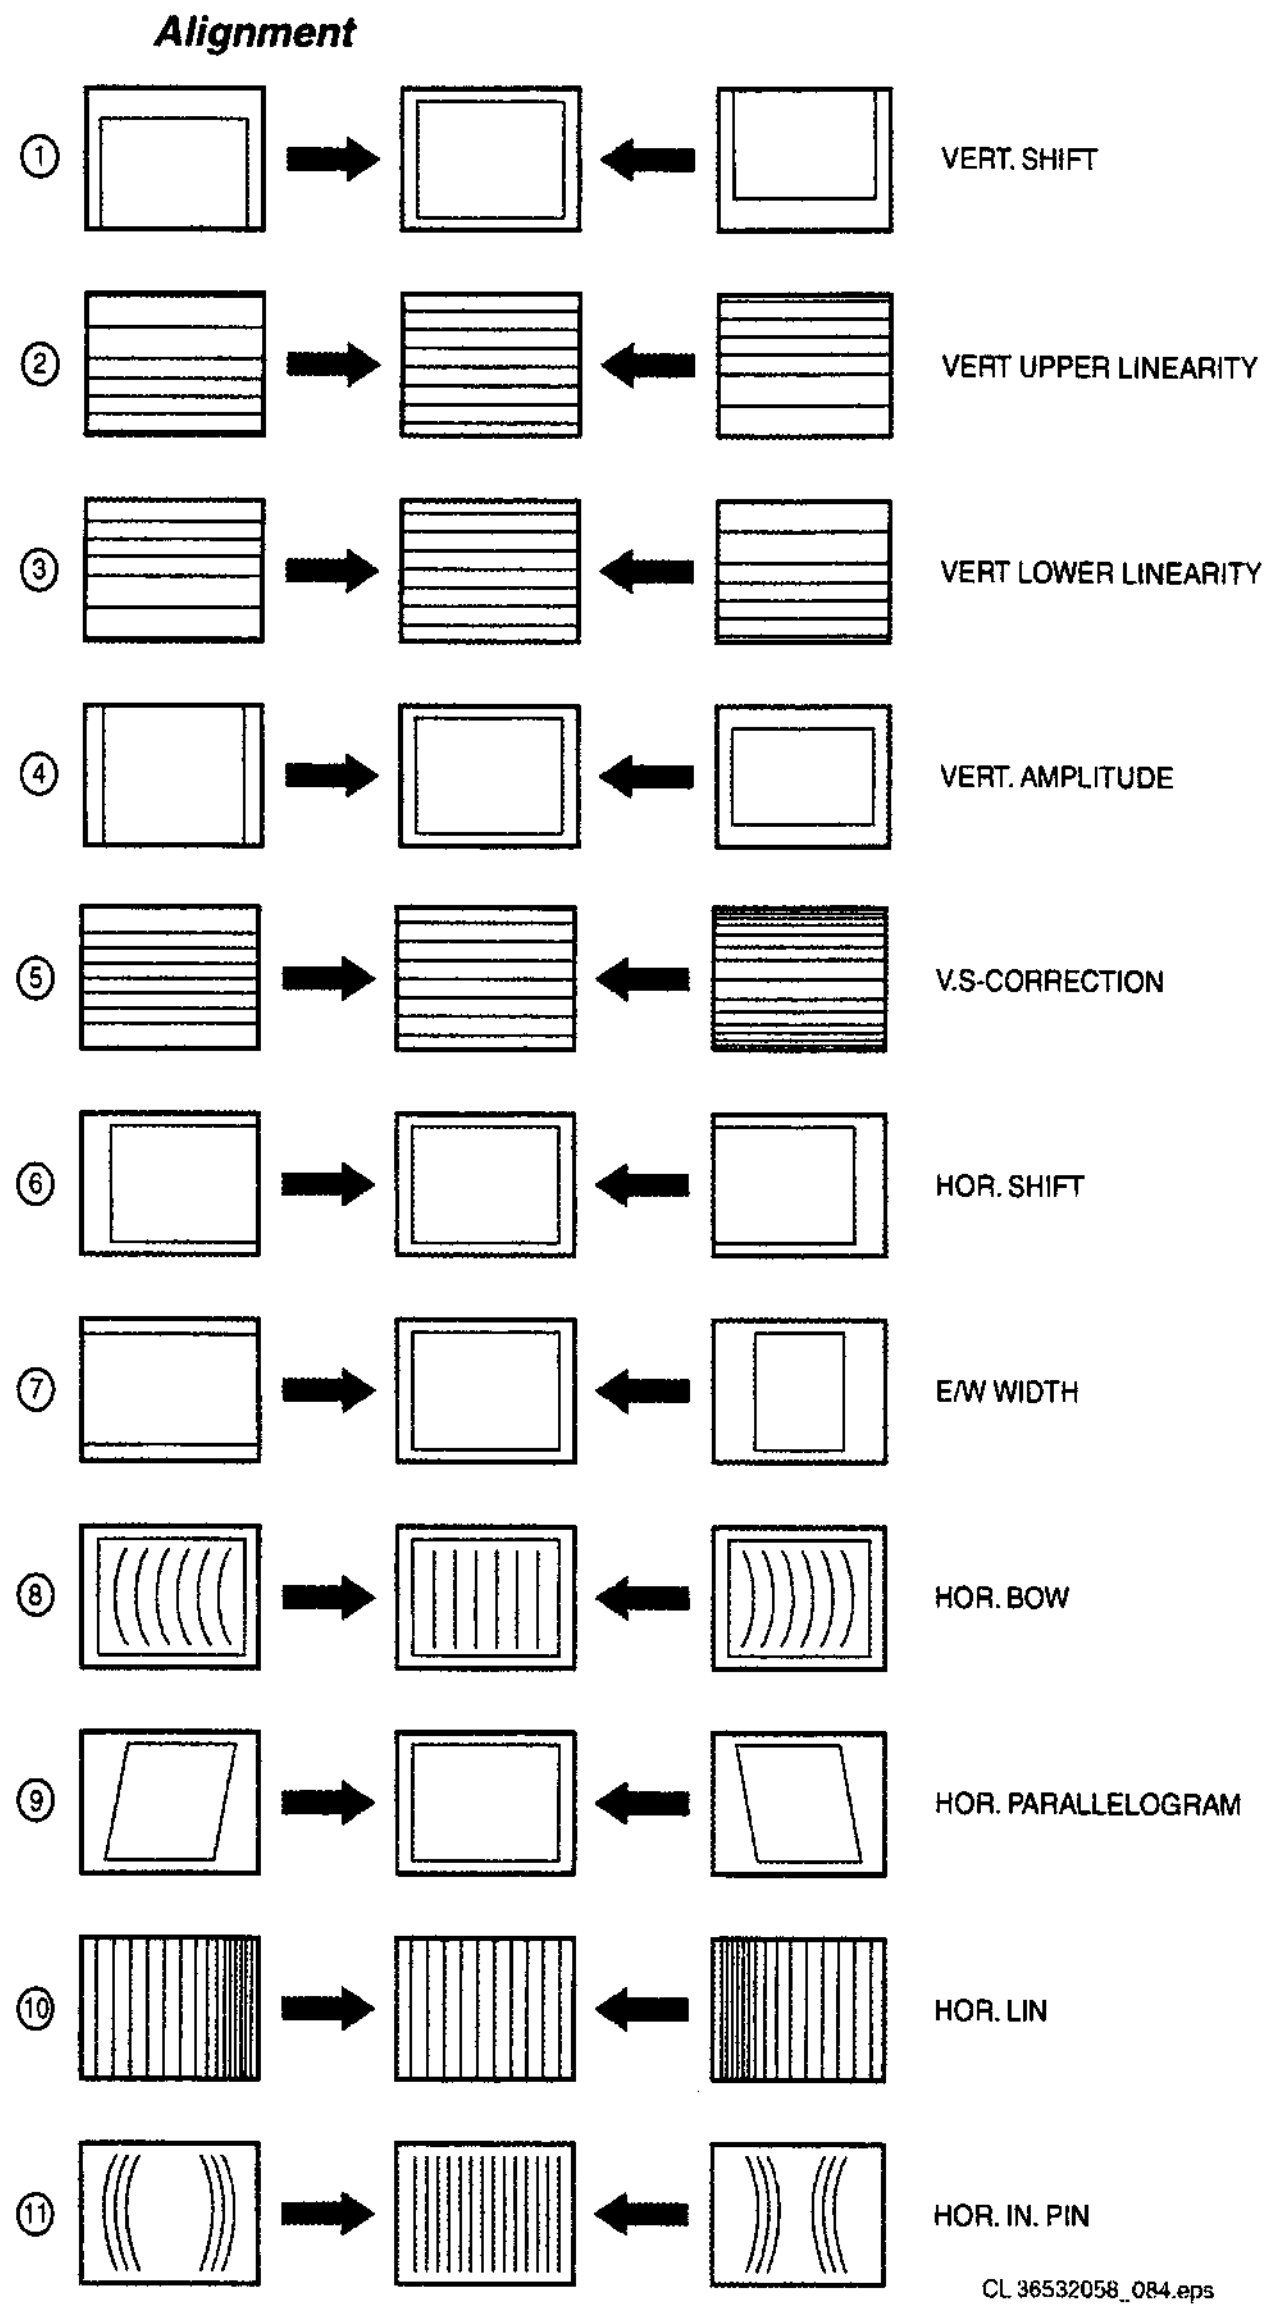

CL 36532058_084.eps
211103

Figure 8-3 Geometry Alignments

1. Before starting the vertical alignment, set (in SAM) the following parameters to "0":
   - VER. SHIFT,
   - VER. SCOR,
   - VER. U_LIN,
   - VER. L_LIN.
2. Set SERV. BLK to "on", to blank the lower half of the screen.
3. Adjust the "VERTICAL SHIFT" potentiometer (R3642 on the LSP) until the picture is centred (to the mechanical centre of the picture tube), and switch SERV. BLK to "off".
4. Adjust VER. U_LIN and VER. L_LIN such, that upper and lower horizontal lines of the crosshatch pattern are just visible.

Use then the following software regulations to modify the geometry:

1. VER. AMPL (Vertical Amplitude): Align for the vertical picture centre, range from -32 to +32.
2. VER. SHIFT (Vertical Shift): Compensating for any gain error in amplifier, adjust range from -32 to +32 to the proper amplitude.
3. VER. SCOR (Vertical S-Correction): Align for equal height of the blocks in the top, the bottom and the middle, range from -63 to +63.
4. HOR. SHIFT (Horizontal Shift): Adjust for the horizontal centre of the screen, range from -127 to +128.

Next step is to align the East/West geometry.

1. First, set the parameters EW_5 and EW_6 to "0"
2. EW. WIDTH (East-West Width): This sets the (overall) horizontal size of the picture on the screen. Range from -63 to +63 (with the following EW alignments, these lines can be straightened).
3. EW_1 (East-West parameter 1): Has effect on the length of the upper part of the vertical E/W lines.
4. EW_2 (East-West parameter 2): Has effect on the length of the vertical E/W lines just below EW_1.
5. EW_3 (East-West parameter 3): Has effect on the length of the vertical E/W lines just below EW_2.
6. EW_4 (East-West parameter 4): Has effect on the length of the vertical E/W lines just below EW_3.
7. EW_5 (East-West parameter 5): Has effect on the length of the vertical E/W lines just below EW_4.
8. EW_6 (East-West parameter 6): Has effect on the length of the vertical E/W lines just below EW_5.
9. EW_7 (East-West parameter 7): Has effect on the length of the vertical E/W lines just below EW_6.
10. EW_8 (East-West parameter 8): Has effect on the length of the vertical E/W lines just below EW_7.
11. EW_9 (East-West parameter 9): Has effect on the length of the vertical E/W lines just below EW_8.
12. EW_10 (East-West parameters 10): Has effect on the length of the lowest part of the vertical E/W lines.
13. HOR. BOW (Horizontal Bow): Align the EW parabola to be symmetrical, range from -63 to +63.
14. HOR. PARALLEL (Horizontal Parallel): Align for straight vertical lines on the picture sides, range from -63 to +63.
15. HOR. LIN (Horizontal Linearity): Align for equal width of horizontal blocks on the left, the right and the centre, range from 0 to +127.
16. HOR. IN_PIN (Horizontal Inner Pincushion): Align for the inner straight vertical lines, range from 0 to +32.

8.3.3 WHITE TONE

In the WHITE TONE sub menu, the colour values for the different colour temperatures can be changed.
The colour temperature mode (NORMAL, DELTA COOL, DELTA WARM) can be selected per colour (R, G, and B) with the RIGHT/LEFT cursor keys. The mode or value can be changed with the UP/DOWN cursor keys.
First, the values for the NORMAL colour temperature must be selected. Then the offset values for the DELTA COOL and DELTA WARM mode can be selected. Note that the alignment values are non-linear.

Alignment
No adjustments needed. Use the given default values:

Table 8-1 White tone alignment (default values)

Parameter	**28PW8609/12**	**29PT8509/12**	**32PW8609/12**
Normal Red	-4	+11	+1
Normal Green	-9	+4	-7
Normal Blue	-6	+12	-2
Red BL Offset	7		
Green BL Offset	7		
Blue BL Offset	7		
Delta Cool Red	7		
Delta Cool Green	15		
Delta Cool Blue	33		
Delta Warm Red	2		
Delta Warm Green	3		
Delta Warm Blue	7		

If the mentioned default value does not give the required result, use the following alignment method:

1. Set the external pattern generator to a 100% white pattern, and connect the RF output to the aerial input of the TV. Set the amplitude at least 1 mV_rms (60 dBuV) and the frequency to 475.25 MHz. Use system PAL B/G if possible, otherwise match the system of your generator with the received signal in the set.
2. Set "Smart Picture" to "Natural".
3. Set "Dynamic NR" to "off".
4. Put the set in the SAM mode.
5. Select via the WHITE TONE menu, the PATTERN sub-menu.
6. Set PATTERN to "on".
7. Set NORMAL GREEN to "32".
8. Measure with the colour analyser (Minolta CA100 Colour Analyser or equivalent), calibrated with the spectra, on the centre of the screen.
9. Adjust with the cursor left/right command the Red and Blue register for the right xy-coordinates (see the table below).
10. Repeat the white tone adjustment also for the colour temperatures COOL and WARM.

Table 8-2 White tone alignment (with colour analyser)

White D mode	**Temperature**	**DUV**	**x**	**y**
Normal	8500 K	+-0.004	288 +/- 4	300 +/- 4
Cool	11500 K	+-0.005	273 +/- 5	282 +/- 5
Warm	7000 K	+-0.005	305 +/- 5	312 +/- 5

8.3.4 SOUND

No adjustments needed. Use the given default values:

- PRESCALE LEVEL
  - FM: "+1".
  - NICAM: "+3".
  - EXTAM Gain: "0".
  - PIPMONO: "0".
  - ExtLR-in: "0".
- TRESHOLD LEVEL
  - Over Mod Tresh: "+3dB".
  - NIC ErrLmt_Hi: "60".
  - NIC ErrLmt_Lo: "20".
  - NoiseTres SC2: "+2".
  - NoiseHyst SC2: "+4".
- EFFECTS LEVEL
  - BMT CutOffFrq: "50Hz".
  - Incredible SND: "60%".
  - VDolby: "100%".

8.3.5 SMART SETTINGS

No adjustments needed. Use the given default values:

Table 8-3 Smart settings (default values)

Smart setting		**Default**
RICH	BGT	55
	COL	55
	CON	100
	SHP	6
	HUE	51
NATURE	BGT	51
	COL	48
	CON	80
	SHP	5
	HUE	51
SOFT	BGT	49
	COL	45
	CON	65
	SHP	4
	HUE	51
MULTI	BGT	51
	COL	48
	CON	85
	SHP	6
	HUE	51
BGT= Brightness, COL= Colour, CON= Contrast, SHP= Sharpness, HUE= Hue (not valid for Europe).		

8.4 Option Settings

8.4.1 Introduction

The microprocessor communicates with a large number of I2C ICs in the set. To ensure good communication and to make digital diagnosis possible, the microprocessor has to know which ICs to address. The presence / absence of these specific ICs (or functions) is made known by the option codes.

Notes:

- After changing the option(s), save them with the STORE command.
- All changes are disregarded when the OPTIONS submenu is left without using the STORE command.
- The new option setting is only active after the TV is switched "off" and "on" again with the Mains switch (the EAROM is then read again).

8.4.2 Changing options

Options are used to control the presence / absence of certain features and hardware. There are two ways to change the option settings. All changes in the option settings are saved by selecting STORE and pressing the CURSOR RIGHT key. Some changes will only take affect after the set has been switched OFF and ON with the mains switch (cold start).

Changing multiple options by changing option byte values
Option Bytes (OB) makes it possible to set all options very fast. An option byte represents a number of different options. All

options are controlled via eight option bytes (OB0 to OB7). Select an Option Byte you want to change with the CURSOR UP/DOWN keys, and key in the new value. See table for more details. An explanation per option is listed in paragraph "Option Bit Definition".

Changing a single option

It is also possible to change an option one at a time. Therefore, select the option with the CURSOR UP/DOWN keys and change its setting with the LEFT/RIGHT keys.

8.4.3 Option Settings

In the table, you will find the option settings.

Table 8-4 Option bit overview

Byte number	Bit number	Decimal value	Name	28PW8609/12	29PT8509/12	32PW8609/12
OB1	1	2	SCAVM	1	1	1
	5	32	RCMX	0	0	0
	6	64	EQTO	0	0	0
	8	256	WSSB	1	0	1
	12	4096	DGSC	1	1	1
	14	16384	SSHT	1	0	1
OB2	5	32	DBYV	1	1	1
	9	512	P50	0	0	0
	11	2048	QPEAK	0	0	0
	12	4096	EPG	0	0	0
OB3	0	1	AV3	1	1	1
	1	2	SCT3	0	0	0
	5	32	SOSD	0	0	0
	8	256	ASPR	1	0	1
	9	512	ROTI	1	0	1
OB4	3	8	PITN *	0	0	0
	4	16	PITN *	0	0	0
OB5	6	64	AAVL	1	1	1
OB8	4	16	PIPC	0	0	0
	5	32	PIPT	0	0	0
OB9	0	1	APC	1	1	1
	5	32	VMOD	0	0	0
	7	128	TIME	1	1	1
	8	256	DNR	1	1	1
	9	512	BBD	0	0	0
	10	1024	ASF	0	0	0
OB10	5	32	UKPNP	0	0	0
	6	64	DTXT	1	0	1
	8	256	SBNP	1	1	1
	9	512	AUSB	0	0	0
	10	1024	CZOM	1	0	1
	11	2048	HSHT	1	0	1
	14	16384	CHLK	1	1	1
OB11	9	512	T1H0	1	1	1
	13	8192	FAPG	1	1	1
	14	16384	ACI	1	1	1
OB12	8	256	PLST	1	1	1
OB13	0	1	T2H5	1	1	1
	2	4	T12H	1	1	1
	3	8	EWEU	0	0	0
	7	128	SMCK	1	1	1
	8	256	ATS	1	1	1

* = There are 2 bits for this option:
00 = Philips,
01 = Other

Unused options have a default value of "0"

8.4.4 Option Bit Definition

Sources

AV3: Side AV source.
Function: Disable/Enable side AV source.
Values: OFF= Disabled, side AV source is not available. ON= Enabled, side AV source is available.

SCT3: SCART 3 input.
Function: Disable/Enable Scart3 input.
Values: OFF= Disabled. ON= Enabled.

Video

ASPR: Aspect Ratio Setting.
Function: Select between 4 by 3 or 16 by 9 set.
Values: OFF= 4 by 3 set. ON= 16 by 9 set.

DNR: Dynamic Noise Reduction.
Function: Disable/Enable (Dynamic) Noise Reduction function.
Values: OFF=Disabled. ON= Enabled.

BBD: Black Bar Detection.
Function: Disable/Enable Black Bar Detection.
Values: OFF=Disabled, Black Bar Detection not available. ON= Enabled, Black Bar Detection available.
Note: The Auto Screen Fit will not be included in the picture size loop when BBD is OFF.

ASF: Auto Screen Fit.
Function: Disable/Enable Auto Screen Fit.
Values: OFF=Disabled, Auto Screen Fit is not available. ON= Enabled, Auto Screen is Fit available.

CZOM: Continuous Zoom.
Function: Disable/Enable Continuous Zoom.
Values: OFF=Disabled. ON= Enabled.

HSHT: Heading Shift.
Function: Disable/Enable Heading Shift.
Values: OFF=Disabled. ON= Enabled.

SSHT: Subtitle Shift.
Function: Disable/Enable Subtitle Shift.
Values: OFF=Disabled. ON= Enabled.

APC: Auto Picture Control (Auto TV).
Function: Disable/Enable Auto picture control.
Values: OFF= Disabled. ON= Enabled.

WSSB: Wide Screen Signalling Bit.
Function: Disable/Enable Wide screen Signalling bit function.
Values: OFF= Disabled. ON= Enabled.

ROTI: Rotation Tilt.
Function: Change the tilt level of picture tube.
Values: OFF= Disabled, menu item ROTATION is not available. ON= Enabled, menu item ROTATION is available.

DGSC: Digital Scan.
Function: Enable/Disable the Digital Scan in the DIGITAL OPT menu.
Values: OFF= Disabled, menu item DIG SCAN is not available. ON= Enabled, menu item DIG SCAN is available.

SCAVM: SCAVEM.
Function: Enable/Disable SCAVEM.
Values: OFF= Disabled. ON= Enabled.

Audio

AAVL: Automatic Volume Level control.
Function: Disable/Enable automatic volume leveller function.
Values: OFF=Disabled, menu item AVL is not available. ON= Enabled, menu item AVL is available.

DBYV: Dolby Virtual.
Function: Select surround setting.
Values: OFF= Disabled, DOLBY VIRTUAL setting is not available. ON= Enabled, DOLBY VIRTUAL setting is available.
Note: Incredible surround & Dolby virtual are mutually exclusive.

EQTO: Equalizer or Tone control.
Function: Selection between Equalizer and Tone control (Bass and Treble).
Values: OFF= Tone control (Bass and Treble). ON= Equalizer.
Note: Equalizer and Tone (Bass and treble) control are mutually exclusive.

QPEAK: AV Sound Mode detection.
Function: The current Sound Mode detection in AV is not working correctly. The optimal threshold value for the correct sound mode detection is still being investigated. Therefore, this is needed to disable the Sound Mode detection in AV until the correct threshold is identified.
Value: OFF= Disabled, AV sound auto detection is not available. ON= Enabled. AV sound auto detection is available.

Tuning
PITN: Philips Tuner.
Function: Choose the tuner type that is configured in the hardware.
Values: OFF= Disabled, ALPS compatible tuner is used. ON= Enabled, Philips compatible tuner is used.

Installation
ACI: Automatic Channel Installation.
Function: Disable/Enable automatic channel installation.
Values: OFF= Disabled Automatic Channel Installation. ON= Enabled Automatic Channel Installation.
Note: Download present program when ACI is ON.

ATS: Automatic Tuning System.
Function: Disable/Enable automatic tuning system.
Values: OFF= Disabled, automatic tuning system is ignored. ON= Enabled Automatic Tuning System, sort the program in an ascending order starting from Program 1.
Note: Sort the program in an ascending order starting from Program 1 when ATS is ON.

VMOD: Virgin Mode.
Function: Disable/Enable virgin mode.
Values: OFF= Disabled, cannot access virgin mode. ON= Enabled, can access virgin mode.
Note: Plug and Play menu item will be displayed to perform installation at the initial start up of the TV when MOD is ON and after installation is done, VMOD will be automatically set to OFF.

UKPNP: UK Plug and Play.
Function: Disable/Enable UK's default Plug and Play setting.
Values: OFF= Disabled, UK's default Plug and Play setting is not available. ON= Enabled, UK's default Plug and Play setting is available.
Note: When UKPNP and VMOD are ON at the initial set-up, LANGUAGE= ENGLISH, COUNTRY= GREAT BRITAIN and after auto store is complete, VMOD will be set automatically to OFF while UKPNP remain ON.

Program Selection
PLST: Program List.
Function: Disable/Enable Program List function.
Values: OFF= Disabled, the access to Program List Command is ignored. ON= Enabled, the access to Program List Command is processed.

Picture In Picture
PIPC: PIP Control.
Function: Disable/Enable submenu to adjust PIP Picture settings
Values: OFF= Disabled, PIP feature is not available. ON= Enabled, PIP feature is available
Note: PIP is present in FEATURES submenu when PIPC is ON. When PIPC is switched OFF, bits PIPT, W4X3, and W169 must be automatically set to OFF.

PIPT: PIP Tuner.
Function: To determine the presence of second tuner.
Values: OFF= Disabled, second tuner is not available. ON= Enabled, second tuner is available.
Note: When PIPC is switched OFF, bits PIPT, W4X3, and W169 must be automatically set to OFF.

Clock
SMCK: Smart Clock/Autochron.
Function: Disable/Enable smart clock/AutoChron function.
Values: OFF= Disabled, menu item smart clock function not available. ON= Enabled, menu item smart clock function available.
Note: For NAFTA, AUTOCHRON is present in INSTALL submenu when SMCK is ON. For AP-PAL and EUROPE, Smart clock downloaded from Teletext is enabled when SMCK is ON.

TIME: Timer.
Function: Disable/Enable menu item TIMER.
Values: OFF= Disabled, menu item TIMER not available. ON= Enabled, menu item TIMER available.
Note: TIMER submenu is present in FEATURES submenu when TIME is ON.

Data Service
DTXT: Dual Text.
Function: Disable/Enable Dual Text.
Values: OFF= Disabled. Dual text is not available. ON= Enabled. Dual text is available.

RCMX: RC for Teletext Mix Mode.
Function: Disable/Enable RC for Teletext Mix mode support.
Values: OFF= Disabled. RC for mix mode is not available. ON= Enabled, RC for mix mode is available.

FAPG: Favourite Page.
Function: Disable/Enable favourite page in Teletext mode.
Values: OFF= Disabled favourite page in Teletext mode. ON= Enabled favourite page in Teletext mode.

T1H0: 100-Page Text.
Function: Disable/Enable 100-page Text.
Values: OFF= Disabled. 100-page text is not available. ON= Enabled, 100-page text is available.

T2H5: 250-Page Text.
Function: Disable/Enable 250-page Text.
Values: OFF= Disabled. 250-page text is not available. ON= Enabled, 250-page text is available.

T12H: 1200-Page Text.
Function: Disable/Enable 1200-page Text.
Values: OFF= Disabled. 1200-page text is not available. ON= Enabled, 1200-page text is available.

Lock Features
CHLK: Child Lock.
Function: Disable / Enabled function to block/unblock channels.
Values: OFF= Disabled. ON= Enabled.

OSD/Menu Related
SOSD: Smart OSD.
Function: Disable/Enable full display of SMART SOUND and SMART PICTURE OSD.

Values: OFF= Disabled, full display of SMART SOUND and SMART PICTURE OSD not available. ON= Enabled, full display of SMART SOUND and SMART PICTURE OSD available.

Miscellaneous

SBNP: Auto Standby with No Picture.
Function: Disable/Enable automatic switch to standby after 15 minutes when no ident.
Values: OFF= Disabled, no automatic switch to standby. ON= Enabled, set switches to standby after 15 minutes when no ident.

AUSB: Auto Standby Auto On.
Function: Disable/Enable automatic switch to standby if no RC or local keyboard response after 4 hours provided that the set is ON from standby mode by the timer.
Values: OFF= Disabled, no automatic switch to standby. ON= Enabled, set switches to standby after 4 hours.

EPG: Electronic Program Guide.
Function: Disable/Enable EPG feature.
Values: OFF= Disabled, EPG feature is not available. ON= Enabled, EPG feature is available.

P50: P50 (Easylink).
Function: Disable/Enable P50 feature.
Values: OFF= Disabled, P50 feature not available. ON= Enabled, P50 feature is available.

EWEU: East/West Europe region.
Function: Select between East Europe and West Europe.
Values: OFF= West Europe. ON= East Europe

9. Circuit Descriptions, Abbreviation List, and IC Data Sheets

Index of this chapter:

1. Introduction
2. Block diagrams
3. Power supply
4. Video
5. Synchronisation
6. Audio
7. Control
8. Protections
9. Software upgrading
10. Abbreviation list

- Only **new** circuits (circuits that are not published recently) are described.
- For the "known" LSP circuits, see the EM5E manual. This manual is available under number 3122 785 12560 (= English).
- Figures can deviate slightly from the actual situation, due to different set executions.
- For a good understanding of the following circuit descriptions, please use the diagrams in chapter 6 and 7. Where necessary, you will find a separate drawing for clarification.

9.1 Introduction

The A02 is intended as the Mainstream TV platform for the years 2003 and 2004 and successor to the A10. Covering three ranges (Digital Ready, Digital Prepared, and Digital Integrated) with screen sizes of 28 inch WS to 36 inch WS RF (16:9) and 29 inch to 38 inch RF (4:3). The platform supports 50 Hz, 100 Hz, and progressive scan.
It is based on the SALSA system (System Application for Lower Segment Analogue television), which is a highly integrated solution for TV. The system comprises two ICs: the ADOC (Analogue Digital One Chip) and the MPIF (Multi Platform InterFace). The MPIF IC performs analogue processing for IF, source selection, and analogue to digital conversion. The ADOC IC incorporates video and audio processing as well as the complete TV control functionality. The ADOC aims at the low and mid range market segment.

The split-up between an analogue (MPIF) and a digital part (ADOC) has the following advantages:
- High frequent parts (IF) can be included in the concept.
- Less A/D and D/A converters needed for source switching.
- Better performance for AD converters (realised in analogue design environment, more accurate, less tolerance).
- Critical items like reference voltages can be realised in the analogue environment.
- Integrated SCART buffers.

The new A02 chassis has the following features:
- An LSP (Large Signal Panel) that is based on the existing EM5 chassis.
- A new SSB (Small Signal Board) with very high integration.
- Upgradeable main software (via ComPair). The software is a large and re-engineered version of the 'MG' software used by Philips CE for several years.

9.1.1 Large Signal Panel

The chassis has a full sized LSP, which is identical to the one in the EM5 chassis.

The main functionalities of the LSP are:
- Supply,
- Deflection,
- Sound amplification.

The LSP (single sided) is built up very conventional, with hardly any surface mounted components on the copper side. It has a large "hot" part, including both deflection coils.

9.1.2 Small Signal Board

The SSB is a high tech module (four layer, 2 sides reflow technology, full SMC) with very high component density. Despite this, it is designed in such a way, that repair on component level is possible. To achieve this, attention was paid to:
- Accessibility of the test points. The SSB has good accessible service positions.
- Clearance around surface mounted ICs (for replacing).
- Detailed diagnostics and fault finding is possible via ComPair.
- Software upgrading is possible via ComPair.

The main functionalities of the SSB are:
- Tuner input,
- I/O interface provisions,
- TXT and Control,
- Video and Audio decoding,
- Feature Box,
- Sync and Geometry control.

Further features of the SSB are:
- The PIP functionality (when present) is integrated on the SSB.
- The 3D Comb filter functionality (for USA) is integrated on the SSB.

On the photographs you can see where the key components are located on the SSB:

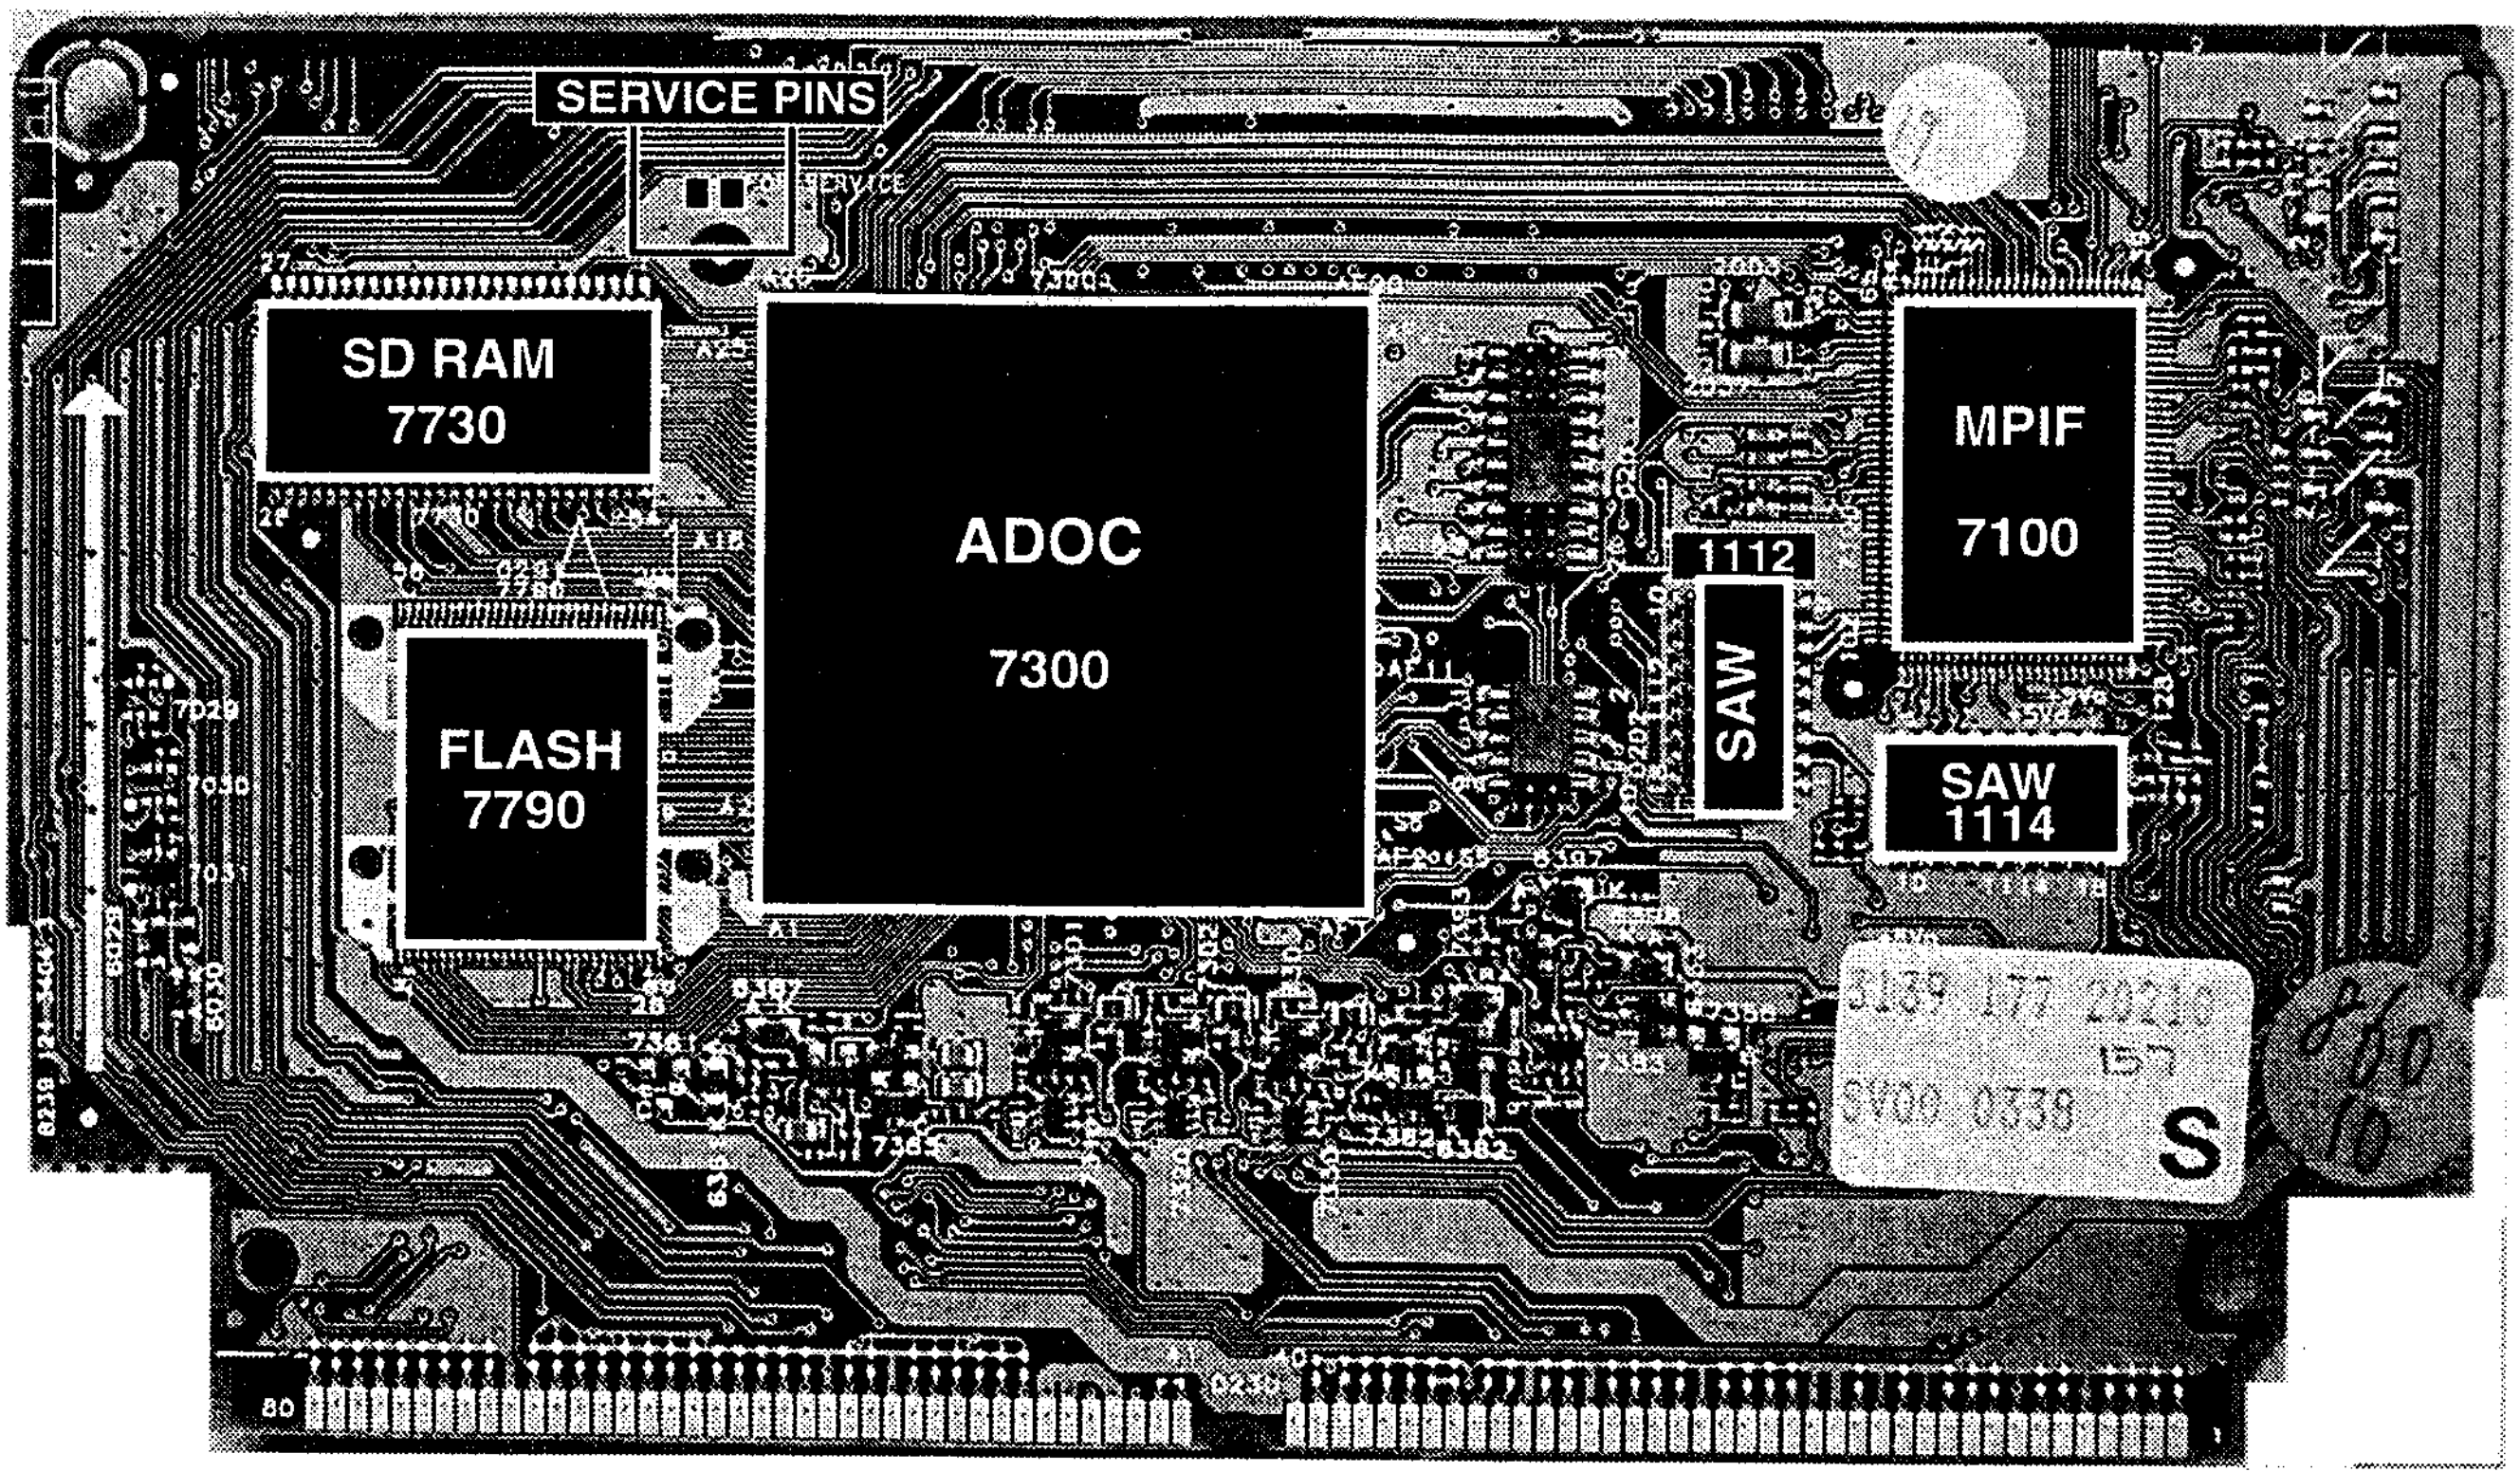
SERVICE PINS
SD RAM
7730
ADOC
7300
MPIF
7100
1112
SAW
FLASH
7790
SAW
1114
S

CL 36532058_060.eps
281003

Figure 9-1 SSB top view (tuner side)

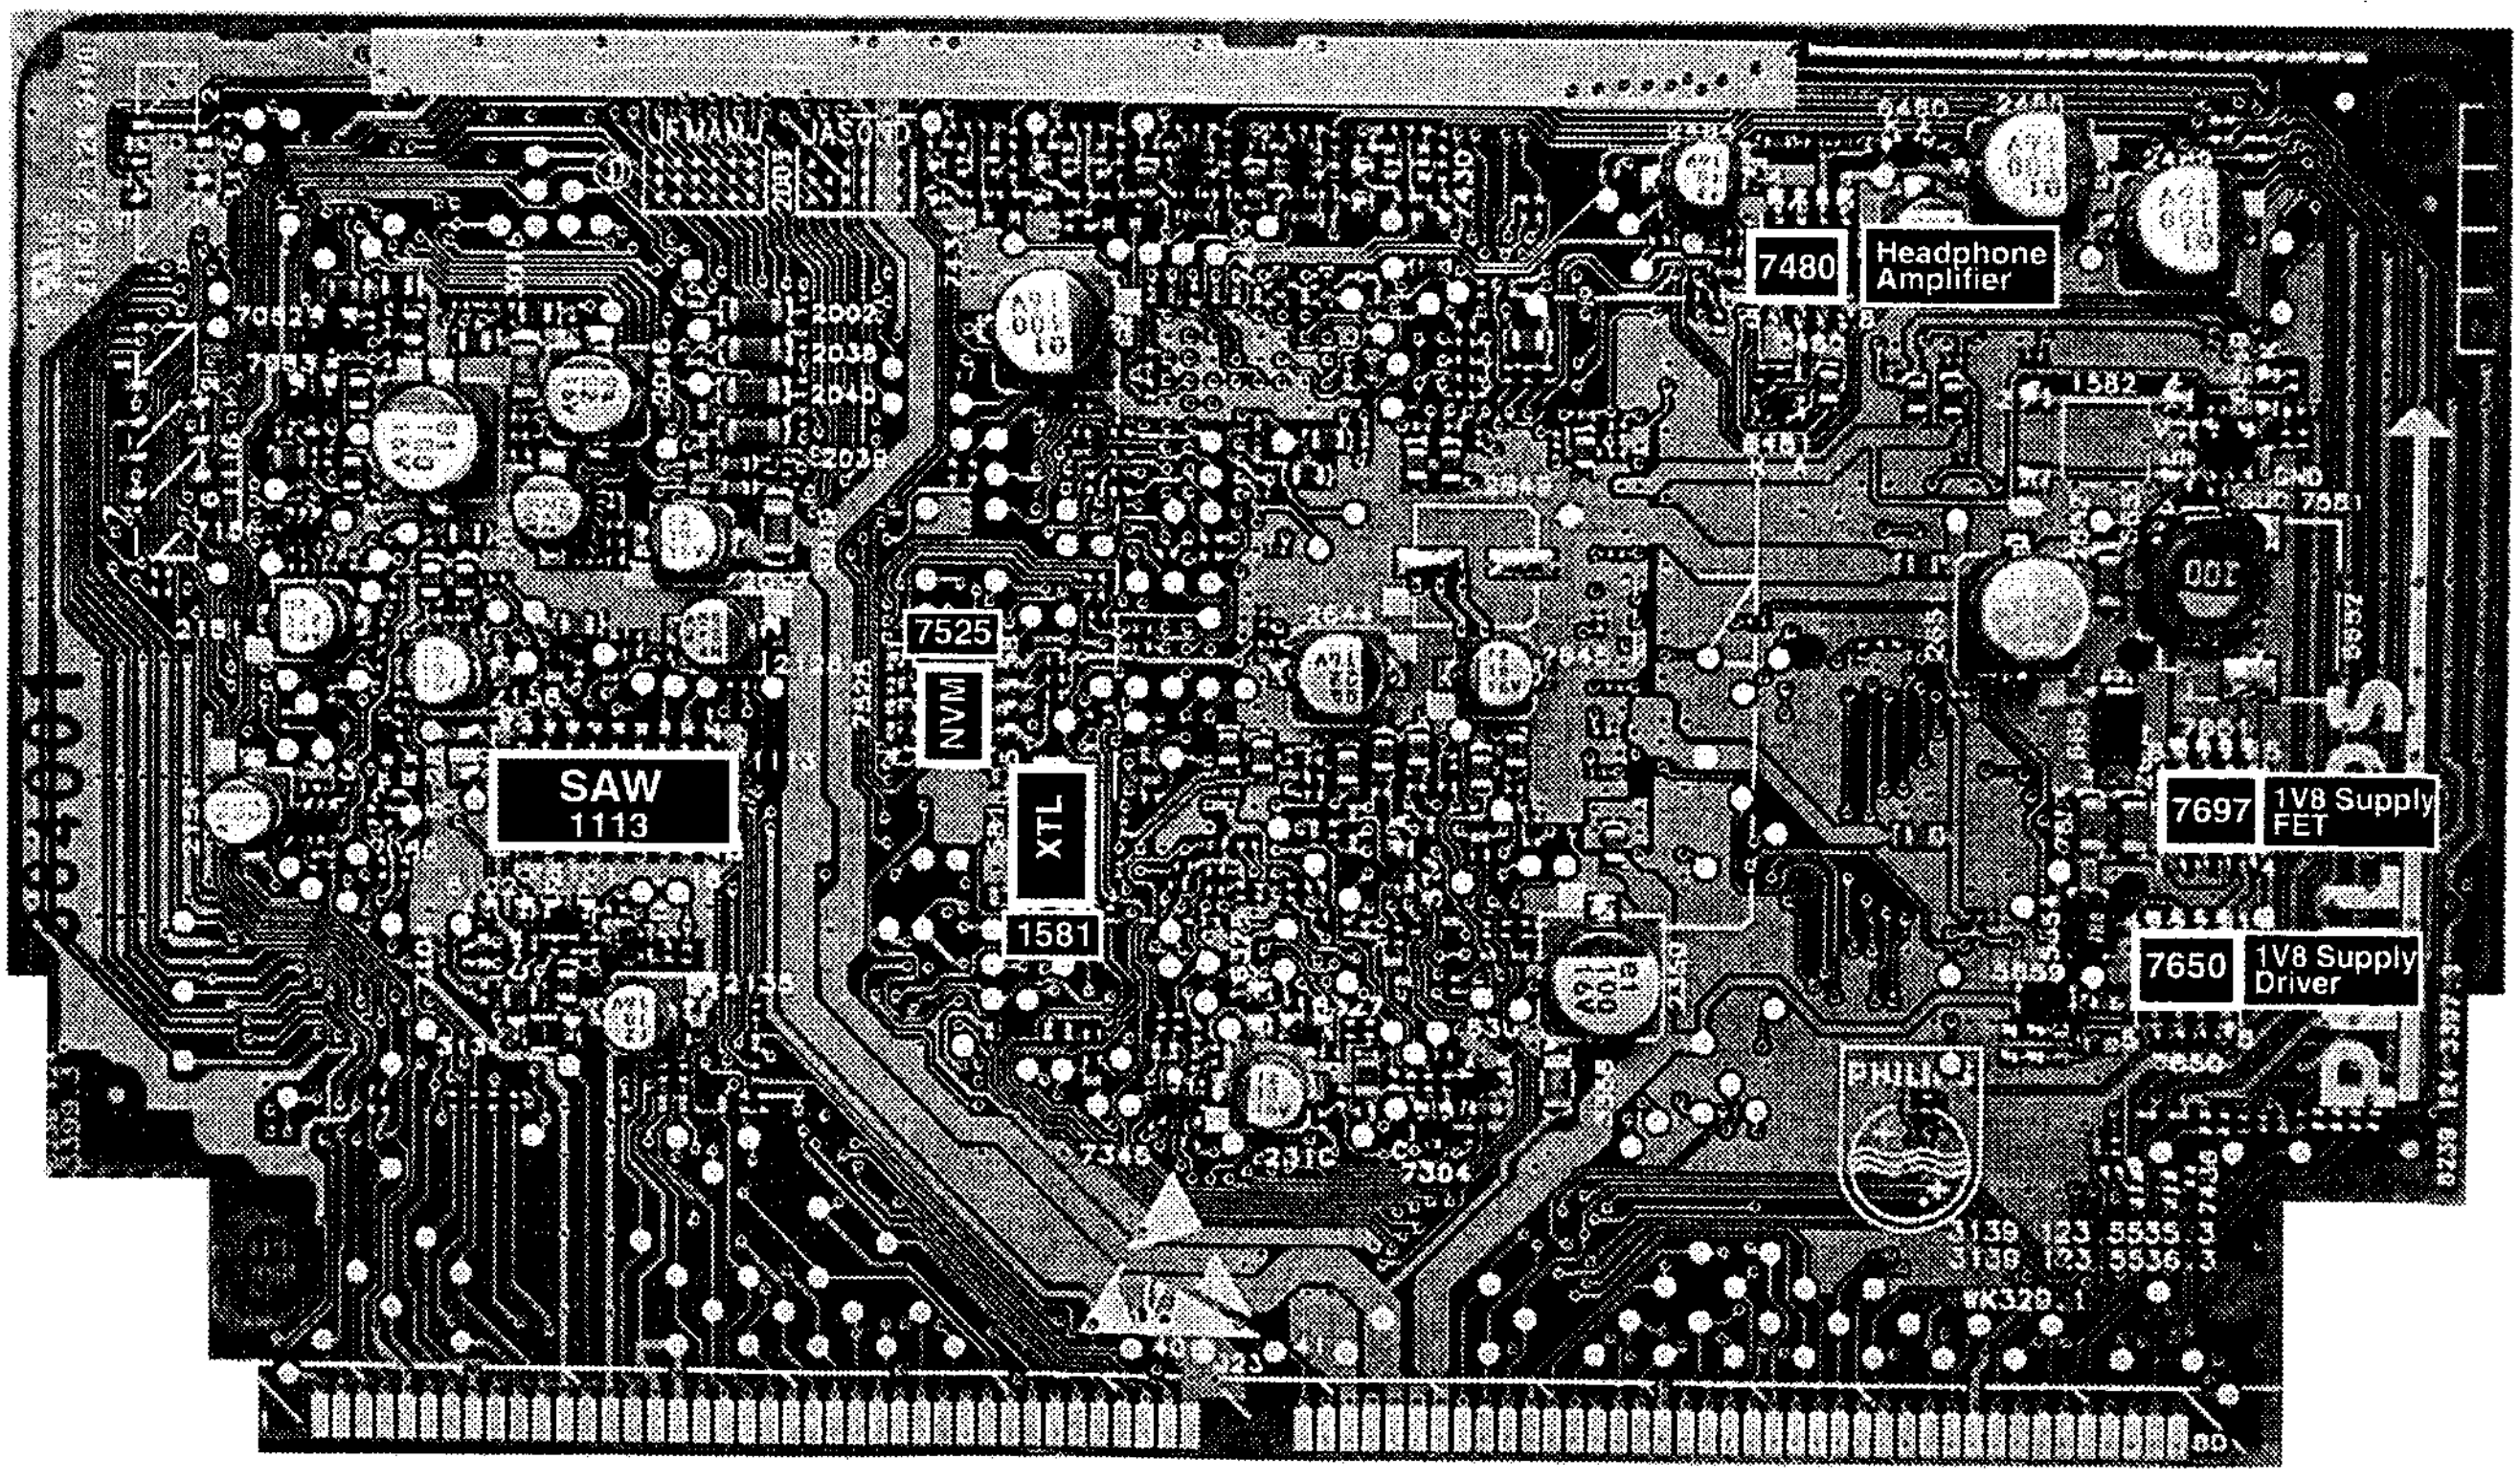
7480
Headphone Amplifier
7525
NVM
XTL
1581
SAW
1113
7697
1V8 Supply FET
7650
1V8 Supply Driver

CL 36532058_061.eps
271003

Figure 9-2 SSB bottom view (LOT side)

9.2 Block Diagrams

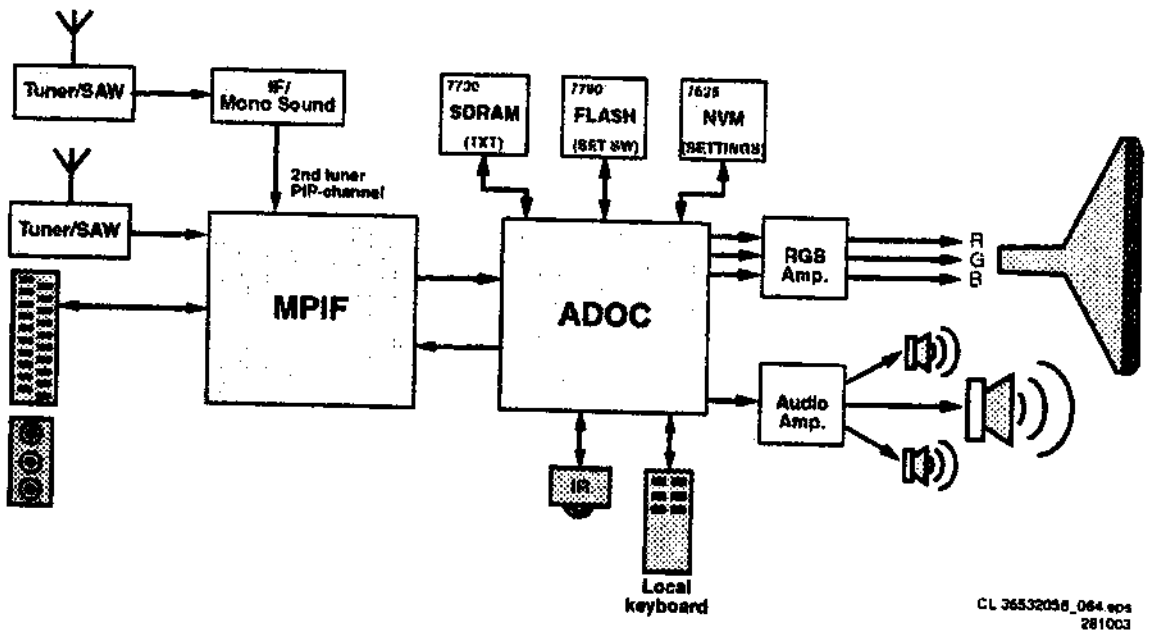

Figure 9-3 Chassis block diagram

The tuner is a PLL tuner and delivers the IF-signal, via audio and video SAW-filters, to the MPIF IC (Multi Platform InterFace). This is an analogue video and audio pre-processing unit for the ADOC TV processor. It contains the high frequent IF part and all the analogue video and audio source switching for external in- and outputs. The MPIF can handle CVBS, Y/C, RGB (1fH/2fH) and YPbPr (1fH/2fH) video signals as well as stereo, I2S, and second sound IF audio signals. The MPIF converts the selected video and audio streams from the analogue to the digital domain. Via three high-speed serial data links (I2D), the digitised audio and video signals are streamed to the ADOC IC for further processing.

The ADOC (Analogue Digital One Chip) is a fully integrated, digitally implemented TV processor for audio, video, Vertical Blank Interval services, graphics, and control. It is a global, multi-standard system primarily designed for the reception and processing of analogue broadcast signals.
Internal video processing is done in the ADOC with YUV-signals. It also handles the video control, geometry part, and the insertion of the TXT/OSD RGB-signals. The video part delivers the RGB signals to the CRT-panel and the geometry part delivers the H-drive, V-drive (differential output), and E/W-drive.
An integrated MIPS 1910 processor runs the chassis software and takes care of the set control, error generation TXT/OSD input-, and output processing. The NVM (Non Volatile Memory) is used to store the settings, the Flash-RAM contains the set software, and the SDRAM stores the Teletext pages (in some versions, this is stored in the internal memory of the ADOC).

Both deflection circuits are located on the LSP and are driven by the ADOC. The horizontal output stage generates also some supply voltages and the EHT-, focus- and Vg2-voltages.

The RGB amplifiers on the CRT-panel are integrated in one IC and are supplied with 200 V from the LOT. The SCAVEM circuit modulates transitions of the Luminance (Y) signal on the horizontal deflection current, giving a sharper picture.

Sound IF processing, audio source selection, and audio analogue-digital signal conversions are done in the MPIF IC. The ADOC contains a digital TV sound processor for analogue and digital multi-channel sound systems in TV sets. By hardware programming, several applications can be scaled. The audio output stage is built around a balanced amplifier, and is located on the LSP. It uses a monolithic integrated power amplifier IC, the TDA7497. The gain of the amplifier is constant. This means that volume control is done via the ADOC.

The power supply is a Switch Mode Power Supply (SMPS) with minimum voltage switch. It is a flyback converter with primary current sensing, secondary voltage sensing, and mains input measuring. It is built around IC7921 (which has a built-in MOSFET and control circuit) and generates a.o. the 140 V (V-BAT) and the 27 V (for the audio part).

During Standby, the power supply is switched to a 'low power burst mode' via TS7946 and the following burst mode generator, in order to reduce the power consumption.
A relay is used to switch the degaussing circuit for several seconds during switching 'ON' of the set.
There is a separate Standby Supply, in order to reduce the Standby power consumption. During Standby, the Main Supply is switched "off" (via TS7529).
A relay (1550) is used to switch the Degaussing circuit. It is switched "on" after set start-up and switched "off" by the microprocessor after 12 s.
The Main Supply, a SMPS based on the "boost converter" principle, generates the 141 V (V_BAT) and the +/- 16 V for the audio part.

9.3 Power Supply

9.3.1 Introduction

The power supply circuitry is located on the large signal PWB, together with the audio amplifier and the deflection. It comprises of:
- Mains entrance with fuse.
- Separate standby -supply.
- Mains harmonic circuit.
- Mains rectifier.
- Main-supply: is able to deliver a continuous power between 100 W and 160 W.
- Degaussing.

For a detailed circuit description, see the EM5E Service Manual.

9.3.2 Power Supply architecture

The A02 SSB is supplied by +5V, +5.2V, +3.3V and +8V supply lines from the LSP. The SSB contains:
- A DC/DC converter which steps down +5.2V to +1V8,
- A switch to cut off the 3V3 supply to the 3D Comb in "Standby" mode, and
- A regulator to generate the 2V5.

When the set is in “Power STANDBY” mode, the +5.2V, +3.3V supply lines are present. Consequently, only the ADOC IC (+3V3 and +1V8), the SDRAM (+3V3), the Flash memory (+3V3), and the NVM memory (+3V3) are supplied. Other than NVM, all the other devices are powered down in "Standby" mode. See section below for more details on the power modes.

OFF Mode
The set is completely switched "off" from the mains. This is done with the mains switch for Europe and AP (for NAFTA it would mean disconnecting the TV from the mains by pulling out the mains cable). Depending upon the last Standby Status (stored in NVM), this mode can transit to “ON' mode or “STANDBY” mode.
The transition timing for a Cold start from “OFF” state to “ON” shall be such that from the instance the ADOC gets a hard reset, within 3 seconds one will hear the audio and within 7 seconds one will see the picture.

ON Mode
This is the normal operating mode. All the power supply lines on the A02 SSB and LSP are available. All the circuits in the set are active. From this mode, it is possible to transit to “STANDBY”, “SEMI-STANDBY”, “PROTECTION”, or “OFF” mode.

STANDBY Mode
The total power consumption of the TV set in this mode is equal or less than 1 W. The Standby state will be indicated by the LED. In this state only the ADOC, SDRAM, Program Memory, NVM, and all means to wake-up the set are powered. Rest of

the A02 sub-systems are disconnected. This is controlled by a STANDBY control port.
The transition timing from "STANDBY" to "ON" state is such that within 3 seconds, one will hear the audio and within 7 seconds, one will see the picture. From this mode, it is possible to transit to "ON", "SEMI-STANDBY", or "OFF" mode.

SEMI-STANDBY Mode

All the circuits in the set (ADOC, MPIF, etc), except the Audio output, Deflection, and hence CRT display, are powered up and fully active. The Audio Mute is activated. The set, however, will appear to behave and to look like "STANDBY" mode to the user. The user is totally oblivious of the existence of this mode. The status of the power supply lines and the estimated total power consumption of the SSB are the same as "ON" mode.
In this mode, the ADOC ICs horizontal deflection drive output is disabled, while the STANDBY control port is disabled. This consequently causes the LOT stage on the LSP to be inactive (although V_batt voltage is present) that, in turn, will cause the EHT to be cut off. This in turn will cause the CRT display to be inactive.
From this mode, it is possible to transit to "ON" mode, "STANDBY" mode, "PROTECTION" mode or "OFF" mode.

PROTECTION Mode

Power profile for protection mode is as low as required to allow "soft" diagnostics, error detection, and to indicate LED flashes to flag the type of fault. The horizontal deflection is "OFF" in this mode. From the protection mode, the only possible transition is to "OFF" mode.

9.3.3 Start Up Sequence

1. When we start the set (cold start), initially 5V2, 3V3, and 1V8 will be available. These come from the Standby module of the power supply.
2. After this, the microprocessor resets (tied to 1V8 and 3V3 supplies) and checks the last status of the supply from the NVM. Accordingly, the set will be put in STANDBY or in the normal ON condition.
3. Now, 5V and 8V are available if the last status was ON condition, and the DOP is initialised by the microcontroller through the PI bus (not via the I2C).
4. The H-drive will become available from the DOP, which is the source for the SUP_ENABLE signal.
5. Via the "SUP-ENABLE" signal, the Main Supply is switched "on" and will deliver the V_BAT to the Line deflection stage.
6. EHT generation is now started.
7. The uP will un-blank the picture.
8. When you switch "off" the set, this is done in a controlled way via the POR (Power On Reset) signal.

Note: Standby is controlled by the STANDBY Line of the uP (not by the DOP).

9.3.4 Shut Down Sequence

This section describes the processes that need to be handled by hardware and software when power is disconnected from the set.
Some system requirements:

- To handle CRT discharge.
- To handle "switch off" plops.
- To prevent NVM corruption at switch "off".
- To effectively distinguish between the condition of mains interruptions and shutdown and handle them properly.
- The "power down" detection is acquired from the deflection supply (+11V) and the level is translated to +3.3V (this event has the highest interrupt priority to trigger SW shutdown procedure).
- Power down detection is fed to the FBCIN input, initiates a slow stop, and hence ensures CRT discharge (it is important that the slow-stop is maintained for at least 50 ms to assist good discharge).
- The microcontroller, hence the system, shall have a clean power "on" and power "off" reset with respect to its supply. The microcontroller shall not be operational when the supply voltage is below the recommended limits. The transition between active and reset is fast.
- The microcontroller "off" reset must occur much later (> 45 ms) than the POWER DOWN signal (P.DN).

When the POWER DOWN interrupt occurs, there is no way of knowing whether it is due to Medium Mains Interruptions or due to shutdown. Hence, there is no choice but to initiate shutdown procedure as described further below. The definition of Mains Interruption is given below:

- **Short Mains Interruptions.** Duration of the interrupts <= 55 ms. The set shall continue to work properly. The "power off" acquisition circuit shall filter such events.
- **Medium Mains Interruptions.** Interruptions are of the order 70 to 80 ms. This is a typical situation when the "power off" acquisition circuit, signals that the power is going down but the microcontroller does not get a reset. In this condition, a POWER DOWN signal is generated but no POWER OFF RESET signal is available.
- **Long Mains Interruption or Shutdown.** Any interrupt above 80 ms shall cause a microcontroller reset and hence a cold start. This happens, when the power is disconnected long enough to get a "Power Off Reset" as well as the microcontroller reset. After this situation, the system would automatically cold start when the power resumes.

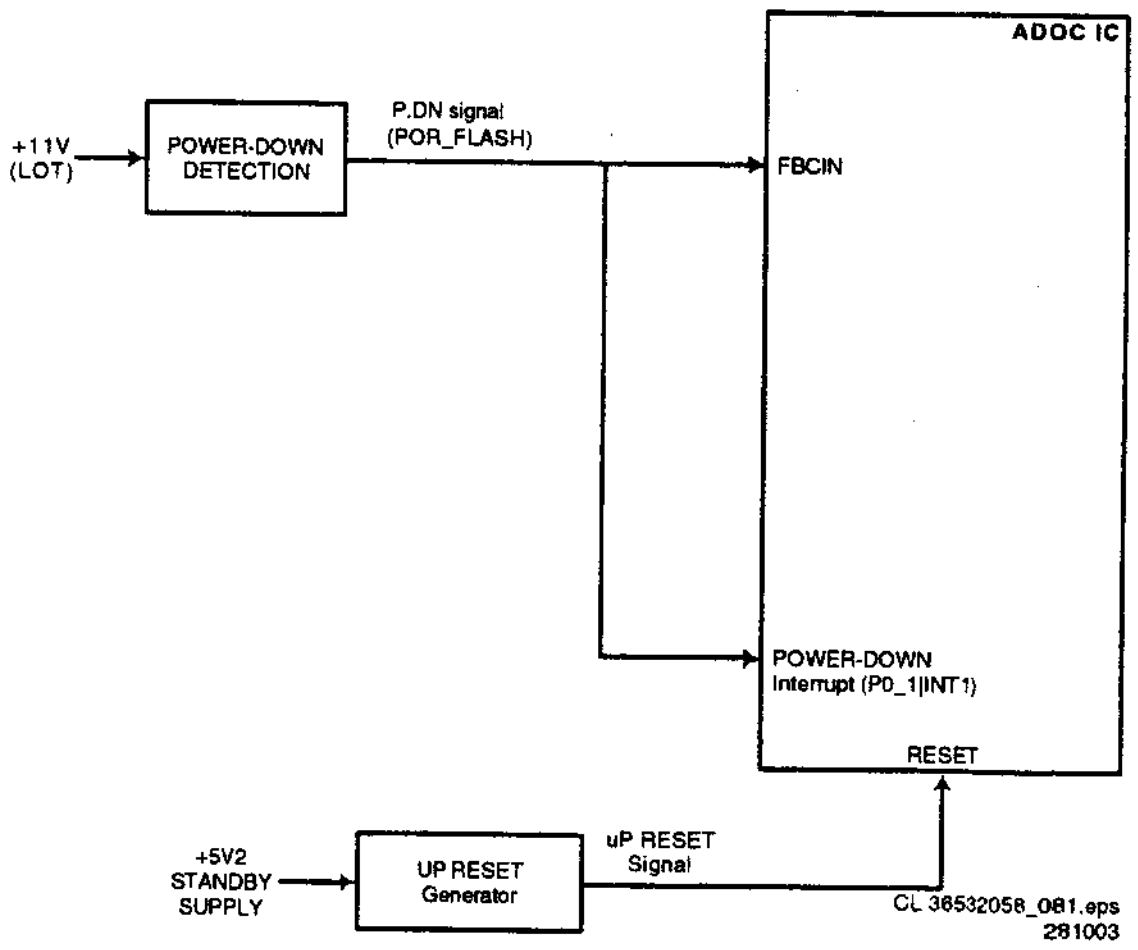

Figure 9-4 Shut down block diagram

Shutdown Procedure

1. Exclude all processes and do not respond to any interrupts - including RC events. However, during the following defined conditions of stopping the deflection (DFL-bit= 0), ignore the P.DN interrupt and rest of the procedure:
   - The system switched from ON to Standby by the user.
   - Protection event that forces the H-Deflection to stop.
   - Any other SW controlled event that causes the deflection to stop.
2. Since the P.DN signal is connected to FBCIN input, the DOP shall slow stop immediately - no software intervention is required. The precondition for this is that the FBDM bit in DOP is set to "1". The slow -stop process will continue for the next 40 ms or so.
3. Mute Audio Output / Sound Enable line.
4. Mute audio external outputs (in ADOC).
5. Set the DFL-bit to "0", such that deflection shall not restart after the slow -stop process is done.
6. Disable NVM access. Do the following:
   - Put the NVM in standby state to stop I2C write to NVM, by sending the Universal Reset Sequence.
   - Set Write Enable high: this avoids any further Write sequence to the NVM.
7. Disable all the I2C hardware communication.

8. Wait for 200 ms and execute a cold start when there is no microcontroller-reset signal. This is considered as "medium mains interruption".
9. After the cold start, the set should resume to the last status of user settings.

9.4 Video

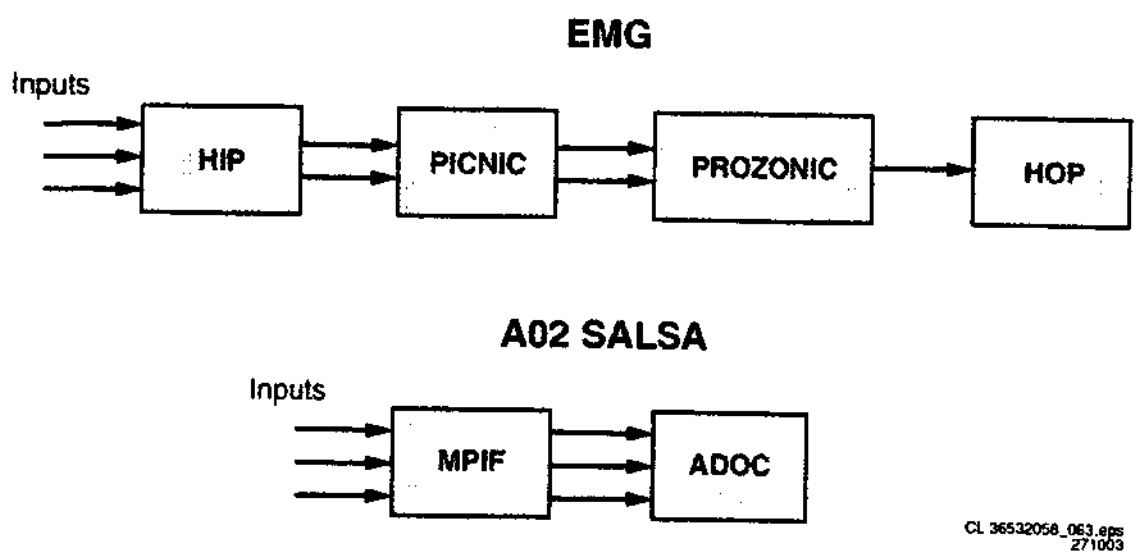

CL 36532058_063.eps
271003

Figure 9-5 Signal processing A02- versus EMG-chassis.

The SALSA video processing part is a highly integrated solution. It comprises only two ICs, the ADOC (Analogue Digital One Chip) and the MPIF (Multi Platform InterFace), while in the EMG-chassis, this was handled by four ICs (HIP, PICNIC, PROZONIC, and HOP).
The MPIF uses a nominal 8V and 5V supply, while the ADOC requires nominal supplies of 1.8V and 3.3V.

The video processing of the SALSA system can be spilt into six parts:

- Initial source selection and analogue to digital conversion performed by MPIF.
- Demodulator (VIDDEC) performed by the ADOC.
- Front End Features (FEF) performed by the ADOC.
- Memory Based Features (MBF) performed by the ADOC.
- Back End Features (BEF) performed by the ADOC.
- Digital Output Processing (DOP) performed by the ADOC.

9.4.1 MPIF Analogue Frond End

Introduction

The MPIF (Multi Platform InterFace, type number PNX3000, item number 7100) is an analogue video and audio pre-processing unit for the ADOC TV processor. It contains the high frequent IF part and all the analogue video and audio source switching for external in- and outputs. The MPIF can handle CVBS, Y/C, RGB (1fH/2fH) and YPbPr (1fH/2fH) video signals as well as stereo, I2S, and second sound IF audio signals. The MPIF converts the selected video and audio streams from the analogue to the digital domain. Via three high-speed serial data links (I2D), the digitised audio and video signals are streamed to the ADOC IC for further processing. Following figure shows the MPIF block diagram.

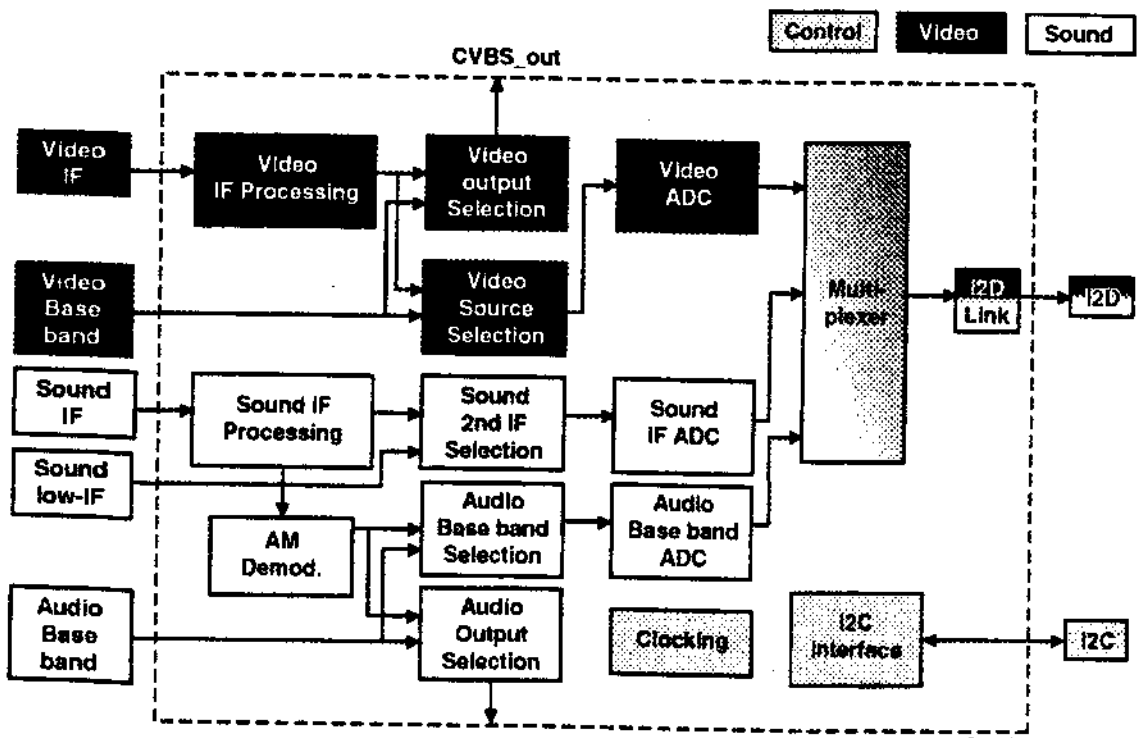

CL 36532058_065.eps
281003

Figure 9-6 MPIF block diagram

Some MPIF features:

- IF Processing:
  - Amplifier, AGC.
  - Down mixer to base band.
  - Sound trap, low pass filter.
- Video base band switching:
  - CVBS, Y/C.
  - RGB, YPbPr (1fH/2fH).
- Audio base band switching.
- Video and audio A/D conversion.
- I2D formatter:
  - Data transfer to ADOC.
- SCART output buffers.

Vision IF

The video signal is demodulated by means of an alignment-free PLL carrier regenerator with an internal VCO. This VCO is calibrated by means of a digital control circuit, which uses an external crystal frequency as reference. The frequency setting for the various standards (33.4, 33.9, 38.0, 38.9, 45.75 and 58.75 MHz) is realised via the I2C bus.
The AFC output is generated by the digital control circuit of the IF-PLL demodulator and can be read via the I2C bus.
The AGC-detector operates on top sync or top white level.
The MPIF IC has an integrated sound trap filter. The trap frequencies can be switched via the I2C-bus.
Also, a group delay correction filter is integrated. The filter can be switched between the PAL BG curve and a flat group delay response characteristic. This has the advantage that in multi-standard receivers the video SAW filter does not need to be switchable (cost effective).

Sound IF

The MPIF has a separate sound IF input to enable Quasi Split Sound (QSS) applications. The sound IF amplifier is similar to the vision IF amplifier and has a gain control range of about 55 dB.
The AGC detector measures the SIF carrier levels (average level of AM or FM carriers) and ensures a constant signal amplitude for the AM demodulator and QSS mixer.
For applications without SIF SAW filter, the IC can also be used in intercarrier mode. In this mode, the composite video signal from the VIF amplifier is fed to the QSS mixer and converted to the intercarrier frequency. AM sound demodulation is realised in the analogue domain with the QSS mixer.

Source Selection

The following selector parts can be identified:

- **CVBS/YC source selector.** The video input selector consists of four independent source selectors, that can select between the CVBS signal coming from the IF part and four external CVBS signals. Two of the external CVBS inputs can also be used as YC input. One selector is used for selection of the primary video channel. A second selector selects the CVBS or YC signal for the secondary channel. The third and fourth selectors are used for selection of analogue CVBS outputs A and B for SCART or line output. The primary channel can be a CVBS or YC signal. If an YC signal is selected for the secondary channel or external CVBS outputs A or B, the luminance and chrominance signals are added so that a CVBS signal is obtained. The video identification circuit detects the presence of a video signal on the CVBS_IF input (CVBS0). The identification output can be read via I2C bus and is normally used to detect transmitters during search tuning.
- **RGB/YPbPr source selector.** The IC has two RGB inputs. Both inputs can also be used as YPbPr input for connection of video sources with an YPbPr output like a DVD player. The RGB inputs can also be used for fast insertion of RGB signals (for instance on screen display menu's) in the primary CVBS signal. The fast insertion switch is located in the digital video processor. The RGB signals are converted to YUV before further processing. The YUV output signal is digitised with the help of two A to D converters. The U and

V components have half the bandwidth of the Y signal, because the U and V signals are multiplexed and digitised with the help of **one** A to D converter.

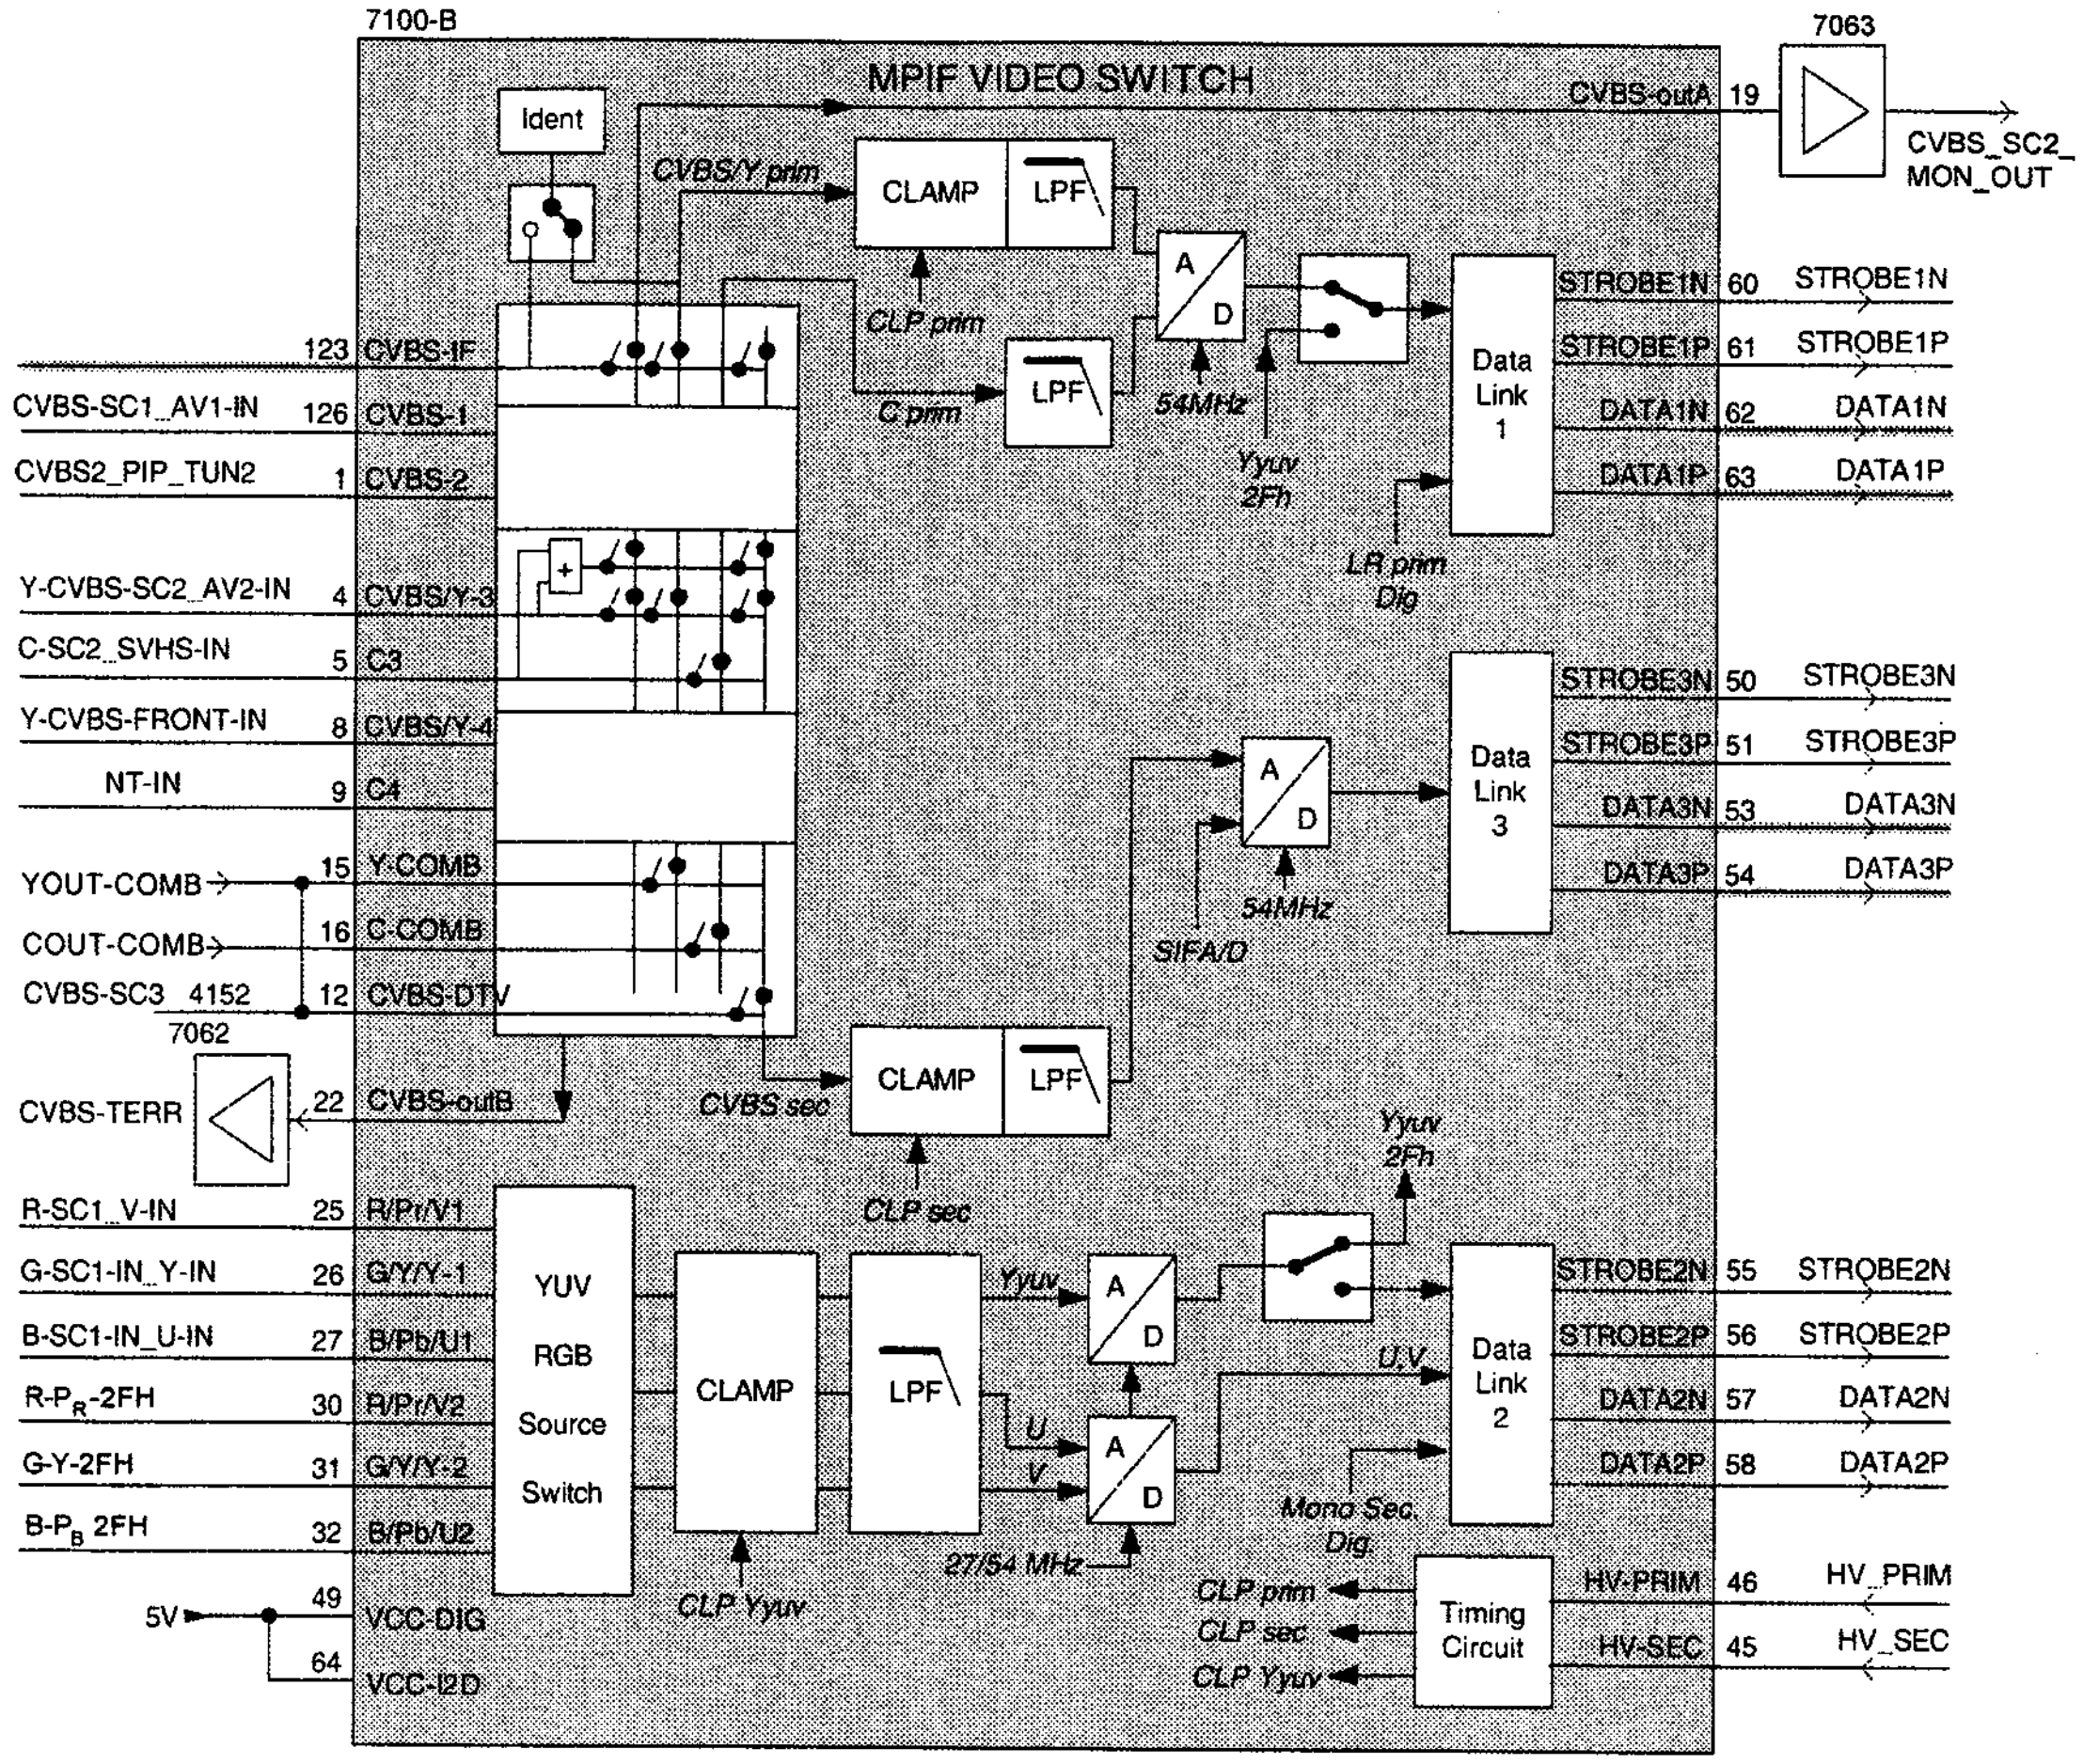
7100-B
MPIF VIDEO SWITCH
7063
CVBS-outA 19
CVBS_SC2_MON_OUT
Ident
CVBS/Y prim
CLAMP
LPF
CLP prim
C prim
A
D
54MHz
Yyuv 2Fh
Data Link 1
LR prim Dig
STROBE1N 60 STROBE1N
STROBE1P 61 STROBE1P
DATA1N 62 DATA1N
DATA1P 63 DATA1P
123 CVBS-IF
CVBS-SC1_AV1-IN 126 CVBS-1
CVBS2_PIP_TUN2 1 CVBS-2
Y-CVBS-SC2_AV2-IN 4 CVBS/Y-3
C-SC2_SVHS-IN 5 C3
Y-CVBS-FRONT-IN 8 CVBS/Y-4
NT-IN 9 C4
YOUT-COMB 15 Y-COMB
COUT-COMB 16 C-COMB
CVBS-SC3_4152 12 CVBS-DTV
7062
CVBS-TERR 22 CVBS-outB
CVBS sec
CLAMP
LPF
CLP sec
SIFA/D
54MHz
Data Link 3
STROBE3N 50 STROBE3N
STROBE3P 51 STROBE3P
DATA3N 53 DATA3N
DATA3P 54 DATA3P
R-SC1_V-IN 25 R/Pr/V1
G-SC1-IN_Y-IN 26 G/Y/Y-1
B-SC1-IN_U-IN 27 B/Pb/U1
R-P_R-2FH 30 R/Pr/V2
G-Y-2FH 31 G/Y/Y-2
B-P_B 2FH 32 B/Pb/U2
YUV RGB Source Switch
CLAMP
LPF
CLP Yyuv
Yyuv
U
V
27/54 MHz
U,V
Yyuv 2Fh
Data Link 2
Mono Sec. Dig.
STROBE2N 55 STROBE2N
STROBE2P 56 STROBE2P
DATA2N 57 DATA2N
DATA2P 58 DATA2P
5V 49 VCC-DIG
64 VCC-I2D
CLP prim
CLP sec
CLP Yyuv
Timing Circuit
HV-PRIM 46 HV_PRIM
HV-SEC 45 HV_SEC

CL 36532058_073.eps
071003

Figure 9-7 MPIF Video source selection

- **Audio source selectors.** The MPIF contains two different audio source selectors. The first selector selects which audio signals are routed to the audio ADCs for further processing in the digital domain. The selector has two outputs, a primary channel and a secondary channel:
  - The primary audio channel is used for one stereo signal. The secondary audio channel can carry a second stereo signal or AM sound signal.
  - The second selector selects which audio signals are fed to the analogue audio outputs for SCART and line out. This selector has also two stereo inputs for demodulated sound signals coming from the digital video processor.

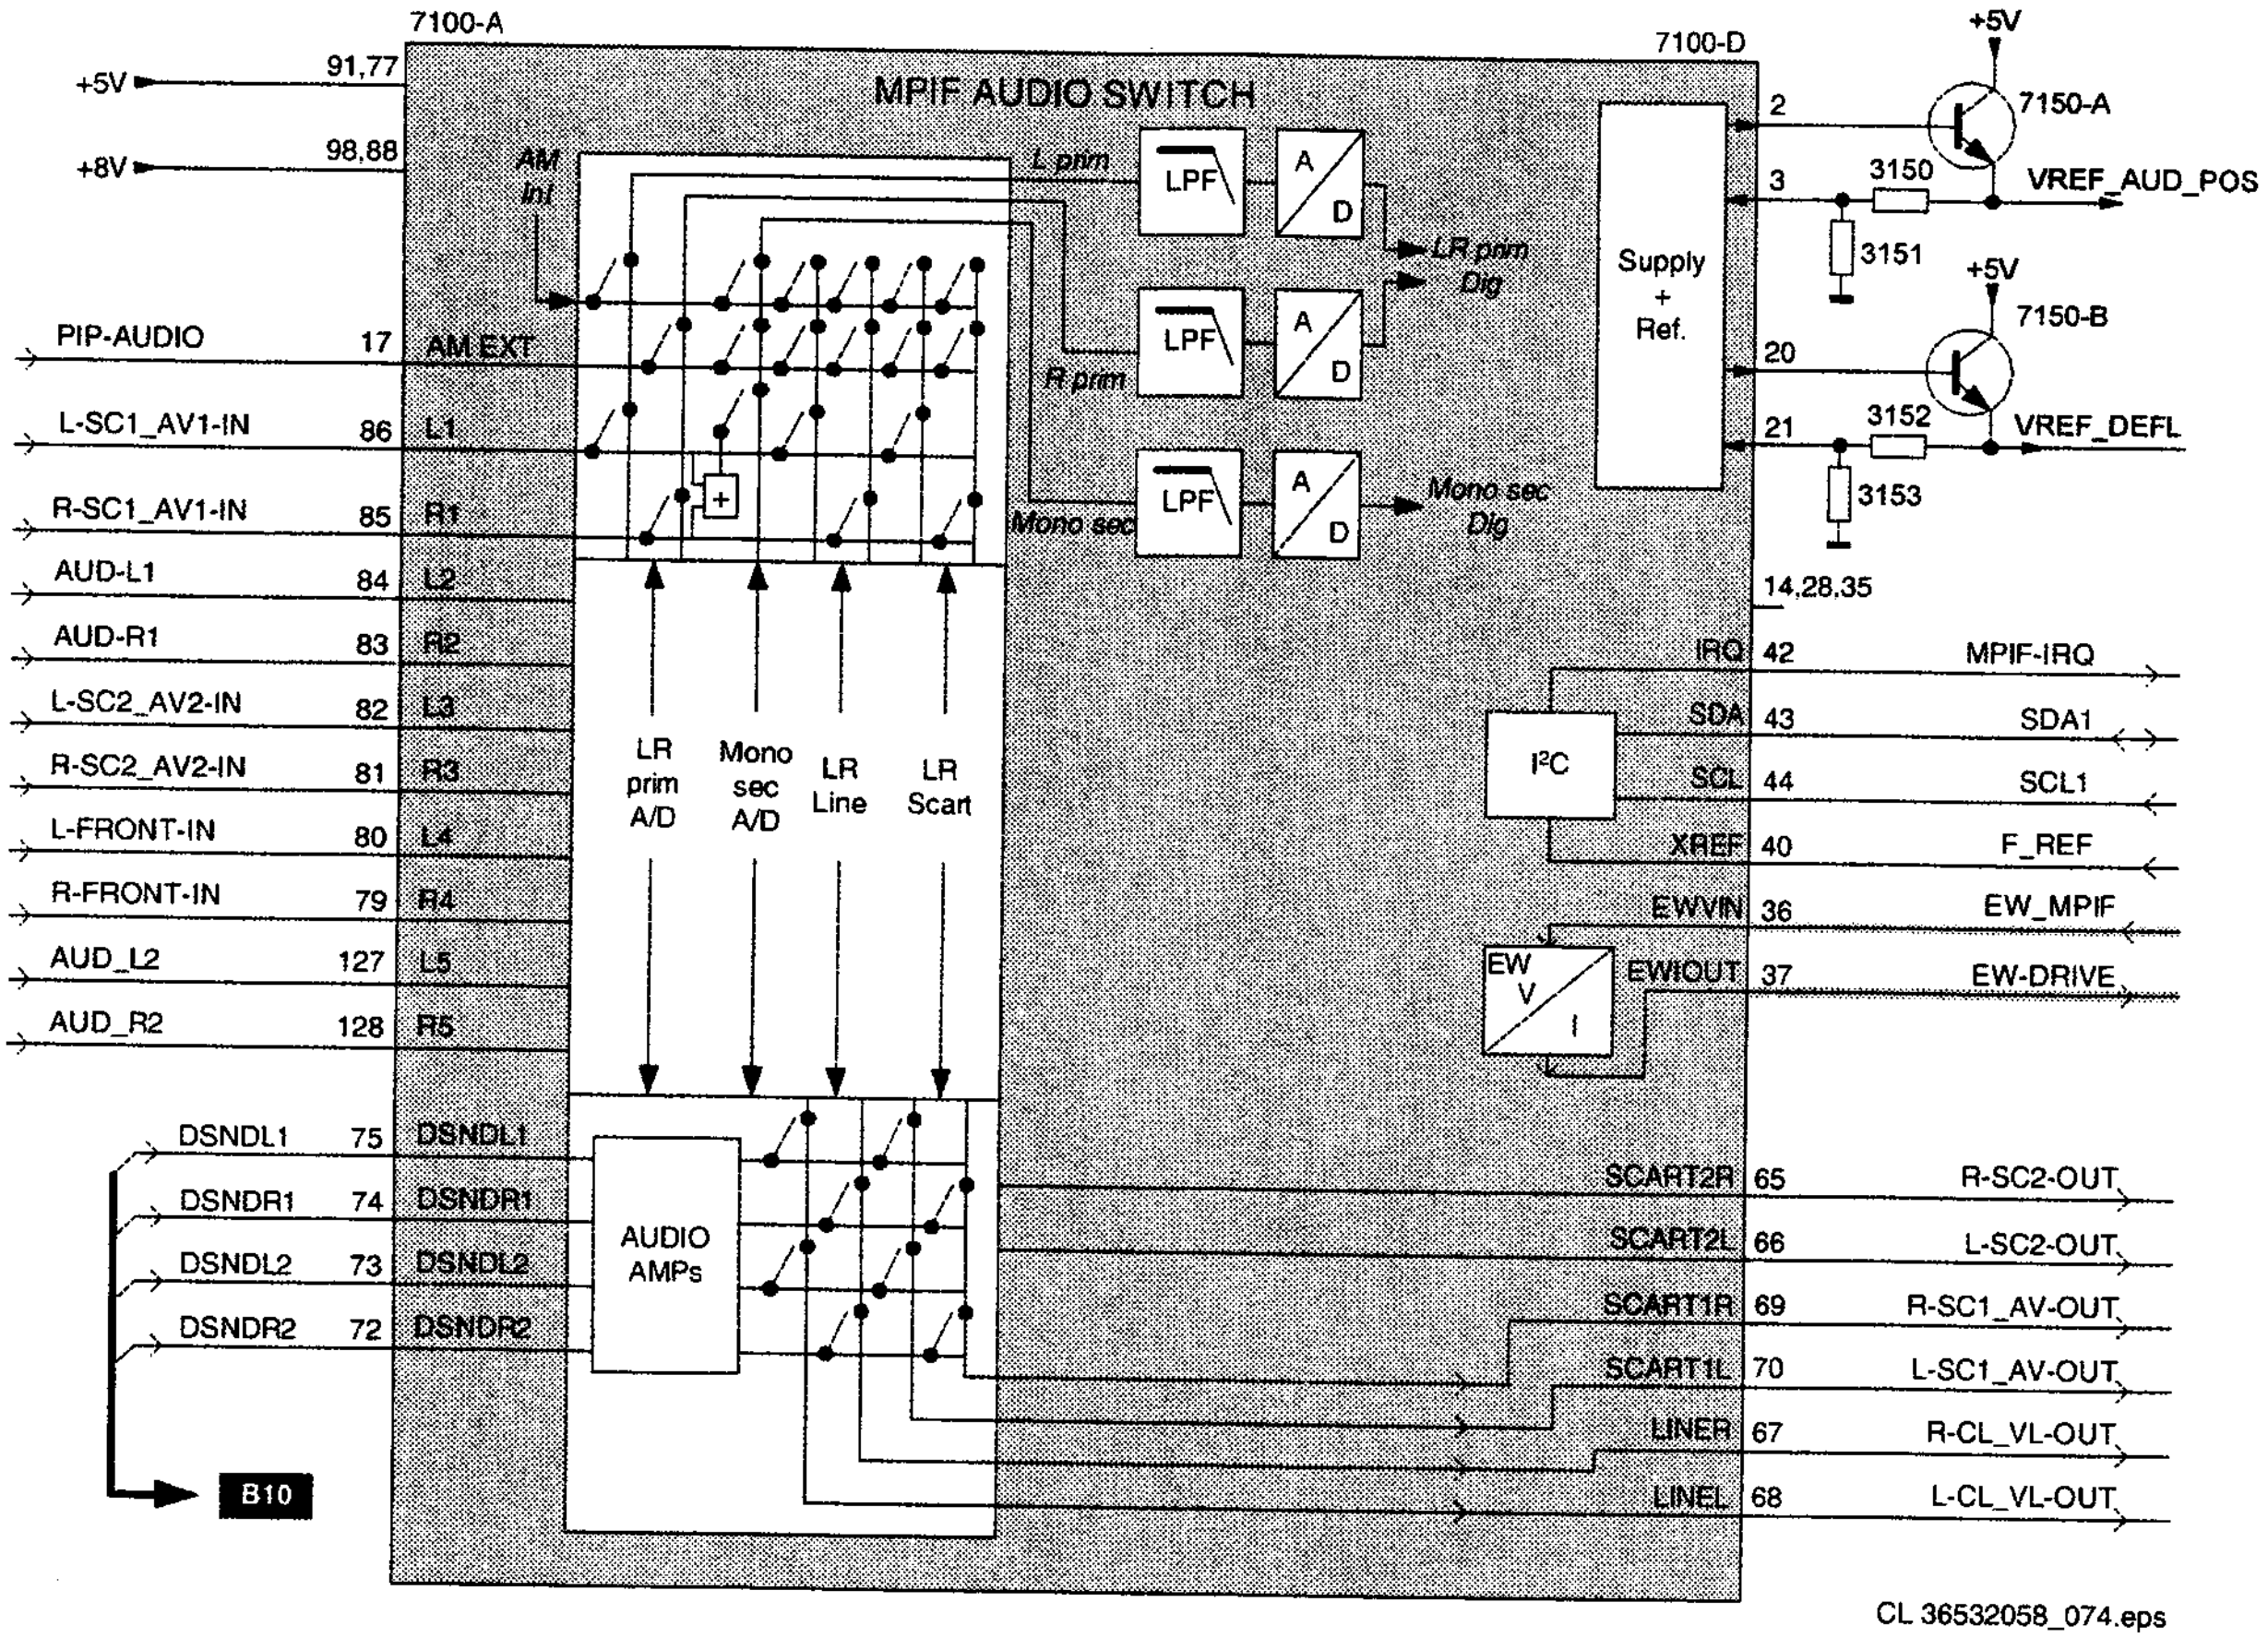
7100-A
MPIF AUDIO SWITCH
7100-D
+5V 91,77
+8V 98,88
AM Int
PIP-AUDIO 17 AM EXT
L-SC1_AV1-IN 86 L1
R-SC1_AV1-IN 85 R1
AUD-L1 84 L2
AUD-R1 83 R2
L-SC2_AV2-IN 82 L3
R-SC2_AV2-IN 81 R3
L-FRONT-IN 80 L4
R-FRONT-IN 79 R4
AUD_L2 127 L5
AUD_R2 128 R5
DSNDL1 75 DSNDL1
DSNDR1 74 DSNDR1
DSNDL2 73 DSNDL2
DSNDR2 72 DSNDR2
B10
L prim
R prim
Mono sec
LPF
A D
LR prim Dig
Mono sec Dig
LR prim A/D
Mono sec A/D
LR Line
LR Scart
AUDIO AMPs
Supply + Ref.
2
3
20
21
14,28,35
+5V
7150-A
3150
3151
VREF_AUD_POS
+5V
7150-B
3152
3153
VREF_DEFL
I²C
IRQ 42 MPIF-IRQ
SDA 43 SDA1
SCL 44 SCL1
XREF 40 F_REF
EWVIN 36 EW_MPIF
EW V I
EWIOUT 37 EW-DRIVE
SCART2R 65 R-SC2-OUT
SCART2L 66 L-SC2-OUT
SCART1R 69 R-SC1_AV-OUT
SCART1L 70 L-SC1_AV-OUT
LINER 67 R-CL_VL-OUT
LINEL 68 L-CL_VL-OUT

CL 36532058_074.eps
071003

Figure 9-8 MPIF Audio source selection

A to D Converters

The MPIF contains four video ADCs for analogue and digital video broadcast signals. The clock frequency for these ADCs is either 27 MHz or 54 MHz. In some cases, two analogue signals are multiplexed at the input of one ADC. In these cases, the clock frequency of the ADCs is 54 MHz, while the sample frequency for each of the two signals is 27 MHz.

The sample frequency for standard 1fH video signals is 27 MHz.
For the YUV channel the sample frequency of the U and V components is half the sample frequency of the Y signal.
For 2fH YPbPr or RGB input signals (for instance 480p or 1080i ATSC signals), the frequency that is used to sample the YUV signals is twice as high as for 1fH signals. The sample frequency is 54 MHz for Y and 27 MHz for U and V.
Due to the high sample frequency, two data links are needed for transport of the video data to the digital video processor.

9.4.2 Data Link Interface (I2D)

The digital interface between MPIF and ADOC is called Data Link (or I2D Link). Data Link is a pin efficient, EMC friendly and power efficient serial interface that transfers the data from MPIF to ADOC over three Data Link interfaces. Each Data Link has a data signal and a strobe signal. The synchronisation information is distributed over the data and the strobe signal.
To minimize EMC, both signal outputs are low voltage differential swing signals, with a swing of about 300 mV.
Each Data Link has four lines, one differential pair for the data, and one differential pair for the strobe. The data rate is 594 Mbit/s. Each Data Link can carry two 27 MHz sampled video streams (or one 54 MHz sampled 2fH video stream) and two audio channels sampled at 6.75 MHz.

In the MPIF, the (video and audio) data to be transmitted is multiplexed in an output register of 42 bits. The content of that 42 bits register is serial transmitted on one of the three data links. In the ADOC, the serial data is de-multiplexed into parallel streams. The data on the data link is divided in several groups of signals (video, audio and strobe signals). Obvious it is important that the transmitter and receiver are in the same transmitting mode.

9.4.3 ADOC Digital TV Processor

Introduction

The A02 system is built around the ADOC IC. This chip implements all TV functions in digital technology. Only a few functions (like AD-conversion, IF processing and source select) are implemented in an analogue companion IC, the MPIF.
The ADOC (Analogue Digital One Chip, type number PNX3001-3008, item number 7300) is a fully integrated, digitally implemented TV processor for audio, video, VBI services, graphics, and control. It is a global, multi-standard system primarily designed for the reception and processing of analogue broadcast signals.
An integrated MIPS 1910 processor runs the chassis software. This software is stored in a non-volatile external flash memory (item 7790). Following figure shows the ADOC block diagram.

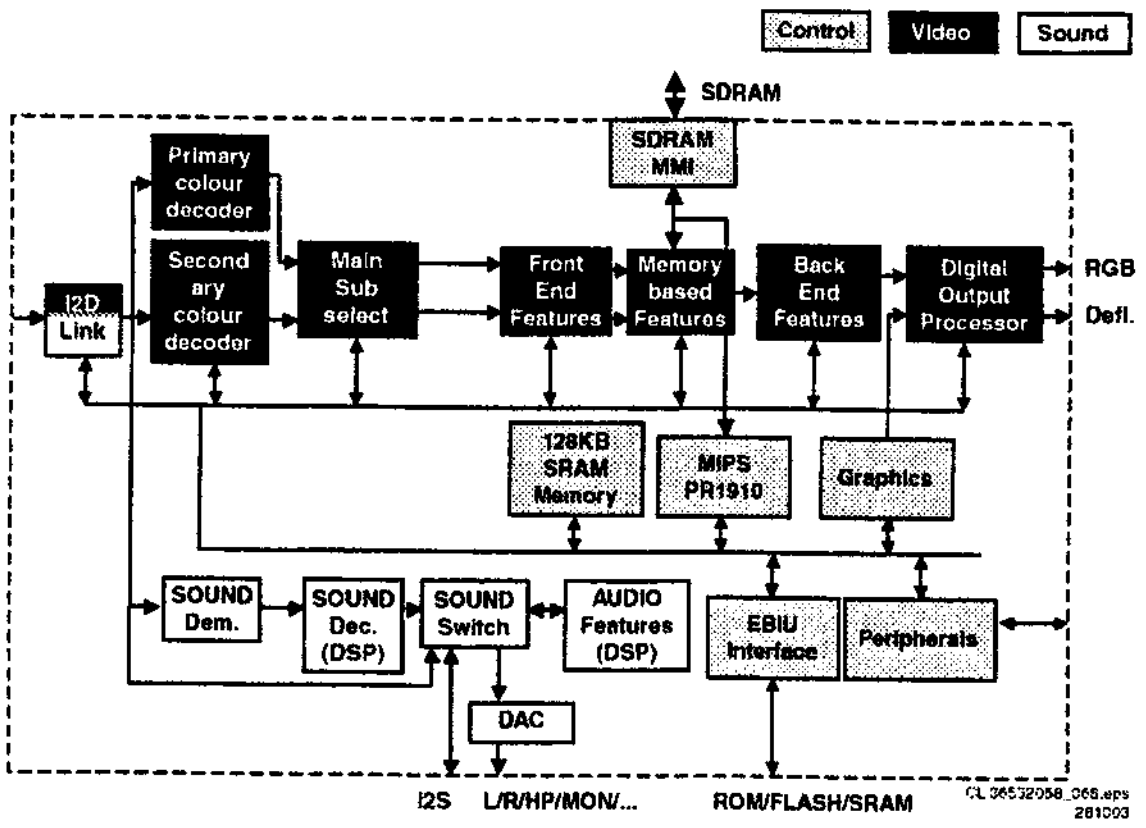
Control
Video
Sound
SDRAM
SDRAM MMI
Primary colour decoder
Secondary colour decoder
I2D Link
Main Sub select
Front End Features
Memory based Features
Back End Features
Digital Output Processor
RGB
Defl.
128KB SRAM Memory
MIPS PR1910
Graphics
SOUND Dem.
SOUND Dec. (DSP)
SOUND Switch
AUDIO Features (DSP)
EBIU Interface
Peripherals
DAC
I2S
L/R/HP/MON/...
ROM/FLASH/SRAM
CL 36532058_066.eps
281003

Figure 9-9 ADOC block diagram

The dual stream architecture of the ADOC system allows audio and video processing of two A/V sources simultaneously. The two video streams can be displayed in several programmable ways (main screen, PIP or DW). The two audio streams are audible via the TV loudspeakers and/or the headphones.
For the memory-based features (like scan rate conversion, 3D-Comb filtering, dynamic noise reduction, and PIP/DW applications), external SDRAM is used (item 7730).
The ADOC also has 128 kBytes of internal SRAM memory. This memory is used to run low latency, timing critical parts of the software. The internal memory is also used if the system operates in a single scan 50/60 Hz interlace application without any other kind of memory based features. Under these circumstances, no external SDRAM is needed.

Some ADOC features:
- Video Decoding:
  - 2-Colour Decoder (PAL, NTSC, SECAM).
  - 2D and 3D Comb filter.
- Memory Based Features:
  - PIP/DW, DNR, Scan Rate conversion.
- Picture Improvements:
  - CTI, LTI, Colour correction.
- Digital Output Processor:
  - RGB processing, Scavem, Deflection control.
- Audio Processing:
  - Demodulator/Decoder (A2, NICAM, BTSC).
  - Tone, Volume, Balance, Dolby ProLogic.
- VBI (Vertical Blank Interval) Services:
  - Teletext, Closed Caption, V-chip.
- TV Control:
  - I2C, UART, IR, Keyboard.
- Graphics:
  - Character based.

Video Decoding (VIDDEC)

The Video Decoder (VIDDEC) is the video input processor and colour decoder. There are two VIDDECs: the primary and the secondary VIDDEC. The VIDDEC processes all CVBS, Y/C, and 1fH/2fH component (e.g. RGB) video input signals.

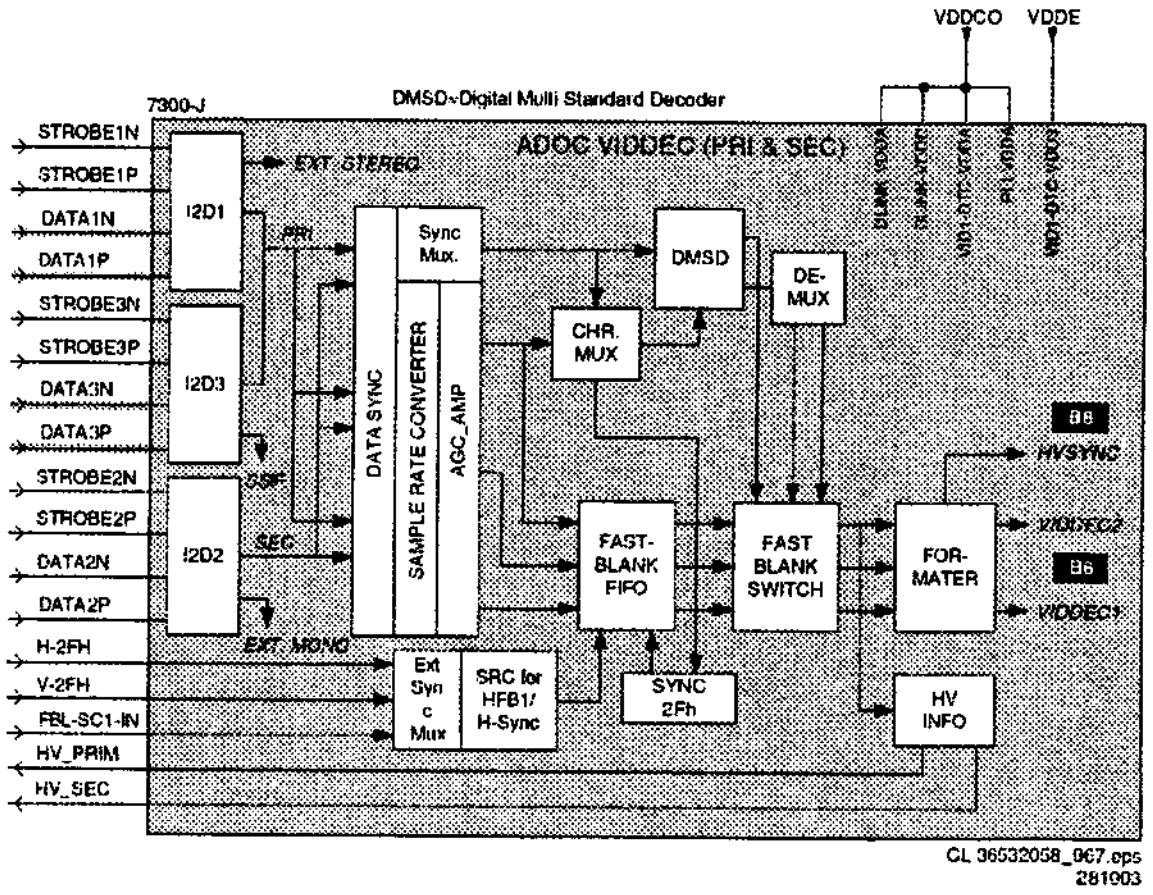
VDDCO
VDDE
7300-J
DMSD-Digital Multi Standard Decoder
ADOC VIDDEC (PRI & SEC)
STROBE1N
STROBE1P
DATA1N
DATA1P
STROBE3N
STROBE3P
DATA3N
DATA3P
STROBE2N
STROBE2P
DATA2N
DATA2P
H-2FH
V-2FH
FBL-SC1-IN
HV_PRIM
HV_SEC
I2D1
I2D3
I2D2
EXT. STEREO
PRI
SSIF
SEC
EXT. MONO
DATA SYNC
Sync Mux.
SAMPLE RATE CONVERTER
AGC_AMP
Ext Sync Mux
SRC for HFB1/ H-Sync
DMSD
DE-MUX
CHR. MUX
FAST-BLANK FIFO
FAST BLANK SWITCH
SYNC 2Fh
FOR-MATER
HV INFO
B8
HVSYNC
VIDDEC2
B6
VIDDEC1
CL 36532058_067.eps
281003

Figure 9-10 VIDDEC block diagram

Primary VIDDEC (1fH/2fH)

The primary VIDDEC supports the following functionality:
- Conversion of the digitised samples from MPIF into orthogonal samples (meaning fixed number of pixels per line, independently of line frequency).
- Correction for any amplitude errors of the input signals (CVBS, YC, or YCbCr) by means of an Automatic Gain Control (AGC).
- Standard detection of PAL/NTSC or SECAM and various 1fH/2fH component input formats.
- Colour decoding for PAL, NTSC, or SECAM input signals.
- Sync identification (to be used for channel search).
- Sync processing for any 1fH or 2fH input signal.
- Fast-blank insertion of RGB signals (supplied via MPIF) on CVBS input signals.
- 2D Comb filtering. 3D Comb filtering is implemented in the Memory Based Feature block of the Feature Box.

Secondary VIDDEC (1fH)

The secondary VIDDEC is mainly intended for use with PIP/DW. It supports the following functionality:
- Conversion of the digitised samples from MPIF into orthogonal samples (meaning fixed number of pixels per line, independently of line frequency).
- Correction for any amplitude errors of the input signals (CVBS) by means of an Automatic Gain Control (AGC).
- Standard detection of PAL/NTSC or SECAM and various 1fH component input formats.
- Colour decoding for PAL, NTSC, or SECAM input signals.
- Sync identification (to be used for channel search).
- Sync processing for any 1fH input signal.
- CVBS 1fH input signals only.

Data Synchroniser and Sample Rate Converter

The data synchroniser is a de-multiplexer that separates the UV stream into a separate U and V data stream. The sample rate converter converts the video samples from the crystal clock domain to the so-called line locked clock domain, 720 pixels per line.

Automatic Gain Control (AGC)

The AGC amplifier block controls the gain of the signal and is controlled directly by the chassis software. This gain will depend on the amplitude of the output signal (signal amplitude and/or sync amplitude) as measured by the AGC gain block. As a secondary function, it controls both the offset at the input and the offset at the output of the gain control.

Digital Multi Standard Decoder (DMSD)

This DMSD block contains the following functionality:

- Decodes a CVBS or Y/C (primary VIDDEC) signal and converts it to an YCbCr signal format. All world colour standards are supported.
- YC detection (primary VIDDEC) via a SW algorithm.
- 50/60 Hz, interlace/progressive, field polarity, and no-YC detection.
- A chroma notch with programmable width.
- 2D Comb filter (primary VIDDEC). The 3D Comb filter uses the attached SDRAM memory and is implemented in the FBX.
- Macro vision detection.

Comb Filter

The ADOC 2D comb works purely in the vertical direction, but can bypass the entire signal as luminance straight away. The 2D comb uses the 180 degrees phase shift of the colour carrier between successive lines or two lines apart. Adaptive two or four delay lines 2D Y/C comb filtering is only possible for sources routed onto the Main-Video path.

In the 3D comb filter implementation (for USA only), the 2D comb filter processing in ADOC IC (on the Main-Video path) is disabled via SW. The signal input for the 3D YC comb-filter circuit is derived from the CVBS-SC2_MON-OUT signal path. The processed signal is re-inserted back via YCOMB and CCOMB inputs of the MPIF IC.

Standard Detection

The Standard Detection part identifies PAL/NTSC/SECAM/BW but also involves Horizontal and Vertical sync identification (both 1fH and 2fH) as well as YC detection (via a SW algorithm).

YUV Multiplexer

The YUV mixer selects between the YUV output of the DMSD and 1fH component video input signals (RGB, YPbPr) or 2fH input signals (RGB, YPbPr, ATSC). The YUV mixer can also be controlled via a fast blanking input (SCART) to insert RGB signals, such as descrambler OSD or full RGB insertion of DVD players.
When a 2fH input signal is selected as a input, the complete primary VIDDEC is running at 2fH (54 MHz), including DMSD (in this scenario, the DMSD cannot be used any more for CVBS input signals, and as such, VBI data slicing cannot be done).

Feature Box

The Feature Box (FBX) in the ADOC can be divided into three functional parts: The front-end features (FEF), memory-based features (MBF), and back end features (BEF).

The FEF part of the FBX implements all signal analysis functions as well as black stretch and histogram correction.
The MBF part applies spatial scaling, temporal noise reduction and up-conversion to either progressive scan or a double field rate (100 Hz).
The BEF part implements spatial picture enhancement functions like sharpness and colour enhancement functions, sharpness measurement and horizontal scaling and panorama
The FBX has two video inputs coming from VIDDDEC 1 and 2, and outputs one RGB video stream to the display output processor (DOP).
The following sections describe the three functional parts of FBX in more detail.

Front End Features (FEF)

The FEF consists of several signal analysis functions (HME, BLD, BBD, NEST), histogram correction (HMO) and black-stretch (BS). Following figure shows the functional block diagram of the video frond-end features (FEF). All signal processing in the FEF is nine bits based.
The FEF has two video inputs coming from the VIDDECs. For every block, one video source can be chosen as input, independently for every block. The FEF has two video outputs, designated as "main" and "sub".
Histogram modification can only be performed on the main channel; therefore, the HME block is general connected to the same video source as the main channel. Besides the two VIDDEC inputs, there is also a third virtual input, the "blanking" input. Only main and sub can be connected to this blanking input, and at the same time, it can be specified which sync source has to be used (VIDDEC1 or VIDDEC2).

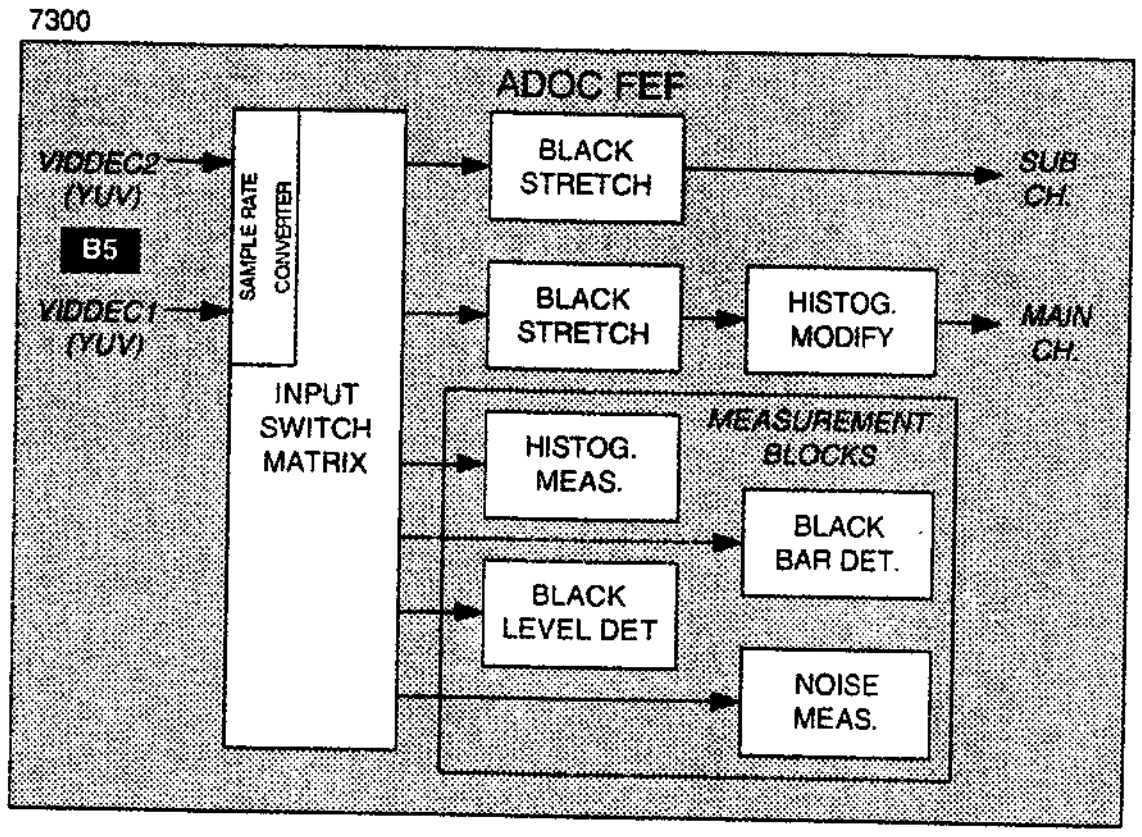

CL 36532058_069.eps
071003

Figure 9-11 FEF block diagram

When a single stream is displayed, the main output is used for this stream. Also, all signal analysis functions should be connected to the same VIDDEC as the main channel is connected to.
When two streams are displayed, then there are two user scenarios: Picture In Picture (PIP) and Double Window (DW). In the PIP scenario, the full screen picture is displayed via the main channel, and the PIP stream is switched to sub. In the DW scenario, selection of the video sources for main and sub depends on if the two streams have a different vertical resolution and how the system has to cope with this difference.

Following blocks are present:

- **Black Stretch (BS).** The function of BS is to pull the dark areas in a picture to even darker levels. BS is available in both the main and sub channel.
- **Histogram (HMx).** This block measures of every field in a programmable (measurement-) window the histogram of the luminance signal. The measurement window is set-up such that the area that contains the subtitles or black bars does not contribute to the histogram.
- **Black Bar Detection (BBD).** Many broadcasts or software played on TVs produce a so-called "letterboxed" picture. Black bars appear above and below the picture. Due to bad standardisation of the aspect ratio, e.g. the size of the black bars, there is a need to actively analyse the picture and determine of the picture is in letterbox format and what the size of the black bars is. Black bars are detected by determining if a defined number of pixels (analysed within a programmable window located in active video) are black. The output of the BBD is the first non-black line and the last non-black line.
- **Black Level Detection (BLD).** The BLD determines within a programmable (measurement) window the "black level" of a picture. The BLD will be used for the BS, but if required, it can also be used for the BBD. The BLD function records in multiple small windows within the measurement window the maximum luminance. The minimum luminance level of the various recorded maximum luminance levels is the true black level. By measuring the maximum luminance level in a small window, the BLD is not sensitive to "black" spikes.
- **Noise Estimation (NEST).** The NEST block analyses the video and outputs a number correlating to the amount of noise in the picture. A basic problem is that picture detail is also 'recognised' as noise. Several control- and status-

registers are added to compensate this. The video signal is only analysed when it is within a programmable (measurement) window. This window coincides with a rectangular shaped part of the (visible) picture. Normally this is the centre part of the picture.

Memory Based Features (MBF)

The Memory Based Features (MBF) block embodies a set of functions that require (shared) memory.
The main and sub video streams can be spatially compressed in order to produce a mixed output in the form of several PIP combinations or DW.
The main video stream can be passed through a temporal noise reduction circuit (DNR).
The 3D Comb filter is also implemented in this block.
The main and sub streams are merged when reading from memory. The merged video stream can be up-converted to either a double line rate (progressive scan) or to a double field rate (100 Hz). The up-conversion is done by means of a digital scan function. Following figure shows the functional block diagram of the video memory based features (MBF).

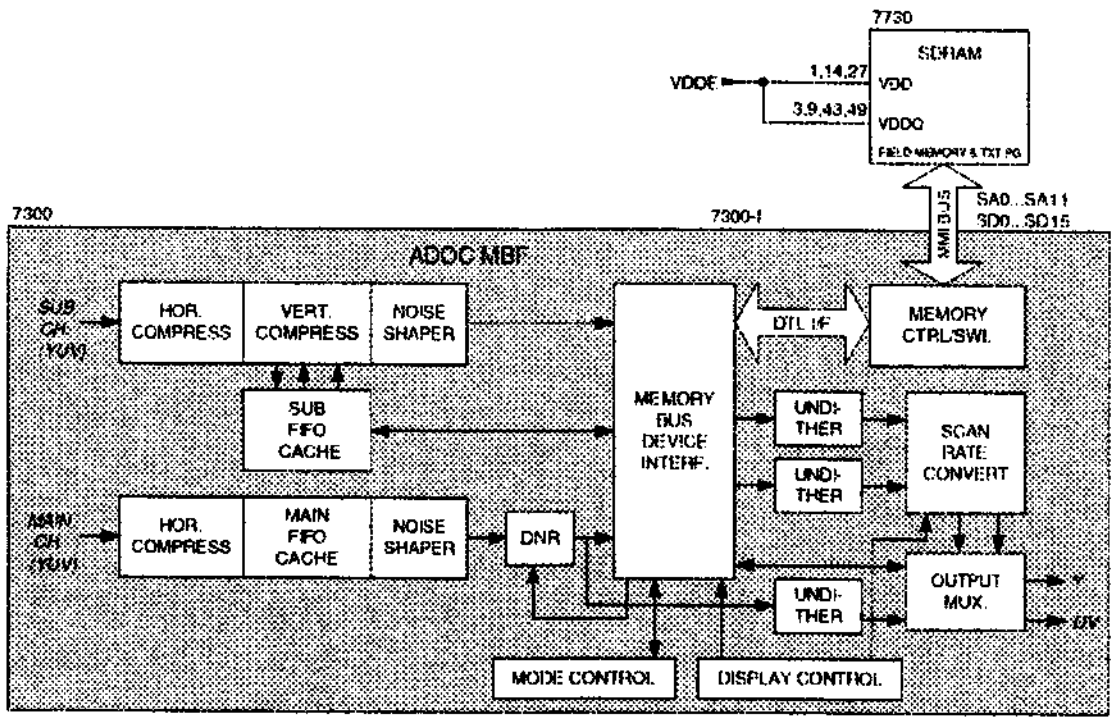
7730
SDRAM
VDDE
1,14,27
VDD
3,9,43,49
VDDQ
FIELD MEMORY & TXT PG
SA0..SA11
SD0..SD15
MMI BUS
7300
7300-I
ADOC MBF
SUB CH (YUV)
HOR. COMPRESS
VERT. COMPRESS
NOISE SHAPER
SUB FIFO CACHE
MAIN CH (YUV)
HOR. COMPRESS
MAIN FIFO CACHE
NOISE SHAPER
DNR
MEMORY BUS DEVICE INTERF.
DTL I/F
MEMORY CTRL/SWI.
UNDI-THER
UNDI-THER
UNDI-THER
SCAN RATE CONVERT
OUTPUT MUX.
Y
UV
MODE CONTROL
DISPLAY CONTROL
CL 36532058_070.eps
071003

Figure 9-12 MBF block diagram

Back End Features (BEF)

The Back End Features (BEF) block embodies a collection of spatial picture enhancement functions.
The video display has to be blanked during AV switching, channel switching, V-chip, and Child Lock modes. This is done inside the BEF block of the ADOC IC. The fast blanking signal input from SCART1and SCART3 (TV SCART inputs) for RGB video insertion is connected to the ADOC IC.

Sharpness functions are:

- Luminance Transient Improvement (LTI),
- Dynamic Peaking, and
- Digital Colour Transient Improvement (DCTI).

The panorama block does the non-linear scaling for displaying 4:3 formats on a wide-screen display.

Colour enhancement functions are:

- Skin Tone Control,
- Blue Stretch, and
- Green Enhancement.

A colour Space Converter can convert the video signal from YUV to RGB format. The Frame Processing block can insert frames and borders such as a coloured frame around the Picture in Picture (PIP). Following figure shows the structure of the Back End Feature block.

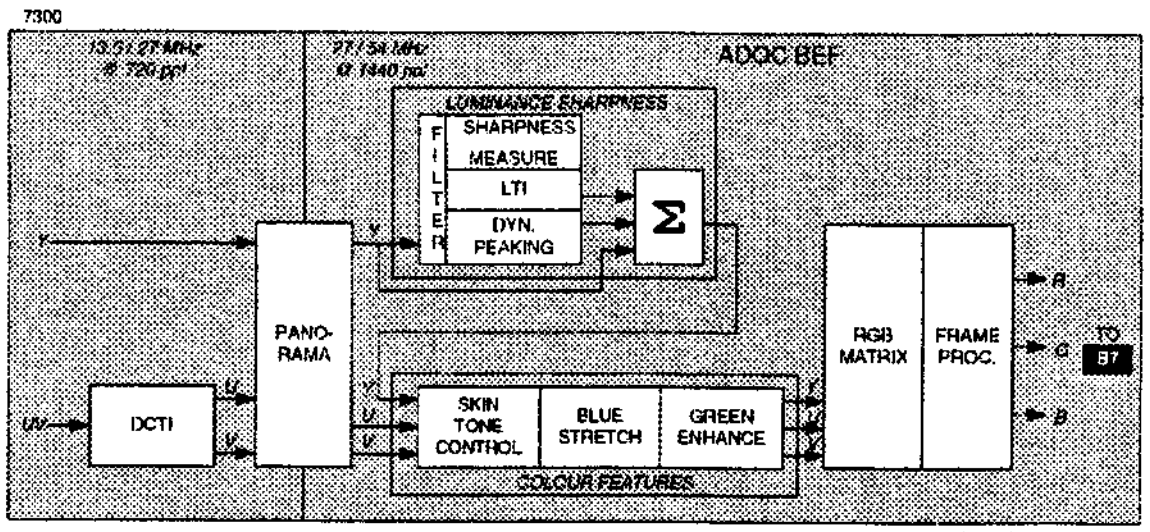
7300
13.5/27 MHz
@ 720 ppl
27/54 MHz
@ 1440 ppl
ADOC BEF
LUMINANCE SHARPNESS
FILTER
SHARPNESS MEASURE
LTI
DYN. PEAKING
Σ
Y
UV
DCTI
U
V
PANO-RAMA
SKIN TONE CONTROL
BLUE STRETCH
GREEN ENHANCE
COLOUR FEATURES
RGB MATRIX
FRAME PROC.
R
G
B
TO
B7
CL 36532058_071.eps
071003

Figure 9-13 BEF block diagram

Digital Output Processor (DOP)

The DOP is a display processor block, and contains the following functions:

- **RGB control processor** with linear RGB input for the main video signal, a linear RGB input for OSD/text signals with blending, and an RGB output stage with black current stabilisation which is realised with the continuous cathode calibration (2-point black current measurement) system.
- **Programmable deflection processor**, driven by an external crystal clock, which generates the drive signals for the horizontal, east-west, north-south and vertical deflection with extensive geometry correction capabilities.
- The circuit can be used in both single scan (50 or 60 Hz) and double scan (100 or 120 Hz) applications.

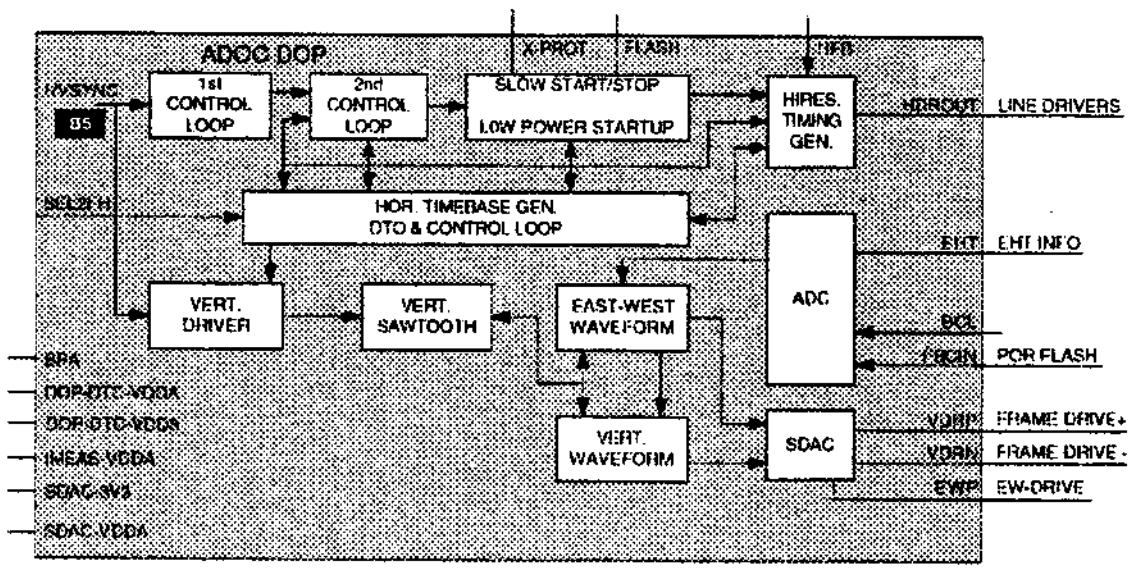
ADOC DOP
X-PROT
FLASH
HFB
H/VSYNC
B5
1st CONTROL LOOP
2nd CONTROL LOOP
SLOW START/STOP
LOW POWER STARTUP
HIRES. TIMING GEN.
HDRVOUT
LINE DRIVERS
HOR. TIMEBASE GEN. DTO & CONTROL LOOP
EHT
EHT INFO
ADC
BCL
POR FLASH
VERT. DRIVER
VERT. SAWTOOTH
EAST-WEST WAVEFORM
VERT. WAVEFORM
SDAC
FRAME DRIVE+
FRAME DRIVE-
EWP
EW-DRIVE
DOP-DTC-VDDA
DOP-DTC-VDDA
IMEAS-VDDA
SDAC-3V3
SDAC-VDDA
CL 36532058_068.eps
071003

Figure 9-14 DOP block diagram

RGB Control Processing

- The RGB control circuit of the DOP contains two sets of input signals:
  - The first RGB input (RGB), 10 bits wide, is intended for the normal video signals coming from the BEF part. The "RGB" signals will first enter a contrast control stage, followed by a brightness control stage, both influenced by a combination of user control, Beam Current Limiter and Peak White Limiter, followed by a soft clipper stage. Then the signal will be applied to the blender stage. The blender input signal will be used as an input for the peak white limiting system.
  - The second RGB input (GFX), 4 bits wide, is intended for OSD and Teletext signals. The switching between the internal signal and the OSD signal is realised via a blending function. The "GFX" input signals will be re-formatted to 10 bit wide internally before entering the Beam Current Control brightness correction stage, followed by the hard clip stage. Then the signal will also be applied to the blender stage.
- The two input data streams are combined into one stream by the blender. This blender is controlled by a third data stream.
- The next block is the "Drive Adjust" part. It contains a Picture Tube Biasing system, a Beam Current Control, and Peak White Limiting part.

In order to enhance the spatial bandwidth of the CRT display, Scan Velocity Modulation (SCAVEM) is implemented on the CRT-panel.

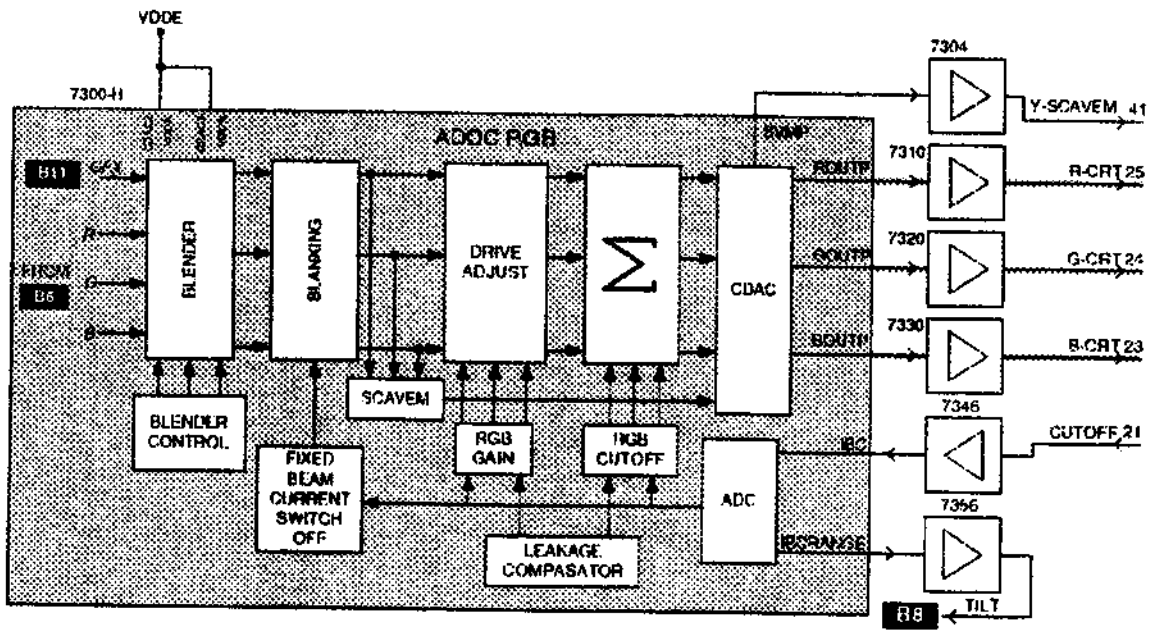

CL 36532058_076.eps
071003

Figure 9-15 ADOC RGB control block diagram

Synchronisation and Deflection Processing

- **Horizontal synchronisation and drive circuit.** The horizontal drive signal is obtained from an internal oscillator, which runs at a fixed frequency of 54 MHz. This oscillator is synchronised to the incoming horizontal H_D pulse by means of a digital PLL. The horizontal drive signal is generated by a second control loop, which compares the phase of the reference signal, applied from the internal DTO, to the horizontal flyback pulse HFB.
- **Vertical deflection and drive circuit.** The drive signals for the vertical and E/W deflection circuits are generated by a vertical divider, which derives its reference signal from the Horizontal Time base Generator. This divider is synchronised by the incoming V_D pulse, generated by the input processor or the Feature Box. The vertical drive output is realised by a differential voltage, which is generated by SDACs. The outputs must be DC-coupled to the vertical output stage (TDA8177, item 7620 on the LSP).

See also figure "DOP block diagram"

9.5 Synchronisation

9.5.1 Sync Flow

The CVBS signal on the SCART1 connector (CVBS-SC1_AV1-IN system signal path; designated as EXT 1 CVBS) is used to provide synchronisation for the EXT1 RGB input. Besides providing synchronisation for RGB source, EXT1 CVBS is also required for SCART2 CVBS output.

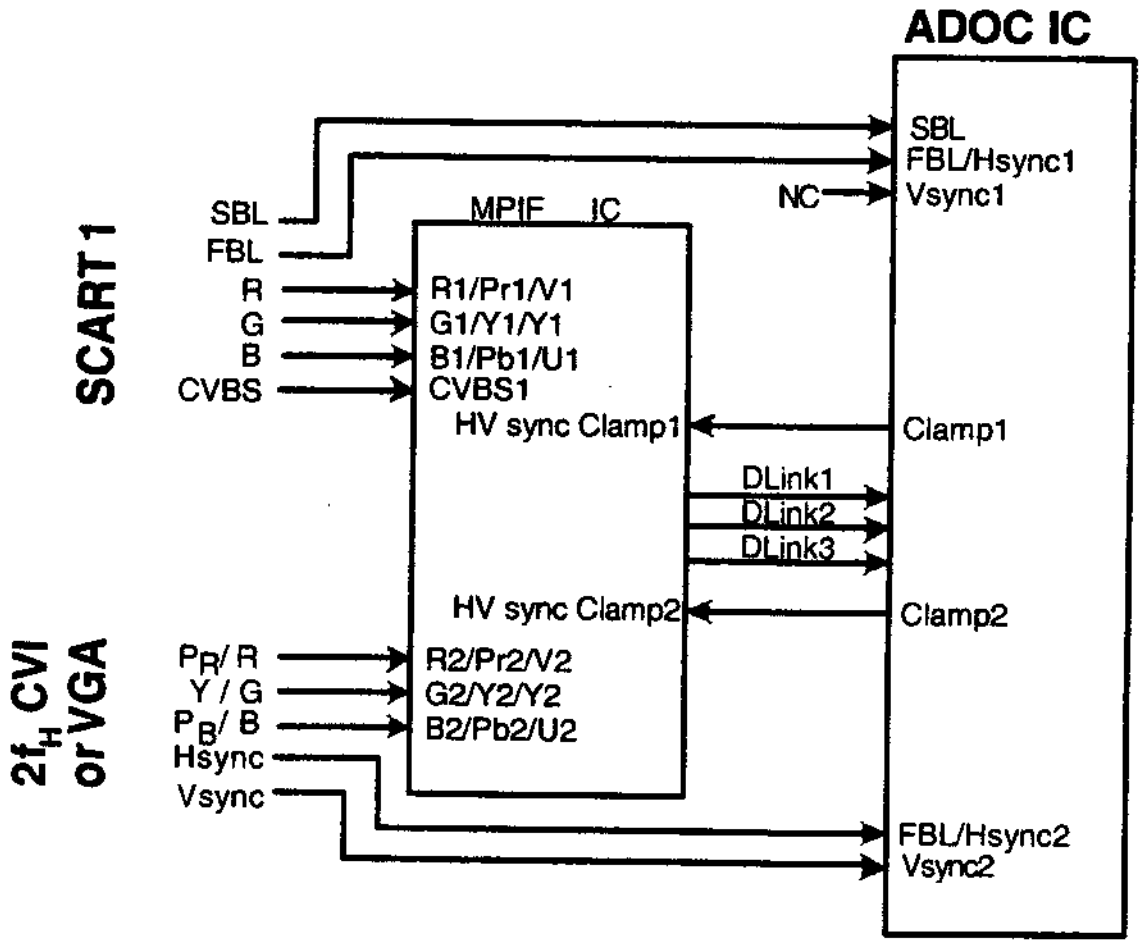

CL 36532058_082.eps
281003

Figure 9-16 Sync flow block diagram

For 1fH CVI input, synchronisation is derived from sync-on-Y. For the 2fH CVI input, synchronisation signal is derived from sync-on-Y input or the H_SYNC/V_SYNC.
In case of VGA input, synchronisation signal is taken from H_SYNC and V_SYNC inputs

9.6 Audio

9.6.1 Introduction

Sound IF processing, audio source selection, and audio analogue-digital signal conversions are done in the MPIF IC. SIF demodulation, sound system auto-detection, audio base-band, and headphone processing is done in the ADOC IC. Therefore, the ADOC contains a digital TV sound processor for analogue and digital multi-channel sound systems in TV sets. By hardware programming, several applications can be scaled.

The sound processing of the SALSA system can be split into three parts:

- Initial source selection and analogue to digital conversion performed by MPIF.
- Demodulator and Decoder (DEMDEC) performed by the ADOC.
- Back End Features (BEF) performed by the ADOC.

9.6.2 MPIF Sound part

The (main) Tuner receives an RF signal and converts it to IF. Via the appropriate SAW filters, the SIF signal is delivered to the QSS mixer stage of the MPIF IC and if channels according to standard L/L' are received also to the AM demodulator. The Quasi Split Sound demodulation generates the SSIF or intercarrier signal. By the SSIF switch, it is possible to choose between the internally derived intercarrier and an external second SIF (e.g. from a PIP front end or 10.7 MHz radio). The selected SSIF passes some anti-alias filtering, is amplified in an AGC amplifier and is then converted from analogue to digital (SSIF AGC/ADC). Together with other signals, the digitised SSIF is transferred via an I2D-Link to the ADOC IC.
The audio signal out of the AM demodulator is connected to the analogue X-bar in the MPIF IC. All other inputs to this multiplexer/audio switch come from external, either from the PIP front end (AMEXT/PIPMONO) or SCART/CINCH (AUDxin) or the DAC1, DAC2 output signals from ADOC. The audio AD converters are digitising the audio signals foreseen for further digital processing in ADOC. Three stereo outputs (AUDx out, LINE out) are available for connections to SCART/CINCH sockets.
The sound part of ADOC consists of the demodulator/decoder (DEMDEC), sample rate conversion (SRC), a digital input X-bar, the digital audio processing for the loudspeaker, headphone and DAC channels, the I2S processing and interfacing as well as the DA conversion. This part will be described in the next chapter.

9.6.3 ADOC Sound part

Introduction
The ADOC sound part contains two DSP cores as shown in the block diagram. The first core called DEMDEC-DSP is combined with DEMDEC (Demodulation/Decoding) hardware and the second core is the AUDIO-DSP. The DEMDEC-DSP is used for the decoder and demodulator tasks, plus the sample rate conversion.
The AUDIO-DSP is used for the sound features, from the level adjust unit up to the output cross bar. Audio DACs and I2S hardware (optional) are converting the processed signals to analogue or digital audio.

All I2D data links carry sound signals. The data link processing splits them from the other signals as video so that the DEMDEC block receives the second sound IF (SSIF) and the audio

signals from the audio ADCs of the MPIF IC. The SSIF needs some hardware processing before it enters the DEMDEC DSP. The DEMDEC processing will be described in the next chapter. The audio signals from the audio ADCs of the MPIF are passing the DEMDEC DSP only for source selection and sample rate conversion.
In this chassis, two of the DAC **outputs** are used to feed a headphone. Two other DAC stereo outputs are provided for the audio feedback to the MPIF IC. They are located to pins of the ADOC that suit best for connection to MPIF.

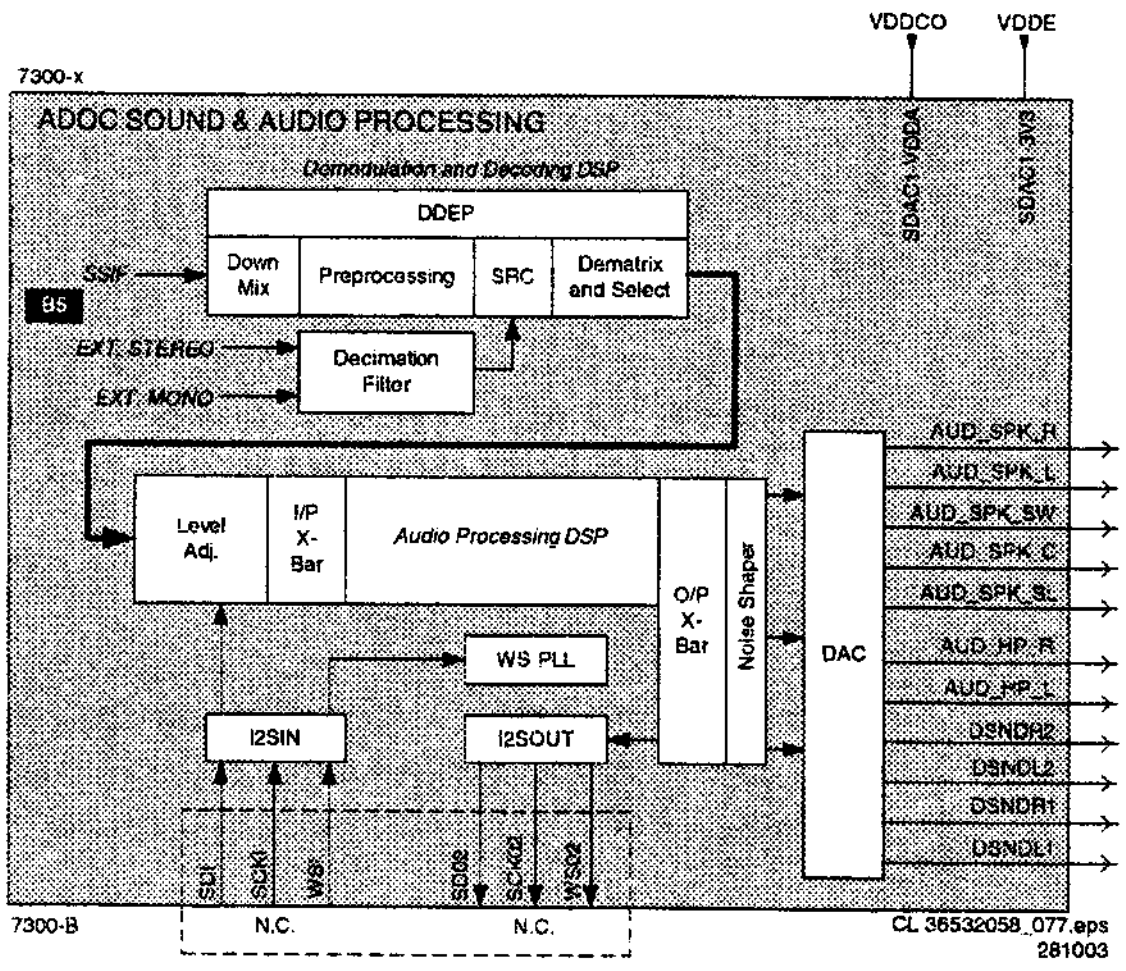

Figure 9-17 ADOC sound processing block diagram

DEMDEC DSP

The output signals of the above-mentioned hardware blocks, plus four audio ADC channels are read in by the DEMDEC DSP, processed, converted to the current audio sample rate, "demultiplexed", and forwarded to the Audio DSP for further processing (volume, tone control, effects etc.).

Down Mixer

The digitised SSIF input signal is fed to the mixers, which mix one or both input sound carriers down to zero IF.

Pre-processing

This part contains the sound system identification and demodulation circuitry.

Audio Sample Rate Conversion (SRC)

All input signals pass through a sample rate conversion to the actual output sample rate (usually 48 kHz) such that the output rate does not need to be synchronised with any of the input rates. Up to five separate channels can be converted.

Audio Processing DSP

This block applies several filters, like down-sampling and de-emphasis, noise reduction processing, performs a sample rate conversion (SRC) to the current audio sample rate, and routes the decoded signals to the output channels.
The generic processing controls are Volume, Bass, Treble, Balance, Incredible Surround, Spatial (incredible mono), DBE, Dynamic Ultra Bass II (for non-woofer sets only), AVL, Sub-Woofer, and 5-band Graphic equaliser.
The Headphone volume can be separately controlled in the Headphone menu without affecting the master volume (the setting of the volume tables will be adapted after fine tuning).
For variable volume output for USA, the DAC1 output will switch to the Main channel and therefore the same volume curve for the Main Channel can be used.

9.6.4 Audio Amplifier

Speakers (diagram A6)

The audio output stage is built around IC7701 , which is a balanced amplifier, and is located on the LSP. It uses an monolithic integrated power amplifier IC, the TDA7497. The gain of the amplifier is constant. This means that volume control is done via the ADOC.
The supply voltage is +28 V, generated by the power supply via L5506 (or L5512). The TDA7497 delivers an output of 3 x 10 W_rms to two full range speakers and an (optional) subwoofer.

Muting

There are three types of muting available: system mute, headphone status mute, and user mute.

- **System mute.** System muting is implemented for "special events" such as channel/source change event, loss of identification signal, "on/off" switching of the set, during search and auto store/program, and/or sound mode change. This muting is transparent to the user. Audio output is muted before the above "special events" occurred, to prevent problems such as audible plop. Muting is done via the SOUND-ENABLE (software controlled) and/ or POR (hardware controlled) line connected (via TS7710 and 7711) to pin 10 of the amplifier-IC and coming from the ADOC microprocessor.
- **Headphone status mute.** A headphone status is available to detect the presence of the headphone and mute the main speakers if the headphone is detected. The microprocessor will read the FRONT-DETECT status.
- **User mute.** This is a mute option available to the user. The user select the MUTE option on the remote control to switch "off/on" the sound output to the main loudspeaker and the (optional) subwoofer.

Headphone amplifier (diagram A7)

The headphone amplifier is built around IC7751 (NJM4556), which is a high-gain, high output current dual operational amplifier. The supply voltage is +5 V.

9.7 Control

9.7.1 Introduction

The MIPS processor within the ADOC performs the control of the complete SALSA system. This part of the document will examine the functions that enable the MIPS to operate and control the remainder of the SALSA system.

Some control features:

- MIPS1910 processor (MIPS).
- Embedded SRAM.
- External Bus Interface Unit (EBIU) for external memory access.
- SDRAM Interface.
- Interrupt Controller.
- Power and Clock management.
- General Purpose I/O (GPIO).
- Analogue to Digital conversion.
- Two x I2C master/slave.
- Two x General Purpose Timers.
- UART.
- Two x Multi-standard VBI Data Capture Unit.
- EJTAG (for debug and boundary scan functions).
- Remote Control (Infra Red) pre-processing.
- Graphics.

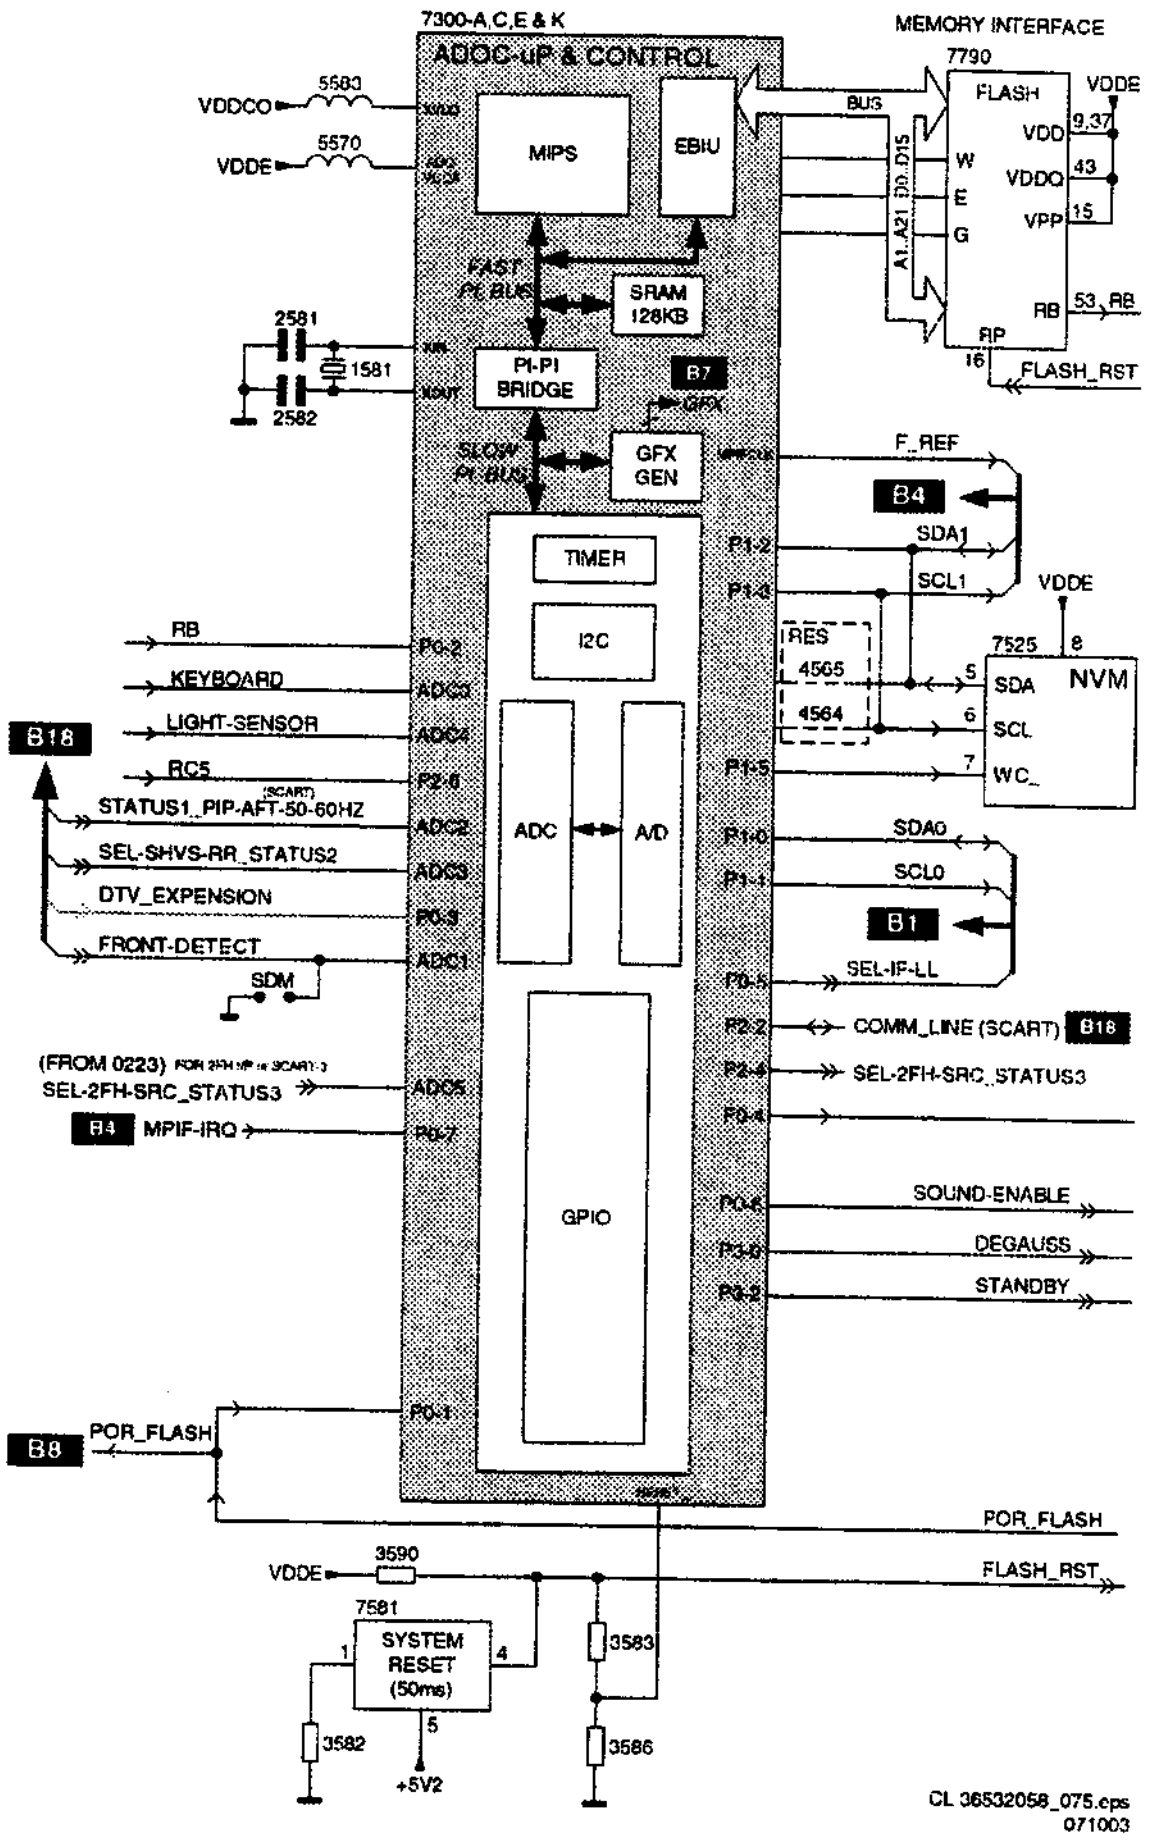
7300-A,C,E & K
ADOC-uP & CONTROL
MEMORY INTERFACE
7790
FLASH
VDDE
VDD
VDDQ
VPP
9,37
43
15
W
E
G
RB
53
RB
RP
16
FLASH_RST
BUS
A1..A21 D0..D15
VDDCO
5583
VDDE
5570
MIPS
EBIU
FAST PI BUS
SRAM 128KB
2581
1581
2582
PI-PI BRIDGE
B7
GFX
SLOW PI BUS
GFX GEN
F_REF
B4
SDA1
SCL1
P1-2
P1-3
VDDE
TIMER
I2C
RES
4565
4564
7525
8
5
6
7
SDA
SCL
WC_
NVM
RB
KEYBOARD
LIGHT-SENSOR
RC5
B18
(SCART)
STATUS1_PIP-AFT-50-60HZ
SEL-SHVS-RR_STATUS2
DTV_EXPENSION
FRONT-DETECT
SDM
P0-2
ADC0
ADC4
P2-6
ADC2
ADC3
P0-3
ADC1
ADC
A/D
P1-5
P1-0
P1-1
SDA0
SCL0
B1
P0-5
SEL-IF-LL
P2-2
COMM_LINE (SCART)
B18
P2-4
SEL-2FH-SRC_STATUS3
P0-4
(FROM 0223)
SEL-2FH-SRC_STATUS3
ADC5
B4
MPIF-IRQ
P0-7
GPIO
P0-6
SOUND-ENABLE
P3-0
DEGAUSS
P3-2
STANDBY
B8
POR_FLASH
P0-1
POR_FLASH
VDDE
3590
FLASH_RST
7581
SYSTEM RESET (50ms)
1
4
5
3583
3582
+5V2
3586
CL 36532058_075.eps
071003

Figure 9-18 ADOC control block diagram

9.7.2 Internal Bus Structure

PI Bus

The Peripheral Interconnect (PI) bus connects all of the functional blocks within the ADOC device. Physically it is split into four distinct sections. These are referred to as:

- Fast PI Bus.
- Slow PI Bus.
- Video PI Bus.
- Sound PI Bus.

The individual segments of the PI bus are interconnected via PI-PI bridges. When several devices are connected to a bus system section only one of these may have control (ownership) of the bus section at any instant in time. The device that has control is referred to as the bus master, the remaining devices are referred to as slaves. Each bus segment section has a Bus Control Unit (BCU), which allocates bus ownership to the various modules that are capable of being bus masters. A bus master may have ownership of one or more sections of the PI bus.

Extension Bus Interface Unit

The Extension Bus Interface Unit (EBIU) allows various types of memory (ROM/FLASH/SRAM) to be attached to the ADOC IC and must therefore be configured per memory type (in terms of chip select lines, bus width used, and access times). This enables the hardware of the EBIU to correctly address the external memories and apply the correct number of wait states.

9.7.3 Microprocessor Reset

The reset of the device is split between three functions:

- Power-On-Reset (POR). Output is fed to the Power Clock Reset (PCR) block generating a Hard reset (all functions reset).
- PCR. In simplified terms two outputs are available:
  - Hard reset, all blocks within ADOC are reset.
  - Soft reset, a limited number of blocks within the control core are reset.
- GP registers are used to allow software control of the reset to certain blocks within ADOC.

9.7.4 External Bus Structure

I2C Bus

The system has two system I2C buses; one for the devices on the SSB and the other for the devices used in the external modules .

- The **I2C-1** system bus, comprises of SCL and SDA, is used to control all the I2C devices on the LSP (the main tuner) and other I2C devices connected to other external panels (PIP Front-End demodulation IC, PIP tuner, etc.). The I2C-1 is a 100 kHz bus and is called as "slow" bus. It is connected to the +5V supply. All these devices are powered down in the Standby mode.
- The **I2C-2** system bus, comprises of SCL2 and SDA2, is used to control all the I2C devices (MPIF, 3D-Comb, NVM, etc.) present on the SSB. The I2C-2 is a 400 kHz bus and is called as "fast" bus. It is connected to the +3.3V supply.

9.8 Protections

For a detailed description, see chapter 5 "Service Modes, Error Codes, and Fault Finding".

9.9 Software Upgrading

In this chassis, you can **upgrade** the software via ComPair. This offers the possibility, to replace the entire SW image without having to remove the flash-RAM from its socket. You can find more information on how this procedure works in the ComPair file. It is possible that not all sets are equipped with the hardware, needed to make software upgrading possible. To speed up the programming process, the firmware of the ComPair interface can be upgraded. See Chapter "Service Modes ..."; paragraph "ComPair" - "How To Order" for the order number.

9.10 Abbreviation list

Table 9-1 Abbreviations

Abbreviation	Description
0/6/12	SCART switch control signal on A/V board. 0 = loop through (AUX to TV), 6 = play 16:9 format, 12 = play 4:3 format
2CS	2 Carrier Stereo
A2	Commonly known as two carriers sound (2CS) system
AC (or ac)	Alternating Current
ACI	Automatic Channel Installation: algorithm that installs TV channels directly from a cable network by means of a predefined TXT page
ADC	Analogue to Digital Converter
ADOC	Analogue Digital One Chip
AFC	Automatic Frequency Control: control signal used to tune to the correct frequency
AGC	Automatic gain control (feedback) signal to the tuner.
AM	Amplitude Modulation
ANR	Automatic Noise Reduction: one of the algorithms of Auto TV
AP / A/P	Asia Pacific
AR	Aspect Ratio: 4 by 3 or 16 by 9
ASD	Automatic Standard Detection
AV	External Audio Video
AVL	Automatic Volume Level control
B	Blue
B/G	Monochrome TV system. Sound carrier distance is 5.5 MHz
BBD	Black Bar Detection
BCL	Beam Current Limiter
BC-PROT	PROTection signal to the microprocessor for a too high Beam Current.
BG	System B and G
BLC-INFO	BLack Current INFO
BLD	Black Level Detection
BS	Black Stretch
BTSC	Broadcast Television Standard Committee. Multiplex FM stereo sound system, originating from the USA and used e.g. in LATAM and AP-NTSC countries
C	Chroma (video) / Centre channel (audio)
CL	Constant Level: audio output to connect with an external amplifier
CLUT	Colour Look Up Table
ComPair	Computer aided rePair
CRT	Cathode Ray Tube or picture tube
CSM	Customer Service Mode
CTI	Colour Transient Improvement: manipulates steepness of chroma transients
CVBS	Composite Video Blanking and Synchronization
CVI	Component Video Input
D/K	Monochrome TV system. Sound carrier distance is 6.5 MHz
DAC	Digital to Analogue Converter
DBE	Dynamic Bass Enhancement: extra low frequency amplification
DC (or dc)	Direct Current
DCC	Dynamic Contrast Control
DC-filament	Filament supply voltage
DEGAUSS	Control line. Logic LOW to enable CRT degaussing. Logic HIGH to disable the CRT degaussing.
DFU	Directions For Use: owner's manual
DNR	Digital Noise Reduction: noise reduction feature of the set
DOP	Digital Output Processor (Part of ADOC which takes care of RGB control and delection)
DPL	Dolby Pro Logic
DRAM	Dynamic RAM
DS	Digital Scan
DSP	Digital Signal Processing
DST	Dealer Service Tool: special remote control designed for dealers to enter e.g. service mode (a DST-emulator is available in ComPair)
DTS	Digital Theatre Sound
DVD	Digital Versatile Disc
DVI(-d)	Digital Visual Interface (d= digital only)
DW	Double Window
DYN-FASE-COR	Dynamic phase correction, to correct the phase of the H-drive
EEPROM	Electrically Erasable and Programmable Read Only Memory
EHT	Extra High Tension
EHT-INFO	Extra High Tension INFOrmation, used for contrast reduction, vertical and horizontal amplitude correction, beam current protection, and flash detection
EMI	Electro Magnetic Interference
EPG	Electronic Program Guide: system used by broadcasters to transmit TV guide information (= NexTView)
EPLD	Erasable Programmable Logic Device
EU	Europe
EW	East West, related to horizontal deflection of the set
EW-DRIVE	East -West correction drive signal.
EXT	EXTernal (source), entering the set by SCART or by Cinches (jacks)
FBL	Fast BLanking: DC signal accompanying RGB signals
FBX	Feature Box: module which contains 100 Hz processing, Pixel Plus, and AutoTV algorithms (FBX6= based on PICNIC, FBX7= based on PICNIC and Eagle)
FE	Front End
Field	Each interlaced broadcast FRAME is composed of two Fields, each Field consists of either Odd or Even lines
FILAMENT	Filament of CRT
FLASH	FLASH memory
FM	Field Memory / Frequency Modulation
FM Radio	Audio receiver which can receive the FM Band 87.5 - 108 MHz
FMR	FM Radio
Frame	A complete TV picture comprising of all lines (625/525)
FRAMEDRIVE -	Differential frame (vertical) drive signal (negative)
FRAMEDRIVE+	Differential frame (vertical) drive signal (positive)
FRC	Frame Rate Converter
FRONT-DETECT	Control line for detection of headphone insertion, Service Mode jumper, power failure detection.
FRONT-Y_CVBS	Front input luminance or CVBS (SVHS)
G	Green
Gb/s	Giga bits per second
H	H_sync to the module
H_2FH	Horizontal sync input for the 2fH source.
H_A50	Horizontal Acquisition 1fH: horizontal sync pulse coming out of the HIP
H_D100	Horizontal Drive 2fH: horizontal sync pulse coming out of the feature-box
H_DRIVE	Horizontal Drive
H_FLYBACK	Horizontal Flayback
H_OUT	H_sync output of the module
H_OUT	Horizontal Output pulse
HA	Horizontal Acquisition: horizontal sync pulse coming out of the BOCMA
HD	High Definition
HEADPHONE-L	Stereo headphone (Left) signal output.
HEADPHONE-R	Stereo headphone (Right) signal output.
HFB	Horizontal Flyback Pulse: horizontal sync pulse from large signal deflection
HP	HeadPhone
HW	Hardware
I	Monochrome TV system. Sound carrier distance is 6.0 MHz
I2C	Integrated IC bus (same as IIC)
I2S	Integrated IC Sound bus
IC	Integrated Circuit
IDRIVE-	Vertical drive -
IDRIVE+	Vertical drive +
IF	Intermediate Frequency
IF-TER	IF signal from main tuner
IIC	Integrated IC bus (same as I2C)
Interlaced	Scan mode where two fields are used to form one frame. Each field contains half the number of the total amount of lines. The fields are written in "pairs", causing line flicker.
IO	In/Out
IR	Infra Red
IROM	Internal ROM (inside uP)
IRQ	Interrupt ReQuest
ITV	Institutional TV
JTAG	Joint Test Action Group. Definition for a standardised serial test interface
KEYB	Front panel keyboard
KEYBOARD	Input line: carries the voltage value of the corresponding tact switch on TOP-control or FRONT-control keypad
L	Left audio channel

Abbreviation	Description
L/L'	Monochrome TV system. Sound carrier distance is 6.5 MHz. L' is Band I, L is all bands except for Band I
Last Status	The settings last chosen by the customer and read and stored in RAM or in the NVM. They are called at startup of the set to configure it according to the customer's preferences
LATAM	Latin America
LCD	Liquid Crystal Display
L-CL_VLOUT	REAR CINCH stereo output
LED	Light Emitting Diode
LFE	Low Frequency Enhancement audio channel
L-FRONT-IN	EXT3 stereo input
LIGHT-SENSOR	Ambient light intensity signal.
LINE DRIVE	Line drive signal (for the Line transistor)
LINEDRIVE1	Horizontal (line) deflection drive signal.
LNA	Low Noise Adapter / Low Noise Amplifier
LOT	Line Output Transformer
LPD	LG.Philips Displays
LS	Loudspeaker
Ls, Rs	Left surround and Right surround channel (audio)
LSP	Large signal panel
Lt, Rt	Left total and Right total in case of a Dolby ProLogic encoded signal (audio)
LTI	Luminance Transient Improvement
LTP	Luminance Transient Processor
LUT	Look Up Table
LVDS	Low Voltage Differential Signalling, data transmission system for high speed and low EMI communication.
M/N	Monochrome TV system. Sound carrier distance is 4.5 MHz
Mb/s	Mega bits per second
MCS	Multi Channel Sound: refers to Dolby Pro Logic Surround in A02 ADOC
MDO	Mode control data output
MIPS	Microprocessor without Interlocked Pipeline-Stages. A RISC-based microprocessor.
Mips	Million instructions per second
MMI	Multi Media Interface
MOSFET	Metal Oxide Semiconductor Field Effect Transistor
MPEG	Motion Pictures Experts Group
MPIF	Multi Platform InterFace (Part of Salsa chipset, sister-chip of ADOC IC)
MPIP	Multi Picture in Picture: commercial feature showing several frozen or moving pips
MPX	MultiPleX
MSP	Multi-standard Sound Processor: ITT sound decoder
MUTE	MUTE Line
NAFTA	North American Free Trade Area (NAFTA & USA are used interchangeable)
NC	Not Connected
NDF	No vertical Deflection: vertical fly back protection
NHF	No Horizontal deflection: horizontal fly back protection
NICAM	Near Instantaneously Companded Audio Multiplexing. This is a digital sound system, mainly used in Europe.
NTC	Negative Temperature Coefficient, non-linear resistor
NTSC	National Television Standard Committee. Colour system mainly used in North America and Japan. Colour carrier NTSC M/N= 3.579545 MHz, NTSC 4.43= 4.433619 MHz (this is a VCR norm, it is not transmitted off-air)
NVM	Non Volatile Memory: IC containing data such as alignments, stations
O/C	Open Circuit
OB	Option Byte
OC	Open Circuit
ON/OFF LED	On/Off control signal for the LED
ON/STBY	On/Standby
ON-OFF-LED	Active-LOW control line. Logic LOW = red LED on, HIGH = red LED off.
OP	Option Byte
OSD	On Screen Display
P50	Project 50: communication protocol between TV and peripherals
PAL	Phase Alternating Line. Colour system mainly used in West Europe (colour carrier= 4.433619 MHz) and South America (colour carrier PAL M= 3.575612 MHz and PAL N= 3.582056 MHz)
PC	Personal Computer
PCB	Printed Circuit Board (same as "PWB")
PCM	Pulse Code Modulation
PILOT	Pilot Signal
PIP	Picture In Picture
PLL	Phase Locked Loop. Used for e.g. FST tuning systems. The customer can give directly the desired frequency
POR	Power On Reset, signal to reset the microprocessor
POR_FLASH	Signal that informs the micro controller (painter) that set will switch off
Progressive Scan	Scan mode where all scan lines are displayed in one frame at the same time, creating a double vertical resolution.
PTC	Positive Temperature Coefficient, non linear resistor
PTP	Picture Tube Panel
PWB	Printed Wiring Board (same as "PCB")
PWM	Pulse Width Modulation
QSS	Quasi Split Sound
R	Right audio channel
R	Red
RAM	Random Access Memory
RC	Remote Control transmitter
RC5	Remote Control system 5, the signal from the remote control
RC5 / RC6	Signal protocol from the remote control receiver
RDS	Radio Data System
RESET	RESET signal
RF	Real Flat / Radio Frequency
RGB	Red, Green, and Blue. The primary colour signals for TV. By mixing levels of R,G, and B, all colours (Y/C) are reproduced.
RGBHV	Red, Green, Blue, Horizontal sync, and Vertical sync
RISC	Reduced Instructions Set Computer
RMS	Root Mean Square value
ROM	Read Only Memory
S	Surround channel or mono surround channel (audio)
S/C	Short Circuit
S/PDIF	Sony Philips Digital InterFace
SALSA	System Application for Low Segment of Analogue TV
SAM	Service Alignment Mode
SAP	Second Audio Program
SAW	Surface Acoustics Wave
SC	SandCastle: two-level pulse derived from sync signals / SCART
SCART	Syndicat des Constructeurs d'Appareils Radiorecepteurs et Televisieurs
SCAVEM	Scan Velocity Modulation
SCL	Serial Clock I2C
SCL-F	CLock Signal on Fast I2C bus
SD	Standard Definition
SDA	Serial Data I2C
SDA-F	Data Signal on Fast I2C bus
SDAM	Service Default / Alignment Mode
SDRAM	Synchronous DRAM
SECAM	SEequence Couleur Avec Memoire: Colour system mainly used in France and East Europe. Colour carriers= 4.406250 MHz and 4.250000 MHz
SEL	Control signal
SIF	Sound Intermediate Frequency
SIMM	Single In-line Memory Module: 80-fold connector between LSP and SSB
SL	Audio Surround Left
SLDP	Smart Local Dooming Prevention (HW and SW)
SMC	Surface Mounted Compoments
SMPS	Switched Mode Power Supply
SND	SouND
SNERT	Synchronous No parity Eight bit Reception and Transmit
SOG	Sync On Green
SOPS	Self Oscillating Power Supply
SOUND-ENABLE	Control line to do hardware mute or un-mute of loudspeakers.
SR	Audio Surround Right
SRAM	Static RAM
SS	Small Screen
ST_BY	Standby
STANDBY (POR)	Signal coming from Main Supply informing the supply is switching off
STATUS	Status signal from pin 8 on SCART connector
STBY	Standby
SURR	Surround (mono) signal
SVHS	Super Video Home System
SW	Software / Subwoofer
SW1	Switch 1
TBD	To Be Defined

Abbreviation	Description
THD	Total Harmonic Distortion
TILT	PWM Output signal (variable DC level) to control the picture tilt from the DOP block of the ADOC.
Trinorma	Video standard, combination of PAL N, PAL M, NTSC M
TXT	Teletext
TXTSW	Teletext switch
U_100	U from Feature Box
UART	Universal Asynchronous Receiver Transmitter
UBE	Ultra Bass Enhancement
uC	Micro controller
UI	User Interface
UOC	Ultimate One Chip
uP	Microprocessor
UV	Colour difference signals
V	V_sync
V_100	V from Feature Box
V_2FH	Vertical sync input for the 2fH source.
V_A50	Vertical Acquisition 1fH
V_AMP	Vertical Amplitude DAC output
V_BAT	Main supply for deflection (usually 141 V)
V_D100	Vertical Drive 2fH: vertical sync pulse from deflection
V_DNEG	One of the symmetrical drive signals for the DC frame output stage.
V_DPOS	One of the symmetrical drive signals for the DC frame output stage.
V_OSD	Vertical OSD
VA	Vertical Acquisition
VBI	Vertical Blank Interval
V-chip	Violence chip
VCR	Video Cassette Recorder
VD	Vertical Drive: vertical sync pulse coming from the feature box
VDS	Virtual Dolby Surround
VERT	Vertical Output pulse
VESA	Video Electronics Standards Association
VGA	Video Graphics Array: 640x480 (4:3)
VGND	Video ground
VGUARD	Vertical guard voltage
VIF	Video Intermediate Frequency
VL	Variable Level out: processed audio output toward external amplifier
VMEM	Voltage supplied for EEPROM
VMICRO	Power supply for micro controller
VOL	Volume
VSYNC	Pulse derived of 530 s-circuit behind the HOP, to vertically synchronize the Painter
WD	Watch Dog
WE-NVM	NVM write enable control line.
WS	Wide Screen
WSS	Wide Screen Signaling, used by broadcasters to transmit e.g. PALPLUS and Aspect Ratio
WST	World System Teletext
WXGA	1280x768 (15:9)
WYSIWYR	What You See is What You Record: record selection that follows main picture and sound
XGA	Extended Graphics Array: 1024x768 (4:3)
XTAL	Quartz crystal
Y	Luminance signal
YC (or Y/C)	Luminance (Y) and Chrominance (C) signal (analogue video encoding format)
YPbPr	Component video (Y= Luminance, Pb/ Pr= Colour difference signals)
YUV	Component video

9.11 IC Data Sheets

This section shows the internal block diagrams and pin layouts of ICs that are drawn as "black boxes" in the electrical diagrams (with the exception of "memory" and "logic" ICs). This is not applicable to this manual.

10. Spare Parts List

Large Signal Panel [A]

Various

0080	4822 492 70789	Transistor clamp
0136	3104 301 24181	Spring for Bracket
0137	3104 301 24181	Spring for Bracket
0138	4822 255 41371	Transistor clamp
0139	4822 492 62076	Transistor clamp
0261	3104 304 10661	Cable clamp
0262	3104 304 10722	Cable clamp
0320	4822 255 41371	Transistor clamp
0341	4822 492 70788	IC clamp
0389	4822 492 70789	Transistor clamp
0395	4822 492 70789	Transistor clamp
0396	4822 492 70789	Transistor clamp
1205	2422 025 17242	Connector 80p f
1417	4822 265 20723	Connector 2p m
1424	2422 025 11244	Connector 7p m
1491	4822 267 10973	Connector 1p m
1498	2422 025 04849	Connector 2p m
1499	2422 025 04849	Connector 2p m
1501	4822 070 35002	Fuse 5A
1502	4822 267 10774	Connector 2p m Rd
1503	4822 070 12502	Fuse 2.5A
1505	2422 025 16374	Connector 2p m
1511	4822 265 11253	Fuse holder 2p
1512	4822 265 11253	Fuse holder 2p
1550	2422 132 07411	Relay 1p 5V 5A
1590	4822 252 60151	Sparkgap dsp501
1591	4822 252 60151	Sparkgap dsp501
1601	2422 086 10919	Fuse 65V 125mA
1620	4822 267 10735	Connector 3p m
1625	2422 025 16382	Connector 3p m
1735	4822 267 10565	Connector 4p
1901	4822 267 10771	Socket 2 x SCART
1902	4822 267 10982	Connector 2p
1936	2422 025 12485	Connector 11p m
1940	2422 025 12485	Connector 11p m
1943	4822 267 10748	Connector 3p m
1945	4822 267 10735	Connector 3p m
1947	4822 267 10734	Connector 5p m
8000	3104 311 03272	Cable 640mm EHT
8193	4822 320 20216	Focus cable 364 mm
8194	4822 320 20189	Cable HT-focus 44cm Rd
8417	3104 311 04561	Cable 2p3/400/2p3
8424	3104 311 02991	Cable 7p/560/7p Wh
8625	3104 311 03101	Cable 3p/560/3p Bk
8625	3104 311 06261	Cable 2p/560/2p3 HR BK INS
8936	3104 311 04121	Cable 11p/680/11p INS
8936	4822 320 12514	Cable 11p 680mm
8940	3104 311 01161	Cable 11p/340/11p Bk
8940	4822 323 10458	Cable 11p 480mm HR WH

⊣⊢

2100	4822 126 13841	1nF 20% 250V
2101	4822 121 51598	2.2nF 5% 400V
2102	4822 124 40248	10µF 20% 63V
2103	2020 552 94427	100pF 5% 50v 0603
2104	4822 123 14025	2200µF 20% 16V
2105	2020 552 94427	100pF 5% 50v 0603
2107	4822 121 43855	3.3nF 5% 400V
2108	4822 121 70162	10nF 5% 400V
2109	4822 126 14472	1µF 10% 10V 0805
2110	4822 126 14472	1µF 10% 10V 0805
2111	4822 121 43526	47nF 5% 250V
2112	5322 126 11583	10nF 10% 50V 0603
2115	4822 124 40764	22µF 100 V
2116	4822 126 13682	100pF 5% 1kV
2118	4822 124 80061	1000µF 20% 25V
2119	4822 123 14025	2200µF 20% 16V
2120	4822 126 13862	1.5nF 10% 2kV
2126	4822 123 14025	2200µF 20% 16V
2130	5322 126 11583	10nF 10% 50V 0603
2131	4822 126 13881	470pF 5% 50V
2132	4822 126 10206	2.2nF 10% 500V
2140	4822 124 40248	10µF 20% 63V
2141	4822 124 40248	10µF 20% 63V
2143	4822 126 10206	2.2nF 10% 500V
2144	4822 126 14472	1µF 10% 10V 0805
2145	4822 126 13881	470pF 5% 50V
2147	3198 017 31530	15nF 20% 50V 0603
2148	4822 126 13599	3.3nF 10% 500V
2149	4822 126 14472	1µF 10% 10V 0805
2150	5322 126 11583	10nF 10% 50V 0603
2153	5322 126 11582	6.8nF 10% 63V
2154	4822 126 14549	33nF 16V 0603
2161	2020 558 90556	680pF 10%b 1kV
2161	4822 126 14152	680pF 10% 1kV
2163	2222 338 22104	100nF 20% 275V
2200	4822 124 40248	10µF 20% 63V
2201	4822 126 13879	220nF 20% 16V
2202	4822 126 13473	220nF 80-20% 50V
2203	4822 124 41584	100µF 20% 10V
2400	4822 124 11936	47µF 20% 160V
2401	4822 121 42077	6.8nF 10% 400V
2402	4822 124 12373	47µF 20% 250V
2403	2238 916 15641	22nF 10% 25V 0603
2404	2238 916 15641	22nF 10% 25V 0603
2405	4822 126 13841	1nF 20% 250V
2412	3198 024 44730	47nF 50V 0603
2413	4822 124 12255	10µF 20% 50V
2414	3198 024 44730	47nF 50V 0603
2415	4822 126 13883	220pF 5% 50V
2417	4822 126 14076	220nF 25V. 20%
2419	4822 126 14237	470pF 10% 2kV
2420	4822 121 70581	1.5nF 5% 2kV
2420	4822 121 70594	1nF 5% 2kV
2421	2038 301 00312	1.2µF 5% 250V
2421	4822 121 42634	560nF 5% 250V
2425	4822 121 10526	9.1nF 5% 2kV
2425	4822 121 70435	10nF 5% 2kV
2426	4822 121 10653	22nF 5% 630V
2430	4822 126 10206	2.2nF 10% 500V
2431	4822 126 10206	2.2nF 10% 500V
2433	2022 333 00087	510nF 5% 250V
2433	2022 333 00163	360nF 5% 250V
2440	2020 552 96448	1µF 10% 16V
2443	9965 000 09661	470pF 50V 10%
2448	5322 122 32268	470pF 5% 63V
2450	4822 121 42408	220nF 10% 50V
2450	5322 121 42578	100nF 5% 250V
2451	2020 012 93757	1000µF 20% 10V
2454	3198 017 31530	15nF 20% 50V 0603
2455	5322 126 11578	1nF 10% 50V 0603
2457	4822 126 13188	15nF 5% 63V
2458	4822 126 14241	330pF 50V 0603
2460	4822 124 81144	1000µF 16V
2461	4822 122 31169	1.5nF 10% 500V
2461	4822 126 11524	1.5nF 10% 1kV
2462	4822 124 11767	470µF 20% 25V
2463	4822 122 31177	470pF 10% 500V
2464	4822 124 11767	470µF 20% 25V
2465	4822 122 31177	470pF 10% 500V
2466	2238 586 59812	100nF 20-80% 50V 0603
2468	4822 122 31177	470pF 10% 500V
2480	5322 126 11582	6.8nF 10% 63V
2482	3198 017 34730	47nF 16V 0603
2483	3198 017 31530	15nF 20% 50V 0603
2490	4822 124 41584	100µF 20% 10V
2491	4822 124 81151	22µF 50V
2492	4822 124 41584	100µF 20% 10V
2494	2238 780 15654	220nF 10% 16V
2495	2238 780 15654	220nF 10% 16V
2496	2238 586 59812	100nF 20-80% 50V 0603
2497	4822 126 12105	33nF 5% 50V
2498	2020 552 96448	1µF 10% 16V
2499	5322 126 11579	3.3nF 10% 63V
2501	4822 126 13449	1nF 10% 2KV
2501	4822 126 14053	1nF 10% 2kV
2503	5322 121 42489	33nF 5% 250V
2504	2238 916 15641	22nF 10% 25V 0603
2505	2020 554 90169	470pF 20% 250V
2507	2222 338 22474	470nF 20% 275V
2508	4822 124 11913	22nF 20% 275V
2509	4822 124 11913	22nF 20% 275V
2510	4822 126 12263	220pF 10% 2kV
2512	4822 124 12056	1000µF 20% 35V
2513	4822 126 13881	470pF 5% 50V
2514	4822 126 14238	2.2nF 50V 0603
2515	4822 124 80096	47µF 200V
2516	2222 057 36221	220µF 20% 400V 057
2518	4822 122 31211	100pF 10% 500V
2519	4822 126 10206	2.2nF 10% 500V
2524	5322 126 11583	10nF 10% 50V 0603
2525	4822 126 14247	1.5nF 50V 0603
2526	2020 558 90571	2.2nF 10% 1kV
2527	4822 126 14237	470pF 10% 2kV
2528	4822 126 14472	1µF 10% 10V 0805
2530	4822 126 14472	1µF 10% 10V 0805
2531	4822 122 31175	1nF 10% 500V
2532	4822 126 14472	1µF 10% 10V 0805
2533	2020 557 90732	4.7nF 10% 250V
2535	4822 126 13193	4.7nF 10% 63V
2537	4822 124 11913	22nF 20% 275V
2538	4822 122 33177	10nF 20% 50V
2540	4822 124 21913	1µF 20% 63V
2541	4822 122 31211	100pF 10% 500V
2544	4822 126 14238	2.2nF 50V 0603
2547	2222 338 22104	100nF 20% 275V
2601	2238 586 59812	100nF 20-80% 50V 0603
2603	4822 126 13883	220pF 5% 50V
2604	4822 126 13473	220nF 80-20% 50V
2605	4822 126 13883	220pF 5% 50V
2620	4822 126 13473	220nF 80-20% 50V
2621	2238 586 59812	100nF 20-80% 50V 0603
2622	4822 124 40255	100µF 20% 63V
2623	4822 126 14238	2.2nF 50V 0603
2624	4822 121 51252	470nF 5% 63V
2625	4822 121 51252	470nF 5% 63V
2627	5322 124 40641	10µF 20% 100V
2628	4822 124 40255	100µF 20% 63V
2630	4822 126 14491	2.2µF -20+80% 10V 0805
2631	4822 126 14491	2.2µF -20+80% 10V 0805
2633	5322 126 11579	3.3nF 10% 63V
2635	2238 586 59812	100nF 20-80% 50V 0603
2642	4822 124 40255	100µF 20% 63V
2653	2238 586 15628	2.7nF 10% 50V 0603
2653	5322 126 11579	3.3nF 10% 63V
2656	2238 916 15641	22nF 10% 25V 0603
2657	2238 916 15641	22nF 10% 25V 0603
2659	2238 916 15641	22nF 10% 25V 0603
2660	5322 126 11578	1nF 10% 50V 0603
2701	4822 126 14043	1µF 20% 16V
2702	3198 016 31020	1nF 10% 25V 0603
2703	4822 126 14043	1µF 20% 16V
2704	3198 016 31020	1nF 10% 25V 0603
2707	4822 126 14043	1µF 20% 16V
2708	4822 124 11767	470µF 20% 25V
2709	3198 026 51020	1000µF 50V 20%
2710	4822 126 14585	100nF 10% 50V
2711	4822 124 80061	1000µF 20% 25V
2712	3198 017 34730	47nF 16V 0603
2713	3198 017 34730	47nF 16V 0603
2714	4822 124 80061	1000µF 20% 25V
2715	3198 017 34730	47nF 16V 0603
2716	3198 017 34730	47nF 16V 0603
2722	4822 124 40255	100µF 20% 63V
2914	4822 124 40248	10µF 20% 63V
2915	4822 124 40248	10µF 20% 63V
2918	4822 126 14585	100nF 10% 50V
2940	4822 124 41584	100µF 20% 10V
2941	4822 126 14585	100nF 10% 50V
2942	4822 126 14585	100nF 10% 50V
2943	4822 126 14585	100nF 10% 50V
2945	4822 126 14491	2.2µF -20+80% 10V 0805
2946	4822 126 14491	2.2µF -20+80% 10V 0805
2947	4822 124 40769	4.7µF 20% 100V
2950	5322 126 11583	10nF 10% 50V 0603
2951	5322 126 11583	10nF 10% 50V 0603
2987	5322 122 31863	330pF 5% 63V
2989	5322 122 31863	330pF 5% 63V
2990	5322 122 31863	330pF 5% 63V
2991	4822 051 20333	33kΩ 5% 0.1W
2991	5322 122 32531	100pF 5% 50V
2992	5322 122 31863	330pF 5% 63V
2993	4822 051 20333	33kΩ 5% 0.1W
2993	5322 122 32531	100pF 5% 50V
2994	5322 122 31863	330pF 5% 63V
2995	5322 122 31863	330pF 5% 63V
2996	5322 122 31863	330pF 5% 63V
2997	5322 122 31863	330pF 5% 63V
2998	4822 051 20333	33kΩ 5% 0.1W
2998	5322 122 32531	100pF 5% 50V
2999	4822 051 20333	33kΩ 5% 0.1W
2999	5322 122 32531	100pF 5% 50V

-ww-

3101	4822 053 20475	4.7MΩ 5% 0.25W
3102	4822 050 21002	1kΩ 1% 0.6W
3103	4822 050 21002	1kΩ 1% 0.6W
3104	4822 116 52195	47Ω 5% 0.5W
3105	4822 050 11002	1kΩ 1% 0.4W
3106	4822 116 52256	2.2kΩ 5% 0.5W
3107	4822 116 52256	2.2kΩ 5% 0.5W
3108	2122 101 01363	2.2Ω 5%
3111	4822 053 10152	1.5kΩ 5% 1W
3113	4822 116 52186	22Ω 5% 0.5W
3114	4822 116 52219	330Ω 5% 0.5W
3115	4822 116 52257	22kΩ 5% 0.5W
3116	4822 116 52257	22kΩ 5% 0.5W
3117	4822 116 52195	47Ω 5% 0.5W

3118	2122 101 01363	2.2Ω 5%
3120	4822 051 20109	10Ω 5% 0.1W
3123	4822 116 52176	10Ω 5% 0.5W
3124	4822 116 52199	68Ω 5% 0.5W
3125	4822 116 52182	15Ω 5% 0.5W
3126	4822 050 21003	10kΩ 1% 0.6W
3127	4822 116 52289	5.6kΩ 5% 0.5W
3130	4822 051 30479	47Ω 5% 0.062W
3131	4822 051 20471	470Ω 5% 0.1W
3132	4822 051 20479	47Ω 5% 0.1W
3133	4822 117 12925	47kΩ 1% 0.063W 0603
3134	4822 051 30102	1kΩ 5% 0.062W
3135	4822 051 30101	100Ω 5% 0.062W
3136	4822 051 30109	10Ω 5% 0.062W
3137	4822 050 24702	4.7kΩ 1% 0.6W
3138	4822 051 20105	1MΩ 5% 0.1W
3140	4822 051 20223	22kΩ 5% 0.1W
3141	4822 116 52263	2.7kΩ 5% 0.5W
3142	4822 051 30332	3.3kΩ 5% 0.062W
3143	4822 051 30101	100Ω 5% 0.062W
3144	4822 053 10221	220Ω 5% 1W
3150	4822 117 11373	100Ω 1% 0805
3151	4822 051 30109	10Ω 5% 0.062W
3152	4822 051 30102	1kΩ 5% 0.062W
3153	4822 051 20472	4.7kΩ 5% 0.1W
3155	4822 051 30101	100Ω 5% 0.062W
3156	5322 117 13017	100Ω 1% 0.063W 0603
3157	4822 051 30103	10kΩ 5% 0.062W
3158	2322 704 61801	180Ω 1% 0603
3158	5322 117 13061	180Ω 1% 0.063W 0603
3159	4822 051 30103	10kΩ 5% 0.062W
3160	4822 051 30102	1kΩ 5% 0.062W
3161	4822 052 10101	100Ω 5% 0.33W
3164	4822 117 13632	100kΩ 1% 0.62W 0603
3165	2322 704 61801	180Ω 1% 0603
3165	5322 117 13061	180Ω 1% 0.063W 0603
3168	4822 051 20472	4.7kΩ 5% 0.1W
3171	4822 116 52297	68kΩ 5% 0.5W
3172	4822 116 52297	68kΩ 5% 0.5W
3200	4822 051 20229	22Ω 5% 0.1W
3201	4822 051 20229	22Ω 5% 0.1W
3250	4822 117 10833	10kΩ 1% 0.1W
3261	4822 117 11373	100Ω 1% 0805
3262	4822 117 11373	100Ω 1% 0805
3400	4822 052 11108	1Ω 5% 0.5W
3401	4822 053 12279	27R00 5% 3W
3402	4822 053 10121	120Ω 5% 1W
3403	4822 116 52175	100Ω 5% 0.5W
3404	4822 051 30471	470Ω 5% 0.062W
3406	4822 117 11373	100Ω 1% 0805
3407	4822 051 30103	10kΩ 5% 0.062W
3409	4822 050 11002	1kΩ 1% 0.4W
3410	4822 051 20479	47Ω 5% 0.1W
3411	2122 101 02111	39Ω 5% 0,5W
3412	4822 117 11817	1.2kΩ 1% 0.062W
3414	4822 051 30331	330Ω 5% 0.062W
3415	3198 012 31590	15Ω 5% 3W
3417	4822 116 52176	10Ω 5% 0.5W
3418	4822 050 25603	56kΩ 1% 0.6W
3419	4822 051 30474	470kΩ 5% 0.062W
3420	4822 051 30332	3.3kΩ 5% 0.062W
3421	4822 051 30474	470kΩ 5% 0.062W
3422	4822 051 30332	3.3kΩ 5% 0.062W
3423	4822 053 10688	6.8Ω 5% 1W
3425	4822 116 52176	10Ω 5% 0.5W
3426	4822 116 52176	10Ω 5% 0.5W
3427	4822 051 30683	68kΩ 5% 0.062W
3427	4822 117 13632	100kΩ 1% 0.62W 0603
3428	4822 051 30684	680kΩ 5% 0.062W
3429	4822 051 30103	10kΩ 5% 0.062W
3429	4822 051 30223	22kΩ 5% 0.062W
3430	4822 051 30123	12kΩ 5% 0.062W
3430	4822 051 30223	22kΩ 5% 0.062W
3431	2306 207 03151	150Ω 5% 0.5W
3440	4822 051 30102	1kΩ 5% 0.062W
3441	4822 051 30223	22kΩ 5% 0.062W
3442	4822 051 30474	470kΩ 5% 0.062W
3443	4822 051 30684	680kΩ 5% 0.062W
3447	4822 117 11373	100Ω 1% 0805
3449	4822 052 10101	100Ω 5% 0.33W
3450	4822 050 21003	10kΩ 1% 0.6W
3451	4822 050 21003	10kΩ 1% 0.6W
3454	4822 051 20108	1Ω 5% 0.1W
3455	4822 117 12902	8.2kΩ 1% 0.063W 0603
3455	5322 117 13056	8.2kΩ 1% 0.063W 0603
3456	4822 117 12903	1.8kΩ 1% 0.063W 0603
3457	4822 051 30152	1.5kΩ 5% 0.062W
3458	4822 051 30471	470Ω 5% 0.062W
3459	4822 051 30272	2.7kΩ 5% 0.062W
3460	4822 052 10108	1Ω 5% 0.33W
3461	4822 052 10108	1Ω 5% 0.33W
3462	4822 052 11108	1Ω 5% 0.5W
3463	4822 052 11108	1Ω 5% 0.5W
3464	4822 052 11108	1Ω 5% 0.5W
3465	4822 052 11108	1Ω 5% 0.5W
3466	4822 051 30472	4.7kΩ 5% 0.062W
3467	4822 117 13632	100kΩ 1% 0.62W 0603
3472	4822 051 30393	39kΩ 5% 0.062W
3474	4822 051 30563	56kΩ 5% 0.062W
3475	4822 051 30472	4.7kΩ 5% 0.062W
3476	4822 116 83874	220kΩ 5% 0.5W
3478	4822 116 52175	100Ω 5% 0.5W
3479	4822 052 10478	4.7Ω 5% 0.33W
3480	4822 052 10478	4.7Ω 5% 0.33W
3480	4822 052 10688	6.8Ω 5% 0.33W
3481	2322 750 61001	100Ω 5% 1206
3482	4822 051 30221	220Ω 5% 0.062W
3483	4822 117 12903	1.8kΩ 1% 0.063W 0603
3485	4822 051 30471	470Ω 5% 0.062W
3486	2322 704 67502	7.5kΩ 1% 0,5W
3487	5322 117 13056	8.2kΩ 1% 0.063W 0603
3488	4822 050 21005	1MΩ 1% 0.6W
3489	4822 051 30103	10kΩ 5% 0.062W
3490	4822 051 30332	3.3kΩ 5% 0.062W
3491	4822 117 12925	47kΩ 1% 0.063W 0603
3492	4822 116 52175	100Ω 5% 0.5W
3493	4822 050 21504	150kΩ 1% 0.6W
3495	4822 050 21503	15kΩ 1% 0.6W
3496	4822 051 30272	2.7kΩ 5% 0.062W
3497	4822 051 30333	33kΩ 5% 0.062W
3501	2120 103 90057	100Ω 20% 0.5W
3504	4822 051 30222	2.2kΩ 5% 0.062W
3505	4822 116 52257	22kΩ 5% 0.5W
3506	4822 051 30562	5.6kΩ 5% 0.063W 0603
3507	4822 050 21604	160kΩ 1% 0.6W
3508	4822 116 52182	15Ω 5% 0.5W
3509	2122 550 00158	VDR 1mA 612V
3510	5322 117 12487	1kΩ 1% 0.125W
3511	4822 053 11222	2.2kΩ 5% 2W
3512	4822 117 12891	220kΩ 1% 0.063W 0603
3513	4822 116 52272	330k 5% 0.5W
3514	2322 193 53397	0.39Ω 5% 0.6W
3515	2322 193 53397	0.39Ω 5% 0.6W
3517	4822 117 10834	47kΩ 1% 0.1W
3518	4822 116 52234	100kΩ 5% 0,5W
3519	4822 051 30102	1kΩ 5% 0.062W
3520	4822 053 11333	33kΩ 5% 2W
3521	4822 053 21155	1.5Ω 5% 0.5W
3522	4822 117 11507	6.8kΩ 1% 0.1W
3523	4822 051 20105	1MΩ 5% 0.1W
3524	4822 051 30333	33kΩ 5% 0.062W
3525	4822 051 30479	47Ω 5% 0.062W
3527	4822 117 11951	2kΩ 1% 0.1W
3528	4822 051 30103	10kΩ 5% 0.062W
3529	4822 051 30472	4.7kΩ 5% 0.062W
3530	4822 051 30102	1kΩ 5% 0.062W
3531	4822 117 11507	6.8kΩ 1% 0.1W
3532	4822 117 12925	47kΩ 1% 0.063W 0603
3533	4822 116 52182	15Ω 5% 0.5W
3534	4822 117 12925	47kΩ 1% 0.063W 0603
3535	4822 051 30479	47Ω 5% 0.062W
3536	4822 051 30152	1.5kΩ 5% 0.062W
3537	4822 052 10102	1kΩ 5% 0.33W
3540	4822 050 23303	33k 1% 0.6W
3541	4822 116 52186	22Ω 5% 0.5W
3543	4822 050 24708	4.7Ω 1% 0.6W
3547	4822 051 30008	Jumper 0603
3549	4822 051 30393	39kΩ 5% 0.062W
3550	2122 663 00018	PTC 4.7Ω 20%
3552	4822 051 30222	2.2kΩ 5% 0.062W
3553	4822 051 30103	10kΩ 5% 0.062W
3610	4822 051 30223	22kΩ 5% 0.062W
3611	4822 051 30222	2.2kΩ 5% 0.062W
3620	4822 050 21808	1.8Ω 1% 0,6W
3620	4822 116 80176	1Ω 5% 0.5W
3621	4822 116 80176	1Ω 5% 0.5W
3622	4822 116 81154	2.2Ω 5% 0.5W
3622	5322 116 53564	3.3Ω 5% 0.5W
3623	4822 116 52251	18kΩ 5% 0.5W
3624	4822 052 10158	1.5Ω 5% 0.33W
3625	4822 116 52206	120Ω 5% 0.5W
3625	4822 116 52219	330Ω 5% 0.5W
3626	4822 116 52175	100Ω 5% 0.5W
3626	4822 116 52219	330Ω 5% 0.5W
3627	4822 051 20223	22kΩ 5% 0.1W
3630	4822 051 30333	33kΩ 5% 0.062W
3631	4822 051 30222	2.2kΩ 5% 0.062W
3632	4822 051 30393	39kΩ 5% 0.062W
3633	4822 051 30563	56kΩ 5% 0.062W
3634	4822 116 83882	39kΩ 5% 0.5W
3635	4822 116 52219	330Ω 5% 0.5W
3636	4822 051 30223	22kΩ 5% 0.062W
3637	4822 051 30103	10kΩ 5% 0.062W
3638	4822 051 30474	470kΩ 5% 0.062W
3639	4822 051 30563	56kΩ 5% 0.062W
3640	4822 051 30222	2.2kΩ 5% 0.062W
3641	4822 116 83883	470Ω 5% 0.5W
3642	4822 101 11193	47kΩ 30% 0.1W
3643	4822 051 30334	330kΩ 5% 0.062W
3644	4822 051 30221	220Ω 5% 0.062W
3645	4822 116 52245	150kΩ 5% 0.5W
3646	4822 117 12925	47kΩ 1% 0.063W 0603
3647	4822 051 20228	2.2Ω 5% 0.1W
3652	4822 051 20479	47Ω 5% 0.1W
3653	4822 051 20223	22kΩ 5% 0.1W
3655	4822 051 30123	12kΩ 5% 0.062W
3656	4822 117 11817	1.2kΩ 1% 0.062W
3657	4822 051 30223	22kΩ 5% 0.062W
3658	4822 051 30223	22kΩ 5% 0.062W
3659	4822 051 30222	2.2kΩ 5% 0.062W
3660	4822 051 30562	5.6kΩ 5% 0.063W 0603
3661	4822 116 52226	560Ω 5% 0.5W
3662	4822 051 30152	1.5kΩ 5% 0.062W
3681	4822 116 52207	1.2kΩ 5% 0.5W
3682	4822 117 13632	100kΩ 1% 0.62W 0603
3683	4822 051 30103	10kΩ 5% 0.062W
3684	4822 051 30682	6.8kΩ 5% 0.062W
3685	4822 051 30273	27kΩ 5% 0.062W
3686	4822 051 30563	56kΩ 5% 0.062W
3687	4822 116 52207	1.2kΩ 5% 0.5W
3688	4822 051 20684	680kΩ 5% 0.1W
3690	4822 051 30109	10Ω 5% 0.062W
3701	4822 051 30103	10kΩ 5% 0.062W
3701	4822 117 12925	47kΩ 1% 0.063W 0603
3702	4822 051 30223	22kΩ 5% 0.062W
3703	4822 051 30103	10kΩ 5% 0.062W
3703	4822 117 12925	47kΩ 1% 0.063W 0603
3704	4822 051 30223	22kΩ 5% 0.062W
3707	4822 051 30103	10kΩ 5% 0.062W
3708	4822 117 12925	47kΩ 1% 0.063W 0603
3710	4822 117 12925	47kΩ 1% 0.063W 0603
3711	4822 051 30103	10kΩ 5% 0.062W
3713	2322 702 81828	8.2Ω 5% 0.1W 0603
3714	2322 702 81828	8.2Ω 5% 0.1W 0603
3716	4822 050 21003	10kΩ 1% 0.6W
3719	4822 051 30103	10kΩ 5% 0.062W
3720	4822 052 10108	1Ω 5% 0.33W
3721	4822 052 10108	1Ω 5% 0.33W
3725	4822 116 52251	18kΩ 5% 0.5W
3726	4822 050 21003	10kΩ 1% 0.6W
3904	4822 052 10688	6.8Ω 5% 0.33W
3905	4822 051 30101	100Ω 5% 0.062W
3912	4822 051 30008	Jumper 0603
3928	4822 051 30101	100Ω 5% 0.062W
3929	4822 051 30103	10kΩ 5% 0.062W
3930	4822 051 20561	560Ω 5% 0.1W
3938	4822 117 11373	100Ω 1% 0805
3939	4822 051 30103	10kΩ 5% 0.062W
3940	4822 051 20561	560Ω 5% 0.1W
3941	4822 052 10688	6.8Ω 5% 0.33W
3959	4822 117 10353	150Ω 1% 0.1W
3960	4822 117 10353	150Ω 1% 0.1W
3961	4822 117 10353	150Ω 1% 0.1W
3962	4822 117 10353	150Ω 1% 0.1W
3965	4822 117 10353	150Ω 1% 0.1W
3966	4822 117 10353	150Ω 1% 0.1W
3967	4822 116 52201	75Ω 5% 0.5W
3968	4822 116 52201	75Ω 5% 0.5W
3969	4822 051 20008	Jumper 0805
3969	4822 117 11373	100Ω 1% 0805
3970	4822 051 20008	Jumper 0805
3970	4822 117 11373	100Ω 1% 0805
3971	4822 116 52201	75Ω 5% 0.5W
3972	4822 116 52201	75Ω 5% 0.5W
3973	4822 116 52201	75Ω 5% 0.5W
3974	4822 116 52201	75Ω 5% 0.5W
3975	4822 116 52201	75Ω 5% 0.5W
3976	4822 117 11373	100Ω 1% 0805
3977	4822 051 20008	Jumper 0805
3977	4822 117 11373	100Ω 1% 0805
3978	4822 051 20008	Jumper 0805
3978	4822 117 11373	100Ω 1% 0805
3979	4822 116 52201	75Ω 5% 0.5W
3980	4822 051 20008	Jumper 0805
3980	4822 117 11373	100Ω 1% 0805
3981	4822 051 10102	1kΩ 2% 0.25W
3981	4822 117 10833	10kΩ 1% 0.1W
3982	4822 051 20392	3.9kΩ 5% 0.1W
3982	4822 051 20393	39kΩ 5% 0.1W
3983	4822 116 52175	100Ω 5% 0.5W
3984	4822 051 10102	1kΩ 2% 0.25W
3984	4822 117 10833	10kΩ 1% 0.1W
3985	4822 116 52201	75Ω 5% 0.5W
3986	4822 116 52276	3.9kΩ 5% 0.5W
3986	4822 116 83882	39kΩ 5% 0.5W
3987	4822 116 52175	100Ω 5% 0.5W
3988	4822 051 10102	1kΩ 2% 0.25W
3988	4822 117 11373	100Ω 1% 0805
3989	4822 050 11002	1kΩ 1% 0.4W
3989	4822 116 52175	100Ω 5% 0.5W
3990	4822 117 10353	150Ω 1% 0.1W
3991	4822 117 10353	150Ω 1% 0.1W

3992	4822 117 10353	150Ω 1% 0.1W
3993	4822 116 83868	150Ω 5% 0.5W
3994	4822 051 10102	1kΩ 2% 0.25W
3994	4822 117 11373	100Ω 1% 0805
3995	4822 051 10102	1kΩ 2% 0.25W
3995	4822 117 11373	100Ω 1% 0805
3996	4822 117 10353	150Ω 1% 0.1W
3997	4822 117 10353	150Ω 1% 0.1W
4xxx	4822 051 30008	Jumper 0603
9xxx	4822 051 20008	Jumper 0805
9xxx	4822 051 30008	Jumper 0603

5100	3104 308 20431	Transformer BS25126-03
5101	4822 526 10704	Bead 45Ω at 50MHz
5102	2422 535 94639	10µH 20%
5103	4822 526 10704	Bead 45Ω at 50MHz
5104	4822 157 11411	Bead 83Ω at 100MHz
5105	2422 535 94632	1µH 30%
5106	4822 157 11716	Bead 30Ω at 100MHz
5107	4822 157 11716	Bead 30Ω at 100MHz
5108	4822 526 10704	Bead 45Ω at 50MHz
5110	4822 526 10704	Bead 45Ω at 50MHz
5111	4822 157 11411	Bead 83Ω at 100MHz
5113	4822 157 11411	Bead 83Ω at 100MHz
5130	4822 157 11411	Bead 83Ω at 100MHz
5400	4822 157 11869	33µH 10%
5401	2422 536 00059	12µH 10%
5402	3198 018 21510	150µH 10%
5410	3128 138 39091	Transformer CE165T
5411	4822 157 71097	0.56µH 10%
5421	3104 308 20471	Linearity coil 28"/29"
5421	3104 308 20591	Linearity coil 32"
5422	2422 531 02357	Bridge coil W7132-004Y 29"
5422	4822 146 11137	Bridge coil W7131-003 28"/32"
5423	4822 157 71097	0.56µH 10%
5425	4822 157 11411	Bead 83Ω at 100MHz
5426	4822 157 11411	Bead 83Ω at 100MHz
5430	3104 308 20491	LOT 1392.9014A
5461	4822 157 11411	Bead 83Ω at 100MHz
5463	4822 157 11411	Bead 83Ω at 100MHz
5465	4822 157 11411	Bead 83Ω at 100MHz
5467	4822 157 11411	Bead 83Ω at 100MHz
5469	4822 157 11411	Bead 83Ω at 100MHz
5503	2422 549 44877	Filter 45mH DMF2845H
5505	4822 157 11411	Bead 83Ω at 100MHz
5506	2422 531 02575	Transformer SMT BS30029-01
5506	2422 531 02635	Transformer SMT SS30327-01 B
5507	4822 157 11411	Bead 83Ω at 100MHz
5511	3104 308 20511	Filter mains 40mH
5515	4822 157 11869	33µH 10%
5517	4822 157 11411	Bead 83Ω at 100MHz
5518	4822 526 10704	Bead 45Ω at 50MHz
5519	4822 157 11716	Bead 30Ω at 100MHz
5520	4822 157 11411	Bead 83Ω at 100MHz
5620	4822 157 11771	0.09µH 10%
5621	3104 308 20571	Transf. S13974-03
5901	4822 157 11299	10µH 5%
5902	3198 018 71010	100µF 10%
5903	4822 157 10359	33µH 10%
5904	4822 157 11411	Bead 83Ω at 100MHz

6080	4822 130 11397	BAS316
6082	4822 130 80622	BAT54
6103	4822 130 41601	BYV95A
6104	9340 548 67115	PDZ22B
6105	4822 130 34281	BZX79-B15
6106	3198 010 52290	BZX79-B22
6108	4822 130 80622	BAT54
6109	4822 130 31083	BYW55
6110	4822 130 41487	BYV95C
6111	9322 161 78682	SB360L-7024
6112	4822 130 11551	UDZS10B
6115	4822 130 80622	BAT54
6120	4822 130 30621	1N4148
6121	4822 130 30621	1N4148
6122	3198 010 53980	BZX79-B3V9
6130	4822 130 11596	BYW29EX-200
6132	9322 171 80685	BZX384-B6V8
6133	4822 130 11397	BAS316
6134	4822 130 11397	BAS316
6141	4822 130 11522	UDZ15B
6142	4822 130 80622	BAT54
6144	4822 130 11397	BAS316
6147	4822 130 34278	BZX79-B6V8
6148	5322 130 31938	BYV27-200
6149	4822 130 11397	BAS316
6200	9340 548 71115	PDZ33B
6202	4822 130 11397	BAS316
6400	4822 130 41601	BYV95A
6402	4822 130 11397	BAS316
6405	4822 130 34383	BZX79-B47
6406	4822 130 11397	BAS316
6407	4822 130 11397	BAS316
6408	4822 130 41601	BYV95A
6421	4822 130 10753	BY359X-1500
6422	4822 130 10218	BY229X-800
6442	4822 130 11522	UDZ15B
6455	4822 130 11397	BAS316
6456	5322 130 34337	BAV99
6457	9322 102 64685	UDZ2.7B
6458	3198 020 55680	BZX384-C5V6
6460	4822 130 41487	BYV95C
6462	9340 559 53112	BYW95C-24
6464	9340 559 53112	BYW95C-24
6480	4822 130 31607	RGP10D
6481	4822 130 11522	UDZ15B
6482	4822 130 11397	BAS316
6483	4822 130 80622	BAT54
6493	4822 130 80622	BAT54
6499	4822 130 11551	UDZS10B
6505	4822 130 34281	BZX79-B15
6506	4822 130 80622	BAT54
6509	4822 130 11397	BAS316
6510	4822 130 61219	BZX79-B10
6511	4822 130 11397	BAS316
6512	4822 130 11397	BAS316
6514	5322 130 31932	BZT03-C200
6515	4822 130 33657	BZV85-C6V8
6516	4822 130 11397	BAS316
6517	4822 130 80622	BAT54
6525	3198 010 10640	Bridge cell GBU4K
6530	4822 130 41487	BYV95C
6534	9322 165 72687	DTV1500MFP
6535	4822 130 11572	STPS8H100F
6537	4822 130 11397	BAS316
6538	4822 130 11397	BAS316
6614	4822 130 80622	BAT54
6615	4822 130 11397	BAS316
6616	4822 130 11397	BAS316
6617	4822 130 11397	BAS316
6618	4822 130 11397	BAS316
6619	4822 130 31607	RGP10D
6620	5322 130 31938	BYV27-200
6621	4822 130 31607	RGP10D
6623	4822 130 11397	BAS316
6624	4822 130 11397	BAS316
6625	4822 130 11397	BAS316
6626	4822 130 11397	BAS316
6627	4822 130 11397	BAS316
6901	4822 130 11416	PDZ6.8B
6950	4822 130 11416	PDZ6.8B
6951	4822 130 11416	PDZ6.8B
6953	4822 130 11416	PDZ6.8B
6954	4822 130 11416	PDZ6.8B
6955	4822 130 11416	PDZ6.8B
6956	4822 130 11416	PDZ6.8B
6957	4822 130 11416	PDZ6.8B
6958	4822 130 11416	PDZ6.8B
6959	4822 130 11416	PDZ6.8B
6960	9340 548 61115	PDZ12B
6961	4822 130 11416	PDZ6.8B
6962	4822 130 11416	PDZ6.8B

7100	4822 130 44568	BC557B
7101	4822 130 40981	BC337-25
7102	9322 160 34687	FQPF3N60
7103	9322 149 04682	TCET1102
7130	5322 130 60159	BC846B
7131	4822 130 11336	STP16NE06FP
7132	5322 130 60159	BC846B
7133	4822 130 60373	BC856B
7140	5322 130 60159	BC846B
7141	4822 130 11336	STP16NE06FP
7408	5322 130 44647	BC368
7409	5322 130 60159	BC846B
7421	9340 210 30127	BU2520DX
7440	4822 209 70672	LM358N SEL.
7441	4822 130 60373	BC856B
7442	4822 130 60373	BC856B
7443	5322 130 60159	BC846B
7445	5322 130 60159	BC846B
7450	5322 209 61472	LM393M
7455	4822 209 73852	PMBT2369
7480	4822 130 11417	STP3NB60FP
7482	4822 130 11418	TCDT1102G
7486	5322 130 60159	BC846B
7487	5322 130 60159	BC846B
7501	5322 130 60159	BC846B
7502	4822 130 40959	BC547B
7504	9322 194 20687	STP5NK50ZFP
7506	4822 209 14933	TL431IZ
7507	9322 149 04682	TCET1102
7528	4822 130 40981	BC337-25
7529	4822 130 44461	BC546B
7530	5322 130 60159	BC846B
7611	5322 130 60159	BC846B
7612	5322 130 60159	BC846B
7613	4822 209 81397	TL431CLPST
7614	5322 130 60159	BC846B
7620	4822 209 90009	TDA8177
7641	5322 130 60159	BC846B
7652	5322 130 60159	BC846B
7653	5322 130 60159	BC846B
7654	4822 130 60373	BC856B
7680	4822 209 60956	TDA7052/N2
7681	5322 130 60159	BC846B
7682	5322 130 44647	BC368
7701	9322 166 94682	TDA7495S
7710	5322 130 60159	BC846B
7711	5322 130 60159	BC846B
7901	5322 130 60159	BC846B
7902	5322 130 60159	BC846B
7910	9322 152 53687	LD1086V33
7912	5322 209 86445	LM7805CT

Small Signal Board [B]

Various

1112	2422 549 44369	SAW 38.9MHz K9656L
1113	2422 549 44372	SAW 38.9MHz K3953L
1581	2422 543 01359	Xtal 13.5MHz 12pF NX8045

2002	2020 552 96507	10µF 10V
2003	2020 552 96507	10µF 10V
2005	2020 552 96618	1nF 10% 50V 0402
2006	2020 552 96618	1nF 10% 50V 0402
2008	2020 552 96618	1nF 10% 50V 0402
2012	3198 017 44740	470nF 10V 0603
2013	3198 035 04710	470pF 50V 0402
2014	3198 035 71040	100nF 10% 16V 0402
2015	3198 035 04710	470pF 50V 0402
2016	3198 017 44740	470nF 10V 0603
2018	3198 035 04710	470pF 50V 0402
2019	3198 017 44740	470nF 10V 0603
2021	3198 035 04710	470pF 50V 0402
2022	3198 017 44740	470nF 10V 0603
2024	3198 035 04710	470pF 50V 0402
2025	3198 017 44740	470nF 10V 0603
2027	3198 035 04710	470pF 50V 0402
2028	3198 017 44740	470nF 10V 0603
2030	2020 552 96618	1nF 10% 50V 0402
2031	2020 552 96618	1nF 10% 50V 0402
2032	2020 552 96618	1nF 10% 50V 0402
2033	2020 552 96618	1nF 10% 50V 0402
2037	2020 552 96507	10µF 10V
2038	2020 552 96507	10µF 10V
2039	2020 552 96507	10µF 10V
2040	2020 552 96507	10µF 10V
2045	3198 030 82280	2.2µF 20% 50V
2046	5322 124 41945	22µF 20% 35V
2047	4822 124 23002	10µF 20% 16V
2048	3198 035 71040	100nF 10% 16V 0402
2049	3198 035 71040	100nF 10% 16V 0402
2050	3198 035 71040	100nF 10% 16V 0402
2051	3198 035 71040	100nF 10% 16V 0402
2060	3198 035 71040	100nF 10% 16V 0402
2062	3198 035 71040	100nF 10% 16V 0402
2063	3198 035 71040	100nF 10% 16V 0402
2065	3198 035 71040	100nF 10% 16V 0402
2066	3198 035 71040	100nF 10% 16V 0402
2067	3198 035 71040	100nF 10% 16V 0402
2068	3198 035 71040	100nF 10% 16V 0402
2071	3198 035 71040	100nF 10% 16V 0402
2072	3198 035 71040	100nF 10% 16V 0402
2073	3198 035 71040	100nF 10% 16V 0402
2078	3198 035 71040	100nF 10% 16V 0402
2079	3198 035 71040	100nF 10% 16V 0402
2081	3198 035 71040	100nF 10% 16V 0402
2082	4822 126 14491	2.2µF -20+80% 10V 0805
2083	3198 035 71040	100nF 10% 16V 0402
2084	3198 035 71040	100nF 10% 16V 0402
2085	3198 035 71040	100nF 10% 16V 0402

2088	4822 126 14491	2.2µF -20+80% 10V 0805
2101	3198 035 71030	10nF 16V 0402
2102	3198 035 71030	10nF 16V 0402
2119	3198 035 71030	10nF 16V 0402
2126	2238 869 15101	100pF 5% 50V 0402
2127	3198 035 71040	100nF 10% 16V 0402
2128	3198 030 82280	2.2µF 20% 50V
2130	3198 035 71030	10nF 16V 0402
2134	3198 035 71040	100nF 10% 16V 0402
2135	4822 124 23002	10µF 20% 16V
2136	4822 124 23002	10µF 20% 16V
2137	4822 124 12095	100µF 20% 16V
2138	3198 035 71040	100nF 10% 16V 0402
2150	3198 035 71040	100nF 10% 16V 0402
2151	3198 030 82280	2.2µF 20% 50V
2152	3198 035 71040	100nF 10% 16V 0402
2154	4822 124 23002	10µF 20% 16V
2155	3198 035 71040	100nF 10% 16V 0402
2156	3198 035 71040	100nF 10% 16V 0402
2157	3198 035 71040	100nF 10% 16V 0402
2281	3198 035 71040	100nF 10% 16V 0402
2282	3198 035 71040	100nF 10% 16V 0402
2284	3198 035 71040	100nF 10% 16V 0402
2285	3198 035 71040	100nF 10% 16V 0402
2300	3198 035 71040	100nF 10% 16V 0402
2305	3198 017 41050	1µF 10V 0603
2307	2238 869 15101	100pF 5% 50V 0402
2308	2238 869 15101	100pF 5% 50V 0402
2310	4822 124 23002	10µF 20% 16V
2311	3198 035 71030	10nF 16V 0402
2317	2238 869 15101	100pF 5% 50V 0402
2318	2238 869 15101	100pF 5% 50V 0402
2321	3198 035 71030	10nF 16V 0402
2324	2238 869 15101	100pF 5% 50V 0402
2325	2238 869 75829	82pF 5% 50V 0402
2327	2238 869 15101	100pF 5% 50V 0402
2328	2238 869 15101	100pF 5% 50V 0402
2331	3198 035 71030	10nF 16V 0402
2341	3198 035 71040	100nF 10% 16V 0402
2342	3198 035 71040	100nF 10% 16V 0402
2343	3198 035 71040	100nF 10% 16V 0402
2344	3198 035 71040	100nF 10% 16V 0402
2345	3198 035 71040	100nF 10% 16V 0402
2346	3198 035 71040	100nF 10% 16V 0402
2350	4822 124 12095	100µF 20% 16V
2351	2238 869 15109	10pF 5% 50V 0402
2352	2238 869 15109	10pF 5% 50V 0402
2358	2238 869 15101	100pF 5% 50V 0402
2359	3198 035 71040	100nF 10% 16V 0402
2360	2238 869 15101	100pF 5% 50V 0402
2361	4822 126 14491	2.2µF -20+80% 10V 0805
2363	2238 869 15101	100pF 5% 50V 0402
2364	4822 126 14491	2.2µF -20+80% 10V 0805
2365	2238 869 15101	100pF 5% 50V 0402
2366	4822 126 14491	2.2µF -20+80% 10V 0805
2371	2020 552 96618	1nF 10% 50V 0402
2372	2020 552 96618	1nF 10% 50V 0402
2377	2020 552 96623	2.2nF 10% 50V 0402
2379	2020 552 96623	2.2nF 10% 50V 0402
2380	3198 035 04710	470pF 50V 0402
2384	2020 552 96618	1nF 10% 50V 0402
2386	2238 869 15109	10pF 5% 50V 0402
2395	3198 035 71030	10nF 16V 0402
2397	3198 035 71040	100nF 10% 16V 0402
2432	2020 552 96618	1nF 10% 50V 0402
2433	2020 552 96618	1nF 10% 50V 0402
2434	3198 017 44740	470nF 10V 0603
2435	3198 017 44740	470nF 10V 0603
2438	3198 017 44740	470nF 10V 0603
2439	3198 017 44740	470nF 10V 0603
2440	2020 552 96618	1nF 10% 50V 0402
2441	2020 552 96618	1nF 10% 50V 0402
2442	2020 552 96618	1nF 10% 50V 0402
2443	2020 552 96618	1nF 10% 50V 0402
2444	2020 552 96618	1nF 10% 50V 0402
2445	2020 552 96618	1nF 10% 50V 0402
2447	4822 124 12095	100µF 20% 16V
2450	3198 035 71030	10nF 16V 0402
2452	3198 035 71030	10nF 16V 0402
2454	4822 126 14491	2.2µF -20+80% 10V 0805
2457	4822 126 14491	2.2µF -20+80% 10V 0805
2461	3198 017 44740	470nF 10V 0603
2462	3198 017 44740	470nF 10V 0603
2480	3198 017 44740	470nF 10V 0603
2481	3198 017 44740	470nF 10V 0603
2483	2020 552 96618	1nF 10% 50V 0402
2484	4822 124 23002	10µF 20% 16V
2485	2020 552 96618	1nF 10% 50V 0402
2486	3198 035 71040	100nF 10% 16V 0402
2487	4822 124 23002	10µF 20% 16V
2488	4822 124 12095	100µF 20% 16V
2489	4822 124 12095	100µF 20% 16V
2514	2238 869 15189	18pF 5% 50V 0402
2516	2238 869 15189	18pF 5% 50V 0402
2525	3198 035 71040	100nF 10% 16V 0402
2546	3198 035 71040	100nF 10% 16V 0402
2557	2238 869 15101	100pF 5% 50V 0402
2571	3198 035 71040	100nF 10% 16V 0402
2581	4822 126 14519	22pF 5% 50V 0402
2582	4822 126 14519	22pF 5% 50V 0402
2583	3198 035 71040	100nF 10% 16V 0402
2584	3198 035 71040	100nF 10% 16V 0402
2600	3198 035 71040	100nF 10% 16V 0402
2601	3198 035 71040	100nF 10% 16V 0402
2604	3198 035 71040	100nF 10% 16V 0402
2607	3198 035 71040	100nF 10% 16V 0402
2609	3198 035 71040	100nF 10% 16V 0402
2611	3198 035 71040	100nF 10% 16V 0402
2612	3198 035 71040	100nF 10% 16V 0402
2615	3198 035 71040	100nF 10% 16V 0402
2618	3198 035 71040	100nF 10% 16V 0402
2620	3198 035 71040	100nF 10% 16V 0402
2622	3198 035 71040	100nF 10% 16V 0402
2623	3198 035 71040	100nF 10% 16V 0402
2628	3198 035 71040	100nF 10% 16V 0402
2629	3198 035 71040	100nF 10% 16V 0402
2630	3198 035 71040	100nF 10% 16V 0402
2633	3198 035 71040	100nF 10% 16V 0402
2634	3198 035 71040	100nF 10% 16V 0402
2638	3198 035 71040	100nF 10% 16V 0402
2644	5322 124 41945	22µF 20% 35V
2645	4822 124 23002	10µF 20% 16V
2651	2020 021 91679	100µF 20% 6.3V
2652	2020 552 96507	10µF 10V
2654	2020 552 96507	10µF 10V
2655	2020 552 96507	10µF 10V
2656	3198 035 71040	100nF 10% 16V 0402
2657	2238 869 15101	100pF 5% 50V 0402
2659	4822 126 13879	220nF 20% 16V
2730	3198 035 71040	100nF 10% 16V 0402
2731	3198 035 71040	100nF 10% 16V 0402
2732	3198 035 71040	100nF 10% 16V 0402
2733	3198 035 71040	100nF 10% 16V 0402
2734	3198 035 71040	100nF 10% 16V 0402
2792	3198 035 71040	100nF 10% 16V 0402
2793	3198 035 71040	100nF 10% 16V 0402
2918	2238 869 15101	100pF 5% 50V 0402
2919	2238 869 15101	100pF 5% 50V 0402
2920	2238 869 75829	82pF 5% 50V 0402
2932	2238 869 15101	100pF 5% 50V 0402
2933	2238 869 15101	100pF 5% 50V 0402
2935	2238 869 15101	100pF 5% 50V 0402
2936	2238 869 15101	100pF 5% 50V 0402
2938	2238 869 15101	100pF 5% 50V 0402
2948	2238 869 15189	18pF 5% 50V 0402
2949	2238 869 15189	18pF 5% 50V 0402
2950	2238 869 15101	100pF 5% 50V 0402
2951	2238 869 15101	100pF 5% 50V 0402
2962	2238 869 15101	100pF 5% 50V 0402
2967	2020 552 96618	1nF 10% 50V 0402
2968	2020 552 96618	1nF 10% 50V 0402
2975	2020 552 96793	4.7nF 10% 50V 0402
2976	2020 552 96793	4.7nF 10% 50V 0402
2977	2238 869 15101	100pF 5% 50V 0402
2978	2238 869 15101	100pF 5% 50V 0402
2979	2238 869 15101	100pF 5% 50V 0402

-ww-

3002	3198 031 04730	47Ω 5% 0402
3003	3198 031 04730	47Ω 5% 0402
3004	3198 031 04730	47Ω 5% 0402
3005	3198 031 04730	47Ω 5% 0402
3006	3198 031 04730	47Ω 5% 0402
3007	3198 031 04730	47Ω 5% 0402
3010	4822 117 13605	Jumper 0402
3011	4822 117 13605	Jumper 0402
3018	4822 117 11152	4.7Ω 5% 0.062W
3019	5322 117 11726	10Ω 5%
3022	3198 031 04730	47Ω 5% 0402
3024	3198 031 04730	47Ω 5% 0402
3026	3198 031 04730	47Ω 5% 0402
3027	3198 031 04730	47Ω 5% 0402
3060	4822 117 13602	2.2kΩ 5% 0.01W 0402
3061	4822 117 13602	2.2kΩ 5% 0.01W 0402
3062	3198 031 01810	180Ω 5% 0402
3063	3198 031 01810	180Ω 5% 0402
3066	4822 117 13602	2.2kΩ 5% 0.01W 0402
3067	4822 117 13548	1kΩ 5% 0402
3068	4822 117 13548	1kΩ 5% 0402
3101	4822 117 13602	2.2kΩ 5% 0.01W 0402
3103	3198 031 06820	6.8kΩ 5% 0.01W 0402
3104	4822 117 13602	2.2kΩ 5% 0.01W 0402
3106	3198 031 02730	27kΩ 5% 0402
3131	3198 031 04720	4.7kΩ 5% 0402
3132	4822 117 13545	100Ω 1% 0402
3138	3198 031 03910	390Ω 1% 0402
3150	3198 031 01820	1K8 5% 0402
3151	3198 031 01220	1K2 5% 0402
3152	3198 031 01820	1K8 5% 0402
3153	3198 031 01220	1K2 5% 0402
3154	3198 031 04730	47Ω 5% 0402
3155	3198 031 08210	820Ω 5% 0,5W
3281	4822 117 13548	1kΩ 5% 0402
3282	4822 117 13548	1kΩ 5% 0402
3283	4822 117 13548	1kΩ 5% 0402
3284	4822 117 13548	1kΩ 5% 0402
3302	3198 031 01220	1K2 5% 0402
3303	3198 031 06820	6.8kΩ 5% 0.01W 0402
3304	4822 117 13597	330Ω 5% 0402 0.01W
3305	4822 117 13548	1kΩ 5% 0402
3306	3198 031 03390	33Ω 1% 0402
3307	2322 705 87189	18Ω 5% 0402
3309	4822 051 30331	330Ω 5% 0.062W
3310	3198 031 01220	1K2 5% 0402
3311	3198 031 03390	33Ω 1% 0402
3312	3198 031 01220	1K2 5% 0402
3313	4822 117 13597	330Ω 5% 0402 0.01W
3316	2322 705 87189	18Ω 5% 0402
3318	3198 031 01220	1K2 5% 0402
3319	4822 051 30331	330Ω 5% 0.062W
3320	3198 031 01220	1K2 5% 0402
3321	3198 031 03390	33Ω 1% 0402
3322	3198 031 01220	1K2 5% 0402
3323	4822 117 13597	330Ω 5% 0402 0.01W
3325	3198 031 04720	4.7kΩ 5% 0402
3326	4822 117 13543	470Ω 5% 0402
3329	4822 051 30331	330Ω 5% 0.062W
3330	3198 031 01220	1K2 5% 0402
3331	3198 031 03390	33Ω 1% 0402
3332	3198 031 01220	1K2 5% 0402
3333	4822 117 13597	330Ω 5% 0402 0.01W
3334	3198 031 03390	33Ω 1% 0402
3335	3198 031 03390	33Ω 1% 0402
3336	3198 031 03390	33Ω 1% 0402
3337	3198 031 03390	33Ω 1% 0402
3338	2322 705 87189	18Ω 5% 0402
3340	4822 117 13548	1kΩ 5% 0402
3343	4822 117 13606	10kΩ 5% 0.01W 0402
3345	3198 031 06820	6.8kΩ 5% 0.01W 0402
3346	4822 117 13548	1kΩ 5% 0402
3347	4822 117 13601	22kΩ 5% 0402
3348	4822 117 13601	22kΩ 5% 0402
3349	3198 031 04730	47Ω 5% 0402
3350	4822 117 13596	220Ω 5% 0.01W 0402
3351	4822 117 13548	1kΩ 5% 0402
3352	3198 031 04730	47Ω 5% 0402
3353	4822 117 13606	10kΩ 5% 0.01W 0402
3354	4822 117 13606	10kΩ 5% 0.01W 0402
3355	4822 117 13601	22kΩ 5% 0402
3356	3198 031 08210	820Ω 5% 0,5W
3357	4822 117 13601	22kΩ 5% 0402
3358	5322 117 11726	10Ω 5%
3361	4822 117 13605	Jumper 0402
3364	2322 705 70124	120kΩ 5% 0402
3365	4822 117 13605	Jumper 0402
3366	4822 117 13602	2.2kΩ 5% 0.01W 0402
3367	4822 117 13548	1kΩ 5% 0402
3368	3198 031 06830	68kΩ 5% 0.01W 0402
3371	4822 117 13548	1kΩ 5% 0402
3372	2322 705 70155	1.5MΩ 5% 0402
3373	4822 117 13606	10kΩ 5% 0.01W 0402
3374	3198 031 02720	2.7kΩ 5% 0.01W 0402
3375	3198 031 02720	2.7kΩ 5% 0.01W 0402
3376	4822 117 13606	10kΩ 5% 0.01W 0402
3377	3198 031 02250	2.2MΩ 5% 0402
3378	3198 031 03340	330kΩ 5% 0402
3380	4822 117 13606	10kΩ 5% 0.01W 0402
3382	4822 117 13548	1kΩ 5% 0402
3384	4822 117 13606	10kΩ 5% 0.01W 0402
3385	3198 031 04730	47Ω 5% 0402
3386	3198 031 02730	27kΩ 5% 0402
3390	4822 117 13548	1kΩ 5% 0402
3391	3198 031 03930	39kΩ 5% 0402
3392	3198 031 04730	47Ω 5% 0402
3393	3198 031 03320	3.3kΩ 5% 0402
3395	4822 117 13606	10kΩ 5% 0.01W 0402
3396	4822 117 13543	470Ω 5% 0402
3397	4822 117 13543	470Ω 5% 0402
3398	4822 117 13545	100Ω 1% 0402
3445	3198 031 04730	47Ω 5% 0402
3446	3198 031 05630	56kΩ 5% 0402
3447	3198 031 05630	56kΩ 5% 0402
3448	3198 031 01220	1K2 5% 0402
3449	3198 031 01520	1.2kΩ 5% 0.01W 0402
3450	3198 031 01220	1K2 5% 0402
3452	3198 031 01220	1K2 5% 0402
3453	3198 031 04730	47Ω 5% 0402
3454	3198 031 05630	56kΩ 5% 0402
3455	3198 031 05630	56kΩ 5% 0402
3456	3198 031 01220	1K2 5% 0402

3457	3198 031 01520	1.2kΩ 5% 0.01W 0402
3480	3198 031 02720	2.7kΩ 5% 0.01W 0402
3481	3198 031 02720	2.7kΩ 5% 0.01W 0402
3482	3198 031 04720	4.7kΩ 5% 0402
3483	3198 031 08220	8.2kΩ 5% 0.5W
3484	3198 031 04720	4.7kΩ 5% 0402
3485	3198 031 08220	8.2kΩ 5% 0.5W
3501	4822 117 13606	10kΩ 5% 0.01W 0402
3502	4822 117 13606	10kΩ 5% 0.01W 0402
3503	4822 117 13606	10kΩ 5% 0.01W 0402
3504	4822 117 13606	10kΩ 5% 0.01W 0402
3507	4822 117 13606	10kΩ 5% 0.01W 0402
3508	3198 031 04720	4.7kΩ 5% 0402
3509	3198 031 02720	2.7kΩ 5% 0.01W 0402
3510	3198 031 02720	2.7kΩ 5% 0.01W 0402
3511	4822 117 13546	47Ω 5% 0402
3512	4822 117 13546	47Ω 5% 0402
3513	3198 031 02720	2.7kΩ 5% 0.01W 0402
3515	3198 031 02720	2.7kΩ 5% 0.01W 0402
3518	4822 117 13601	22kΩ 5% 0402
3523	4822 117 13606	10kΩ 5% 0.01W 0402
3530	4822 117 11297	100kΩ 5% 0.1W
3547	3198 031 03390	33Ω 1% 0402
3550	3198 031 04720	4.7kΩ 5% 0402
3557	4822 117 13546	47Ω 5% 0402
3563	4822 117 13606	10kΩ 5% 0.01W 0402
3564	4822 117 13606	10kΩ 5% 0.01W 0402
3565	4822 117 13606	10kΩ 5% 0.01W 0402
3570	4822 117 13602	2.2kΩ 5% 0.01W 0402
3571	3198 031 02720	2.7kΩ 5% 0.01W 0402
3572	4822 117 13606	10kΩ 5% 0.01W 0402
3581	4822 117 13545	100Ω 1% 0402
3582	4822 117 13606	10kΩ 5% 0.01W 0402
3583	3198 031 01830	18kΩ 5% 0.01W 0402
3586	4822 117 13601	22kΩ 5% 0402
3590	4822 117 13548	1kΩ 5% 0402
3651	5322 117 13036	1.2kΩ 1% 0.063W 0603
3652	5322 117 13052	2.7kΩ 1% 0.063W 0603
3737	3198 031 03390	33Ω 1% 0402
3904	4822 117 13605	Jumper 0402
3909	4822 117 13545	100Ω 1% 0402
3911	4822 117 13545	100Ω 1% 0402
3918	4822 117 13545	100Ω 1% 0402
3919	4822 117 13545	100Ω 1% 0402
3928	4822 117 13545	100Ω 1% 0402
3929	4822 117 13545	100Ω 1% 0402
3936	4822 117 13545	100Ω 1% 0402
3938	4822 117 13545	100Ω 1% 0402
3950	4822 117 13545	100Ω 1% 0402
3951	4822 117 13545	100Ω 1% 0402
3962	4822 117 13545	100Ω 1% 0402
3963	4822 117 13545	100Ω 1% 0402
3964	4822 117 13545	100Ω 1% 0402
3975	4822 117 13545	100Ω 1% 0402
3976	4822 117 13545	100Ω 1% 0402
3977	4822 117 13545	100Ω 1% 0402
3978	4822 117 13545	100Ω 1% 0402
3979	4822 117 13545	100Ω 1% 0402
3980	4822 117 13545	100Ω 1% 0402
4xxx	4822 117 13605	Jumper 0402

─⌒⌒─

5060	2422 549 44197	Bead 220Ω at 100MHz
5061	2422 549 44197	Bead 220Ω at 100MHz
5062	2422 549 44197	Bead 220Ω at 100MHz
5063	2422 549 44197	Bead 220Ω at 100MHz
5101	4822 157 71303	0.39μH 10% 0805
5102	2422 549 44197	Bead 220Ω at 100MHz
5112	2422 549 44197	Bead 220Ω at 100MHz
5134	2422 549 44197	Bead 220Ω at 100MHz
5135	2422 549 44197	Bead 220Ω at 100MHz
5150	2422 549 44197	Bead 220Ω at 100MHz
5151	2422 549 44197	Bead 220Ω at 100MHz
5152	2422 549 44197	Bead 220Ω at 100MHz
5281	2422 549 44197	Bead 220Ω at 100MHz
5282	2422 549 44197	Bead 220Ω at 100MHz
5283	2422 549 44197	Bead 220Ω at 100MHz
5285	2422 549 44197	Bead 220Ω at 100MHz
5300	2422 549 44197	Bead 220Ω at 100MHz
5307	4822 051 20008	Jumper 0805
5317	4822 051 20008	Jumper 0805
5327	4822 051 20008	Jumper 0805
5328	4822 051 20008	Jumper 0805
5342	2422 549 44197	Bead 220Ω at 100MHz
5343	2422 549 44197	Bead 220Ω at 100MHz
5344	2422 549 44197	Bead 220Ω at 100MHz
5345	2422 549 44197	Bead 220Ω at 100MHz
5450	2422 549 44197	Bead 220Ω at 100MHz
5452	2422 549 44197	Bead 220Ω at 100MHz
5480	2422 549 44197	Bead 220Ω at 100MHz
5570	2422 549 44197	Bead 220Ω at 100MHz
5583	2422 549 44197	Bead 220Ω at 100MHz
5600	4822 157 11716	Bead 30Ω at 100MHz
5601	2422 549 44197	Bead 220Ω at 100MHz
5651	2422 535 94134	10μH 20% 0805
5654	4822 157 11258	1μH 20% NLC322522T
5659	4822 157 71334	0.68μH
5730	2422 549 44197	Bead 220Ω at 100MHz
5731	2422 549 44197	Bead 220Ω at 100MHz
5792	2422 549 44197	Bead 220Ω at 100MHz

─▶|─

6101	4822 130 11525	1SS356
6301	4822 130 11397	BAS316
6327	9322 102 64685	UDZ2.7B
6341	4822 130 11397	BAS316
6353	5322 130 34337	BAV99
6365	5322 130 34337	BAV99
6367	9340 548 67115	PDZ22B
6368	4822 130 11397	BAS316
6381	5322 130 34337	BAV99
6382	4822 130 11594	BZX284-C47
6384	9340 548 67115	PDZ22B
6385	4822 130 11397	BAS316
6397	9340 548 69115	PDZ27B
6398	4822 130 11397	BAS316
6480	9340 548 61115	PDZ12B
6481	9340 548 61115	PDZ12B
6651	9322 128 70685	SMSS14

▭

7060	9340 425 30115	BC847BPN
7062	4822 130 60373	BC856B
7063	4822 130 60373	BC856B
7100	9352 712 54557	PNX3000HL/N1
7101	3198 010 42310	BC847BW
7150	9340 425 20115	BC847BS
7300	9352 735 54557	PNX3002E/N302
7301	4822 130 60373	BC856B
7302	4822 130 60373	BC856B
7303	4822 130 60373	BC856B
7304	3198 010 42310	BC847BW
7310	9340 425 30115	BC847BPN
7320	9340 425 30115	BC847BPN
7330	9340 425 30115	BC847BPN
7346	4822 130 60373	BC856B
7356	4822 130 60373	BC856B
7365	5322 130 60159	BC846B
7382	4822 130 60373	BC856B
7383	9340 425 30115	BC847BPN
7393	3198 010 42310	BC847BW
7432	9340 425 30115	BC847BPN
7433	9340 425 30115	BC847BPN
7480	4822 209 33165	TDA1308T/N1
7525	9322 130 41668	M24C64-WMN6
7581	9352 691 56115	NE56610-45GW
7650	9322 170 61668	CS51033YDR8
7651	9322 170 87668	STS5PF30L
7730	9322 180 88668	K4S641632F-TC75
7790	9322 199 76668	M58LW032C90N1

Side I/O Panel [D]

Various

0240	2422 025 12485	Connector 11p m
0241	4822 267 10734	Connector 5p m
0242	4822 267 10734	Connector 5p m
1254	4822 267 31014	Socket headphone
1255	4822 265 11606	Connector 3p
1256	2422 026 04926	Socket SVHS 4p f

─||─

2286	4822 122 33642	150pF 5% 50V
2288	4822 122 33642	150pF 5% 50V
2292	5322 122 32311	470pF 10% 100V
2294	5322 122 32311	470pF 10% 100V
2296	4822 122 30103	22nF 80% 63V
2297	4822 122 30103	22nF 80% 63V

─WW─

3285	4822 116 52201	75Ω 5% 0.5W
3286	4822 116 52176	10Ω 5% 0.5W
3287	4822 116 52201	75Ω 5% 0.5W
3288	4822 116 52176	10Ω 5% 0.5W
3289	4822 116 52249	1.8kΩ 5% 0.5W
3291	4822 050 11002	1kΩ 1% 0.4W
3292	4822 117 10834	47kΩ 1% 0.1W
3293	4822 050 11002	1kΩ 1% 0.4W
3294	4822 117 10834	47kΩ 1% 0.1W
3295	4822 116 52276	3.9kΩ 5% 0.5W
3296	4822 117 10833	10kΩ 1% 0.1W
3297	4822 117 10833	10kΩ 1% 0.1W
4xxx	4822 051 20008	Jumper 0805

─▶|─

6291	9340 548 61115	PDZ12B
6292	9340 548 61115	PDZ12B
6293	9340 548 61115	PDZ12B
6294	9340 548 61115	PDZ12B
6296	9340 548 61115	PDZ12B
6297	9340 548 61115	PDZ12B

Top Control Panel [E]

Various

0135	3104 311 04671	Cable 3p/1200/3p
0215	2422 025 16601	Connector 3p m
1091	4822 276 13775	Switch
1092	4822 276 13775	Switch
1093	4822 276 13775	Switch
1094	4822 276 13775	Switch

─||─

2010	4822 122 33177	10nF 20% 50V

─WW─

3088	4822 051 30008	Jumper 0603
3089	4822 051 30008	Jumper 0603
3091	4822 051 30561	560Ω 5% 0.062W
3092	4822 051 30391	390Ω 5% 0.062W
3093	4822 051 30561	560Ω 5% 0.062W
3094	4822 051 30271	270Ω 5% 0.062W
3095	4822 051 30332	3.3kΩ 5% 0.062W
3096	4822 051 30152	1.5kΩ 5% 0.062W
4092	4822 051 30008	Jumper 0603

─▶|─

6092	4822 130 10654	BAT254

CRT Panel [F]

Various

0032	4822 492 70788	IC clamp
1298	2422 500 80063	Connector CRT 10p f
1424	2422 025 11244	Connector 7p m
1434	4822 267 10973	Connector 1p m
1483	4822 267 10735	Connector 3p m
1940	2422 025 12485	Connector 11p m
8483	3104 311 03111	Cable 3p/340/3p ferrite

─||─

2300	4822 124 40764	22μF 100 V
2301	4822 124 40196	220μF 20% 16V
2304	4822 121 41856	22nF 5% 250V
2306	2238 586 59812	100nF 20-80% 50V 0603
2307	4822 121 41856	22nF 5% 250V
2309	3198 017 42230	22nF 50V
2313	4822 124 12373	47μF 20% 250V
2315	5322 126 11583	10nF 10% 50V 0603
2316	4822 121 40518	100nF 10% 250V
2318	5322 122 32654	22nF 10% 63V
2319	4822 122 30043	10nF 80% 63V
2320	2238 586 59812	100nF 20-80% 50V 0603
2324	5322 121 44356	4.7nF 5% 2kV
2325	2238 586 59812	100nF 20-80% 50V 0603
2330	4822 126 13879	220nF 20% 16V
2338	2238 786 19856	330nF 16V 0603
2409	4822 051 30008	Jumper 0603
2410	3198 017 44740	470nF 10V 0603
2411	4822 126 14585	100nF 10% 50V
2420	4822 051 30008	Jumper 0603

─WW─

3300	4822 052 10109	10Ω 5% 0.33W
3301	4822 053 12103	10K00 5% 3W
3302	4822 051 30681	680Ω 5% 0.062W

3303	4822 051 30682	6.8kΩ 5% 0.062W
3304	4822 051 10102	1kΩ 2% 0.25W
3306	4822 117 13608	4.7Ω 5% 0603 0.62W
3307	4822 051 30109	10Ω 5% 0.062W
3308	4822 051 30563	56kΩ 5% 0.062W
3310	4822 051 10102	1kΩ 2% 0.25W
3311	4822 051 30181	180Ω 5% 0.062W
3312	4822 051 30222	2.2kΩ 5% 0.062W
3316	4822 051 30563	56kΩ 5% 0.062W
3318	4822 117 12971	15Ω 5% 0.62W 0603
3319	4822 051 30102	1kΩ 5% 0.062W
3323	4822 050 24708	4.7Ω 1% 0.6W
3324	4822 051 30221	220Ω 5% 0.062W
3329	4822 050 24708	4.7Ω 1% 0.6W
3334	4822 050 11002	1kΩ 1% 0.4W
3335	4822 051 30271	270Ω 5% 0.062W
3336	4822 051 30271	270Ω 5% 0.062W
3337	4822 051 30271	270Ω 5% 0.062W
3338	3198 013 01020	1kΩ 2% 0.5W
3339	3198 013 01020	1kΩ 2% 0.5W
3340	3198 013 01020	1kΩ 2% 0.5W
3341	2306 207 03151	150Ω 5% 0.5W
3342	4822 116 83883	470Ω 5% 0.5W
3345	4822 116 52191	33Ω 5% 0.5W
3347	3198 013 01520	1.5kΩ 2% 0.5W
3349	3198 013 01020	1kΩ 2% 0.5W
3350	4822 116 83883	470Ω 5% 0.5W
3351	4822 116 83883	470Ω 5% 0.5W
3352	4822 116 83883	470Ω 5% 0.5W
3354	4822 051 30222	2.2kΩ 5% 0.062W
3355	4822 117 13608	4.7Ω 5% 0603 0.62W
3356	4822 051 10102	1kΩ 2% 0.25W
3357	4822 117 13608	4.7Ω 5% 0603 0.62W
3370	4822 117 13016	VDR 1mA/50V
3371	4822 051 30472	4.7kΩ 5% 0.062W
3401	4822 116 52175	100Ω 5% 0.5W
3403	4822 052 11228	2R20 5% 0,5W
3404	4822 052 11228	2R20 5% 0,5W
3410	4822 051 30103	10kΩ 5% 0.062W
3411	4822 051 30103	10kΩ 5% 0.062W
3412	2322 750 61509	15Ω 5% 1206 fusible
3413	4822 051 30181	180Ω 5% 0.062W
3414	4822 051 30109	10Ω 5% 0.062W
3417	4822 051 30109	10Ω 5% 0.062W
3418	4822 051 30181	180Ω 5% 0.062W
3420	4822 051 30008	Jumper 0603
3427	4822 051 30008	Jumper 0603
3999	4822 051 30152	1.5kΩ 5% 0.062W
9402	4822 051 20008	Jumper 0805
9405	4822 051 30008	Jumper 0603

∿

5300	3104 308 20571	Transf. S13974-03
5400	4822 157 11869	33µH 10%
5401	4822 157 71334	0.68µH

▷|

6300	4822 130 83757	BAS216
6301	4822 051 20008	Jumper 0805
6305	9340 553 52115	BAS321
6306	9340 553 52115	BAS321
6307	9340 553 52115	BAS321
6310	4822 130 11397	BAS316
6311	4822 130 11397	BAS316
6312	4822 130 11397	BAS316
6313	4822 130 11397	BAS316
6314	4822 130 11397	BAS316

⊗▭

7300	5322 130 42718	BFS20
7301	5322 130 42718	BFS20
7302	5322 130 62804	BCP53
7303	5322 130 63033	BCP56
7304	4822 130 60383	BF824
7307	9352 561 40112	TDA6108
7308	5322 130 60159	BC846B

DC Shift Panel [G]

Various

0317	4822 265 20723	Connector 2p m
0318	4822 265 20723	Connector 2p m
1430	2422 086 10581	Fuse 400mA 65V
8317	3104 311 01421	Cable 2p3/220/2p3 Wh

⊣⊢

2430	4822 122 31177	470pF 10% 500V
2431	4822 122 31177	470pF 10% 500V

∿

5430	3128 138 38911	DC-shift coil CU15

▷|

6432	9340 317 00133	BYD33V
6433	9340 317 00133	BYD33V

DAF + 2nd order [I]

Various

0034	3104 304 23041	DAF bracket EMGS
1417	4822 265 20723	Connector 2p m
1418	2422 025 16374	Connector 2p m
1419	4822 265 20723	Connector 2p m
1497	4822 267 10973	Connector 1p m
8418	3104 311 01951	Cable 2p3/560/2p4 Bk

⊣⊢

2800	2222 375 90498	470pF 5% 2kV
2821	2222 479 90166	68nF 5% 400V
2890	2222 375 90276	220pF 5% 2kV

-WW-

3898	4822 116 21211	VDR 420V
3899	4822 116 21211	VDR 420V

∿

5800	2422 531 02437	Transformer S21975-03
5801	2422 531 02435	Transformer C948-02
5801	8228 001 34391	Driver Transformer CU15

Front Interface Panel [J]

Various

0157	3104 311 02421	Cable 5p/480/5p
0177	3104 311 03011	Cable 2p/340/2p Bk
0201	2422 025 16268	Connector 2p m
0202	2422 025 16268	Connector 2p m
0203	2422 025 06353	Connector 5p m
1910	9322 127 54667	TSOP1836UH1
1951	2422 128 02972	Mains switch

⊣⊢

2930	4822 124 41584	100µF 20% 10V

-WW-

3957	4822 053 21335	3.3MΩ 5% 0.5W
3966	4822 053 21335	3.3MΩ 5% 0.5W
3978	4822 051 30008	Jumper 0603
3981	4822 051 30681	680Ω 5% 0.062W
3982	4822 116 52219	330Ω 5% 0.5W
4903	4822 051 30008	Jumper 0603

▷|

6901	9322 050 99682	LTL-10224WHCR

11. Revision List

First release